 




**Fantastic
Furniture**

Version 1.0

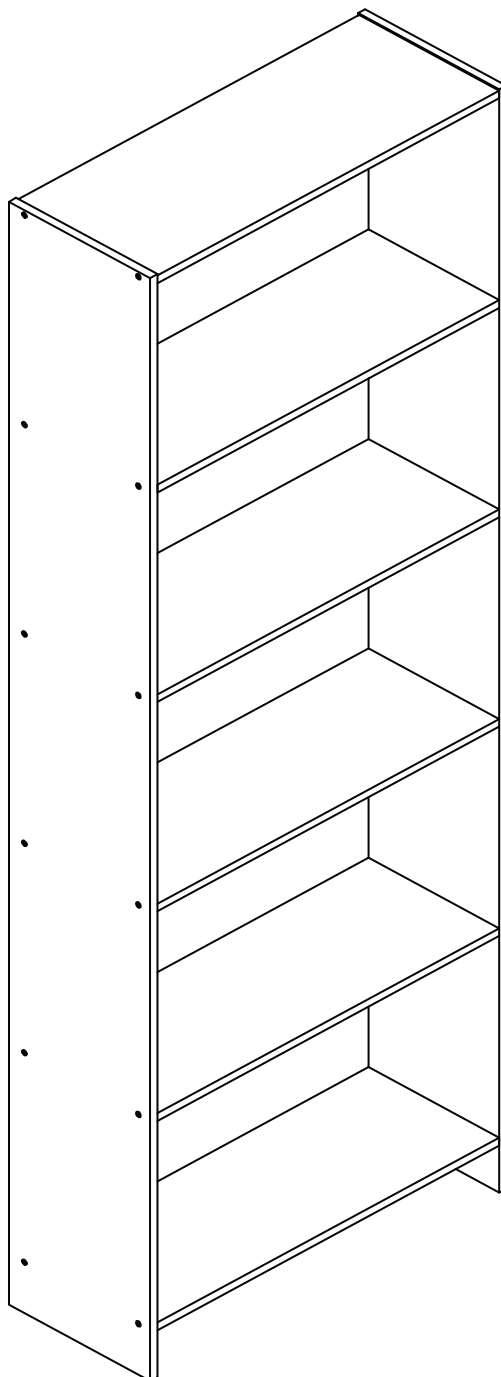 


Opus
Bookcase

fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents

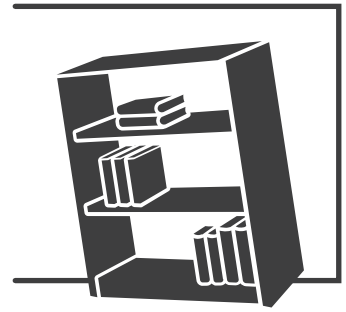

WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended weight capacity: 10kg per Shelf

To reduce the risk of furniture tipover:



- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.

- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.

 
- Do not open more than one drawer at the time.



- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.


- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard
(without available wood stud)

 Securing method:
Self drilling plasterboard anchor.

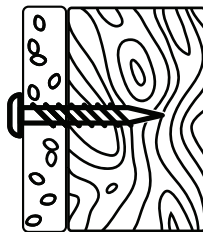

For plasterboard
(with available wood stud)

 Securing method:
Screw inserted directly into stud.

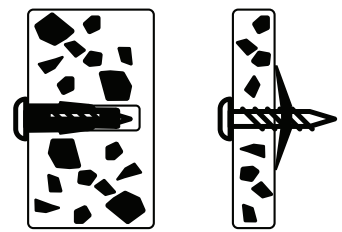

For masonry wall

Securing method:
Solid wall: Plug with screw
Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

 
Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.

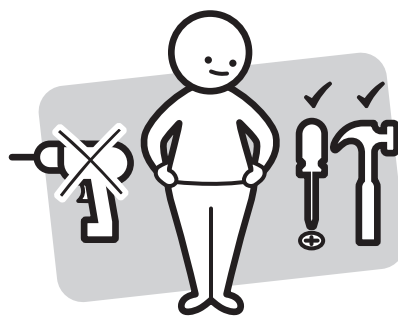

 Make sure you have all the required tools. Never use power tools unless instructed.

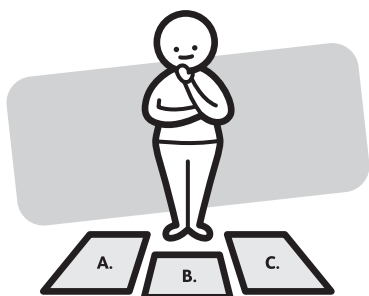

 Identify and lay out all of the components before you begin assembly.

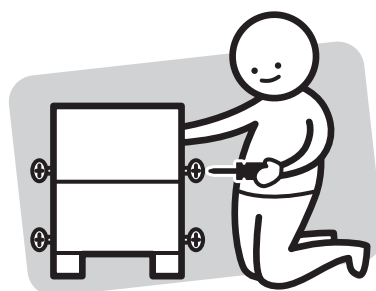

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product



 
DO NOT USE



Other tools you need:
Phillips head screwdriver;
Mallet.

Parts list


Side Panel Left (P1);
Side Panel Right (P2);
Top Panel (P3);
4x Shelf Panels (P4);
Bottom Panel (P5);
5x Back Panels (P6)

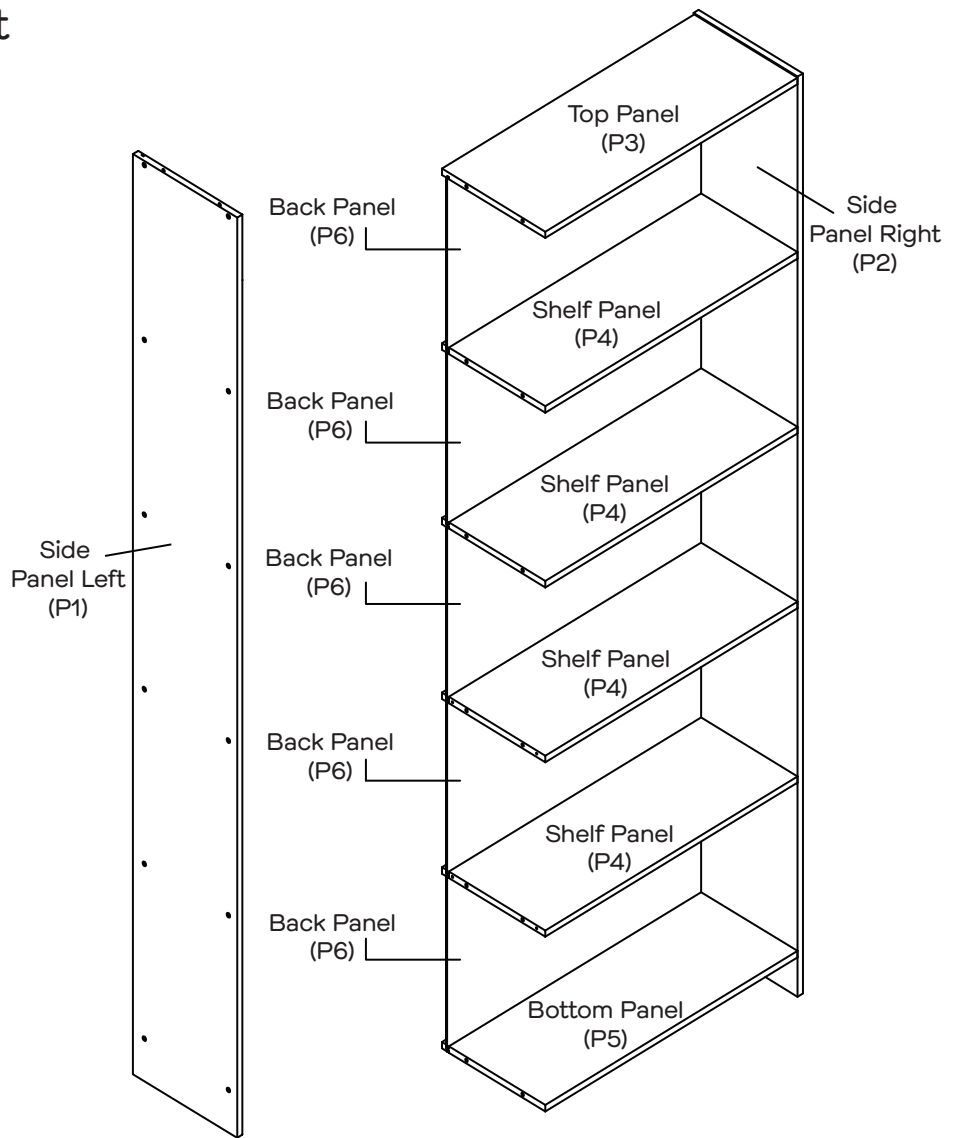

Hardware pack



 24 x Long Phillips
Screws
(H1)



24 x Wood
Dowels
(H2)



4 x Plastic
Leg Studs
(H3)



1 x Webbing
(H4)



1 x Pan Head
Screw
(H5)





 
 
24 x Stickers
(H6)



1 x Flat Washer
(H7)



Step 1

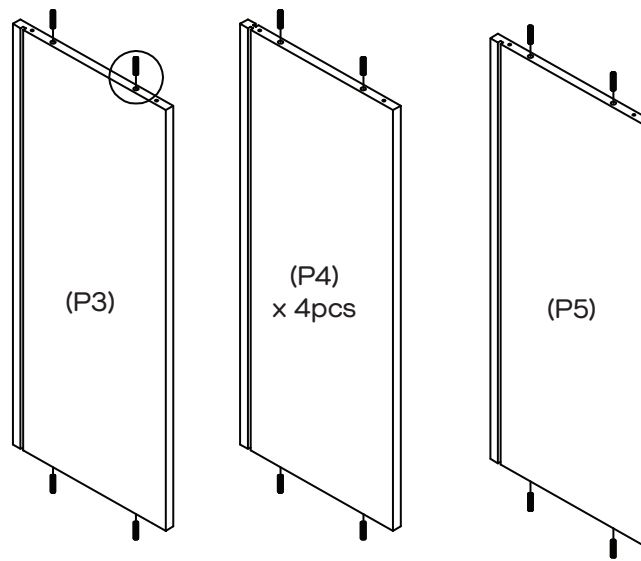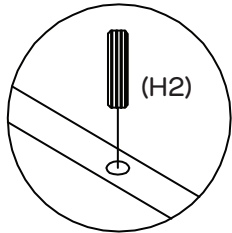
You will need	
	
24 x Wood Dowels (H2)	Mallet



Using a mallet, gently tap 24x Wood Dowels (H2) into pre-drilled holes in Top Panel (P3), 4x Shelf Panels (P4) and Bottom Panel (P5).


Step 2

You will need	
	
12 x Long Phillips Screws (H1)	Phillips Head Screwdriver

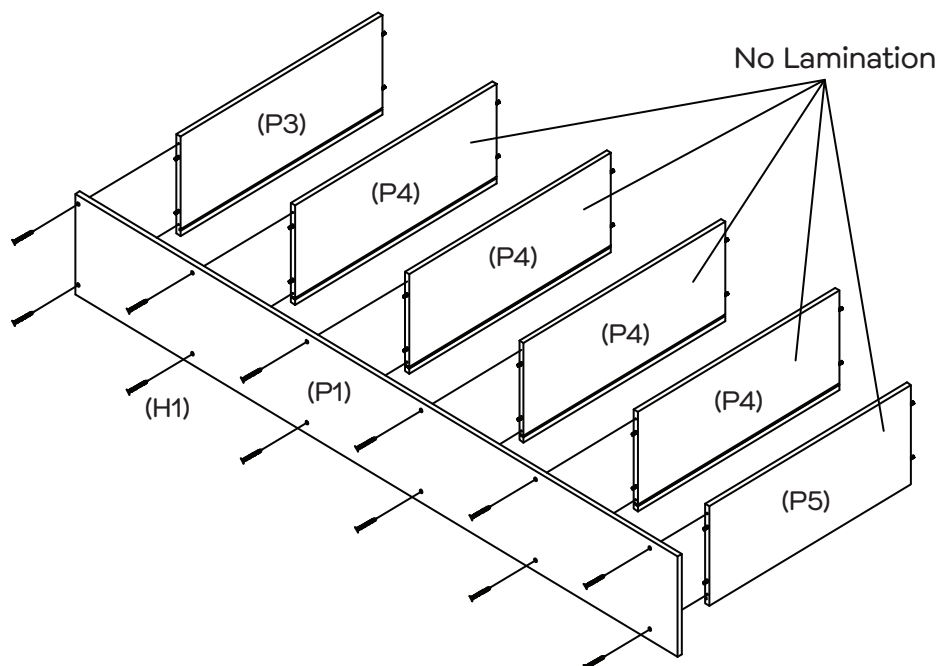 



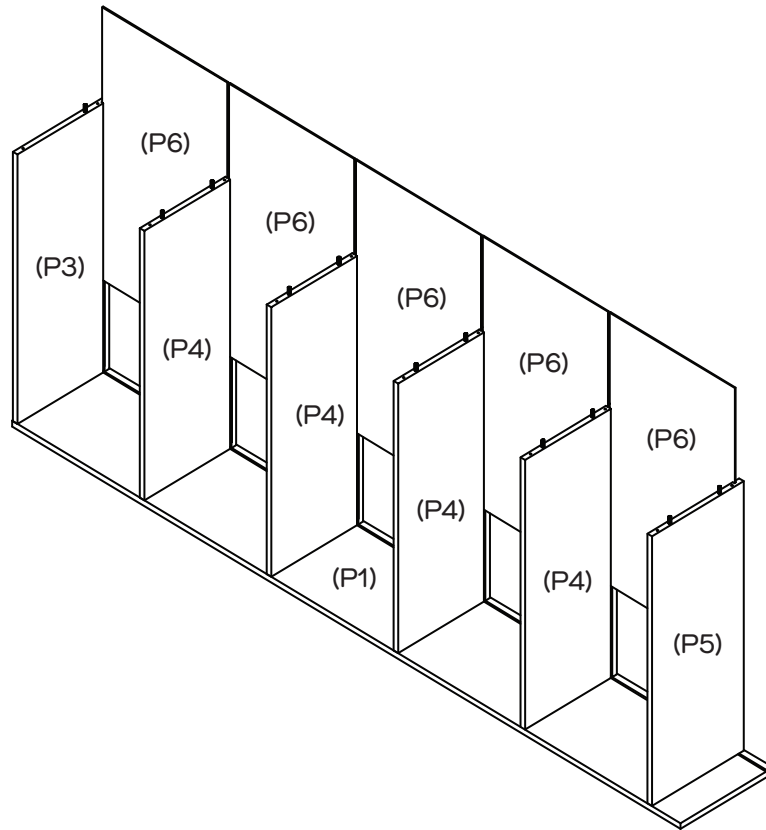 

Attach Top Panel (P3), 4x Shelf Panels (P4) and Bottom Panel (P5) to the Side Panel Left (P1) with 12x Long Phillips Screws (H1). Tighten with a phillips head screwdriver.


Step 3



Slide 5x Back Panels (P6) into grooves of Top Panel (P3), 4x Shelf Panels (P4) and Bottom Panel (P5).


Step 4



You will need			
			
12 x Long Phillips Screws (H1)	4 x Plastic Leg Studs (H3)	Phillips Head Screwdriver	Mallet

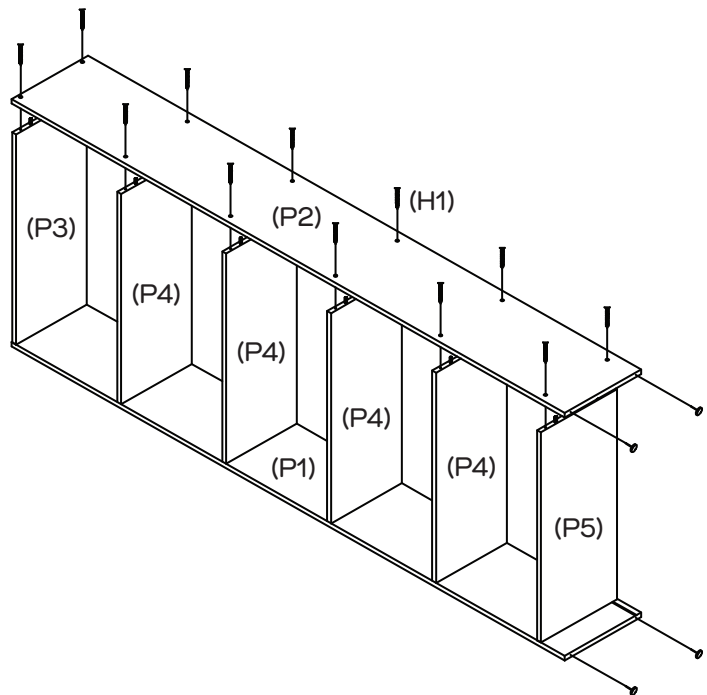 

  Fix Side Panel Right (P2) to main assembly with 12x Long Phillips Screws (H1) and tighten with a phillips head screwdriver. Using a Mallet, gently tap 4x Plastic Leg Studs (H3) into the base of both Shelf Panels (P1 and P2) as shown.



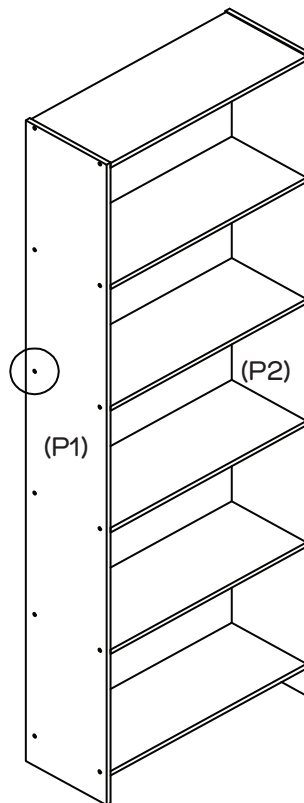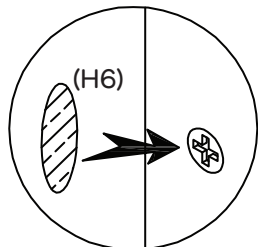

Step 5

 
You will need

24 x Stickers (H6)



Place 24x Stickers (H6) to cover screws.


Step 6

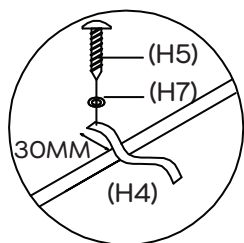You will need			
			
1 x Webbing (H4)	1 x Pan Head Screw (H5)	1 x Flat Washer (H7)	Phillips head screwdriver




Attach the Webbing (H4) to the unit using the Flat Washer (H7) and Pan Head Screw (H5).
We strongly advise that you secure the unit to a wall using the Webbing provided, to prevent the unit from toppling.

 Step 7

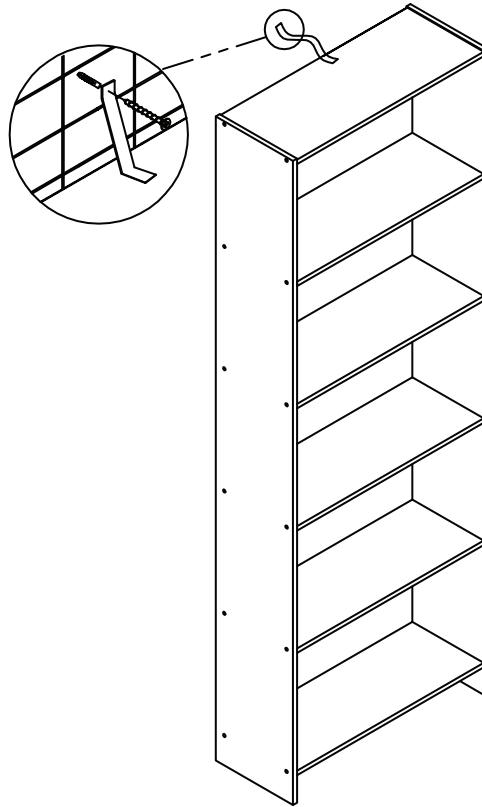

Move furniture to its final position, then connect the end of the Webbing (H4) to the wall, ensuring it is firmly attached. Seek advice from a qualified trades person on how to attach this to your specific wall. Screws and wall plugs are not supplied. Please use appropriate fixtures for your wall.

 Step 8

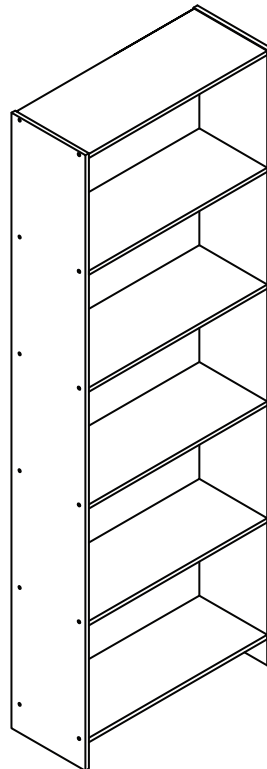

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.