 


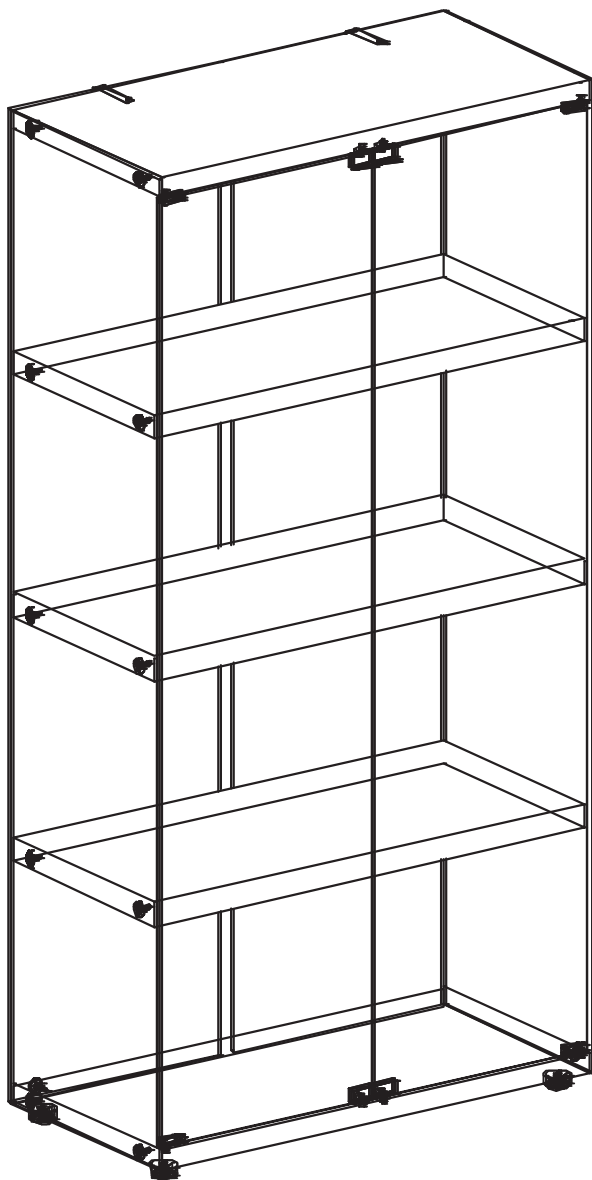

**Fantastic
Furniture**

Version: 1.7



TWO PEOPLE



REQUIRED

Gallery

Display Cabinet 4 Shelf

www.fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents



WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Weight capacity: 10kgs/shelf.

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard
(without available wood stud)

 Securing method:
Self drilling plasterboard anchor.

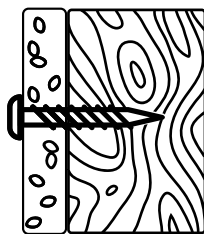

For plasterboard
(with available wood stud)

 Securing method:
Screw inserted directly into stud.

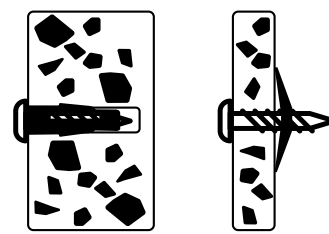

For masonry wall

Securing method:
Solid wall: Plug with screw
Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

THIS PRODUCT MUST BE ASSEMBLED ON A SOFT SURFACE SUCH AS CARPET OR A RUG TO PREVENT ACCIDENTAL SHATTERING DURING ASSEMBLY. IF YOU DO NOT HAVE THESE IN YOUR HOME THEN LAY THE CARDBOARD PACKAGING FLAT AND ASSEMBLE ON TOP OF THE EMPTY PACKAGING.

DO NOT ASSEMBLE ON A HARD SURFACE.

Tempered Glass

Glass should always be handled with care.

Scratches, chips, sudden changes in temperature and hairline fractures may cause glass to break. This glass is designed to break into small, relatively harmless pieces and not sharp fragments.

Avoid placing hot or cold items directly onto the table unless using a thick insulation material such as placemats or coasters.

Avoid dropping objects onto the glass. Do not allow hard or pointed objects to come into contact with the glass. Never use the top area as a chopping surface. Do not sit or stand on the glass surface.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram
for your chance to win a \$250 Fantastic Furniture Gift Card!
[@fantasticfurniture](https://www.instagram.com/fantasticfurniture)

 
Assembly Checklist




Read through the instructions carefully before you begin



Make sure you have all the required tools.
Never use power tools unless instructed.

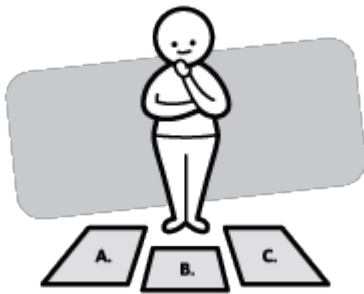

 Identify and lay out all of the components before you begin assembly

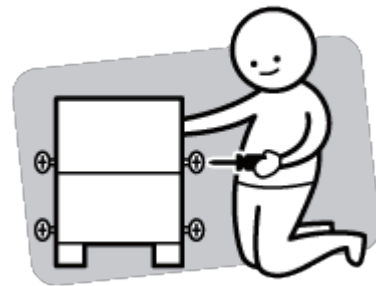

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage you components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product



DO NOT USE



Other tools you need

Phillips Head Screwdriver


Parts List:

Box 1

Base (P1);
Shelf (P2);
Top Panel (P3);
Left Panel (P4);
Right Panel (P5);
Left Back (P6).

Box 2

 2x Shelf (P2);
Right Back (P7);
Left Door (P8);
Right Door (P9)

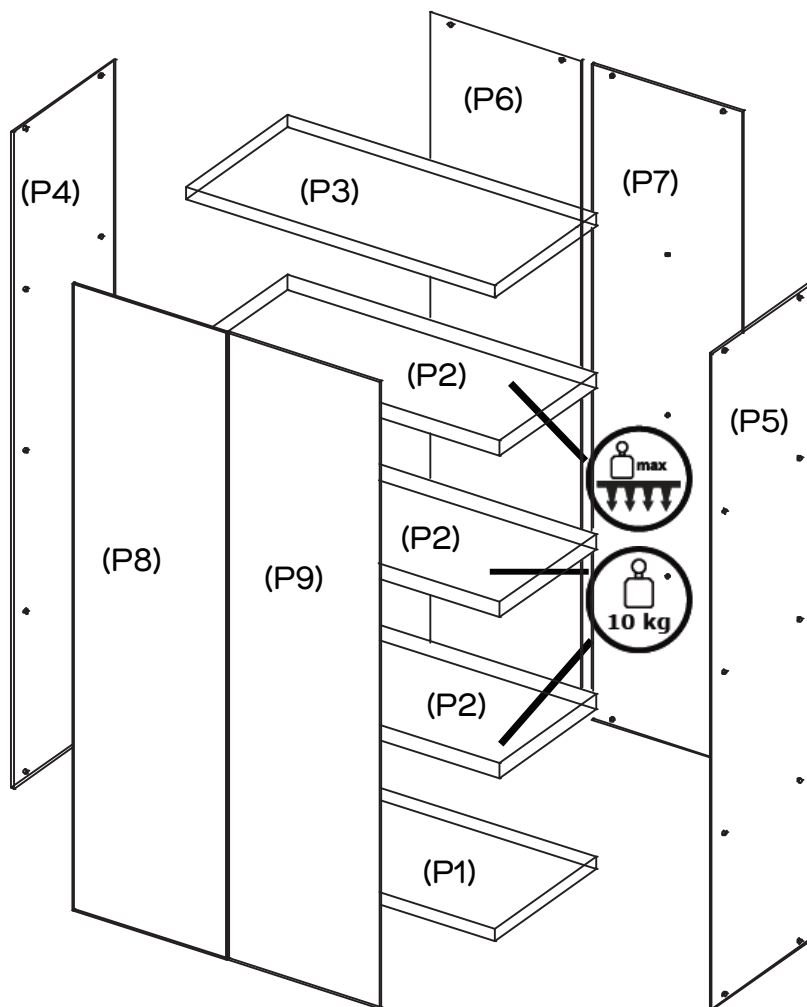

Hardware Pack:



 
34 x Knob Bolt
(H1)



4 x Feet
(H2)



4 x M4 x 22 mm Screws
(H3)




4 x Door Hinges/Hinge Plates
(H4)



4 x Magnetic Catch
(H5)



 
2 x Strike Plates/Foam Inserts
(H6)



2 x Door Handles/Foam Inserts
(H7)



 4 x Plastic Sleeve
(H8)



2x M4 x 14 mm Screws
(H9)



4 x Metal Washers
(H10)






2 x Wall Straps
(H11)




34 x Plastic Washers
(H12)



Step 1



You will need	
	
4 x Feet (H2)	4x M4 x 22 mm Screws (H3)
	
Phillips Head Screwdriver	

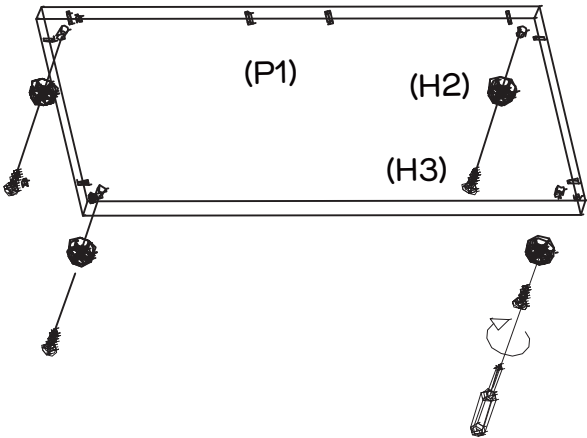 
THIS PRODUCT MUST BE ASSEMBLED ON A SOFT SURFACE SUCH AS CARPET OR A RUG TO PREVENT ACCIDENTAL SHATTERING DURING ASSEMBLY. IF YOU DO NOT HAVE A SOFT SURFACE. LAY THE CARDBOARD PACKAGING FLAT AND USE AS A BASE FOR ASSEMBLY.



Attach Feet (H2) to Base (P1) using 4 x Screws (H3) and tighten using Phillips Head Screwdriver.



 Step 2

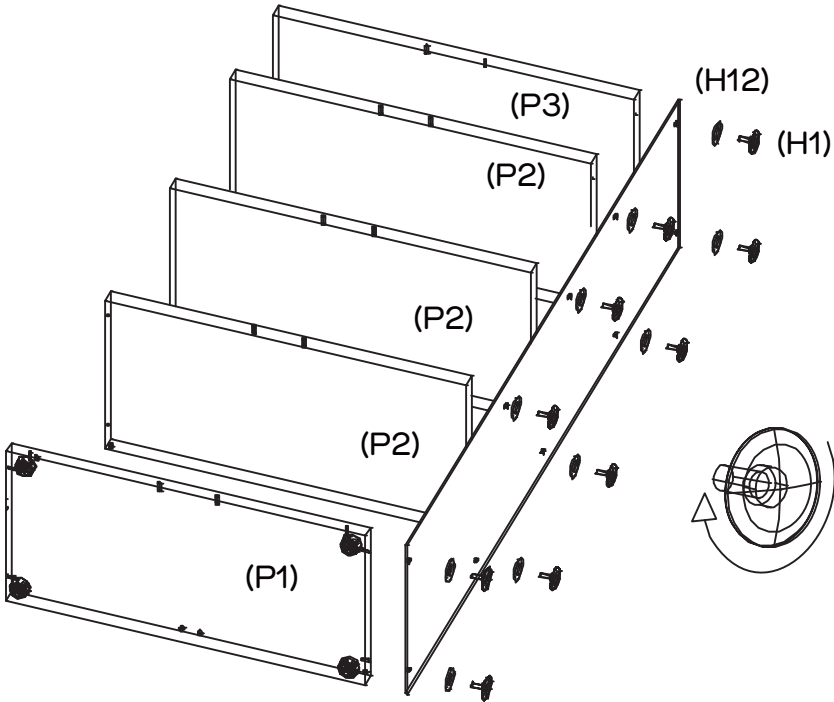
You will need	
	
10 x Knob Bolt (H1)	10 x Plastic Washers (H12)



Attach Left Panel (P4) to Base (P1), 3 x Shelf (P2) and Top Panel (P3) with 10 x Knob Bolt (H1) and 10 x Plastic Washers (H12). Ensure holes in (P1) ~ (P3) face upwards.



 Step 3

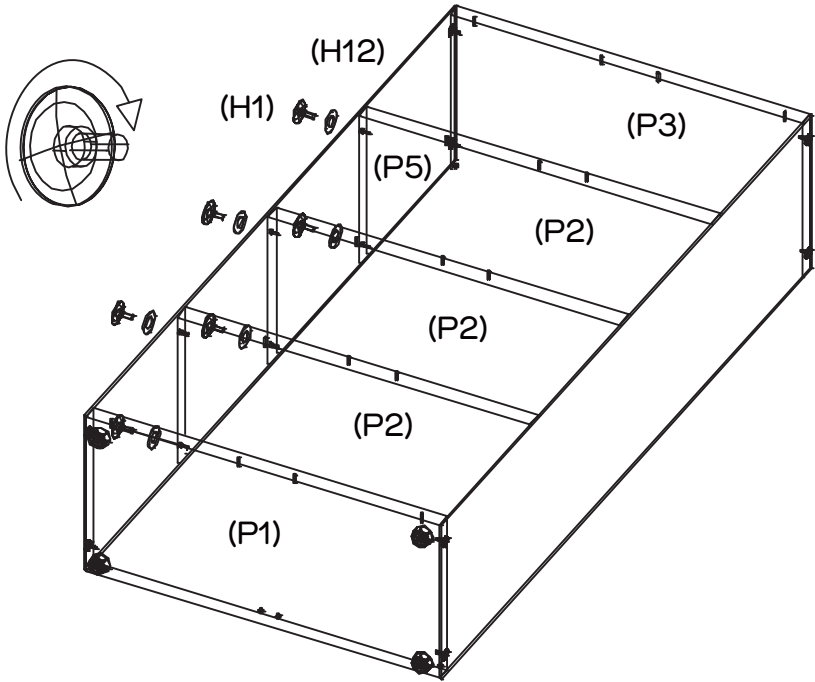You will need	
	
10 x Knob Bolt (H1)	10 x Plastic Washers (H12)



Attach Right Panel (P5) to Base (P1), 3 x Shelf (P2) and Top Panel (P3) with 10 x Knob Bolts (H1) and 10 x Plastic Washers (H12)


Step 4

You will need	
	
14 x Knob Bolt (H1)	14 x Plastic Washers (H12)

 TWO PEOPLE

 



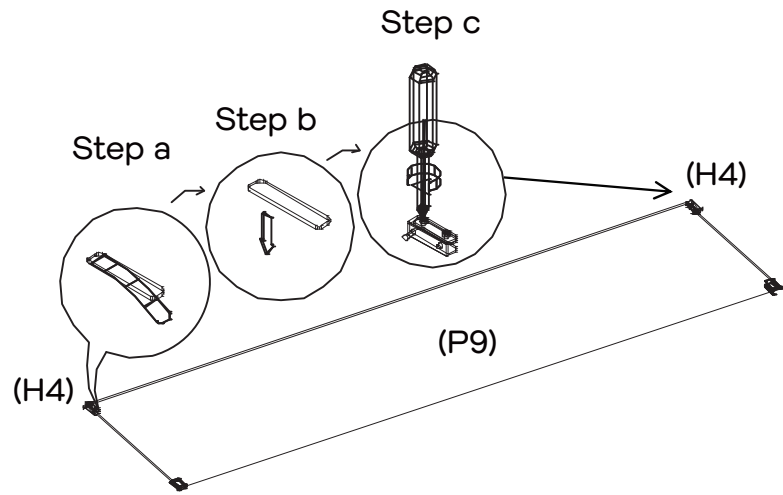 
REQUIRED

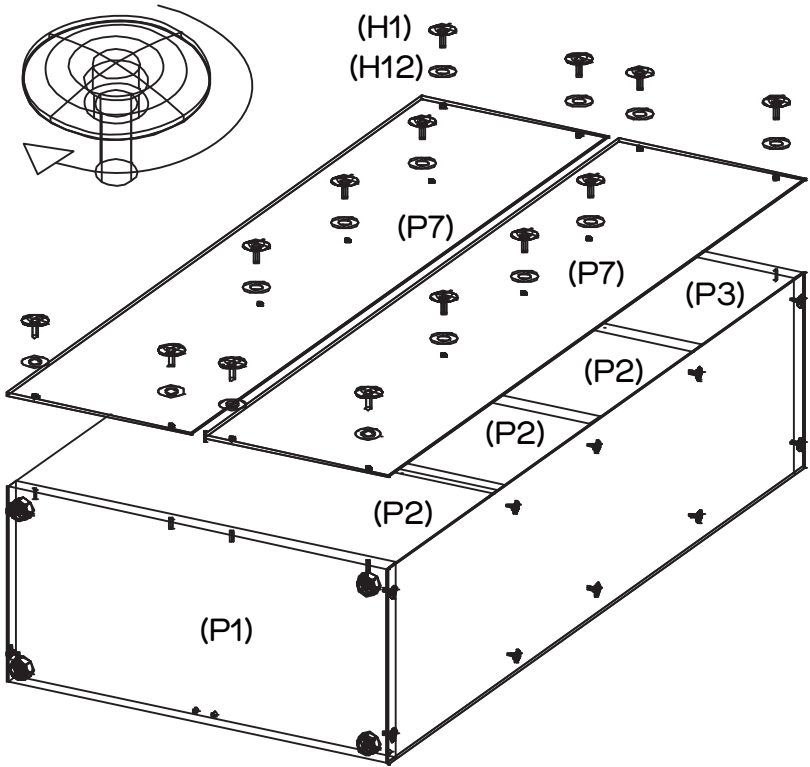

Attach Right and Left Back Panel (P7), (P6) to Base (P1), 3 x Shelf (P2) and Top Panel (P3) with 14 x Knob Bolt (H1) and 14 x Plastic Washers (H12). With help, carefully stand the cabinet upright.

Step 5

You will need	
	
2x Door Hinges/ Hinge plates (H4)	Phillips Head Screwdriver



Attach hinges onto doors.

 

Step a. Peel o° backing of Hinge Plate (H4).


Step b. Paste Hinge Plate (H4) onto two corners along the short edge of the Door (P9).

Step c. Attach the Hinges to the Hinge Plates with screws. DO NOT OVERTIGHTEN.

Repeat process for other door

Step 6

You will need	
	
1x Door Handle/ Foam Insert (H7)	1 x Strike Plate/ Foam Insert (H6)

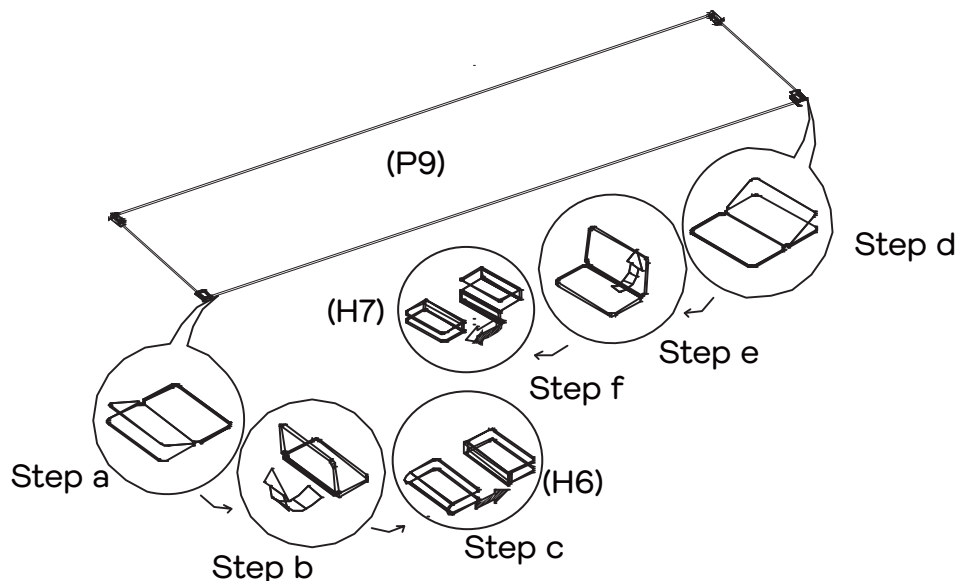 

Attach handle and strike plate onto doors

Step a. Remove the Foam Insert from the Strike Plate (H6).

Step b. Peel o° the backing from Foam Insert and paste it onto the bottom corner of the Door (P9).

Step c. Slide the Strike Plate (H6) into position.




Step d. Remove the Foam Insert from the Door Handle (H7).

 
Step e. Peel o° the backing from Foam Insert and paste it onto the top corner of the Door (P9).

Step f. Slide the Door Handle (H7) into position.

Repeat process for other door

Step 7

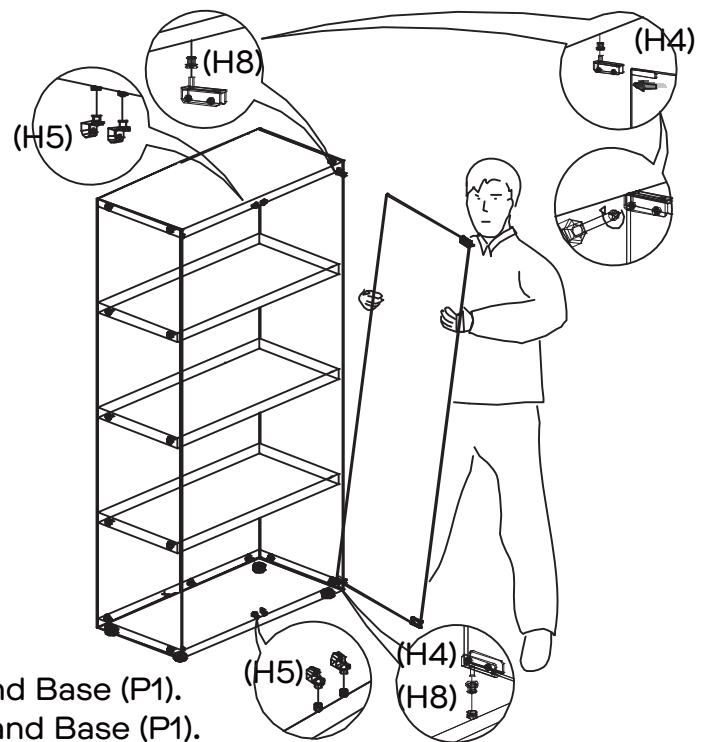


You will need	
	
4 x Magnetic Catch (H5)	4 x Plastic Sleeve (H8)
	
Phillips Head Screwdriver	




Fasten magnetic catch (H5) to the Top Panel (P3) and Base (P1).
 Insert 1x Plastic Sleeve (H8) each into the Top (P3) and Base (P1).
 Place the Door (P11) with its hinge into the Plastic Sleeve (H8) in Base (P1).
 Loosen the Door Hinge (H4) on the top of Door (P9) with a Phillips Head Screwdriver.
 Insert the top hinge into the Plastic Sleeve (H8) on the Top Panel (P3).
 Slide the top corner of Door (P9) into the hinge.
 Tighten the bolts on the door hinge with a Phillips Head Screwdriver ensuring contact with the hinge plate.

Repeat process for other door

Step 8

You will need	
	
2x Wall Straps (H11)	2x Metal Washers (H10)
	
Phillips Head Screwdriver	

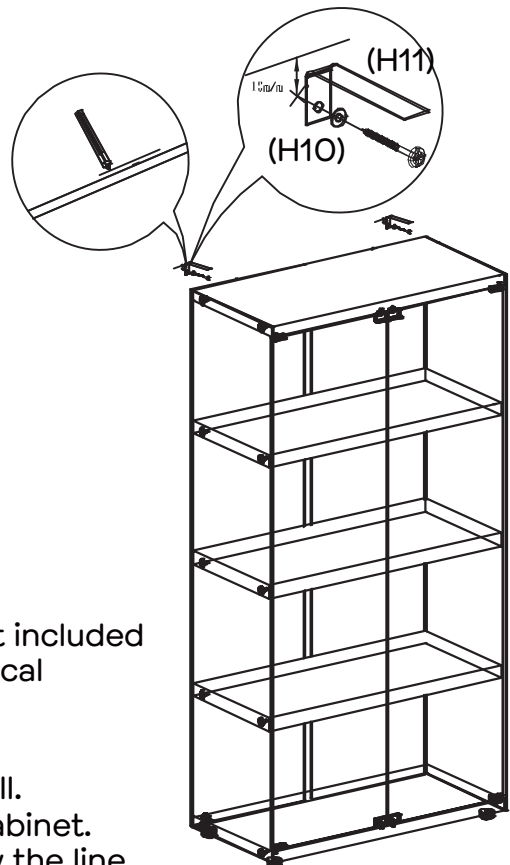 




It is recommended that the unit is fixed to a wall.


As wall materials vary, screws for fixing to wall are not included
 For advice on suitable screw systems, contact your local specialized dealer.

 Move the cabinet to the desired position against a wall.
 Mark a line on the wall at 2 sides of top edge of the cabinet.
 Remove the cabinet, mark a point about 10 mm below the line.
 Attach the wall strap (H11) with the appropriate screw system and 2x Metal Washers (H10).


Step 9

You will need	
	
2x M4 x 14 mm Screws (H9)	2x Metal Washers (H10)
	
Phillips head Screwdriver	

 Reposition the cabinet. Attach the cabinet at its top to the Wall Straps (H11) using 2 x Screws (H9) and 2 x Metal Washers (H10).

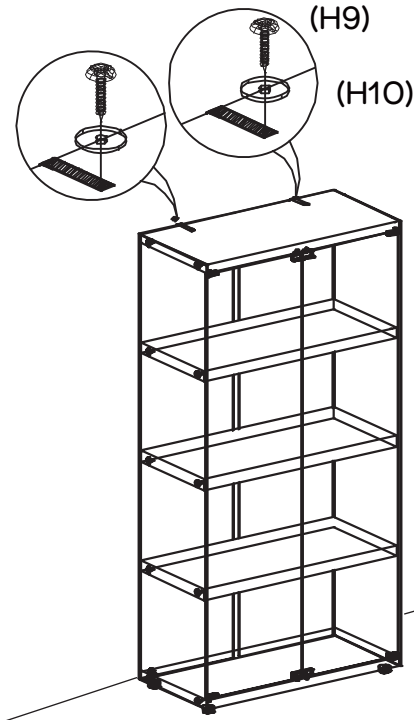

 Step 10

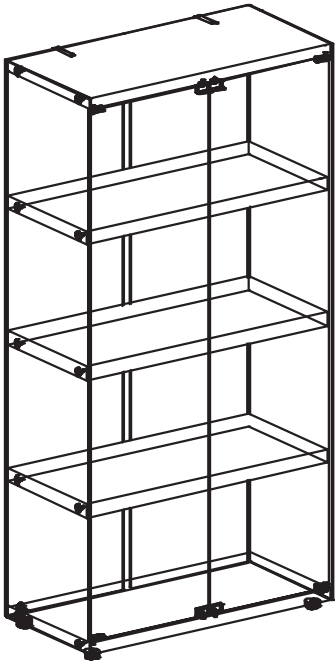

Job complete!

In the interest of our environment Please dispose of all packing thoughtfully.