



Version 1.0

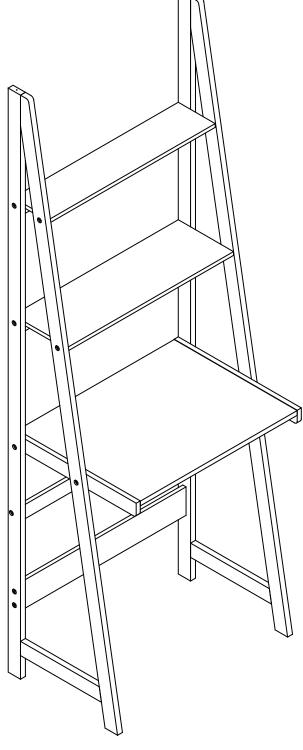

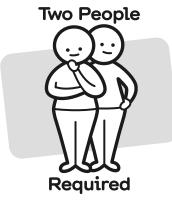



Secure it!

Reduce the risk of furniture tip-over accidents





To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended Weight Capacity :10kg/shelf

To reduce the risk of furniture tipover:



- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.
- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

Securing method: Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.

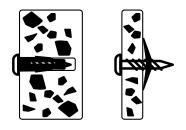

For masonry wall

Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Assembly Checklist



Read through the instructions carefully before you begin.

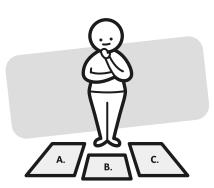

Identify and lay out all of the components before you begin assembly.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.





Make sure you have all the required tools. Never use power tools unless instructed.




Unless instructed, do not fully tighten screws until the item is fully assembled.



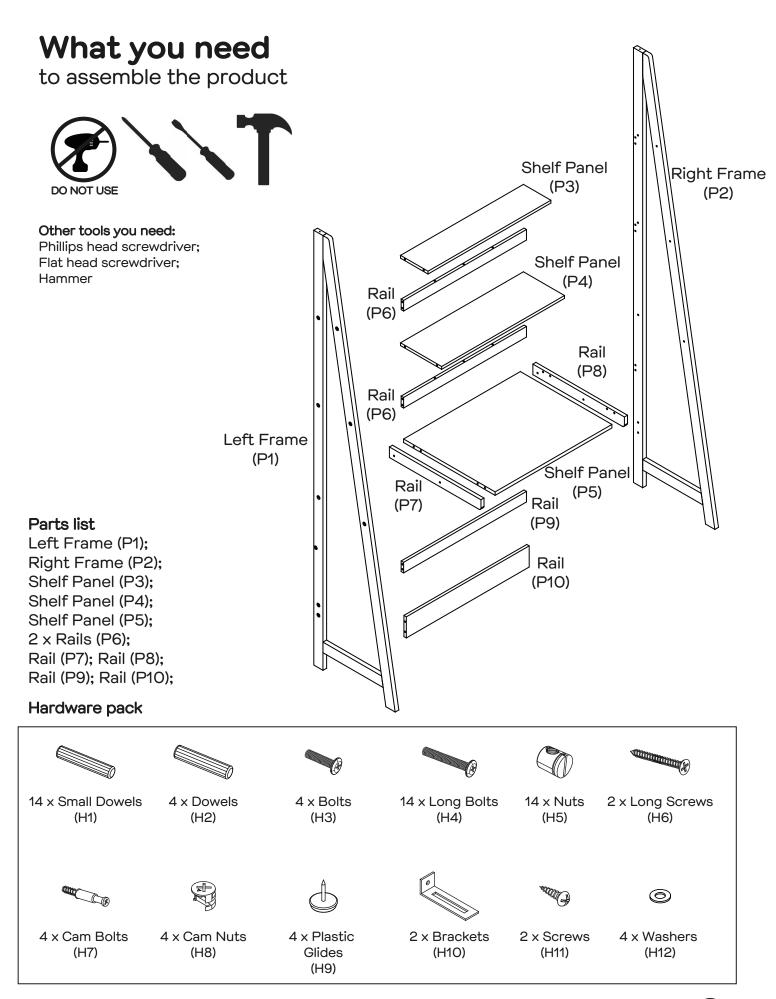

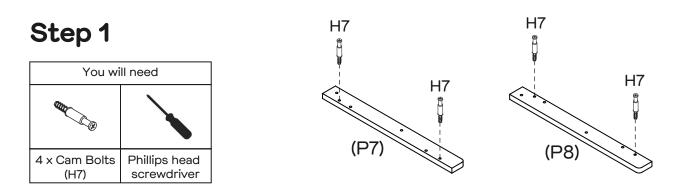


Attach 4 x Cam Bolts (H7) into Rails (P7, P8) with a Phillips head screwdriver.

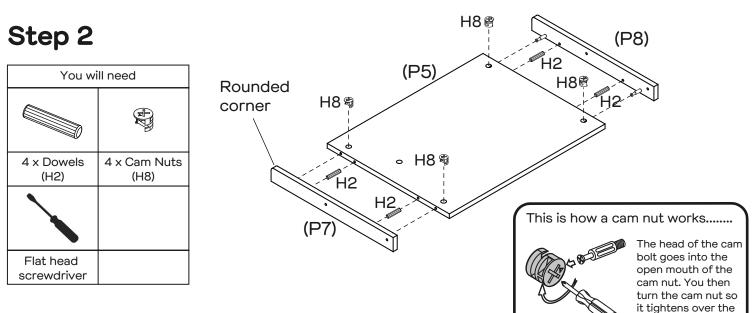

Insert 4 x Dowels (H2) into Shelf Panel (P5). Insert 4 x Cam Nuts (H8) into the holes of Shelf Panel (P5). Rotate the cam nuts so the arrows point towards the incoming cam bolts.

Attach Rails (P7, P8) to Shelf Panel (P5), then tighten the cam nuts using a Flat head screwdriver.

Step 3

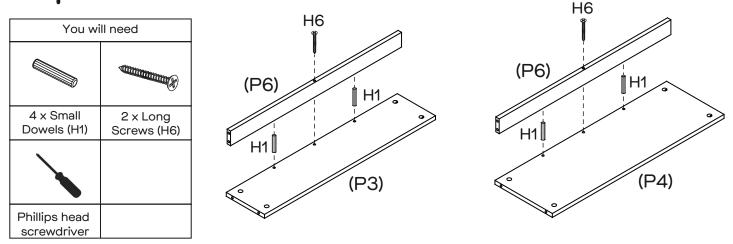


Insert 4 x Small Dowels (H1) into Shelf Panels (P3, P4). Attach Rails (P6) to Shelf Panels (P3, P4) with 2 x Long Screws (H6). Tighten Screws using a Phillips head screwdriver.

Fantastic Furniture Page 6


bolt.



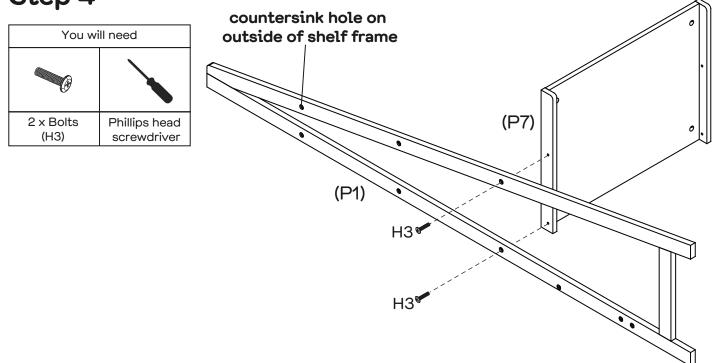


Attach Left Frame (P1) to Rail (P7) with 2 x Bolts (H3) using a Phillips head screwdriver.

Step 5

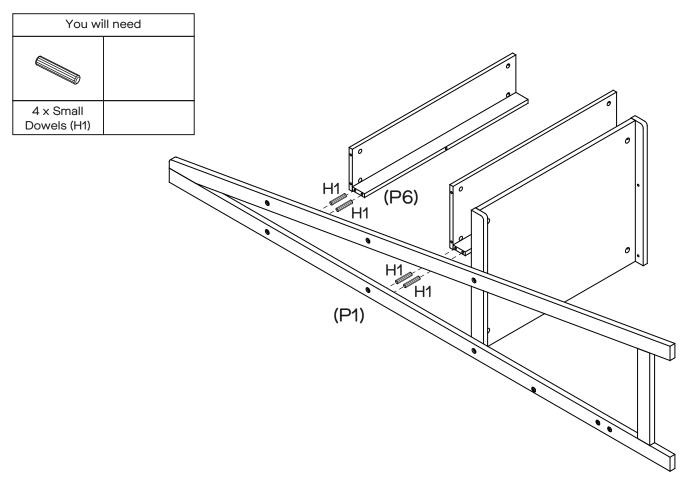


Insert 4 x Small Dowels (H1) into Rails (P6). Attach Shelf Panels (P3, P4) to Left Frame (P1) securely.




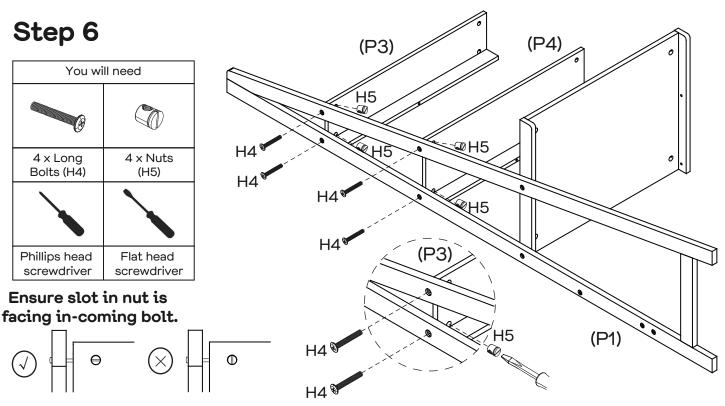

Insert 4 x Nuts (H5) into the holes on Shelf Panels (P3, P4), make sure the opening is facing incoming cam bolts. Push 4 x Long Bolts (H4) through Left Frame (P1), and connect with Shelf Panels (P3, P4) with 4 x Nuts (H5) using a Flat head screwdriver. Tighten the bolts with Phillips head screwdriver.

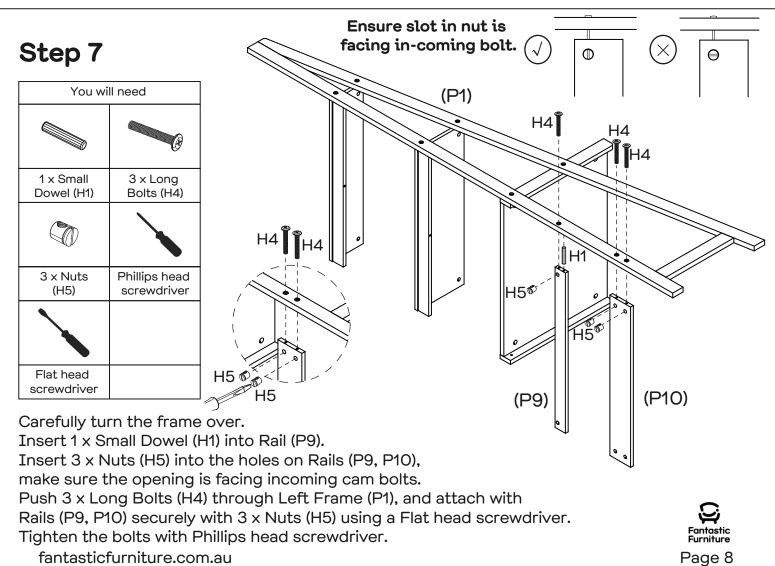

Step 8

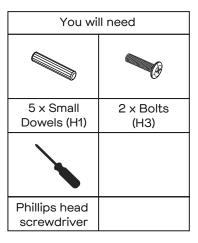

Two People

Required

Carefully turn the frame over.

Insert 5 x Small Dowels (H1) into Rails (P6, P9).

Attach Right Frame (P2) to Rail (P8) with 2 x Bolts (H3) using a Phillips head screwdriver.

H3

∎H1

Page 9

(P9)

H3

(P6)


(P8)

H1 H1


(P2)

H1

(P6)

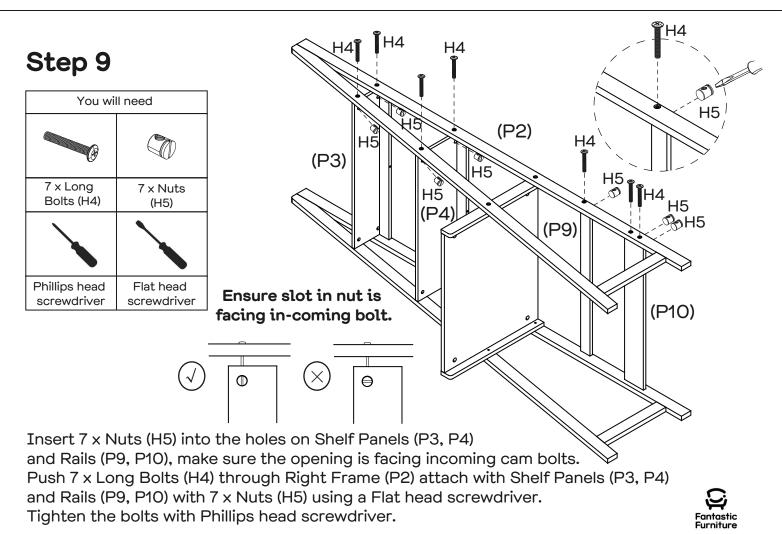


Step 10

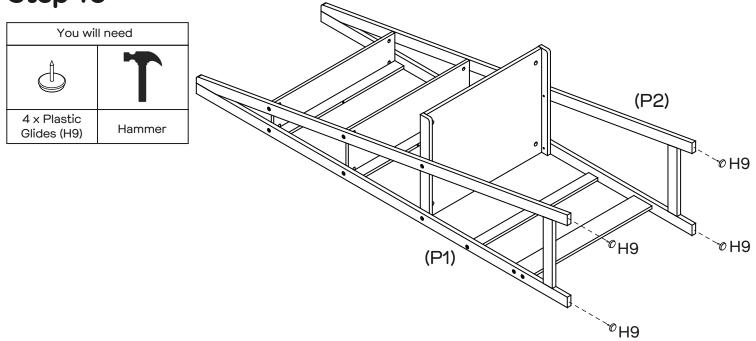

Carefully turn the frame over. Attach 4 x Plastic Glides (H9) to the bottom of Frames (P1, P2) with a Hammer.

Step 11

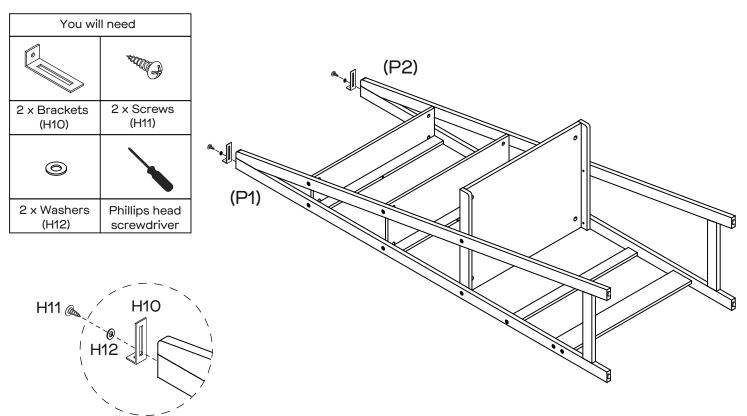


Attach 2 x Brackets (H1O) to the top of Frames (P1, P2) with 2 x Screws (H11) and 2 x Washers (H12), then tighten the screws with Phillips head screwdriver.




Step 12



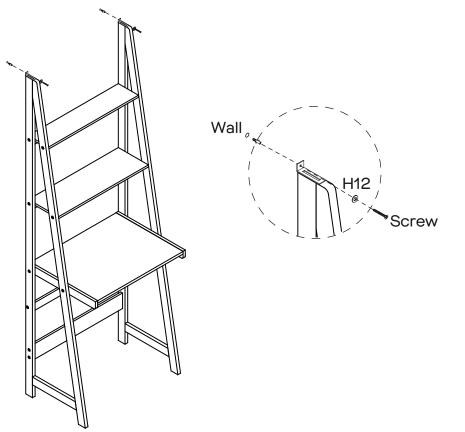

Move the bookcase to the final position, and attach the brackets to the wall securely. Make sure it is firmly attached and snug fit.

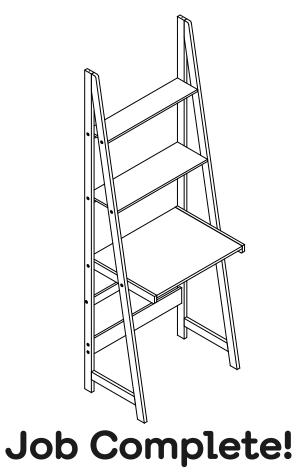

In the interest of our environment please dispose of all packaging thoughtfully.

