


Version 1.0

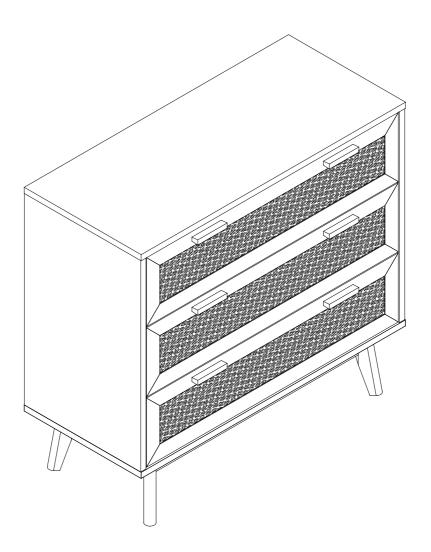





Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide



For plasterboard (without available wood stud)

 Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method:
Screw inserted directly into stud.





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Rattan

Rattan is a natural material that will respond to humidity in the environment. Low humidity may cause the rattan to shrink. High humidity may cause the rattan to absorb moisture and expand, causing the weaving to look loose and wavy.

This is a natural phenomenon and not a defect.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture

Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.




Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product

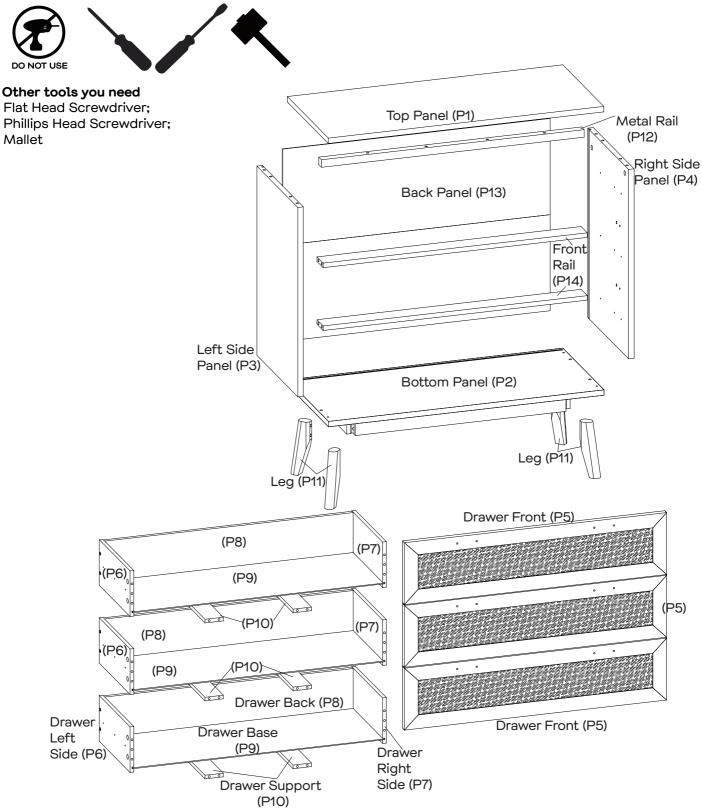



Parts list


- 1 x Top Panel (P1)
- 1 x Bottom Panel (P2)
- 1 x Left Side Panel (P3)
- 1 x Right Side Panel (P4)
- 3 x Drawer Fronts (P5)
- 3 x Drawer Left Sides (P6)
- 3 x Drawer Right Sides (P7)
- 3 x Drawer Backs (P8)
- 3 x Drawer Bases (P9)
- 6 x Drawer Supports (P10)
- 4 x Legs (P11)
- 1 x Metal Rail (P12)
- 1 x Back Panel (P13)
- 2 x Front Rails (P14)




Hardware Pack

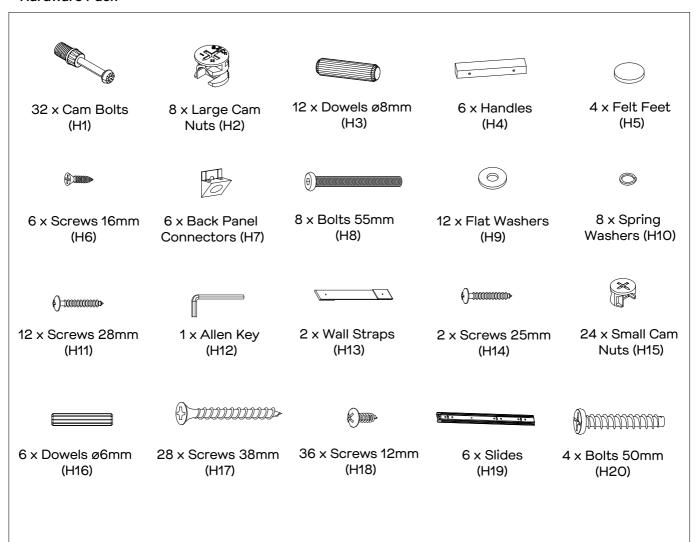

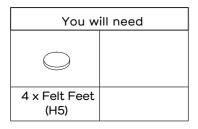

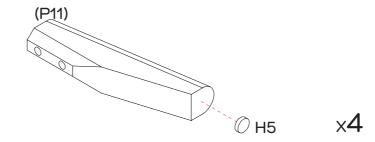

Attach 1 x felt foot (H5) onto each leg (P11) as shown.

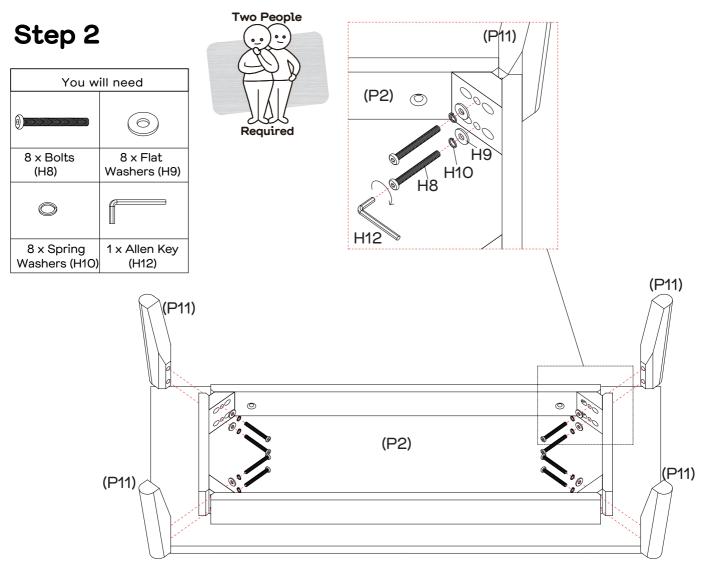


Attach 1 x leg (P11) onto bottom panel (P2), using 2 x bolts (H8), 2 x spring washers (H10) and 2 x flat washers (H9).

Tighten the bolts with allen key (H12).

Repeat this step for the other 3 x legs (P11).

With assistance turn the assembled frame over.

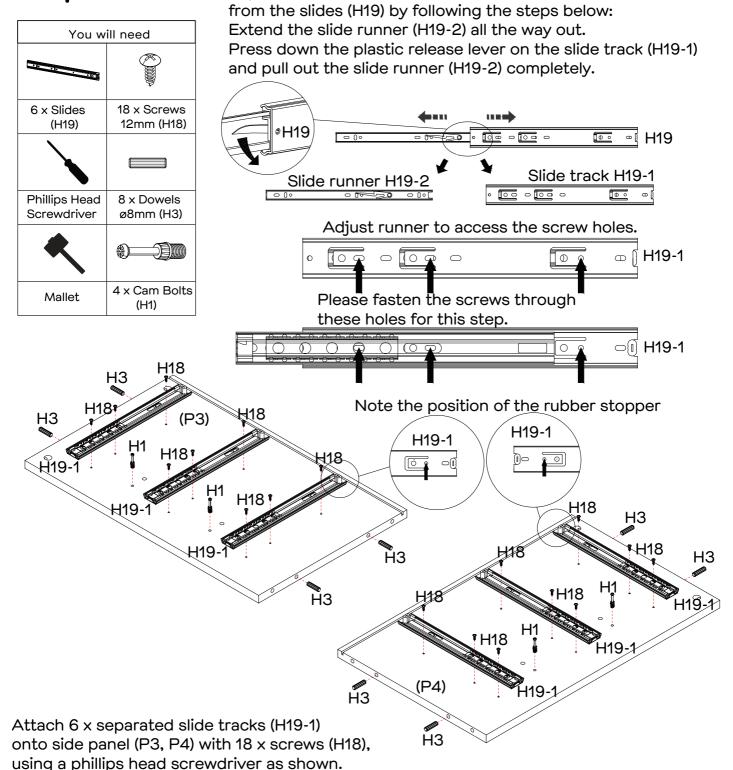

Separate the 6 x slide runners (H19-2) and slide tracks (H19-1)


Ensure the slide tracks (H19-1) are attached so the rubber stopper is positioned near the grooves on side panel (P3, P4) as shown.

Screw 2 x cam bolts (H1) into each side panel (P3, P4), using a phillips head screwdriver.

Insert 4 x dowels (H3) into each panel (P3) & (P4) as shown. If needed use a mallet to gently tap the dowels into place.

You will need 4 x Dowels ø8mm (H3) H3 (P14) X2


Insert 2 x dowels (H3) into each front rail (P14) as shown. Use a mallet to gently tap the dowels into place if needed.

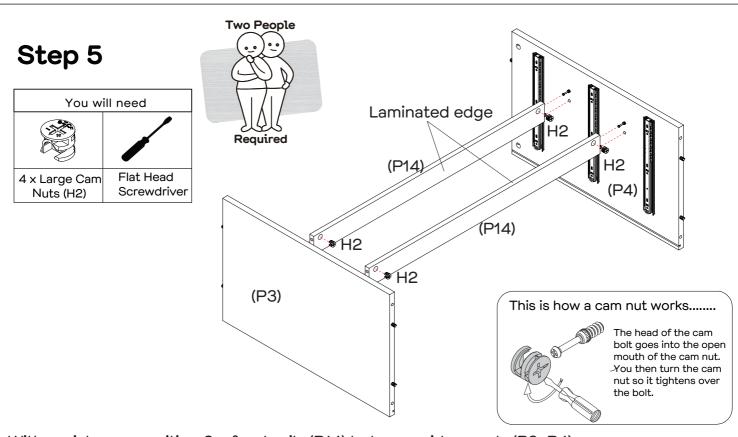


With assistance, position 2 x front rails (P14) between side panels (P3, P4), ensuring the grooves on the side panels (P3, P4) are on the same side. Insert 4 x large cam nuts (H2) into front rails (P14).


Rotate the cam nuts so the arrows point towards the incoming cam bolts. Using a flat head screwdriver turn clockwise to lock.




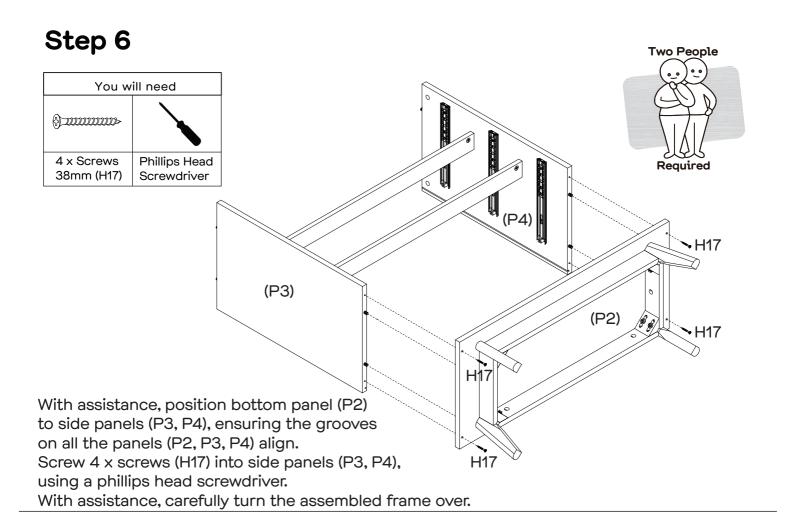

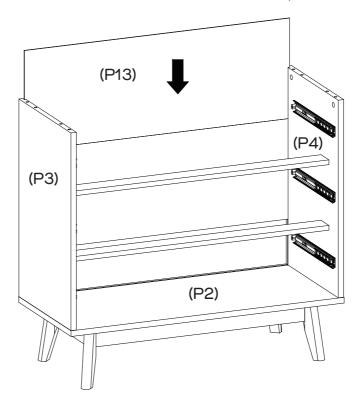


Unfold and slide back panel (P13) into the grooves on side panels (P3, P4) and bottom panel (P2).

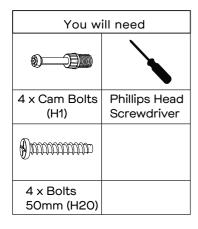

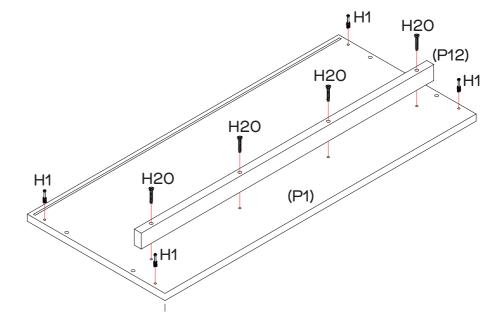


Screw 4 x cam bolts (H1) into top panel (P1), using a phillips head screwdriver. Attach metal rail (P12) onto top panel (P1) with 4 x bolts (H20), using a phillips head screwdriver.

Step 9

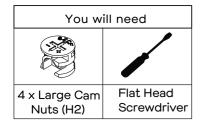




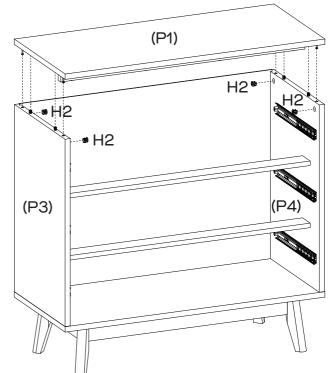

With assistance, position top panel (P1) onto the assembled frame as shown.

Insert 4 x large cam nuts (H2) into panels (P3, P4). Rotate the cam nuts so the arrows point towards the incoming cam bolts.


Using a flat head screwdriver turn clockwise to lock.

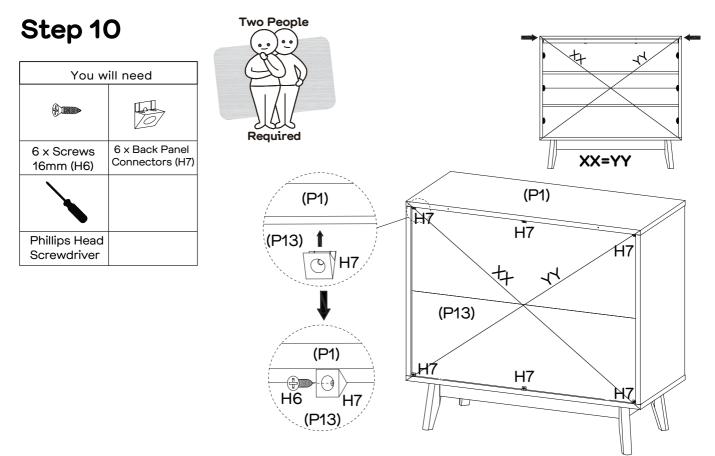


If necessary, gently adjust the top panel (P1) sideways in either direction until XX and YY are equal.

Holding it in place, fix 6 x back panel connectors (H7) to assembled unit with 6 x screws (H6) as shown, using a phillips head screwdriver.


Step 11

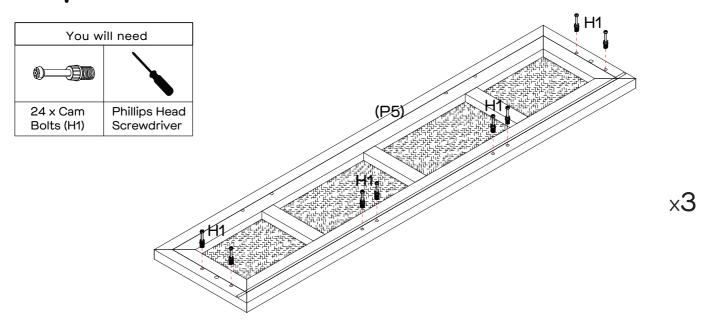


Screw 8 x cam bolts (H1) each into drawer front (P5), using a phillips head screwdriver.

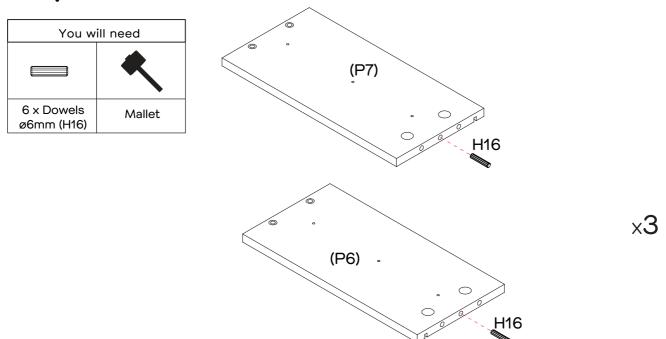

Insert 1 x dowel (H16) into each side panel (P7, P6) as shown. if needed use a mallet to gently tap the dowels into place.

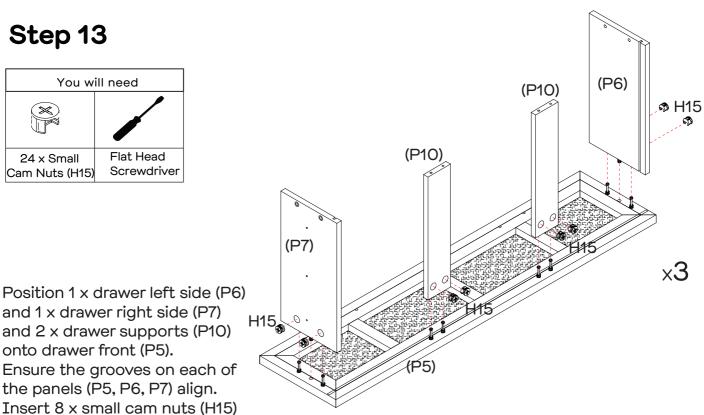

into drawer sides (P6, P7) and drawer supports (P10 x2). Rotate the cam nuts so the arrows point towards the incoming cam bolts. Using a flat head screwdriver turn clockwise to lock.

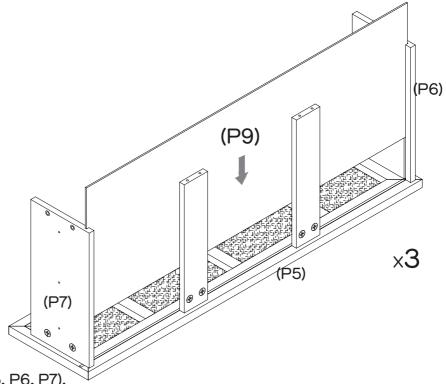



Slide drawer base (P9)

into the grooves on panels (P5, P6, P7).

Repeat this step for the other 2 x drawer assembly.

Step 15

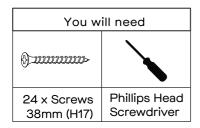

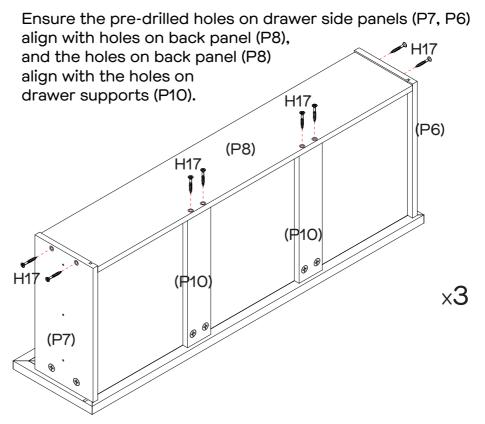


Attach drawer back (P8) onto an assembled drawer with 8 \times screws (H17), using a phillips head screwdriver as shown.

Repeat this step for the other 2 x drawer assembly.


Step 16 Please fasten the screws through these holes for this step. You will need H19-2 H18 6 x Slide 18 x Screws Runners (H19-2) 12mm (H18) H18 (P7) **^**H1\8 Phillips Head Screwdriver x3 H19-2 H18


Attach 1 x slide runner (H19-2) to each drawer left side (P6) and drawer right side (P7) with 3 x screws (H18), using a phillips head screwdriver as shown. Repeat this step for the other 2×10^{-2} drawer assembly.

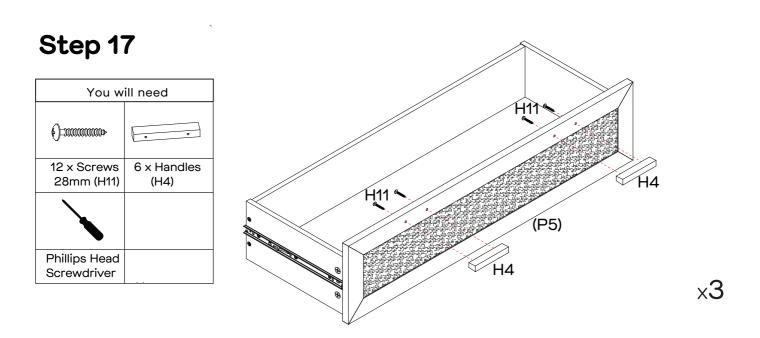


Attach 2 x handles (H4) onto a drawer front (P5) with 4 x screws (H11), using a phillips head screwdriver as shown. Repeat this step for the other $2 \times drawer$ assembly.



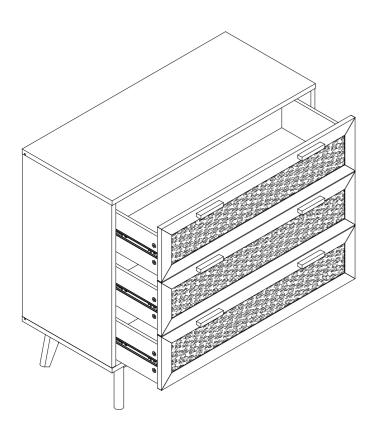


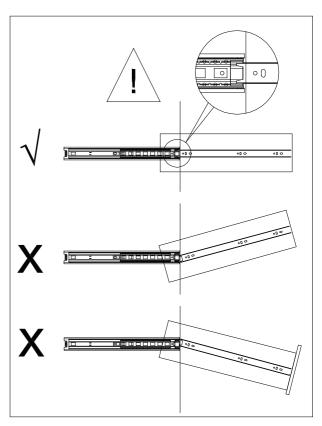

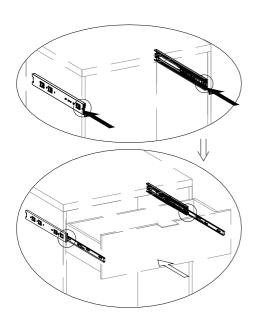


Move inner ball bearing track to front of slide track (H19-1).

 Gently insert drawer slide runner (H19-2) in between the ball bearing track.





Position drawer so that slide runners (H19-2) align with slide tracks (H19-1) as shown. Gently push drawer into the closed position.



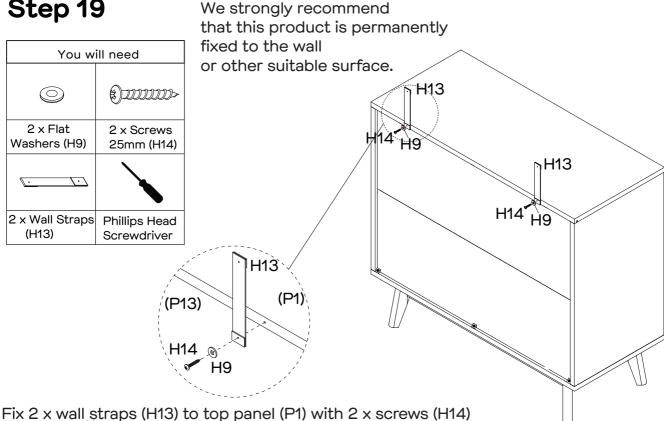

and 2 x flat washers (H9) as shown, using a phillips head screwdriver.

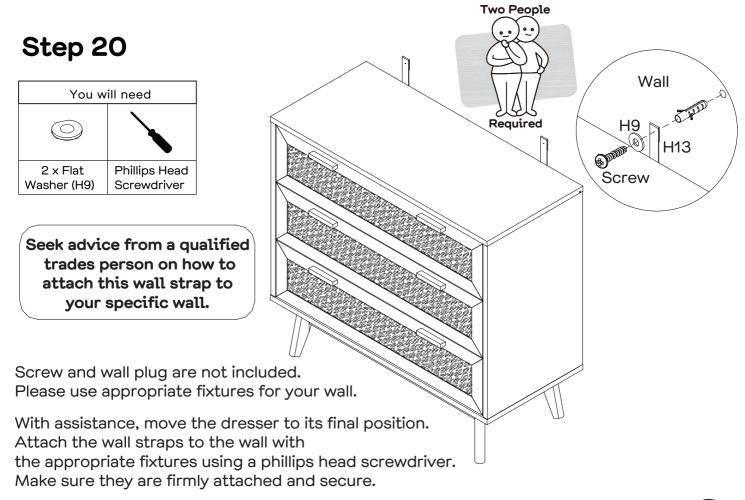

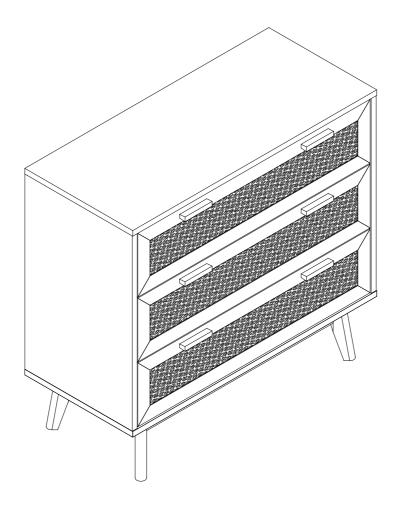

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.