

Two People

Required

Sonoma

Robe 2 Door

fantasticfurniture.com.au

# Secure it!

Reduce the risk of furniture tip-over accidents





# WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

#### **WEIGHT LIMIT: 20 KGS PER SHELF**

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
   Check anchors regularly.
- Avoid putting a TV on this product.

#### Wall attachment guide

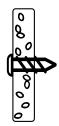


For plasterboard (without available wood stud)

 **Securing method:** Self drilling plasterboard anchor.

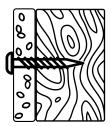

For plasterboard (with available wood stud)

 Securing method:
Screw inserted directly into stud.

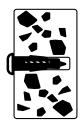



For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



## Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



# **Assembly Checklist**



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

#### Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

## What You Need





Other tools you need

Phillips Head screwdriver; Hammer

#### Parts list


#### Box 1:

Top Panel (P3) Bottom Panel (P4) Fixed Panel (P5) 2 x Back Support Panel (P6) 2 x Lower Frame (P8)

2 x Base Rails (P9)


#### Box 2:


Side Left Panel (P1) Side Rigth Panel (P2) 2 x Back Panel (P7) 2 x Door Panel (P10)

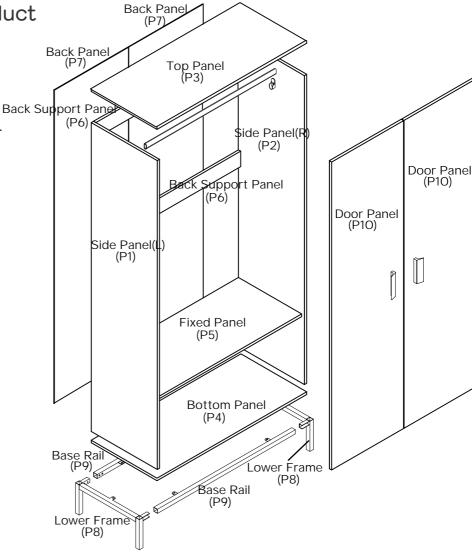

#### Hardware list:

#### **Box 1:**

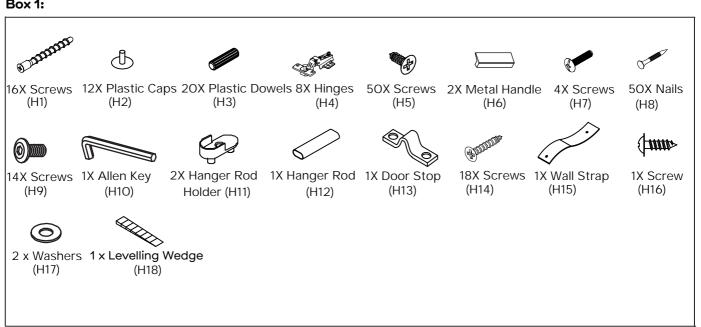

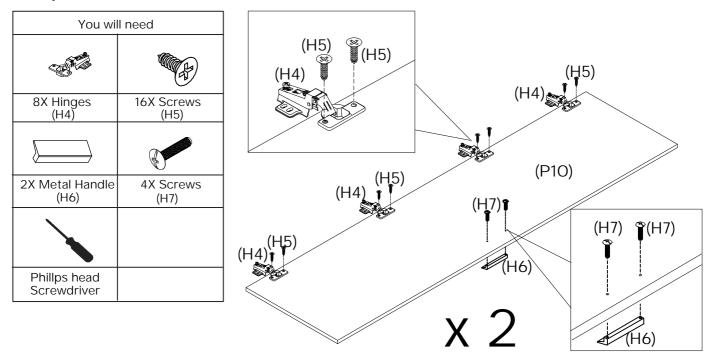


Fix 4 x Hinges (H4) to Door Panel (P10) using 8 x Screws (H5) by tightening with the Phillps Head Screwdriver.


Fix Metal Handle (H6) to pre-drilled holes using 2 x Screws (H7), tighten with a Phillips Head Screwdriver.

Repeat for 2nd Door Panel (P10).

## Step 2

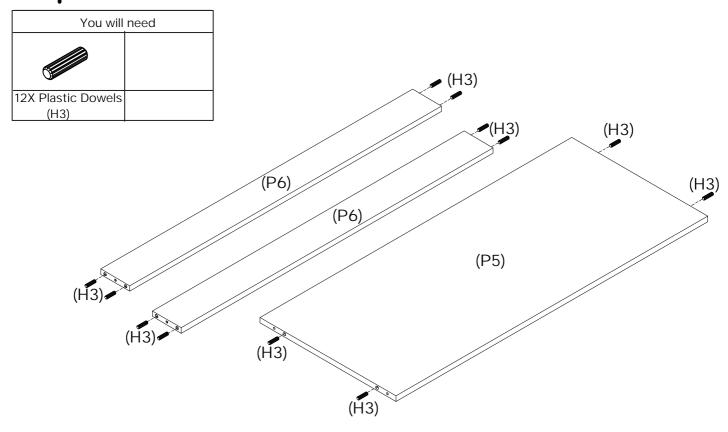




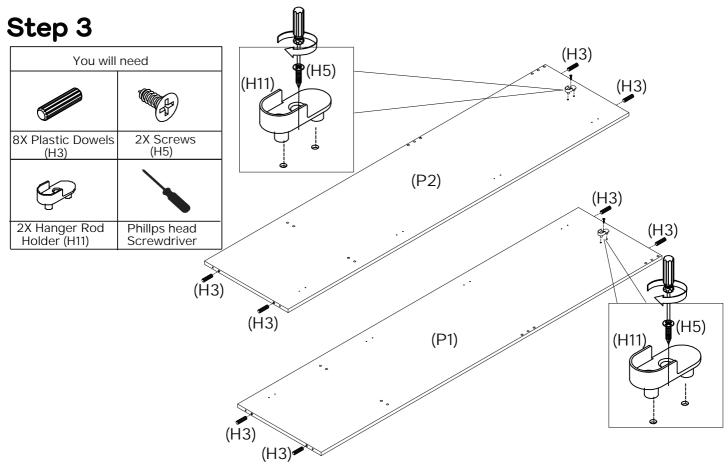

Fix 2 x Hanger Rod Holders (H11) to Side Panels (P1 & P2) as shown with 2 x Screw (H5) by tightening with the Phillps Head Screwdriver.

Insert 8 x Plastic Dowels (H3) to Side Panels (P1&P2) one by one.

#### Step 4

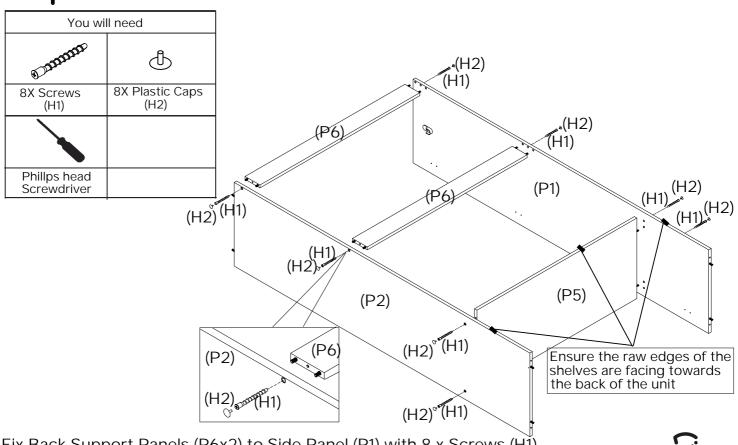


**Fantastic** 


Page 7

Fix Back Support Panels (P6x2) to Side Panel (P1) with 8 x Screws (H1), Use Plastic Caps (H2) to cover the screws (H1). Repeat for Side Panel (P2).

fantasticfurniture.com.au

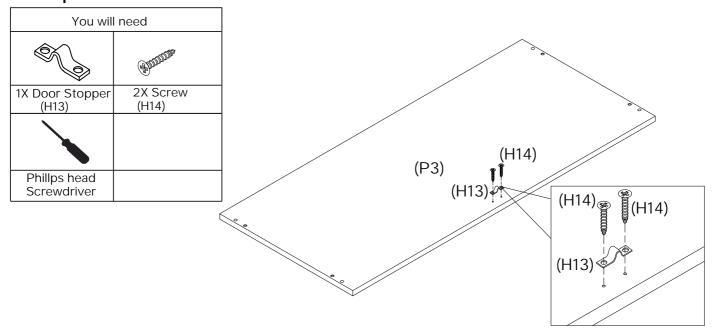


Attach Door Stop (H13) to Top Panel (P3) with 2 x Screws (H14) as shown by tightening with the Phillps Head Screwdriver.

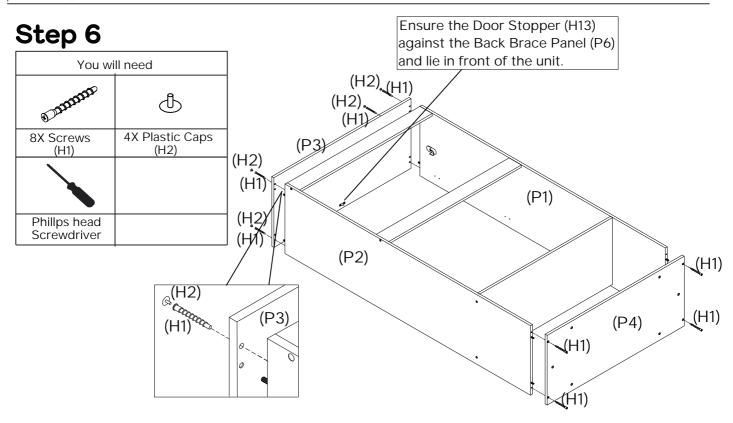


Fix Top and Bottom Panel (P3 & P4) to Side Panels (P1 & P3) with 8 x Screws (H1) by tightening with the Phillps Head Screwdriver.

Fantastic Furniture Page 8

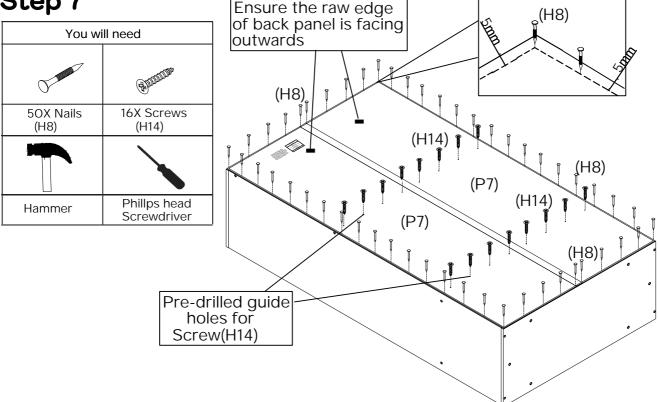


Using a Hammer, fix Back Panel (P7) to assembled unit using 50 x Nails (H8). Fix Back Panel (P7) to Fixed Shelves (P5) and Back Support Panel (P6) with 16 x Screws (H14), tighten Screws with a Phillips Head Screwdriver.



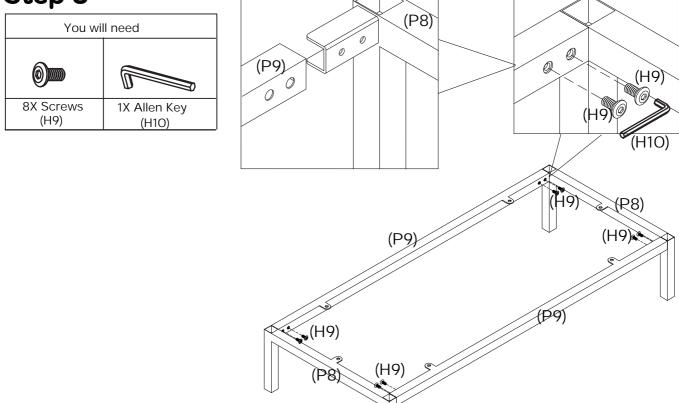


Attach Base Rails (P9x2) with Lower Frame (P8x2) as shown with 8 x Screws (H9) by tightening with Allen Key (H10). fantasticfurniture.com.au

Fantastic Furniture Page 9

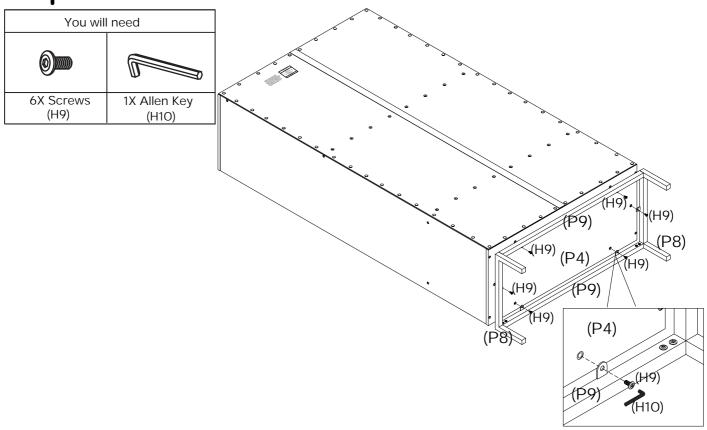


Fix assembled base frame to assembled unit using  $6\ x$  Screws (H9) ,by tightening with Allen Key (H10).

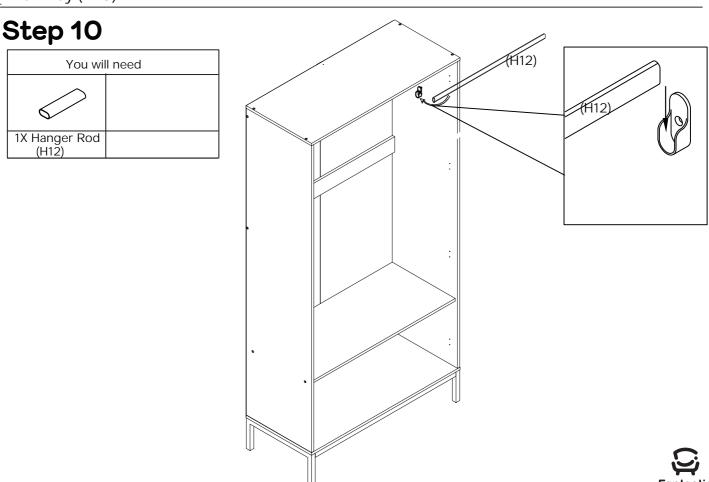


Page 10

Place Hanger Rod (H12) into Hanger Rod Holder (H11). fantasticfurniture.com.au

You will need	
32X Screws (H5)	Phillps head Screwdriver

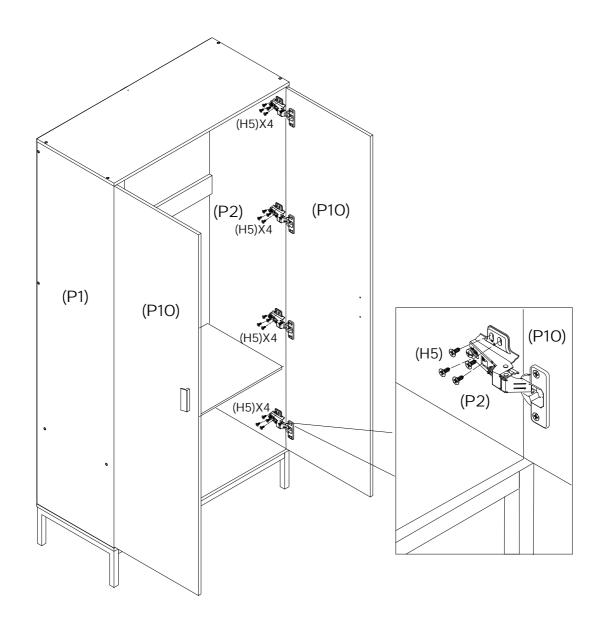




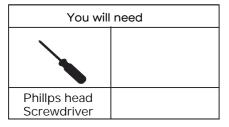


TO ADJUST YOU DOORS TO MAKE THE GAPS


MORE EVEN (OPTIONAL)

 STEP 12.1 Open the door.

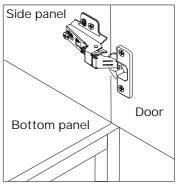


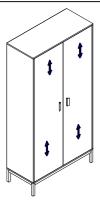


STEP 12.2 Adjust the door panels upward or downward

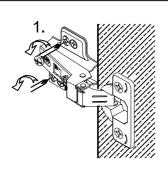


Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.

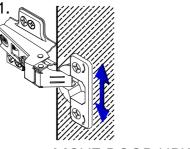


MOVE DOOR UPWARD OR DOWNWARD

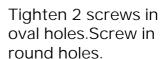 


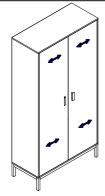 


STEP 12.3 C Adjust the flush between door panel and side panel

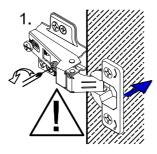

MOVE DOOR OUTWARD by turning this screw counter-clockwise

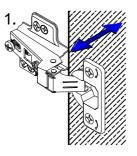


KEEP DOOR IN RIGHT POSITION

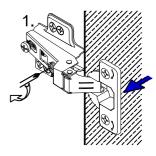


MOVE DOOR OUTWARD by turning this screw clockwise




STEP 12.4 Adjust the gap between door panel and side panel

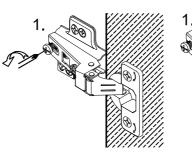

Loosen this screw a bit

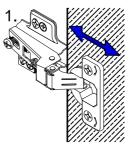


MOVE DOOR BACK OR FORTH

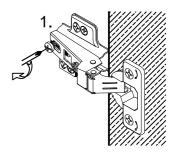

Re-tighten this screw



You will need	
	<i>(+mm</i> >
1 x Wall Strap (H15)	1 x Wall Strap Screw (H16)
0	
1 x Washer (H17)	Phillps head Screwdriver

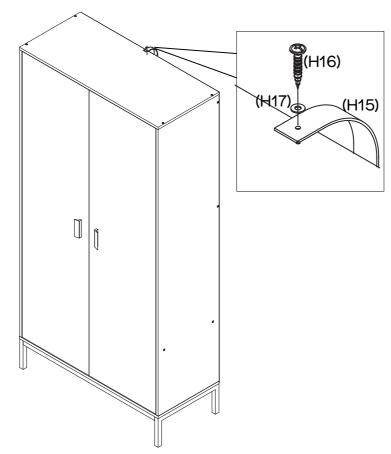

Attach the Wall Strap (H15) to Top Panel (P3) with 1 x Washer (H17) and 1 x Wall Strap Screw (H16) by tightening with the Phillips Head Screwdriver.

## Step 14

You will need		
0		
1 x Washer (H17)		


Screws and wall plugs are not provided please use appropriate fixtures for your wall.

 
Move the unit into it's final position and then secure the Safety Strap to the wall.


Ensure it is firmly attached. Screw and wall plug are not provided. Please use appropriate fixtures for your wall.

\*Seek advice from a qualified tradesperson on how to attach this safety strap to your specific wall.

fantasticfurniture.com.au

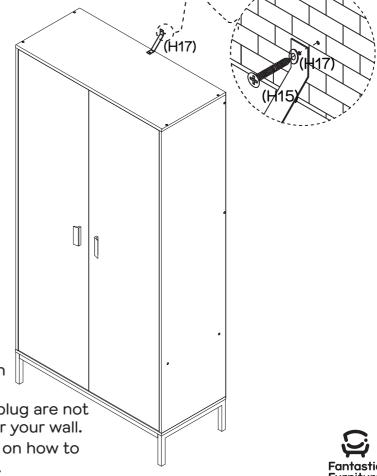


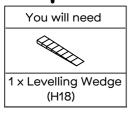

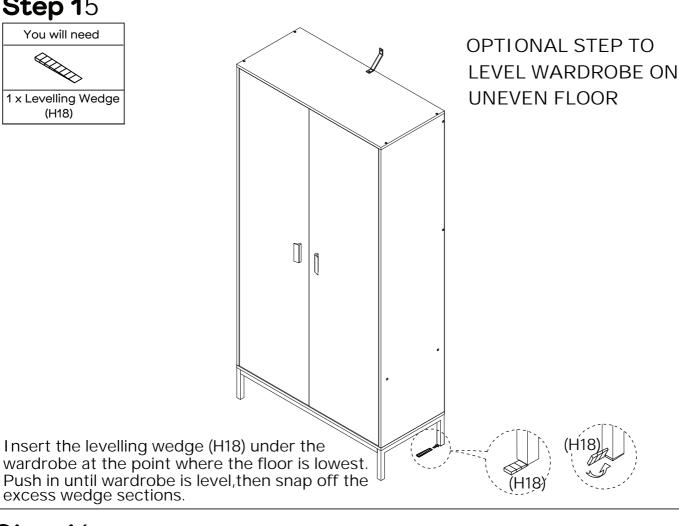

## **Step 1**6

excess wedge sections.

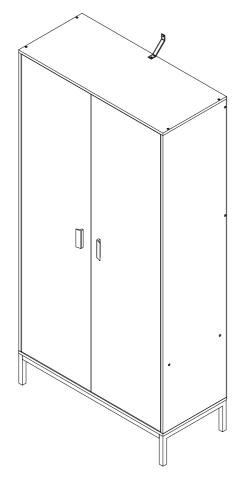

# Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

