

Two People



Sonoma Clothes Rack 2 Drawer

Secure it!

Reduce the risk of furniture tip-over accidents



WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

WEIGHT LIMIT: 20 KGS PER SHELF

To reduce the risk of furniture tipover:



 
- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.
- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

Securing method: Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.

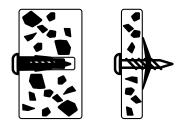

For masonry wall

Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Assembly Checklist




Read through the instructions

carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

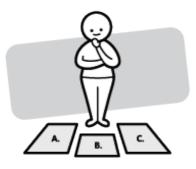



Identify and lay out all of the components before you begin assembly.


Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.




What You Need

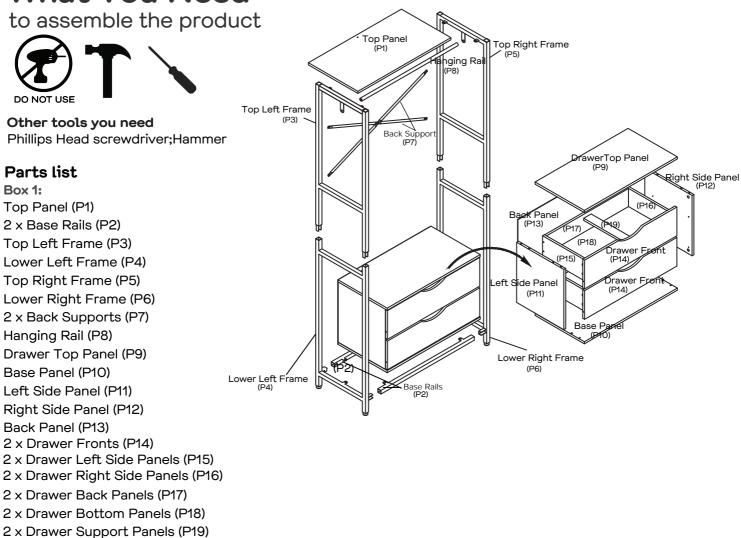

Hardware Pack:

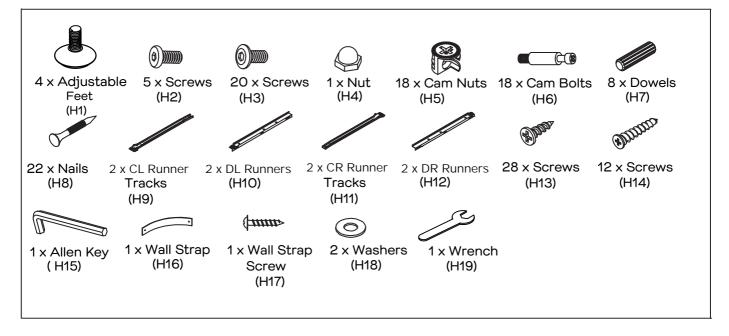




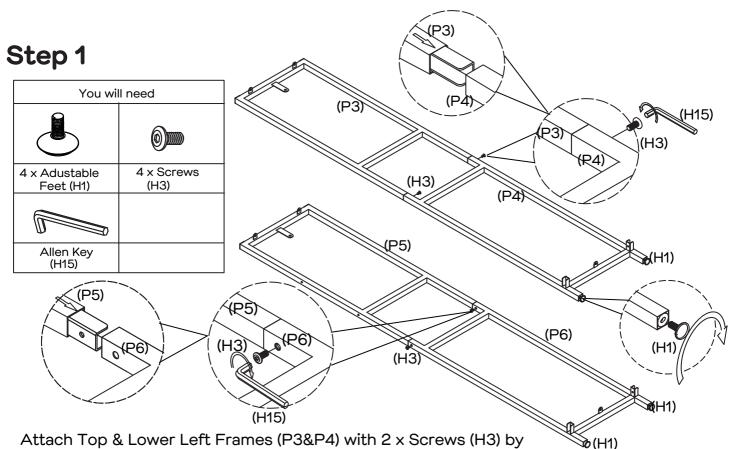


tightening with the Allen Key (H15).


Repeat steps for Top & Lower Right Frames (P5&P6). Secure 4 x Adjustable Feet (H1) to the bottom of Lower Left & Right Frames (P4&P6) as shown.

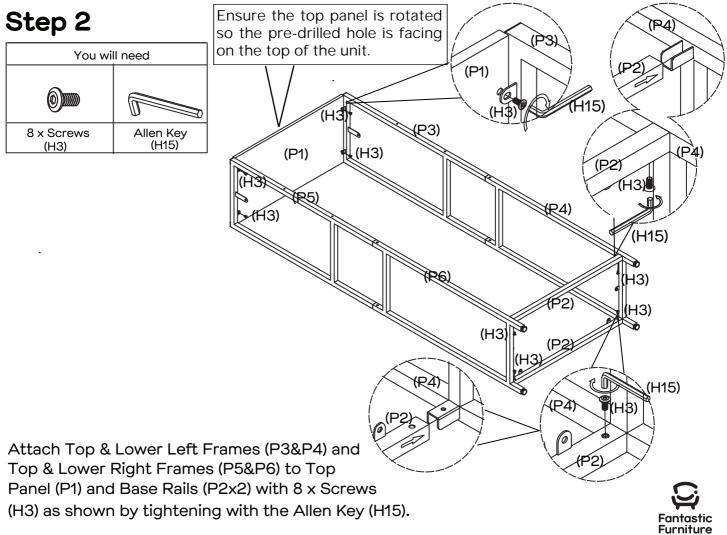


Page 6

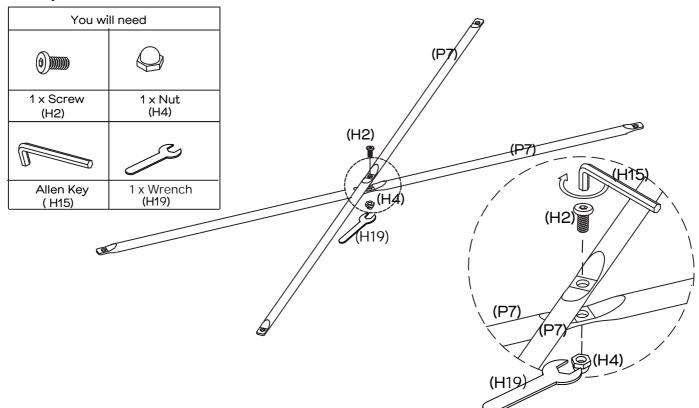

Secure Back Supports (P7x2) together as shown with 1 x Nut (H4) and 1 x Screw (H2) by tightening with the Allen Key (H15) and Wrench (H19).

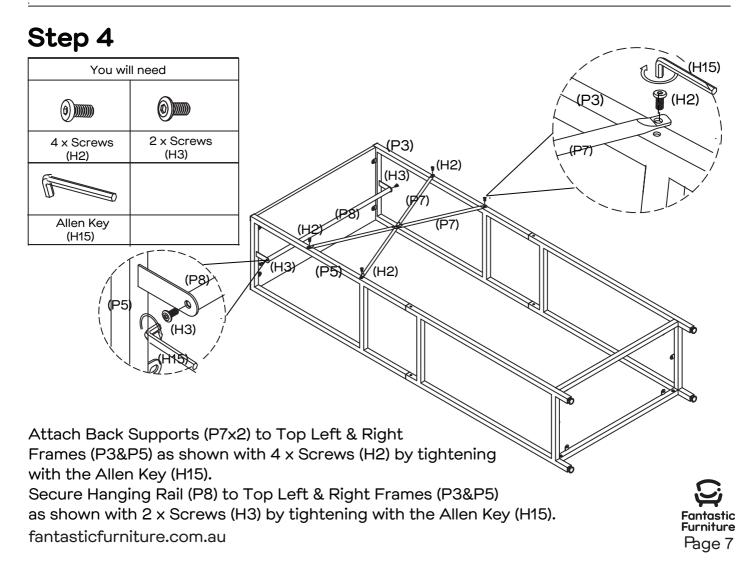


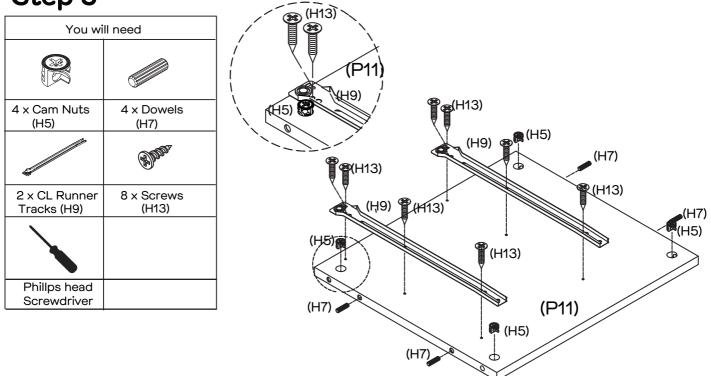

Attach 2 x CL Runner Tracks (H9) to Left Side Panel (P11) with 8 x Screws (H13) as shown by tightening with the Phillips Head Screwdriver.


Insert 4 x Dowels (H7) and 4 x Cam Nuts (H5) into Left Side Panel (P11) as shown.



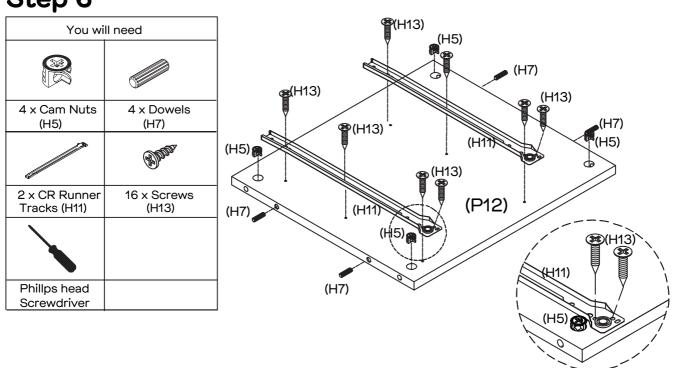


Attach 2 x CR Runner Tracks (H11) to Right Side Panel (P12) with 8 x Screws (H13) as shown by tightening with the Phillips Head Screwdriver.

Insert 4 x Dowels (H7) and 4 x Cam Nuts (H5) into Right Side Panel (P12) as shown.

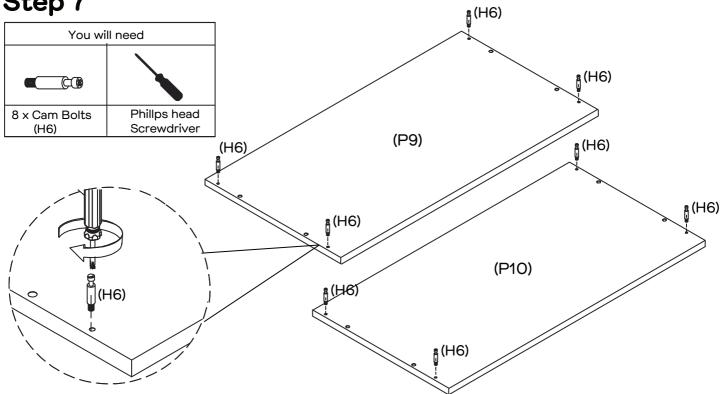


Attach 8 x Cam Bolts (H6) to Drawer Top Panel (P9) and Base Panel (P10) as shown by tightening with the Phillips Head Screwdriver.

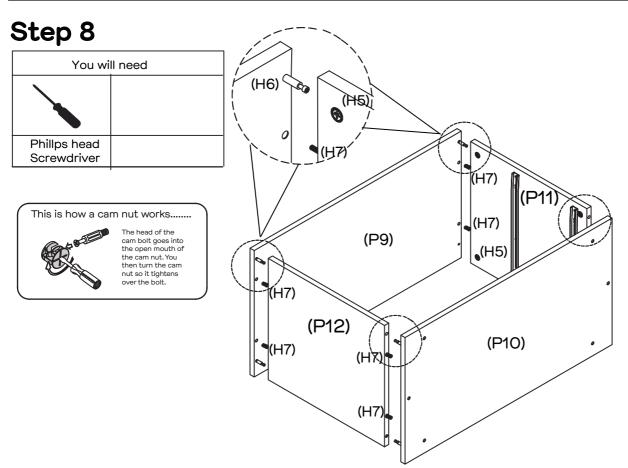


Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts. Secure the Drawer Top Panel (P9) and Base Panel (P10) to Left & Right Side Panels (P11&P12) as shown by tightening 8 x Cam Nuts (H5) with the Phillips Head Screwdriver. fantasticfurniture.com.au



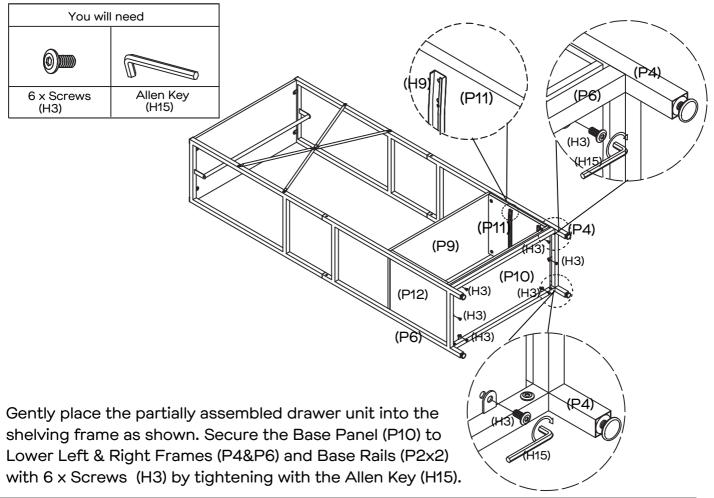


Step 10

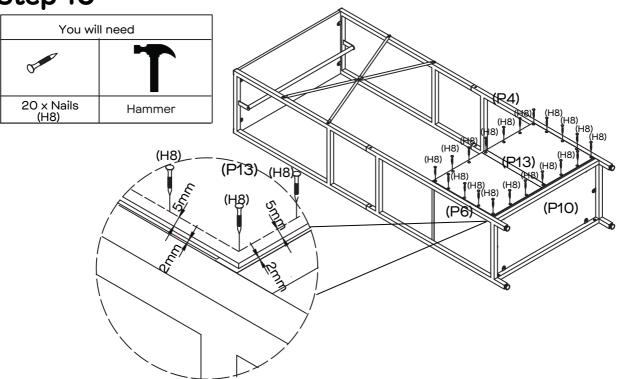


Secure Back Panel (P13) to the back of the partially assembled drawer unit as shown with 20 x Nails, approximately 5mm from the edge, using the Hammer. Ensure the Fantastic Furniture Back Panel is sitting square in the unit before securing, with about 2mm around each edge.

Page10

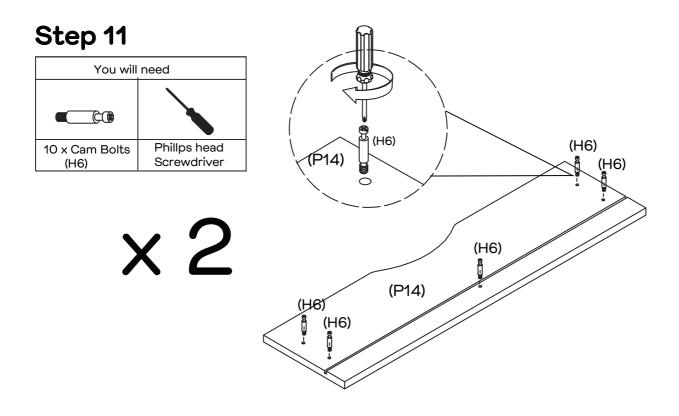

Secure 5 x Cam Bolts (H6) to Drawer Front (P14) by tightening with the Phillips Head Screwdriver.


Repeat steps for the second Drawer.

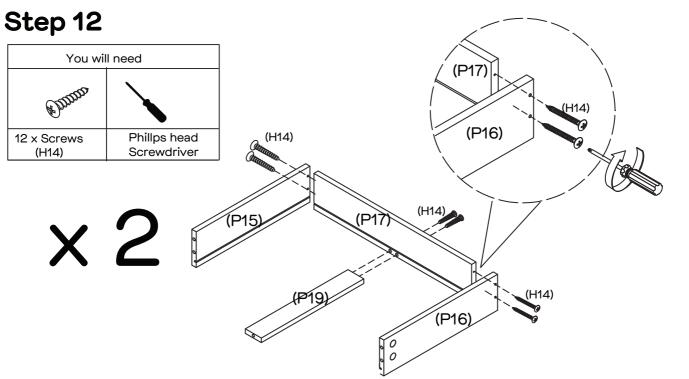

Secure Left & Right Drawer Sides (P15&P16) to Back Panel (P17) with 4 x Screws (H14) by tightening with the Phillips Head Screwdriver. Attach Drawer Support Panel (P19) to Back Panel (P17) with 2 x Screws (H14) by tightening with the Phillips Head Screwdriver. Repeat steps for the second Drawer.





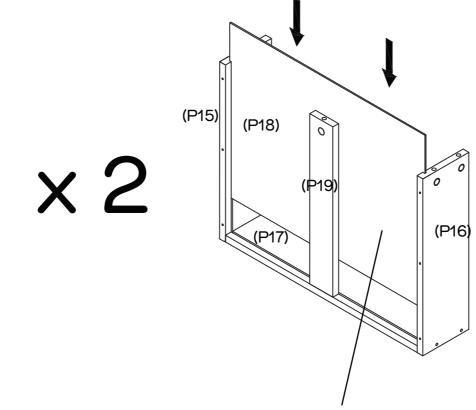


Raw Side

Fantastic Furniture

Page 12


Slide Drawer Base (P18) into the grooves of Left & Right Drawer Sides (P15&P16) and Back Panel (P17).

Repeat steps for the second Drawer.

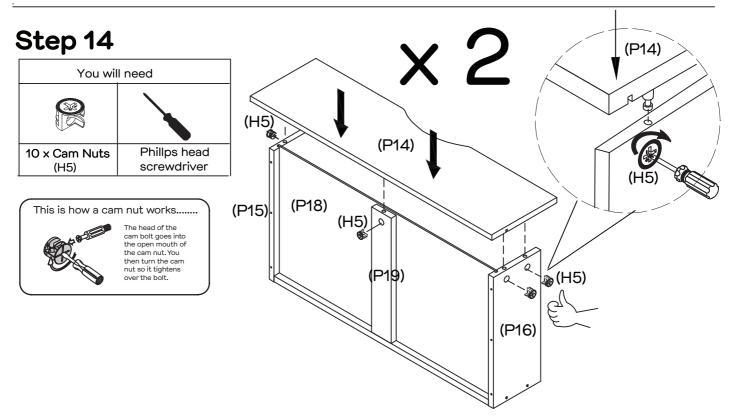

Insert 5 x Cam Nuts (H5) into Left & Right Drawer Sides (P15&P16) and Drawer Support Panel (P19) as shown. Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts. Secure the Drawer Front (P14) to Drawer Left & Right Side Panels (P15&P16) and Drawer Support Panel (P19) as shown by tightening 5 x Cam Nuts (H15) with the Phillips Head Screwdriver.

Repeat steps for the second Drawer.

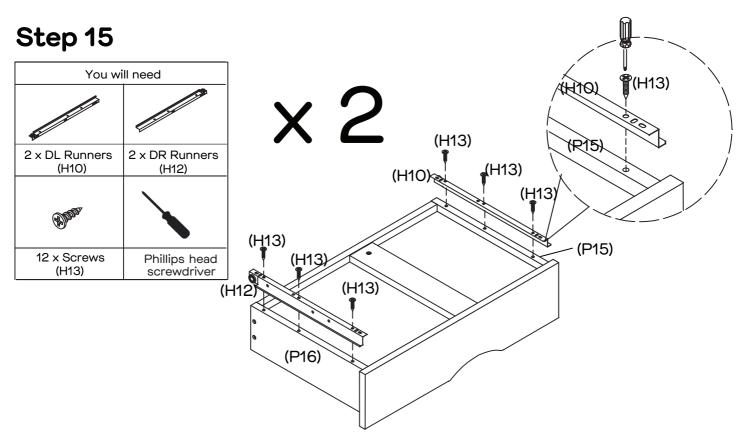


Secure 1 x DL Runner (H10) to Drawer Left Side Panel (P15) and 1 x DR Runner (H12) to Drawer Right Side Panel (P16) as shown with 6 x Screws (H13) by tightening with the Phillips Head Screwdriver.

Repeat steps for the second Drawer.

Step 16

You will need	
	(>
1 x Wall Strap (H16)	1 x Wall Strap Screw (H17)
0	
1 x Washer (H18)	Phillps head Screwdriver

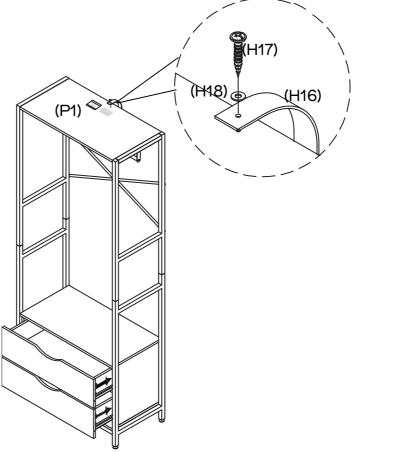


Attach the Wall Strap (H16) to Top Panel (P1) with $1 \times$ Washer (H18) and $1 \times$ Wall Strap Screw (H17) by tightening with the Phillips Head Screwdriver.

 
Carefully insert the assembled drawers into the unit by gently guiding the runners into the tracks.









Screws and wall plugs are not provided please use appropriate fixtures for your wall.

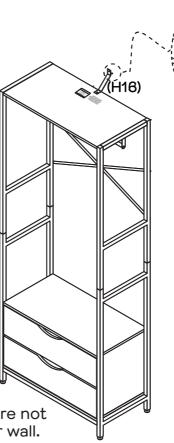

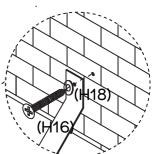

Move the unit into it's final position and then secure the Safety Strap to the wall. Ensure it is firmly attached. Screw and wall plug are not provided. Please use appropriate fixtures for your wall. *Seek advice from a qualified tradesperson on how to attach this safety strap to your specific wall.

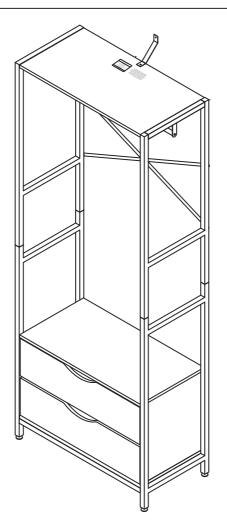

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

