


Version 1.0

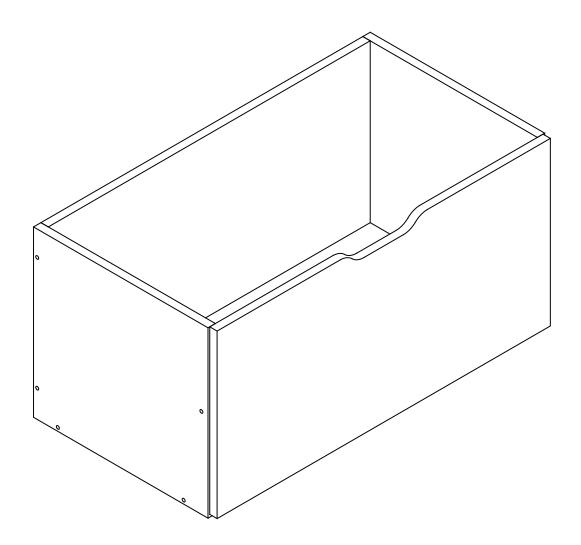



Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture




Assembly Checklist




Read through the instructions carefully before you begin.

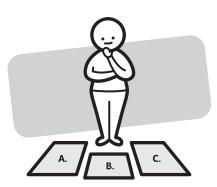

Identify and lay out all of the components before you begin assembly.

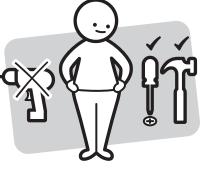

Make sure you have all the required tools. Never use power tools unless instructed.

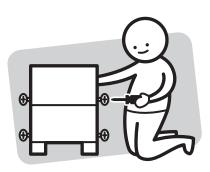

Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.




What you need


to assemble the product

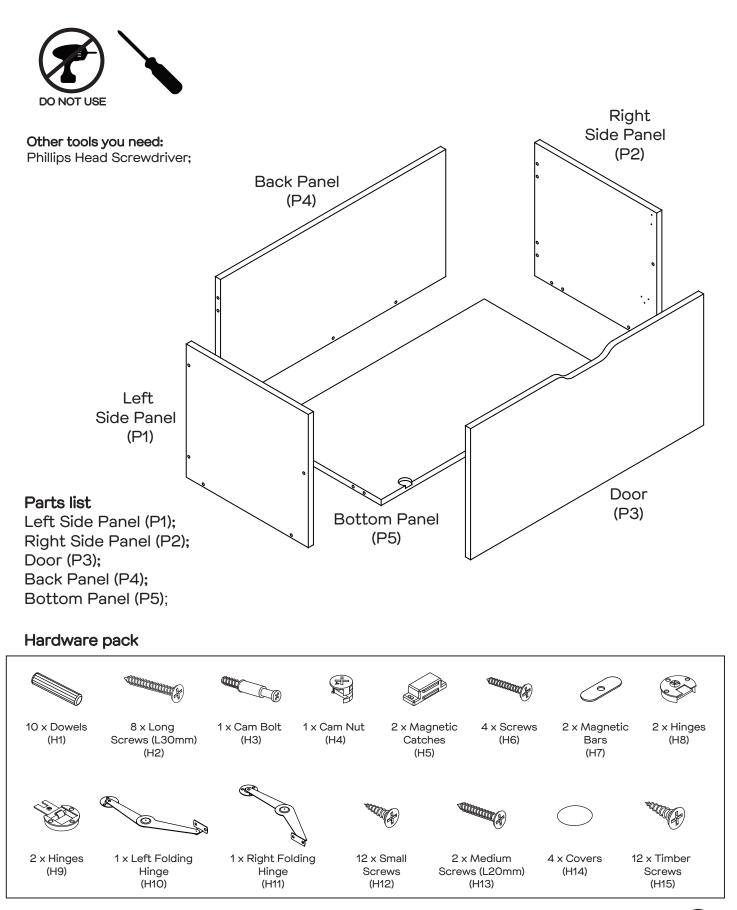


Step 1

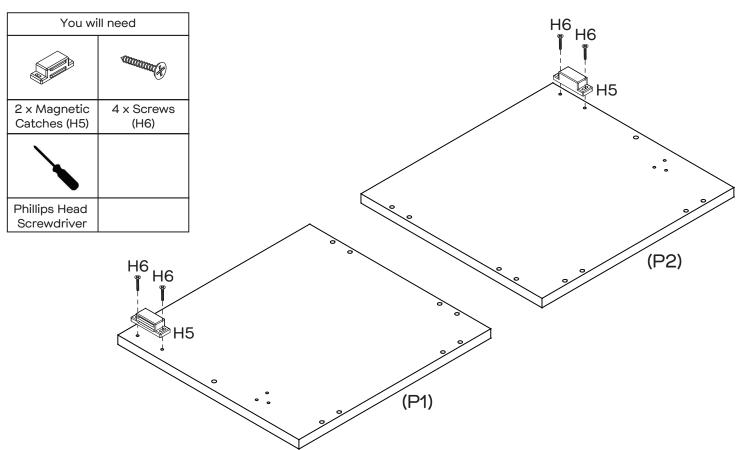


Attach 2 x Magnetic Catches (H5) to Side Panels (P1, P2) with 4 x Screws (H6) as shown.

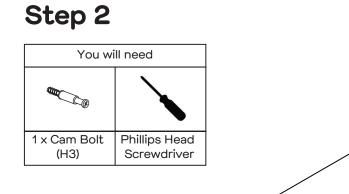

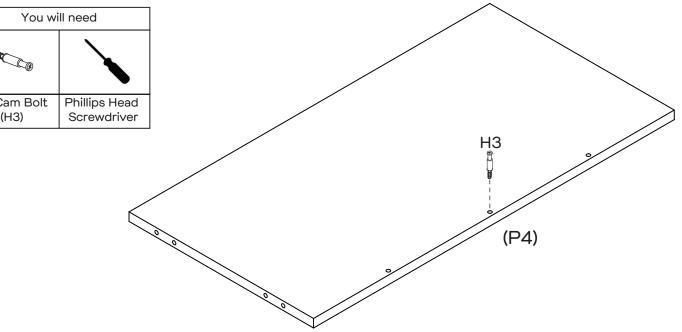


Attach 1 x Cam Bolt (H3) into Back Panel (P4) as shown.




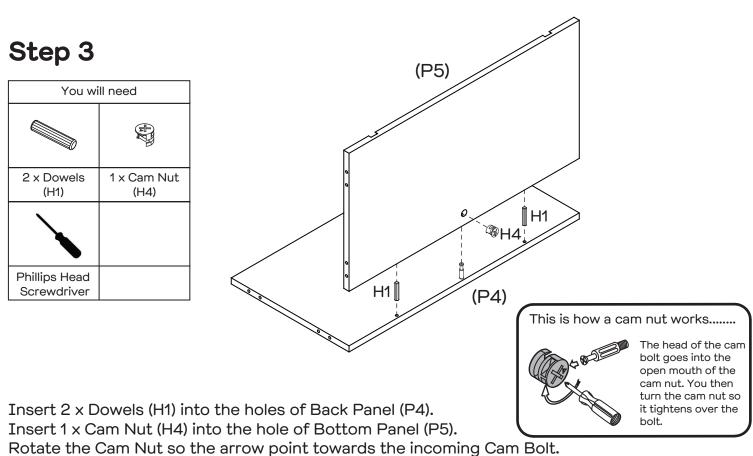


Attach Bottom Panel (P5) to Back Panel (P4), then tighten the Cam Nut using a Phillips Head Screwdriver.

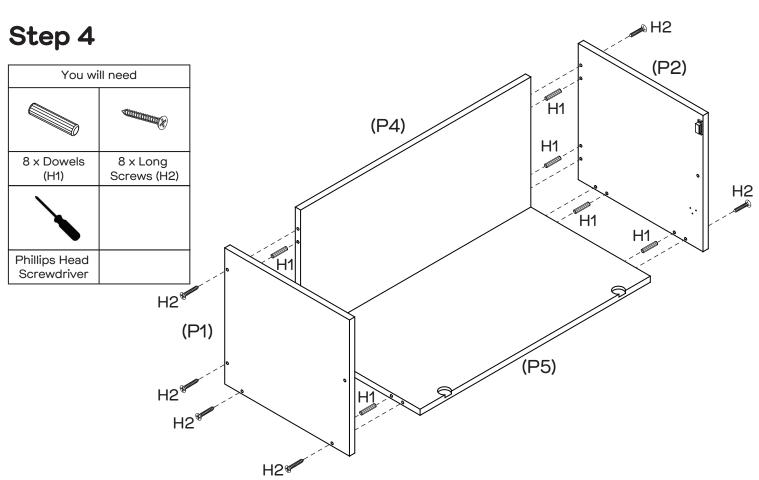

Insert 8 x Dowels (H1) into the holes of Back Panel (P4) and Bottom Panel (P5). Attach Side Panels (P1, P2) to Back Panel (P4) and Bottom Panel (P5) with 8 x Long Screws (H2) using a Phillips Head Screwdriver.

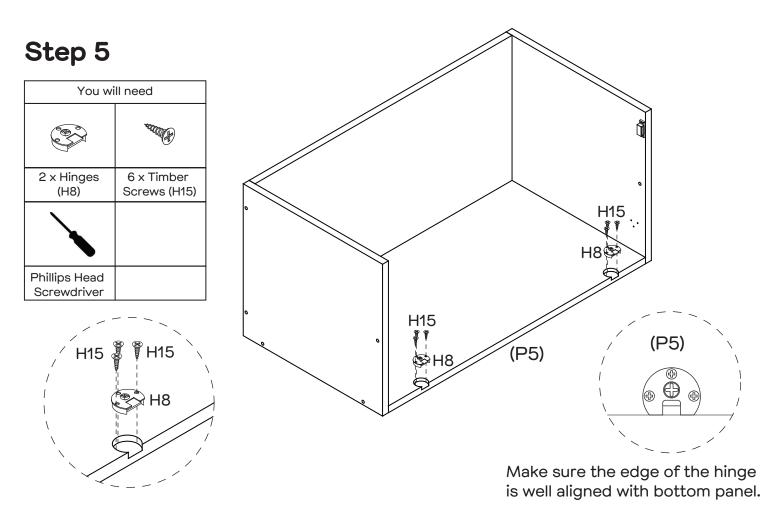


Attach 2 x Hinges (H8) to Bottom Panel (P5) with 6 x Timber Screws (H15). Tighten the screws with a Phillips Head Screwdriver.

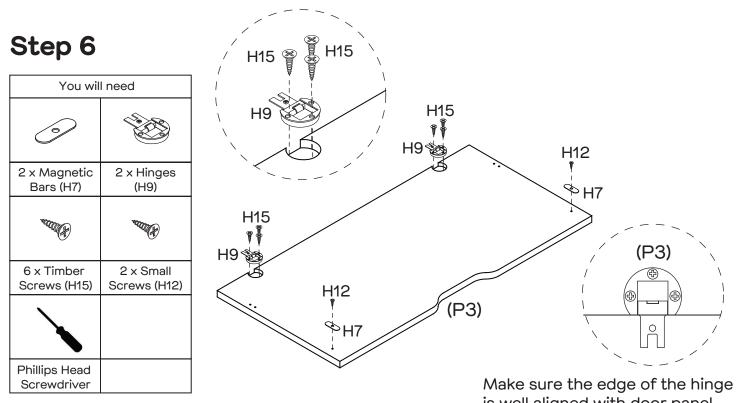


is well aligned with door panel. with 2 x Small Screws (H12).

Attach 2 x Magnetic Bars (H7) to Door (P3) with 2 x Small Screws (H12). Attach 2 x Hinges (H9) to Door (P3) with 6 x Timber Screws (H15). Tighten the screws with a Phillips Head Screwdriver.




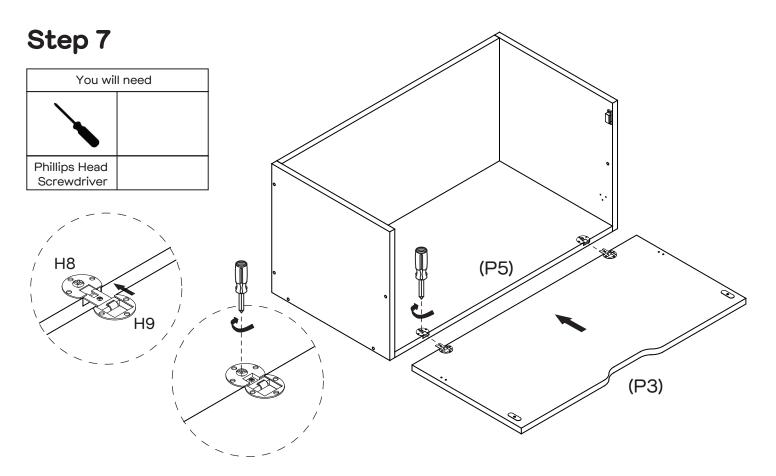

Attach Hinges (H9) to Hinges (H8), if they can't connect, loosen the screw indicated a little. Tighten the screws to connect the hinges on Door (P3) and Bottom Panel (P5).

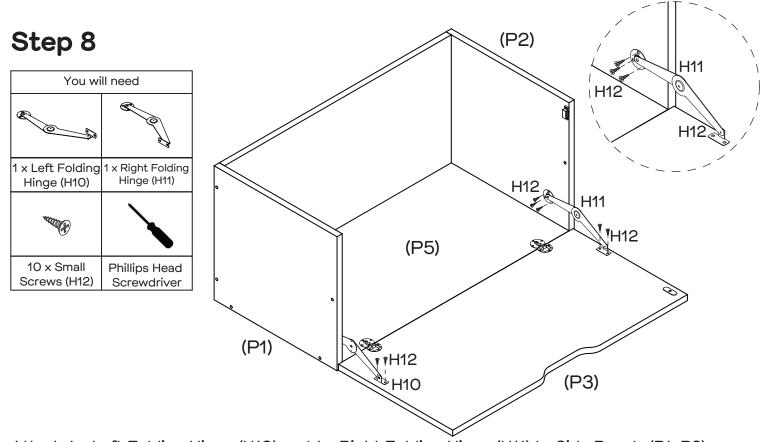


Attach 1 x Left Folding Hinge (H10) and 1 x Right Folding Hinge (H11) to Side Panels (P1, P2) with 6 x Small Screws (H12). Then attach the Left Folding Hinge and the Right Folding Hinge to Door (P3) with 4 x Small Screws (H12).

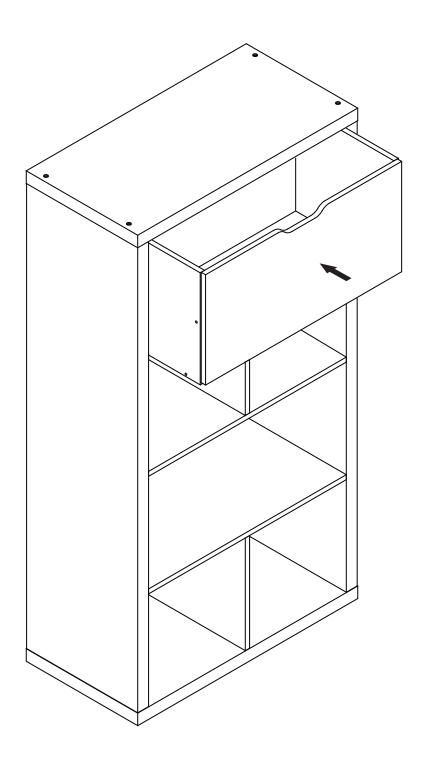

Put the insert cabinet into the bookcase, make sure the door of insert cabinet is flush with the edge of shelf.



Step 10

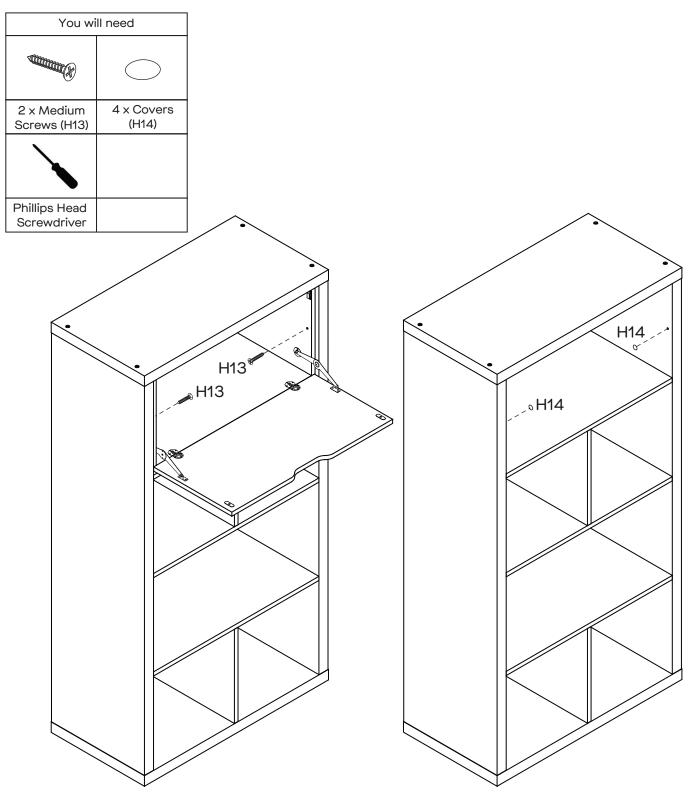

Open the door carefully.

Attach the cabinet to the bookcase with 2 x Medium Screws (H13) using a Phillips Head Screwdriver. If you'd like to adjust the insert cabinet or remove it, please seal the holes with the Covers (H14).

Job Complete!


In the interest of our environment please dispose of all packaging thoughtfully.



TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


Step 1



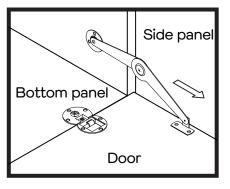


Step 2

Adjust the door move in or out a little

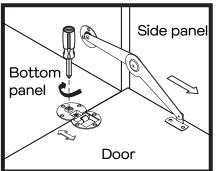


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & Step 2b), then tighten the screw.

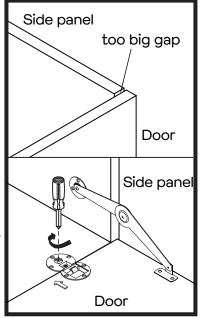

STEP 2a MOVE DOOR IN

STEP 2b MOVE DOOR OUT

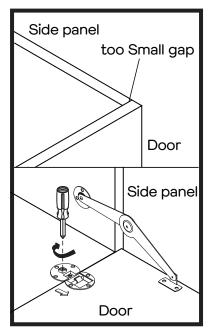


Push the hinge back a little.


Pull the hinge forward a little.

Step 3


Adjust the door move up or down a little

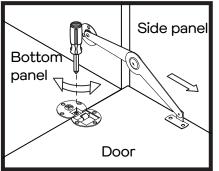

Loosen or tighten the screw indicated a little to adjust the door move up or down a little (see step 3a & Step 3b) STEP 3a MOVE DOOR UP

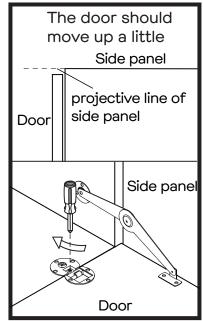

Turn the screw clockwise a little as shown to move door up. STEP 3b MOVE DOOR DOWN

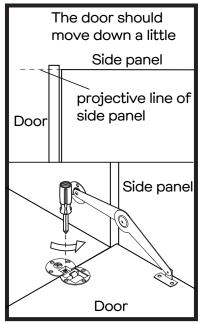

Turn the screw counterclockwise a little as shown to move door down.

