


Version 1.0

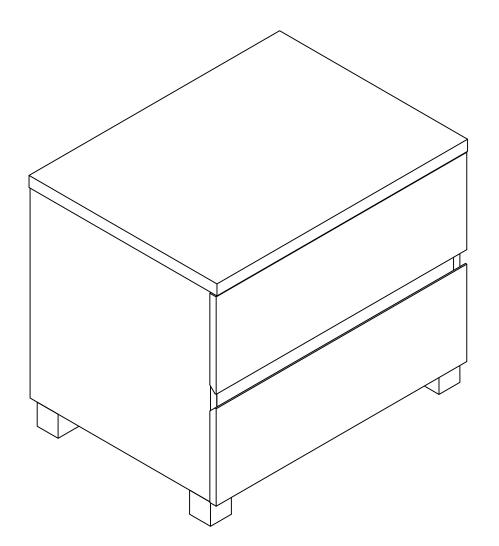





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY. To avoid any serious or fatal injury, this product has been provided with a wall strap to prevent toppling.We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Enjoy Your purchase from Australia's Best Value Furniture Store






Assembly checklist



Read through the instructions carefully before you begin.

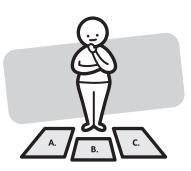

Identify and lay out all of the components before you begin assembly.



Make sure you have all the required tools. Never use power tools unless instructed.




Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.



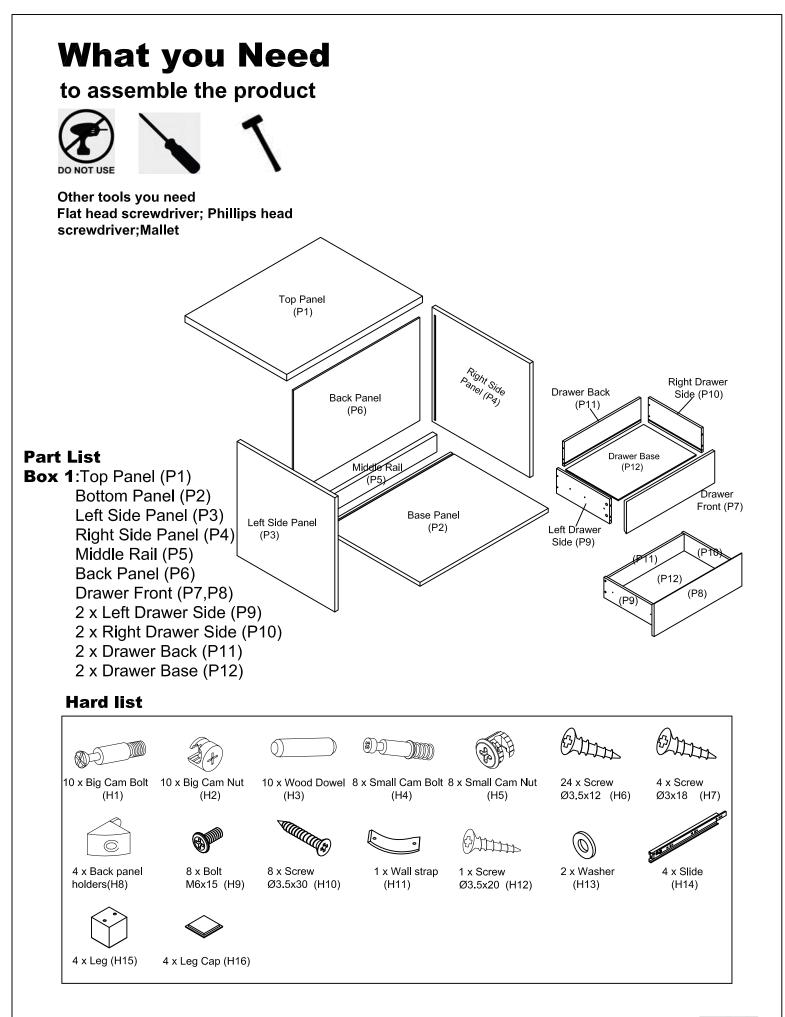




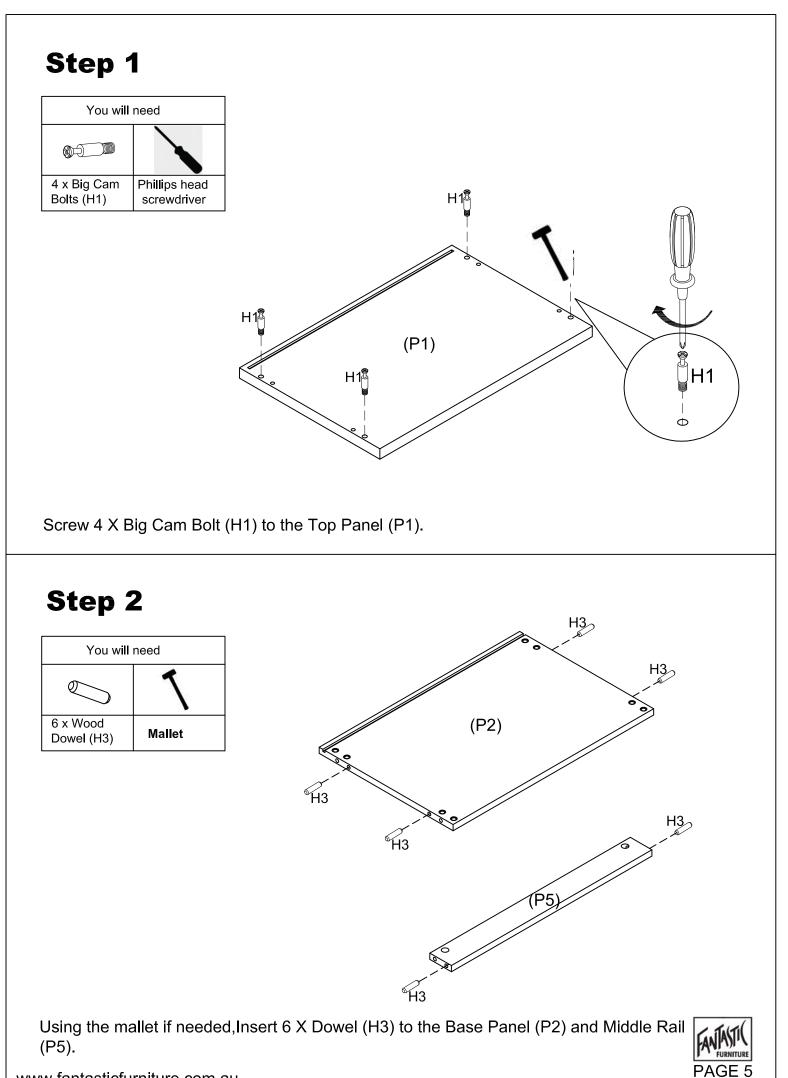

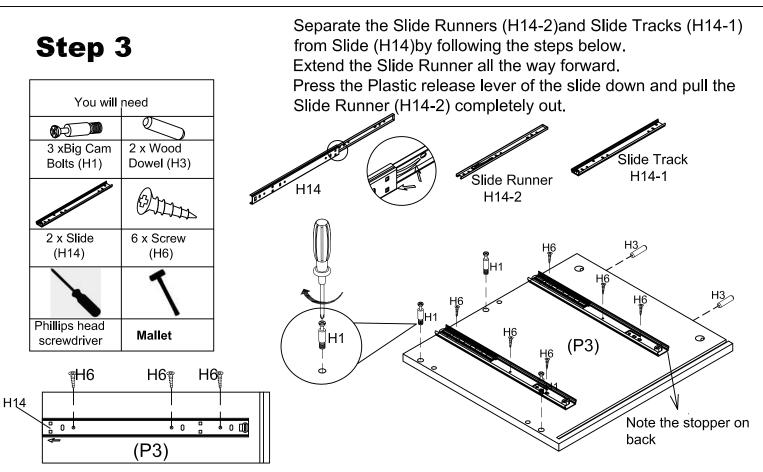


Insert 2 x Dowel (H3) onto the Left Side (P3),Screw 3 x Big Cam Bolt (H1) onto the Left Side (P3). By using a Phillip Head Screwdriver,attach the 2 x Slide Track (H14-1) onto the Left Side (P3) by using 6 x Screw (H6)

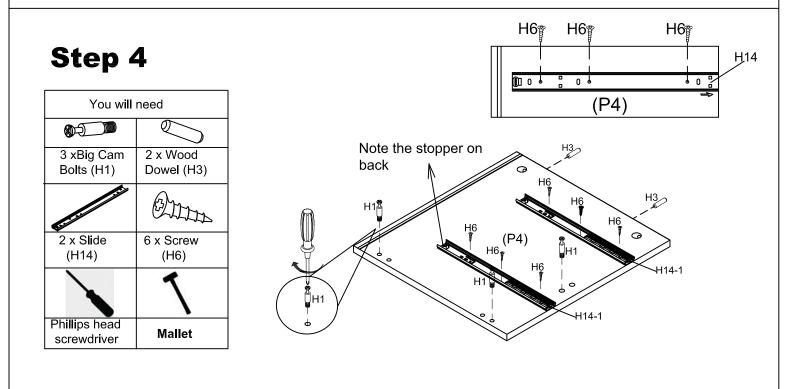


Insert the 2 x Dowel (H3) to the Right Side (P4) Screw 3 x Big Cam Bolt (H1) to the Right Side (P4) By using a Phillip Head Screwdriver,attach 2 x Slide Track (H14-1) onto the Right Side (P4) by using 6 x Screw (H6)



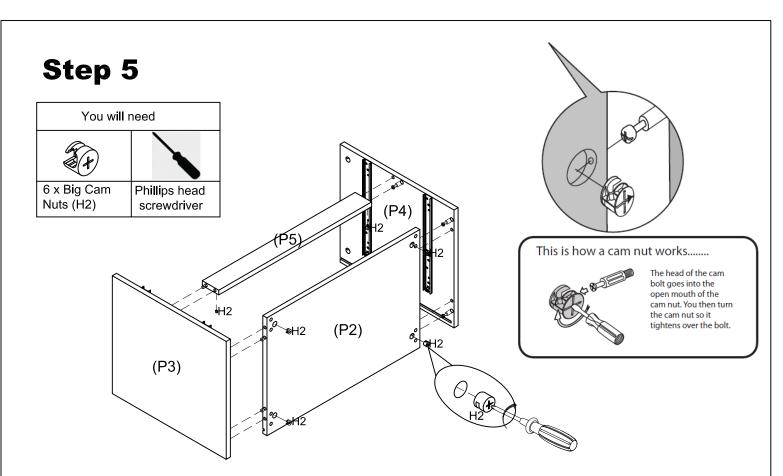


Position the Left Side Panel (P3) and Right Side Panel (P4) to the Base Panel (P2) and Middle Rail (P5),

Insert the 8 x Big Cam Nuts (H2) to the Panel (P2,P5) make sure the opening on nuts is facing incoming cam bolts, then turn clockwise to lock.

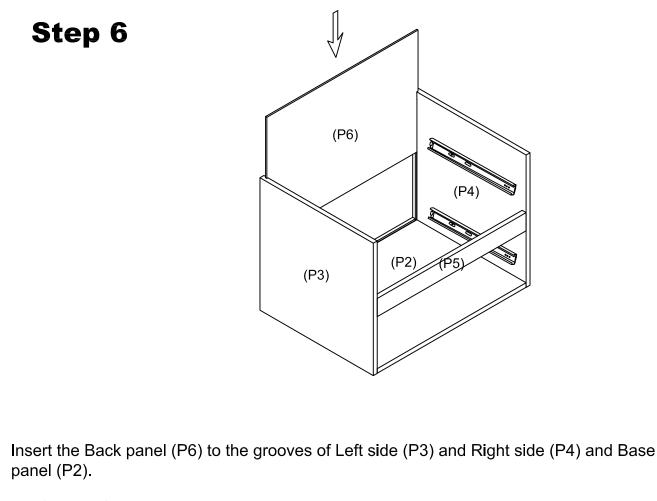




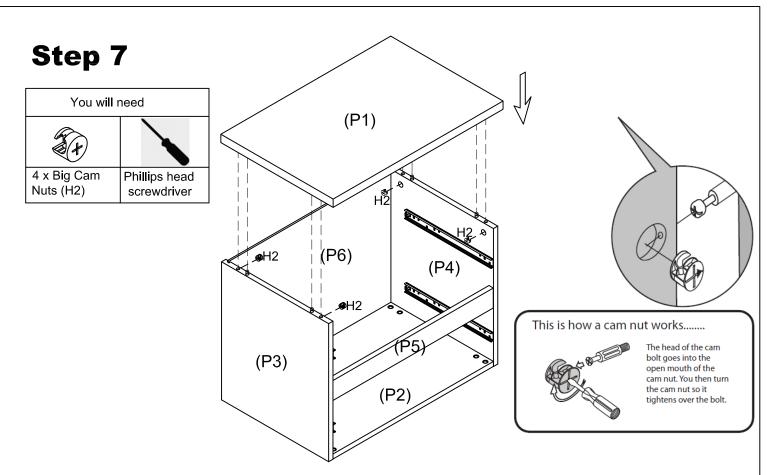



Place the Top panel (P1) onto position

Insert the 4 x Big Cam nuts (H2) to the Left Side Panel (P3) and Right Side Panel (P4) make sure the opening on nuts is facing incoming cam bolts, turn the clockwise to lock.

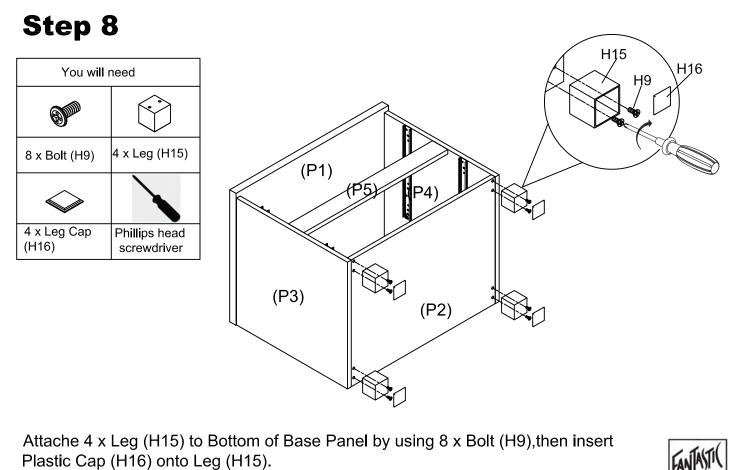



PAGE 8

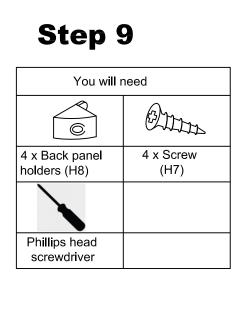


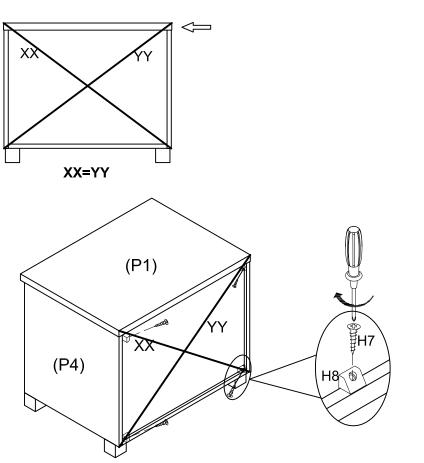


If necessary,gently adjust the Top Panel (P1) sideway in either direction untill XX and YY are equal Slide 4 x Back Panel holders (H8) into the grooves as show.Insert 4 x Screw (H7) to fix them into place.tighten the Screw (H7) with a Phillips head Screwdriver

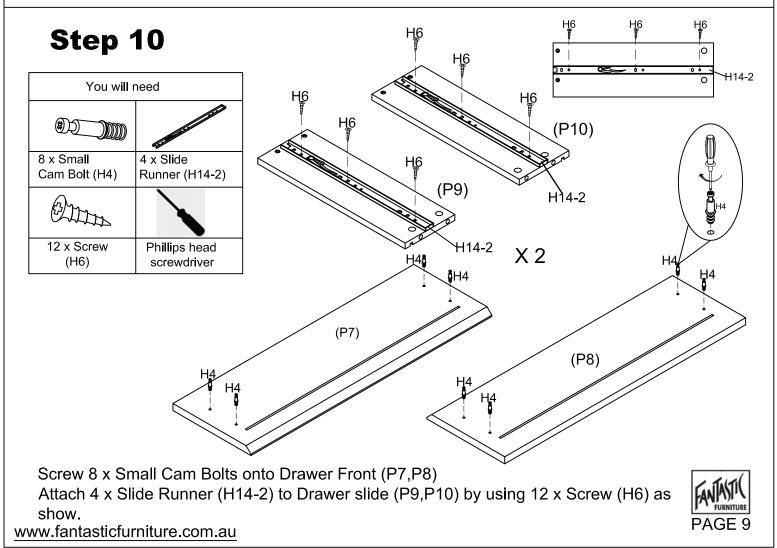

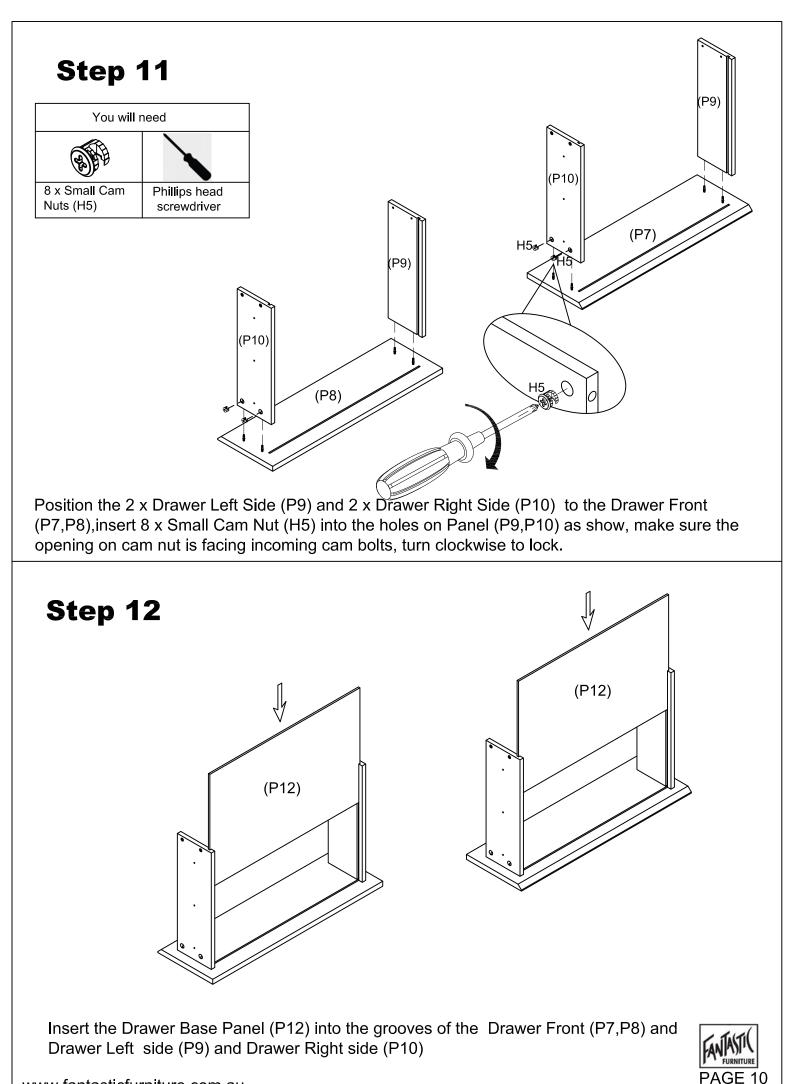

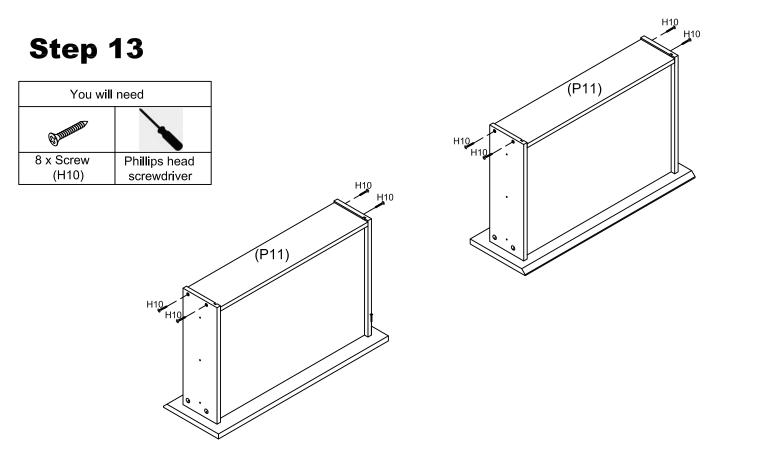


Screw the 2 x Drawer Back (P11) to the Drawer Left Side (P9) and Drawer Right Side (P10) by using 8 x Screw (H10)

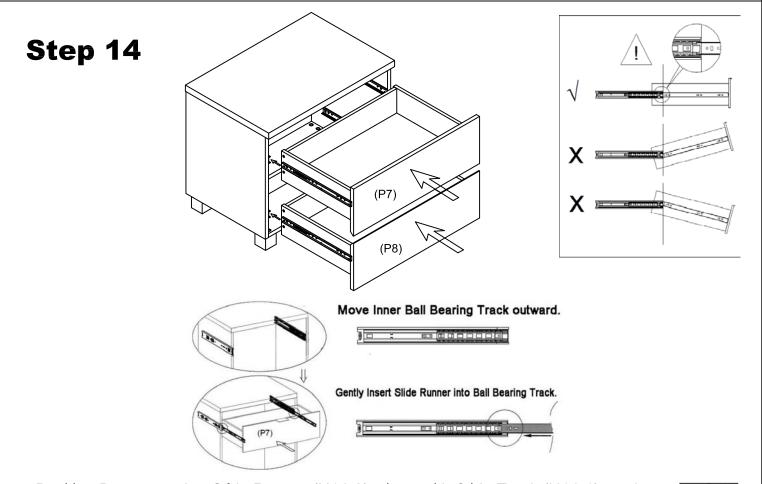


Position Drawer so that Slide Runner (H14-2) aligns with Slide Track (H14-1) as shown Gently push drawer into the closed position.



Step 15

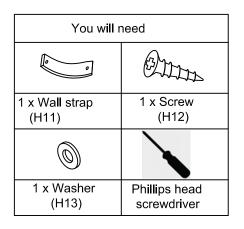

We strongly advise that you use the wall strap provided to prevent the unit toppling over

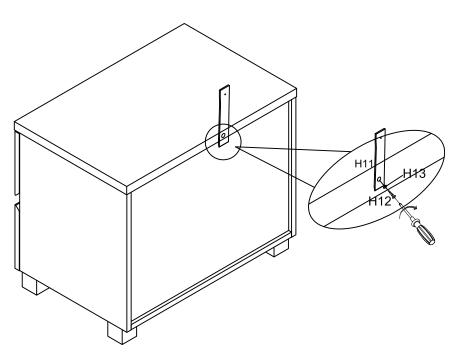

Screw 1 x Wall Strap (H11) onto Top panel (P1) with Screw (H12) and Washer (H13)as shown.

<section-header><text>

Move the Tall boy to the final position, and attached the wall strap to the wall securely. Make sure it is firmly attached and snug fit.





THIS TOP IS FINISHED WITH A CLEAR PU LACQUER

Avoid placing hot items directly onto the surface unless using a thick insulation material such as placemats or coasters. Heat may lead to discolouration or other damage to the surface of the product.


Use a soft cloth that has been dampened in water to clean the surface of this product. Do not use abrasive cleaners, furniture wax or polish on the surface of this product, as it may damage the surface.

CAUTION: FREQUENT EXPOSURE TO DIRECT SUNLIGHT OR SIMILAR SOURCES MAY CAUSE THE SURFACE TO DISCOLOUR OR FADE.





Version 1.0

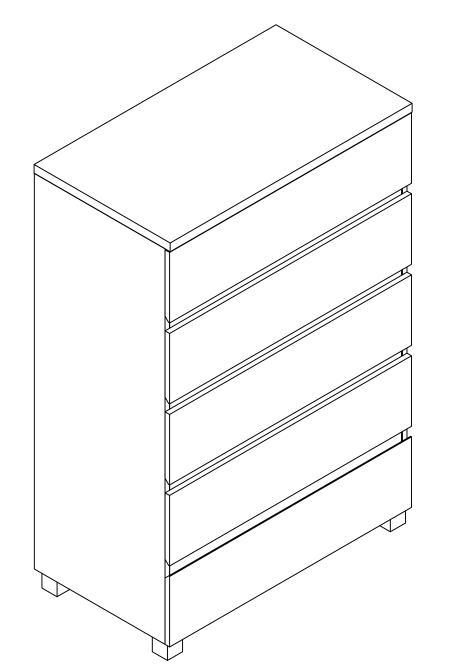







WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY. To avoid any serious or fatal injury, this product has been provided with a wall strap to prevent toppling.We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Enjoy Your purchase from Australia's Best Value Furniture Store






Assembly checklist



Read through the instructions carefully before you begin.

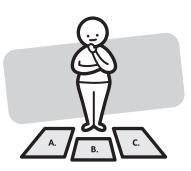

Identify and lay out all of the components before you begin assembly.



Make sure you have all the required tools. Never use power tools unless instructed.





Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.




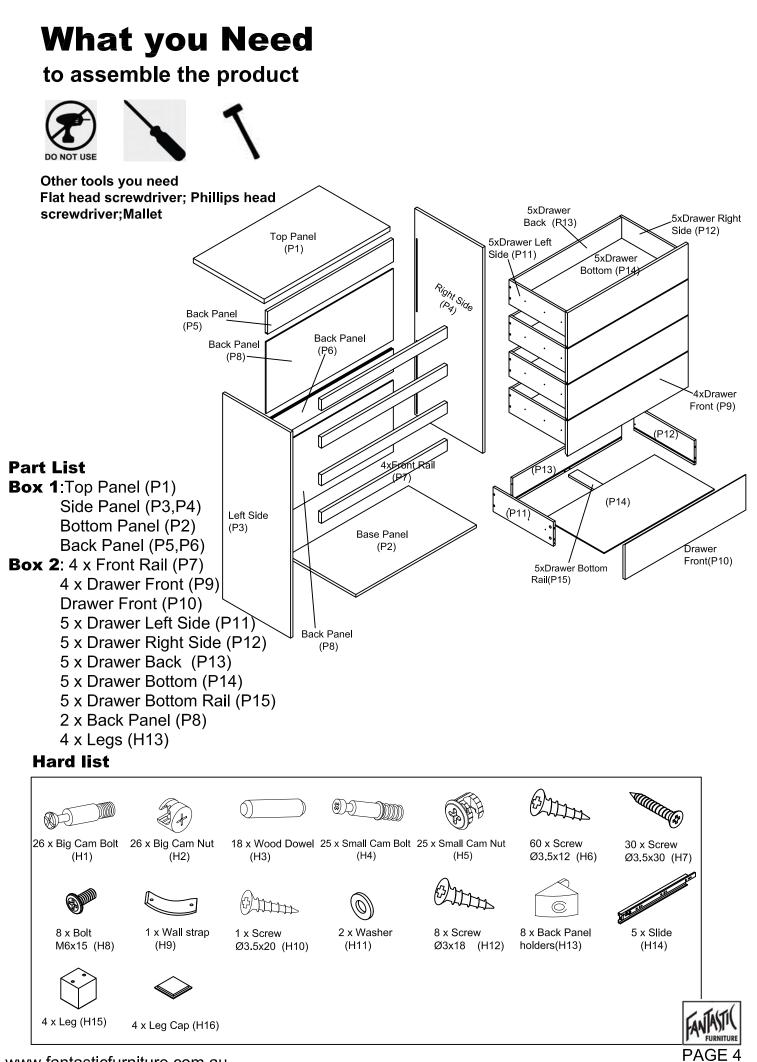

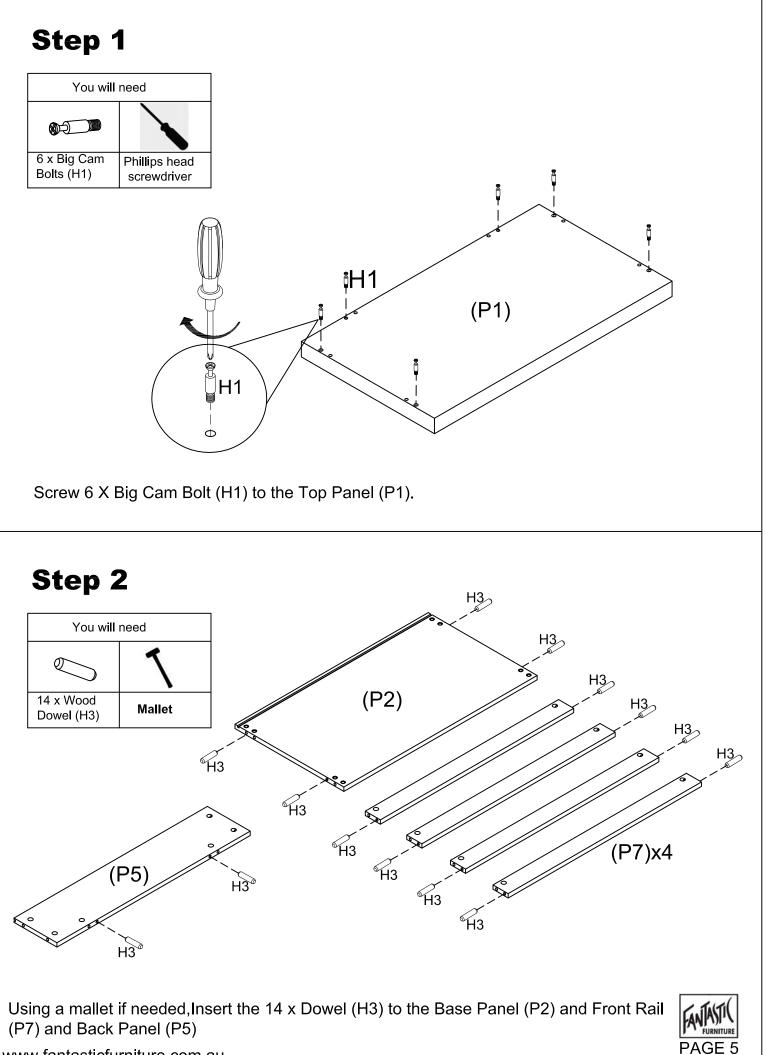


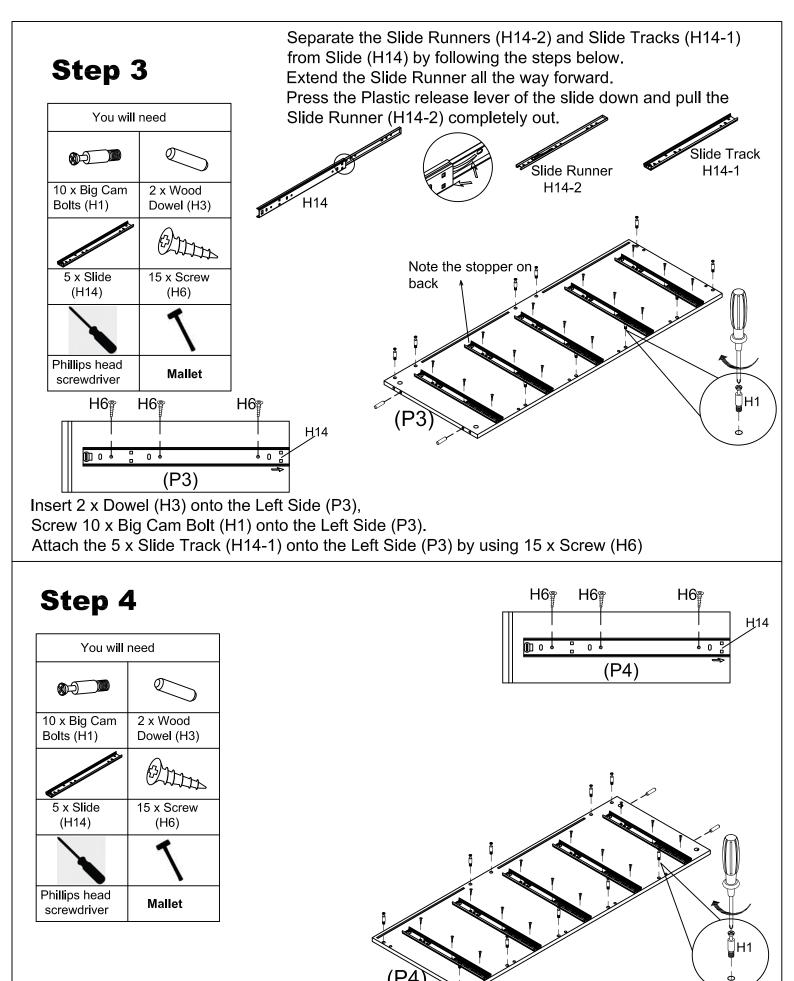

 Insert 2 x Dowel (H3) onto the Right Side (P4), Screw 10 x Big Cam Bolt (H1) onto the Right Side (P4). Attach the 5 x Slide Track (H14-1) onto the Right Side (P4) by using 15 x Screw (H6)




PAGE 6

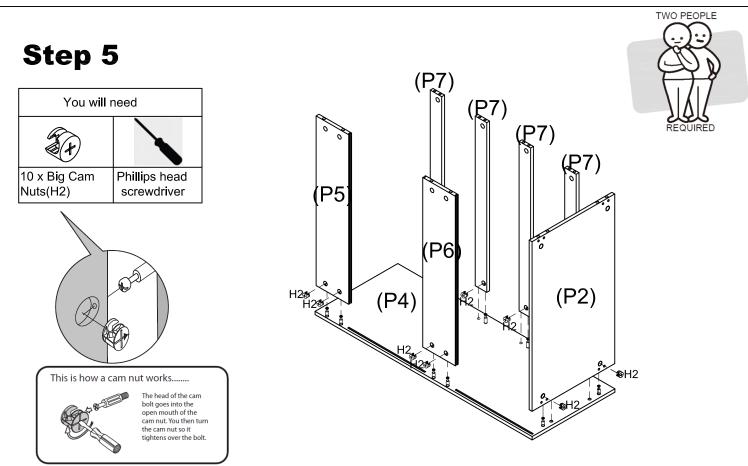


Position the Base Panel (P2) and Back Panel (P5,P6) and 4 x Front Rail (P7) onto the Right Side (P4),

Insert the 10 x Big Cam Nuts (H2) into the holes on Panel (P2,P5,P6,P7) make sure the opening on cam nut face incoming cam bolts, turn clockwise to lock.

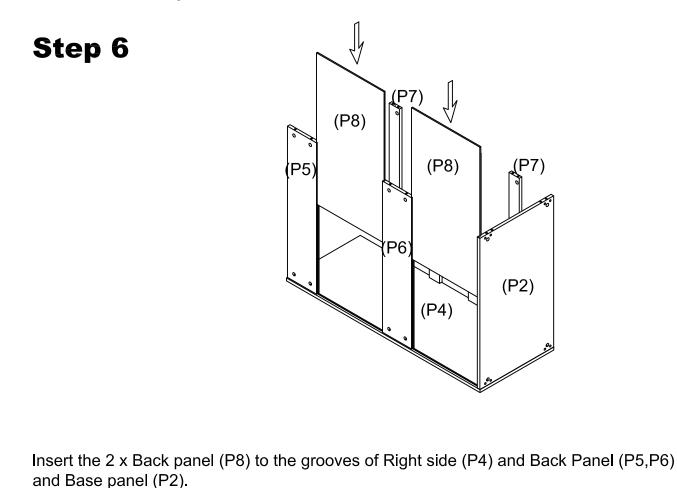





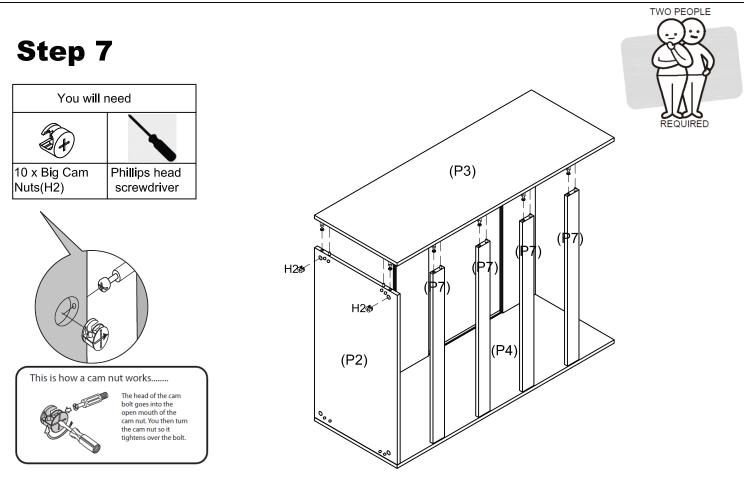

Place Left Side (P3) on to position ,insert 10 x Big Cam Nut (H2) into the holes on Panel (P2,P5,P6,P7) make sure the opening on cam nut face incoming cam bolts, turn clockwise to lock.


Step 8

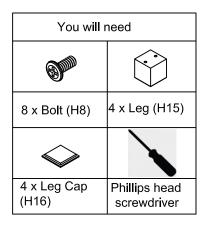

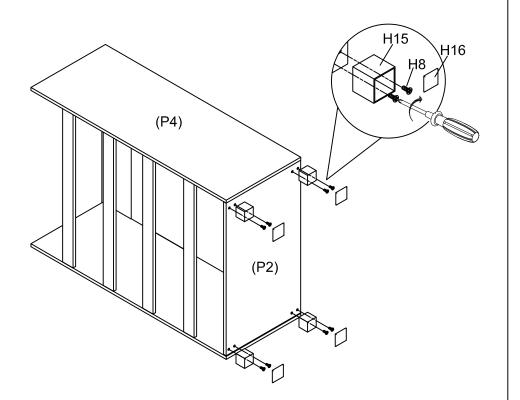


Attach 4 x Leg (H15) to Bottom of Base Panel by using 8xBolt (H8), then insert Plastic Cap (H16) onto Leg (H15)




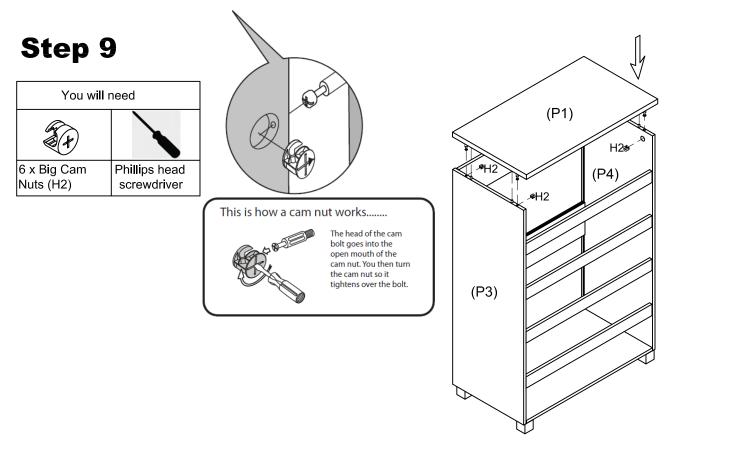


Place the Top panel (P1) onto position

Insert the 6 x Big Cam nuts (H2) into the holes of Panel (P3,P4,P5), make sure the opening on cam nut face incoming cam bolts,turn clockwise to lock.

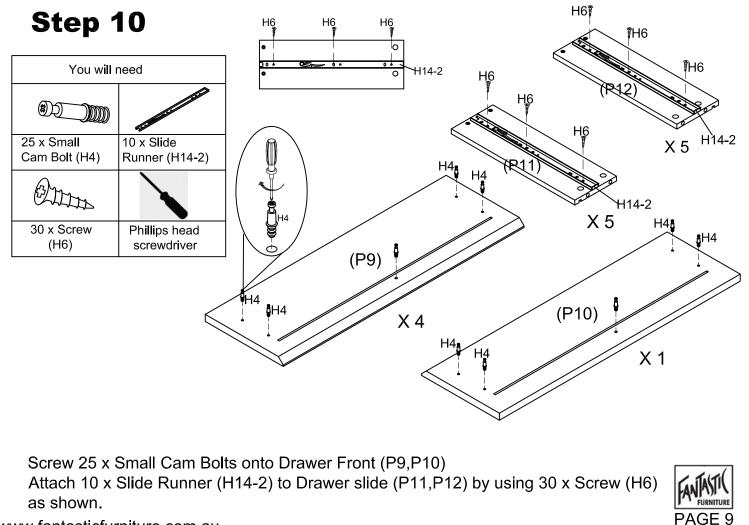

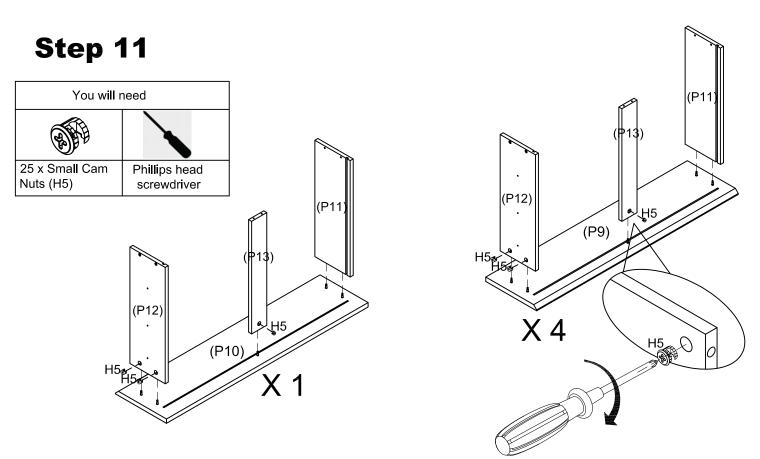


Position the 5 x Drawer Left Side (P11) and 5 x Drawer Right Side (P12) and 5 x Drawer Bottom Rail (P13) to the Drawer Front (P9,P10),insert 25 x Small Cam Nut (H5) into the holes on Panel (P11,P12,P13) as show, make sure the opening on cam nut is facing incoming cam bolts, turn clockwise to lock.

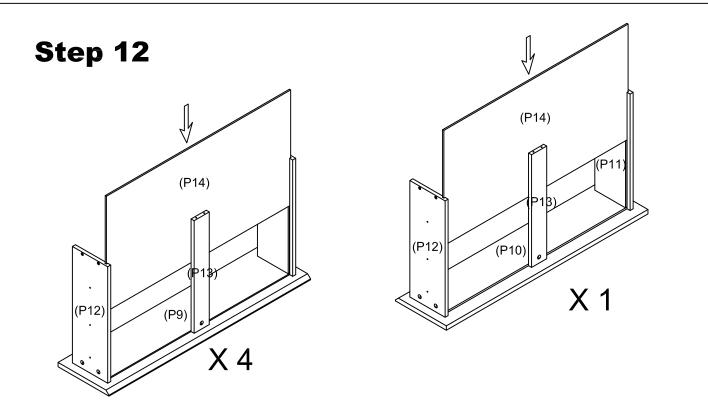

Insert the Drawer Base Panel (P14) into the grooves of the Drawer Front (P9,P10), Drawer Left Side (P11) and Drawer Right Side (P12)



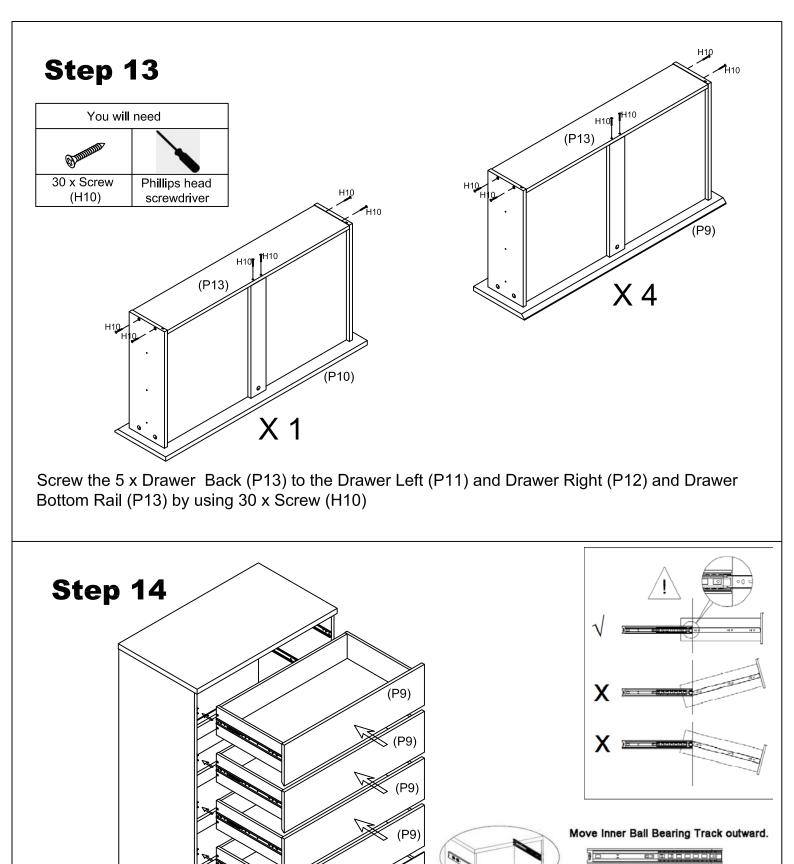

Position Drawer box so that Slide Runner (H14-2) aligns with Side Track (H14-1) as shown.


(P10)

FANTASTIC FURNITURE PAGE 11

Gently Insert Slide Runner into Ball Bearing Track.

)E

Gently push drawer into the closed position.

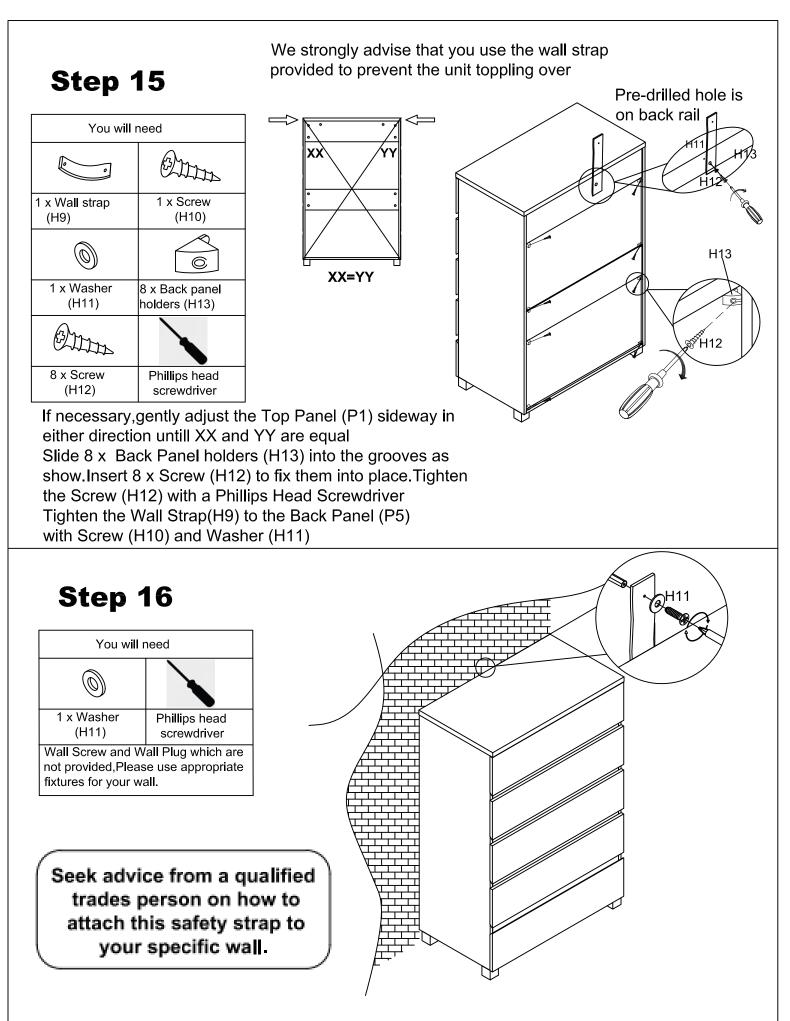

Move the Tall boy to the final position, and attached the wall strap to the wall securely. Make sure it is firmly attached and snug fit.





THIS TOP IS FINISHED WITH A CLEAR PU LACQUER

Avoid placing hot items directly onto the surface unless using a thick insulation material such as placemats or coasters. Heat may lead to discolouration or other damage to the surface of the product.

Use a soft cloth that has been dampened in water to clean the surface of this product. Do not use abrasive cleaners, furniture wax or polish on the surface of this product, as it may damage the surface.

CAUTION: FREQUENT EXPOSURE TO DIRECT SUNLIGHT OR SIMILAR SOURCES MAY CAUSE THE SURFACE TO DISCOLOUR OR FADE.

