


Version 1.0

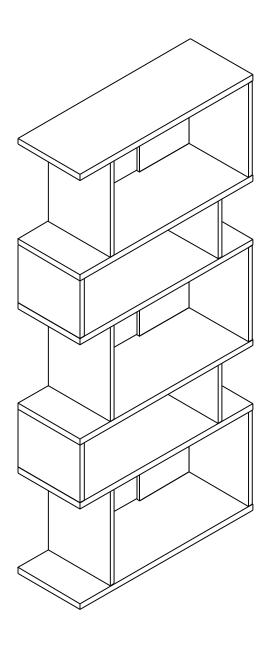





fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended weight capacity: 15kg per Shelf

To reduce the risk of furniture tipover:




- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide

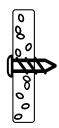

For plasterboard (without available wood stud)

Securing method:Self drilling plasterboard anchor.

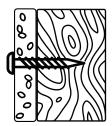

For plasterboard (with available wood stud)

Securing method:
Screw inserted directly into





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!


@fantasticfurniture




Assembly checklist




Read through the instructions carefully before you begin.

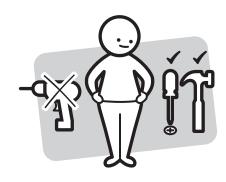

Make sure you have all the required tools. Never use power tools unless instructed.

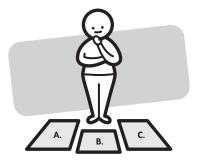

Identify and lay out all of the compenents before you begin assembly.

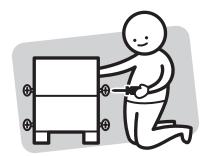

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky itmes such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit throught a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasterners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



What you need

to assemble the product




Other tools you need: Phillips head screwdriver; Hammer


Parts list


Top Panel (P1); 2x Shelf Panels 1 (P2); 2x Shelf Panels 2 (P3); Base Panel (P4); 6x Large Side Panels (P5); 4x Small Side Panels (P6); 3x Large Back Panels (P7);

2x Small Back Panels (P8)

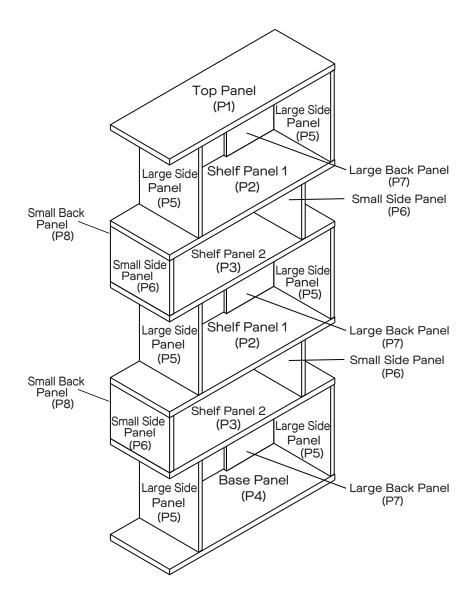


Hardware pack

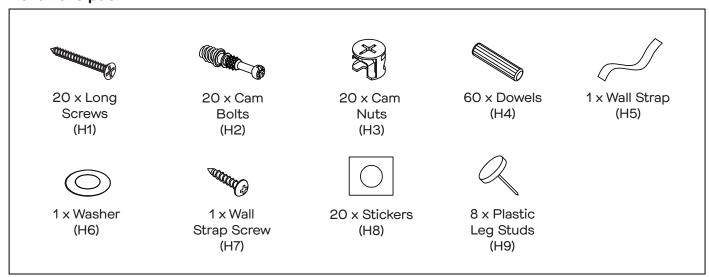

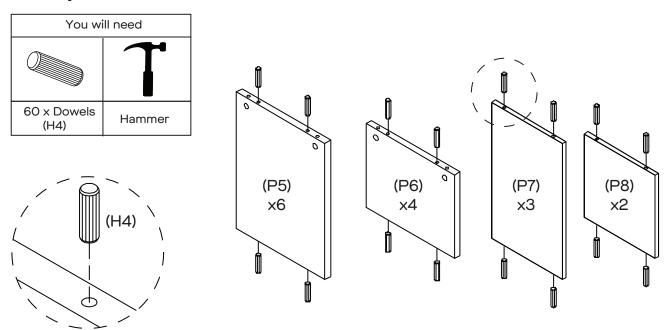


Insert 60 x Dowels (H4) into all Large & Small Side Panels (P5x6 & P6x4), all Large & Small Back Panels (P7x3 & P8x2) as shown. Use the Hammer to gently tap the Dowels into place if need be.

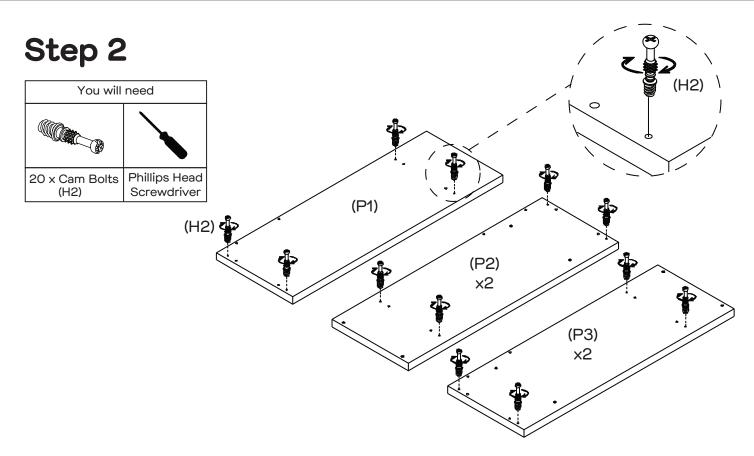


Attach 20 x Cam Bolts (H2) to Top Panel (P1) and Shelf Panels 1 & 2 (P2x2 & P3x2) by tightening with the Phillips Head Screwdriver as shown.



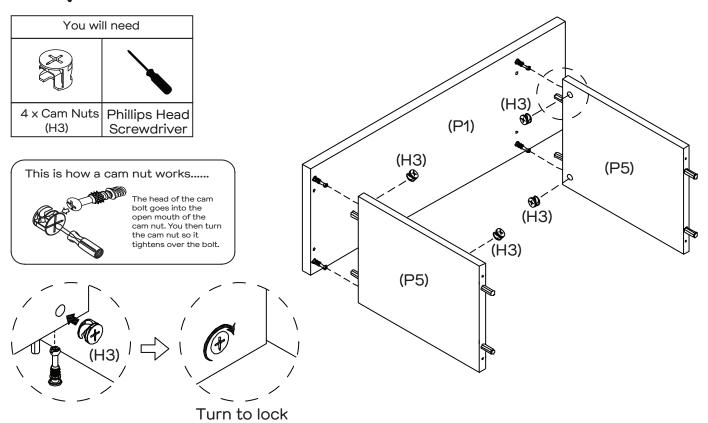


Insert 4 x Cam Nuts (H3) into Large Side Panels (P5x2) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Large Side Panels (P5x2) to Top Panel (P1) by tightening all cam nuts with the Phillips Head Screwdriver.

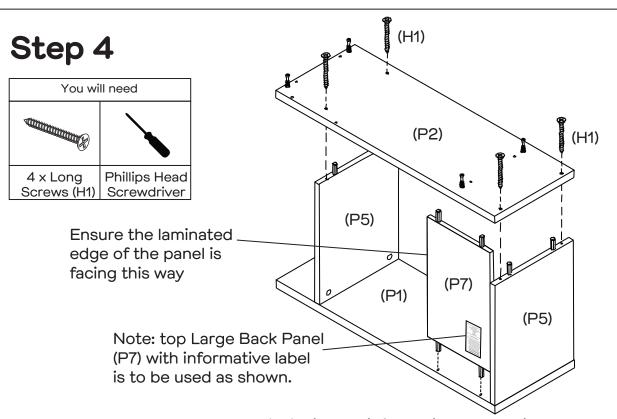


Attach the top Large Back Panel (P7) with the informative label on it to Top Panel (P1) as shown. Secure Shelf Panel 1 (P2) to Large Side Panels (P5x2) with 4 x Long Screws (H1) by tightening with the Phillips Head Screwdriver.




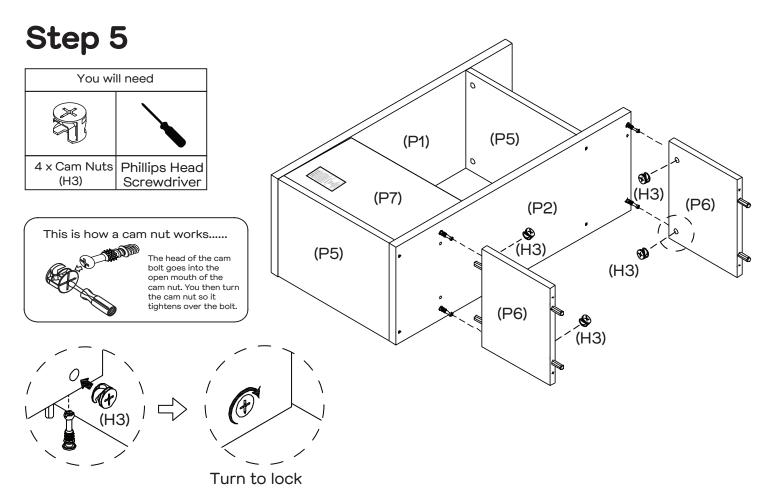


Insert 4 x Cam Nuts (H3) into Small Side Panels (P6x2) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Small Side Panels (P6x2) to Shelf Panel 1 (P2) by tightening all cam nuts with the Phillips Head Screwdriver.

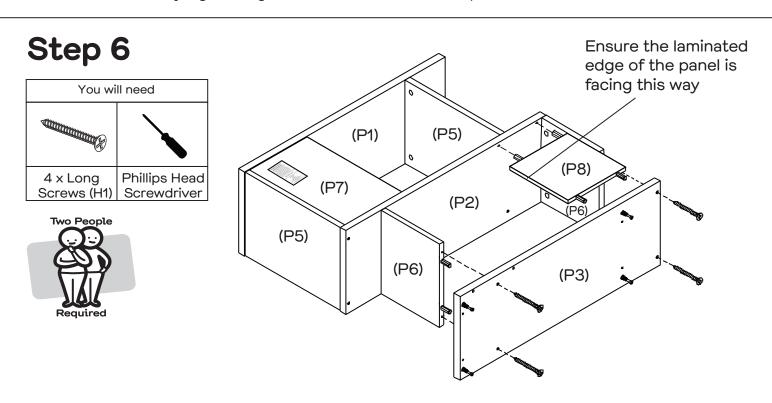


Attach Small Back Panel (P8) to Shelf Panel 1 (P2) as shown. Secure Shelf Panel 2 (P3) to Small Side Panels (P6x2) with 4 x Long Screws (H1) by tightening with the Phillips Head Screwdriver.

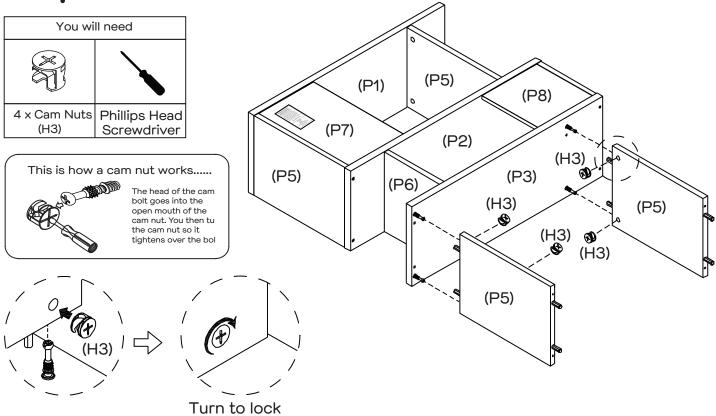


Insert 4 x Cam Nuts (H3) into Large Side Panels (P5x2) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Large Side Panels (P5x2) to Shelf Panel 2 (P3) by tightening all cam nuts with the Phillips Head Screwdriver.

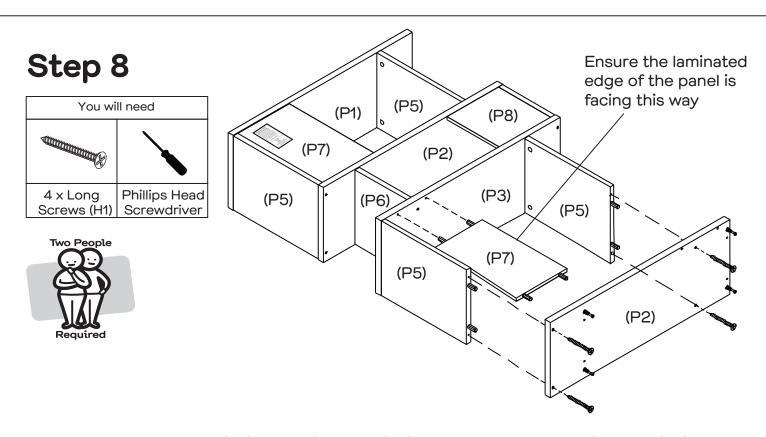


Attach Large Back Panel (P7) to Shelf Panel 2 (P3) as shown. Secure Shelf Panel 1 (P2) to Large Side Panels (P5x2) with 4 x Long Screws (H1) by tightening with the Phillips Head Screwdriver.

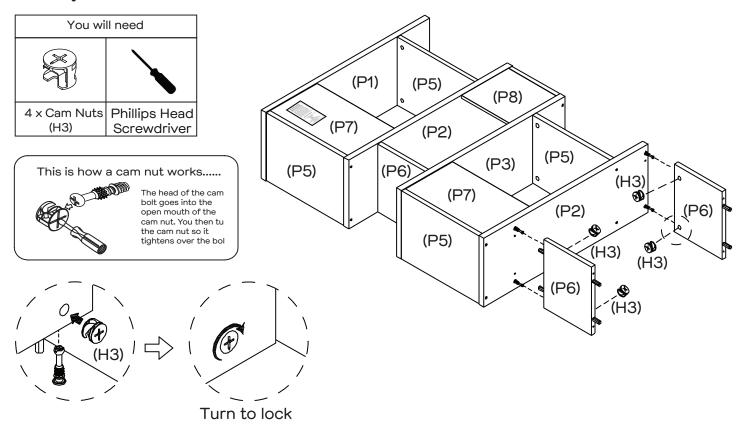


Insert 4 x Cam Nuts (H3) into Small Side Panels (P6x2) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Small Side Panels (P6x2) to Shelf Panel 1 (P2) by tightening all cam nuts with the Phillips Head Screwdriver.

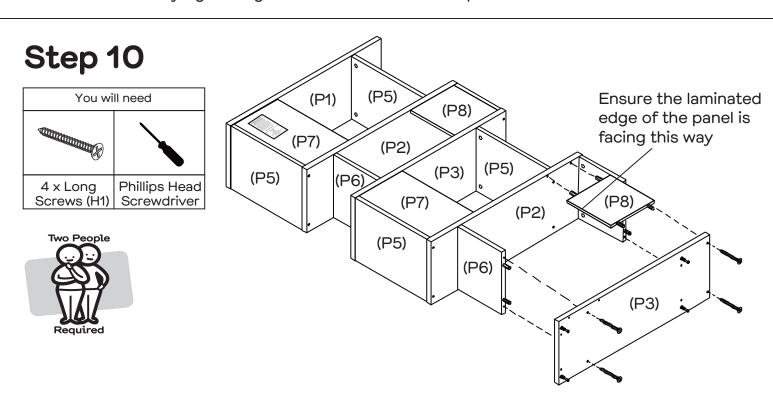


Attach Small Back Panel (P8) to Shelf Panel 1 (P2) as shown. Secure Shelf Panel 2 (P3) to Small Side Panels (P6x2) with 4 x Long Screws (H1) by tightening with the Phillips Head Screwdriver.

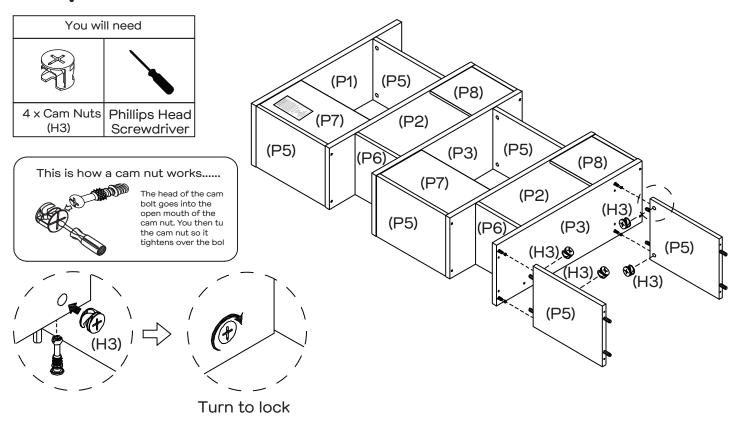


Insert 4 x Cam Nuts (H3) into Large Side Panels (P5x2) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Large Side Panels (P5x2) to Shelf Panel 2 (P3) by tightening all cam nuts with the Phillips Head Screwdriver.

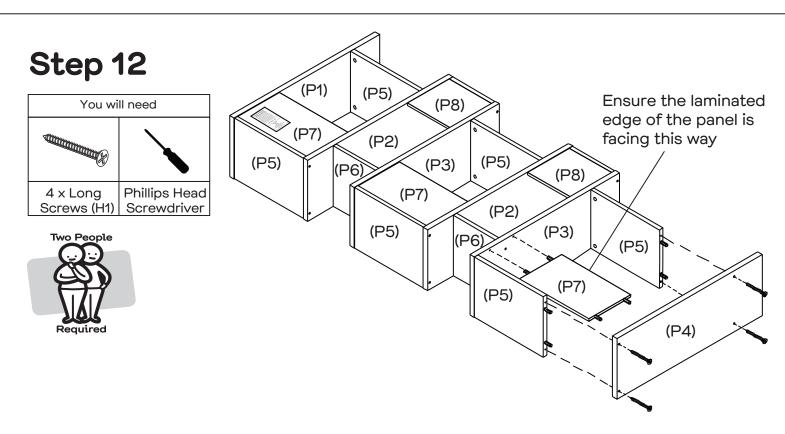

Attach Large Back Panel (P7) to Shelf Panel 2 (P3) as shown. Secure Base Panel (P4) to Large Side Panels (P5x2) with 4 x Long Screws (H1) by tightening with the Phillips Head Screwdriver.

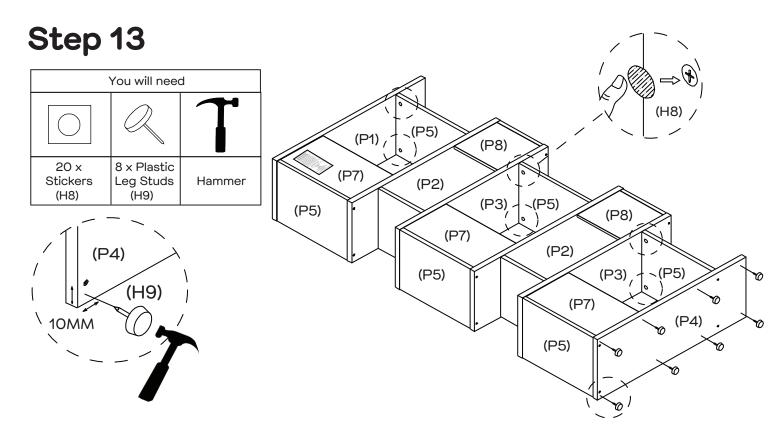

Attach 8 x Plastic Leg Studs (H9) to Base Panel (P4) using the Hammer, approx 10mm from the edge and spaced evenly as shown. Use 20 x Stickers (H8) to cover all Cam Nut holes.

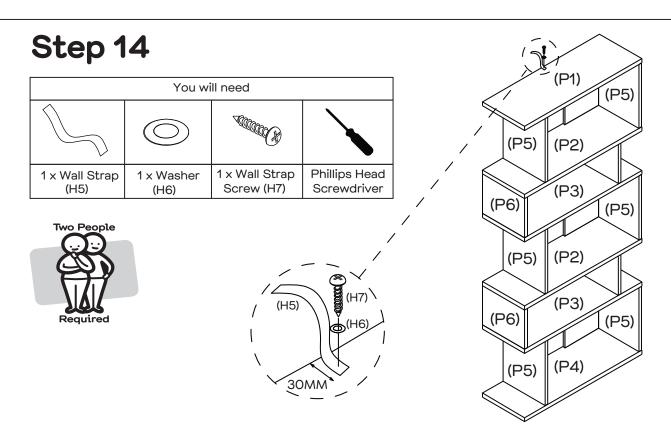

Gently stand the bookcase upright. Attach the Wall Strap (H5) to Top Panel (P1) as shown with 1×1 Washer (H6) and 1×1 Wall Strap Screw (H7) by tightening with the Phillips Head Screwdriver. We strongly advise that you secure the unit to a wall using the wall strap provided, to prevent the unit from toppling.




Step 15 Screw and Wall Plug are not provided. Please use appropriate fixtures for your wall. Seek advise from a qualified trades person on how to attach this safety strap to

Move the furniture to its final position, then connect the end of the Wall Strap (H5) to the wall, ensuring it is firmly attached.

Step 16

your specific wall.

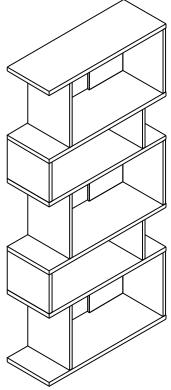

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.

