


Version 1.0

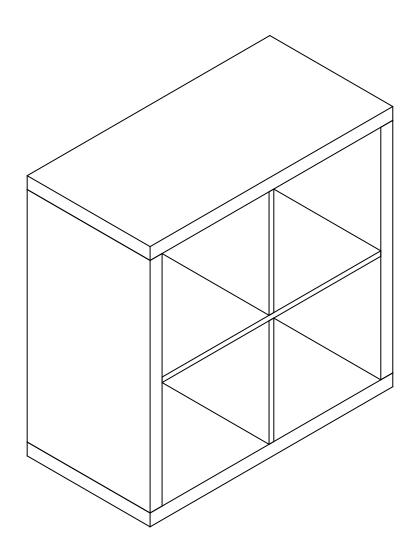



# Secure it!

Reduce the risk of furniture tip-over accidents





# WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

#### Recommended Weight Capacity: 10kg/shelf

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
   Check anchors regularly.
- Avoid putting a TV on this product.

#### Wall attachment guide



For plasterboard (without available wood stud)

 **Securing method:**Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method:
Screw inserted directly into





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



#### Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


## **Assembly Checklist**




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

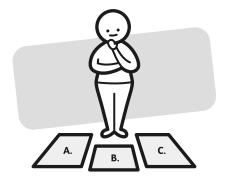

Identify and lay out all of the components before you begin assembly.

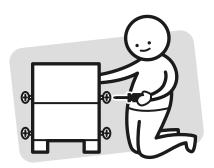


Unless instructed, do not fully tighten screws until the item is fully assembled.

#### **Useful Information**

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.


## What you need

to assemble the product

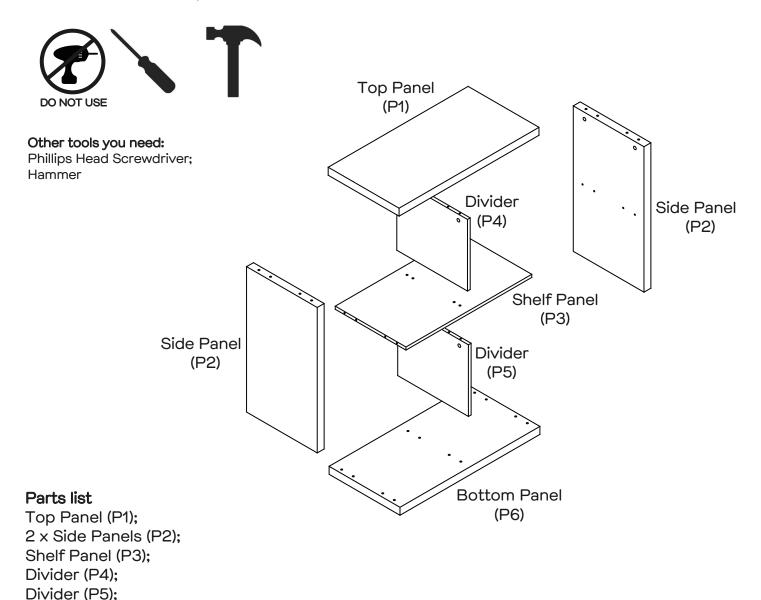


#### Hardware pack

Bottom Panel (P6);

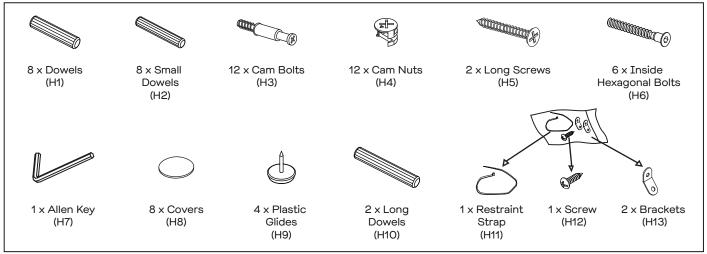





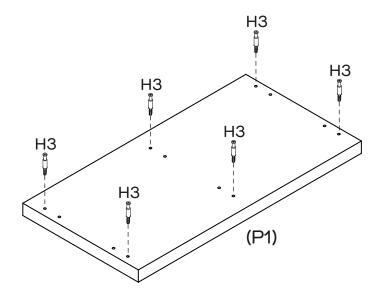

Attach 6 x Cam Bolts (H3) into Top Panel (P1) as shown.


### Step 2

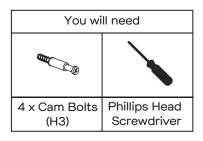


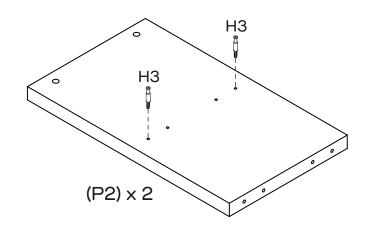

Attach 2 x Cam Bolts (H3) into each Side Panel (P2) as shown.


#### Step 3

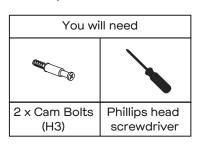


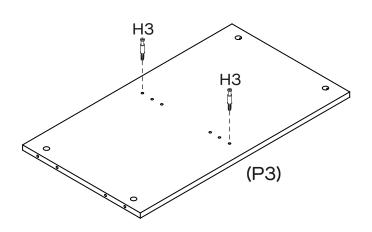


Attach 2 x Cam Bolts (H3) into Shelf Panel (P3) as shown. fantasticfurniture.com.au




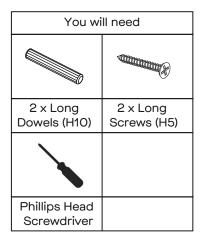


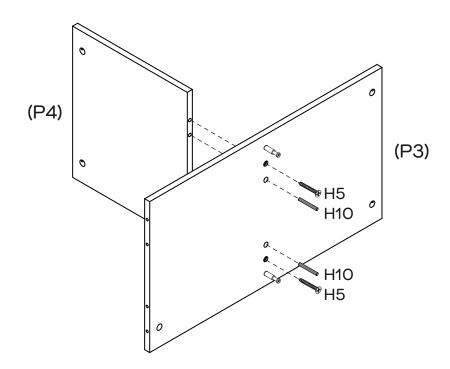


#### Step 5

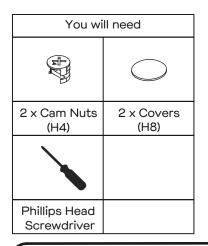


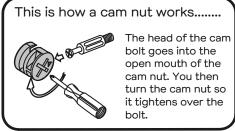

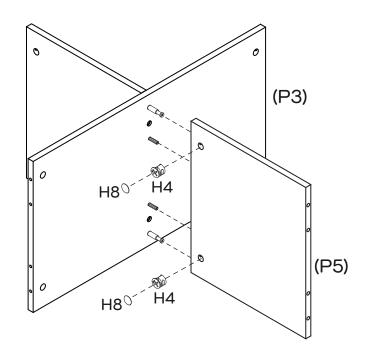

Insert 2 x Cam Nuts (H4) into the holes of Divider (P5). Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts. Push Divider (P5) into place and then tighten the Cam Nuts using a Phillips Head Screwdriver. Seal the holes with 2 x Covers (H8).

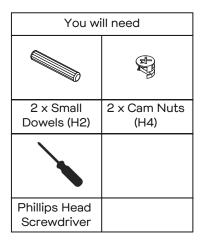

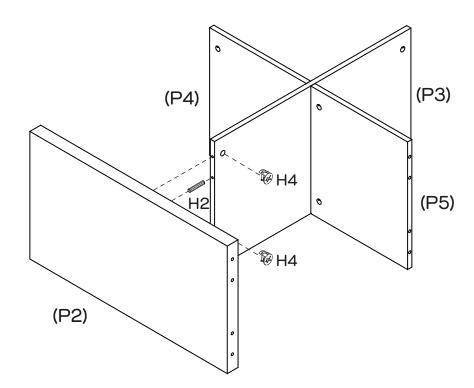


Insert 2 x Small Dowels (H2) into the holes of Shelf Panel (P3).


Insert 2 x Cam Nuts (H4) into the holes of Shelf Panel (P3).

Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts.

Push Side Panel (P2) into place and then tighten the Cam Nuts using a Phillips Head Screwdriver.

#### Step 7

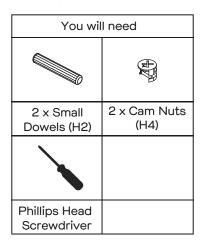

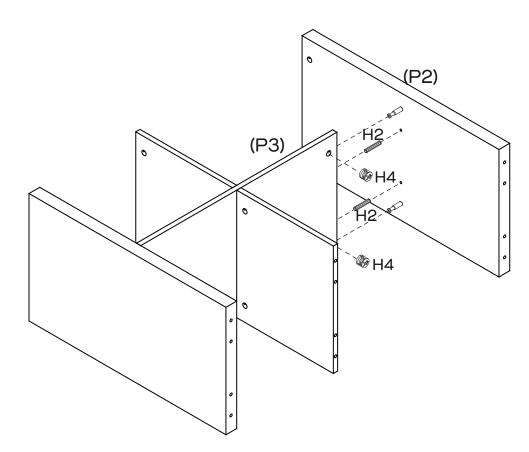

Insert 2 x Small Dowels (H2) into the holes of Shelf Panel (P3).


Insert 2 x Cam Nuts (H4) into the holes of Shelf Panel (P3).


Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts.

Push Side Panel (P2) into place.

Tighten the Cam Nuts using a Phillips Head Screwdriver.



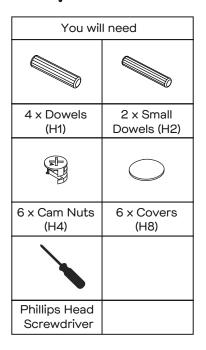


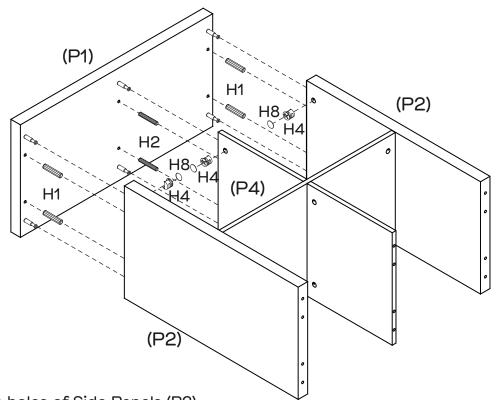


Insert 4 x Dowels (H1) into the holes of Side Panels (P2).

Insert 2 x Small Dowels (H2) into the holes of Divider (P4).

Insert 6 x Cam Nuts (H4) into the holes of Side Panels (P2) and Divider (P4), Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts. Attach Top Panel (P1) into place and then tighten the Cam Nuts using a Phillips Head Screwdriver. Seal the holes with 6 x Covers (H8) as shown.

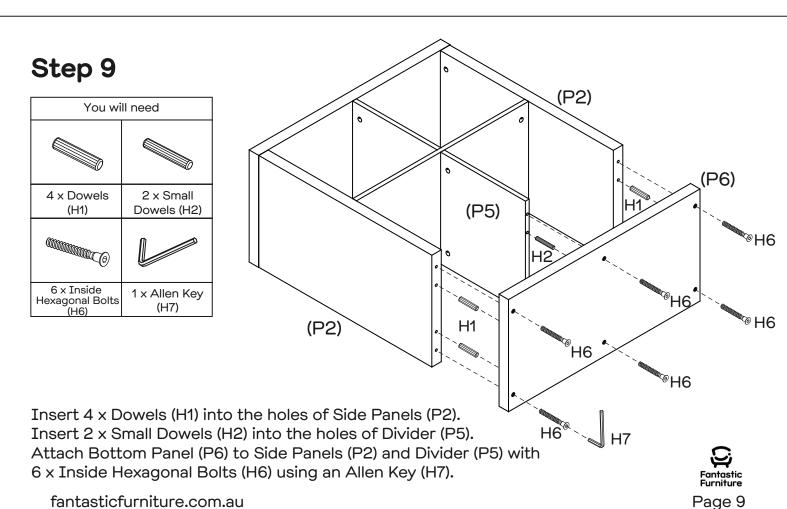


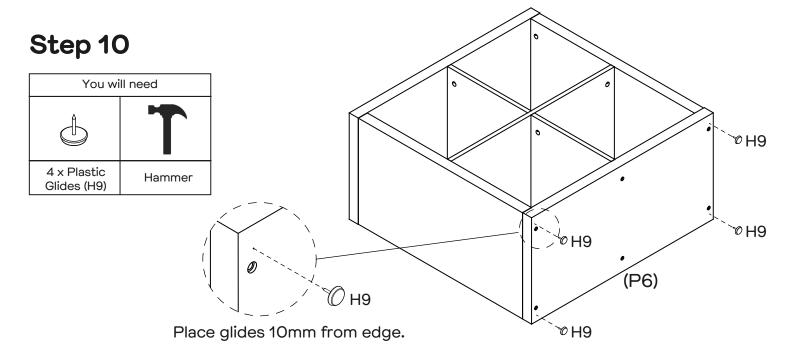

Attach 4 x Plastic Glides (H9) to the bottom of Bottom Panel (P6) with a Hammer.

We strongly advise that you use



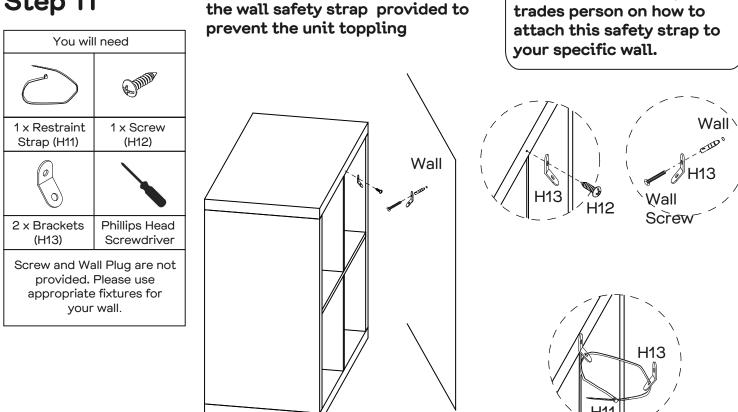

Carefully turn the bookcase over to an upright position.

Attach 1 x Bracket (H13) securely to back of Top Panel (P1)

with 1 x Screw (H12) through the smaller hole.


Align the opposite wall Bracket about 20mm lower than the one attached to the bookcase so the Bracket can't be seen.

Using appropriate wall connection fixtures, secure the bracket to the wall and thread the Restraint Strap through it.

Be careful not to over tighten the strap which would cause the unit to lean.



Seek advice from a qualified

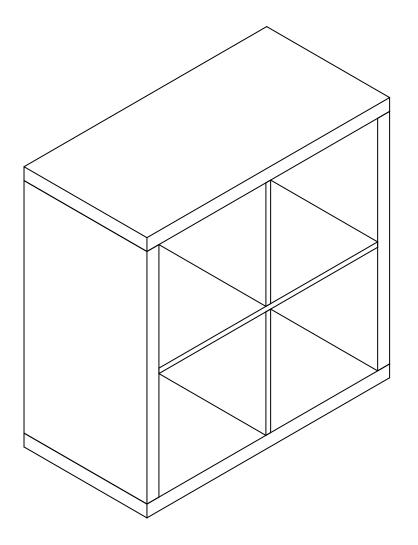

# Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.