


Version 1.0

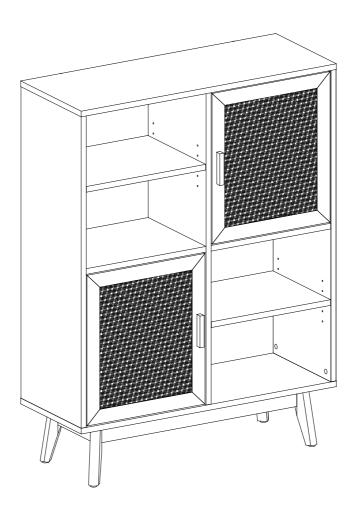





Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

RECOMMENDED WEIGHT CAPACITY: 20kgs/shelf

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

 Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

 Securing method:
Screw inserted directly into stud.





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Rattan

Rattan is a natural material that will respond to humidity in the environment. Low humidity may cause the rattan to shrink. High humidity may cause the rattan to absorb moisture and expand, causing the weaving to look loose and wavy.

This is a natural phenomenon and not a defect.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture

Assembly Checklist



Read through the instructions carefully before you begin.

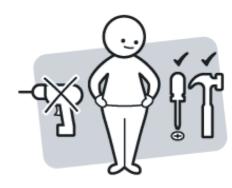

Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product



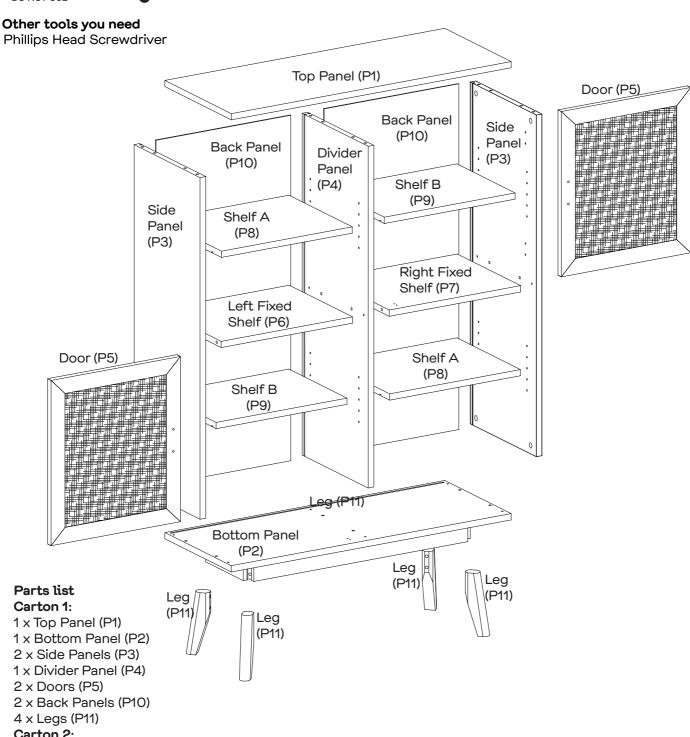




1 x Left Fixed Shelf (P6)

1 x Right Fixed Shelf (P7)

2 x Shelf A (P8)

2 x Shelf B (P9)

 Hardware Pack









20 x Cam Bolts

20 x Cam Nuts (H2)

20 x Dowels (H3)

2 x Handles (H4)

4 x Felt Pads (H5)

8 x Back Panel

4 x Back Panel

Screws (H6)

Connectors (H7)

8 x Bolts (H8)

12 x Flat Washers (H9)

€)=>>>>>>

8 x Spring Washers (H10)

4 x Handle Screws (H11)



1 x Allen Key (H12)



2 x Wall Straps (H13)



2 x Wall Strap Screws (H14)



8 x Hinges Screws (H15)



8 x Door Screws (H16)



4 x Hinges (H17)



16 x Shelf Pins (H18)




4 x Stoppers (H19)




8 x Stopper Screws (H2O)




12 x Stickers (H21)

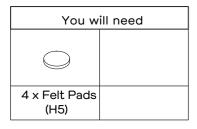


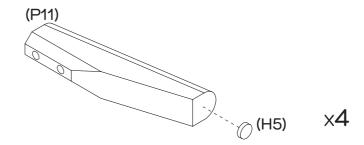

Attach $4 \times \text{Felt Pads}$ (H5) to the bottom of Legs (P11x4) by removing the adhesive backing and pressing firmly.

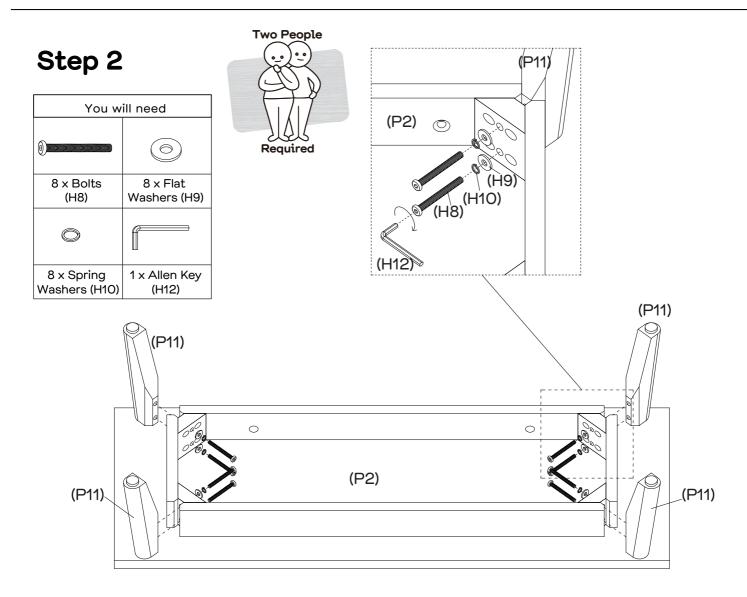


Attach Legs (P11x4) to Bottom Panel (P2) with 8 x Bolts (H8), 8 x Spring Washers (H10) and 8 x Flat Washers (H9) as shown by tightening with the Allen Key (H12).

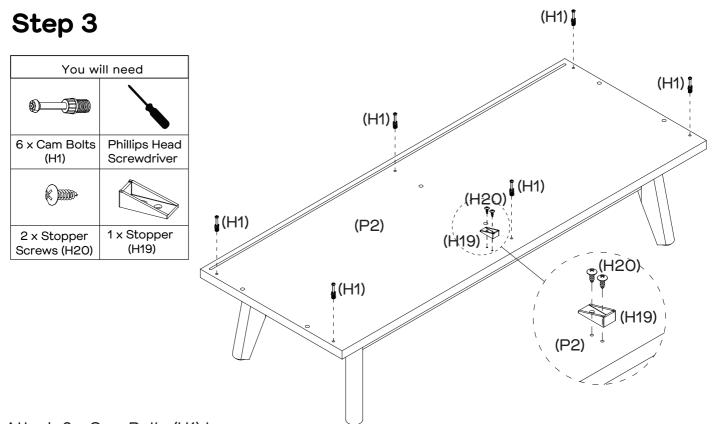


Attach 6 x Cam Bolts (H1) to
Bottom Panel (P2) by tightening with the Phillips Head Screwdriver.


Secure 1 x Stopper (H19) to Bottom Panel (P2) as shown with 2 x Stopper Screws (H20) by tightening with the Phillips Head Screwdriver.

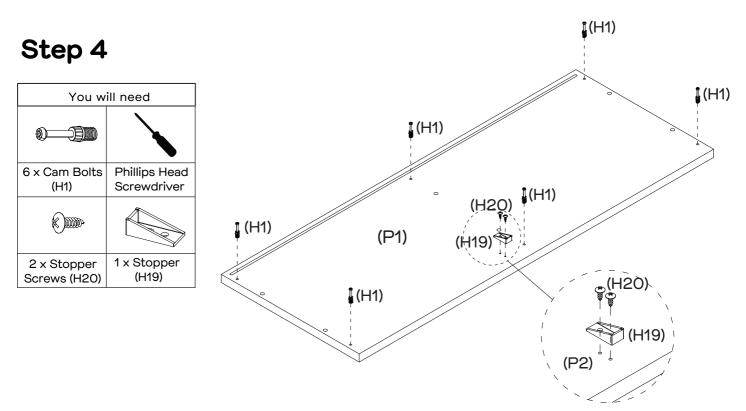


Attach 6 x Cam Bolts (H1) to Top Panel (P1) by tightening with the Phillips Head Screwdriver. Secure 1 x Stopper (H19) to Top Panel (P1) as shown with 2 x Stopper Screws (H20) by tightening with the Phillips Head Screwdriver.

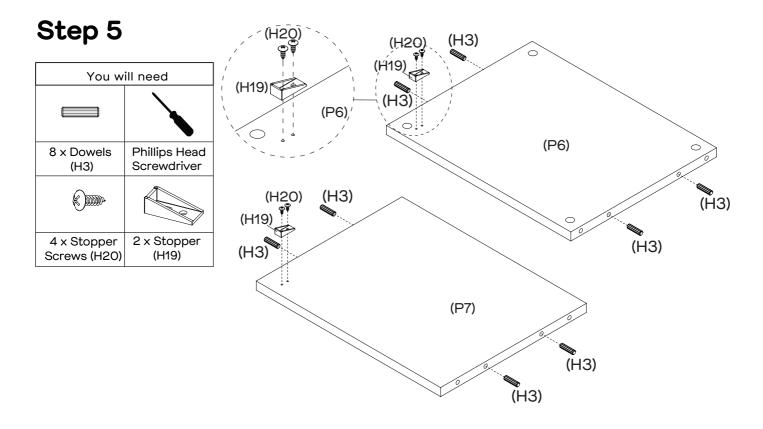

Insert 8 x Dowels (H3) into Left & Right Fixed Shelves (P6&P7) as shown. Secure 2 x Stoppers (H19) to Left & Right Fixed Shelves (P6&P7) as shown with $4 \times 4 \times 10^{-5}$ x Stopper Screws (H2O) by tightening with the Phillips Head Screwdriver .

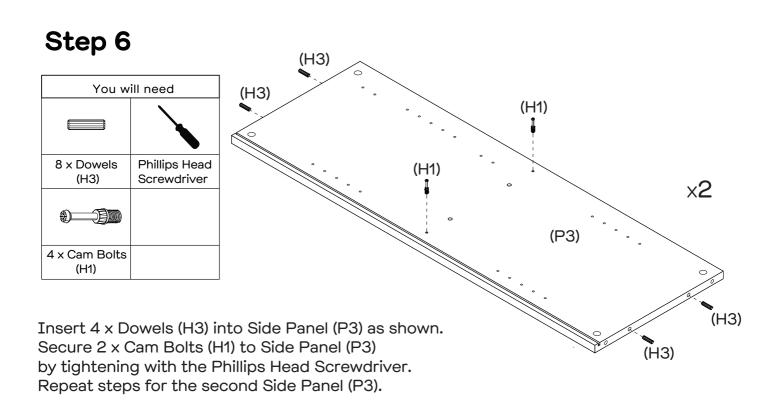



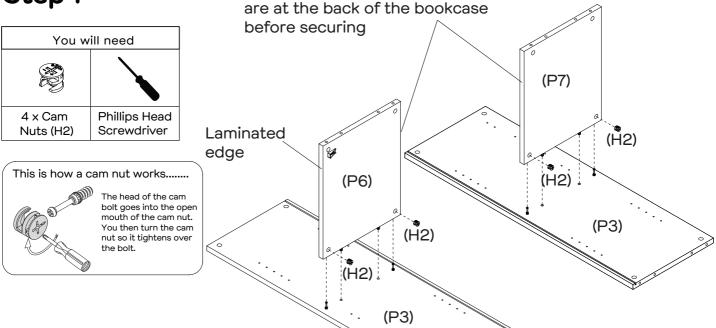

Ensure the raw edge of the shelves

Left & Right Fixed Shelves (P6&P7) as shown.


Insert 4 x Cam Nuts (H2) into


Rotate the cam nuts so the arrows point towards the incoming cam bolts.

Attach Left & Right Fixed Shelves (P6xP7) to Side Panels (P3x2)

by tightening the cam nuts with the Phillips Head Screwdriver.

Step 8

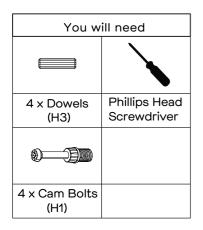

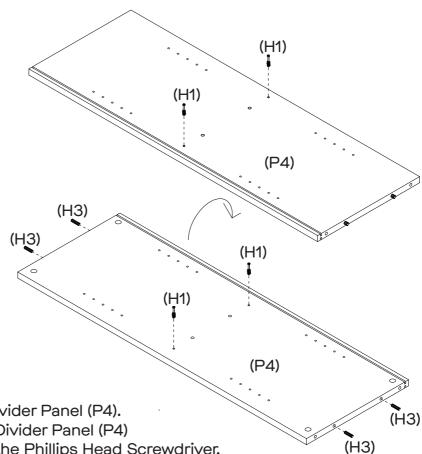

Insert 4 x Dowels (H3) into Divider Panel (P4).


Attach 2 x Cam Bolts (H1) to Divider Panel (P4)


as shown by tightening with the Phillips Head Screwdriver.

Carefully turn the Divider Panel (P4) over and attach


the remaining 2 x Cam Bolts (H1) by tightening with the Phillips Head Screwdriver.



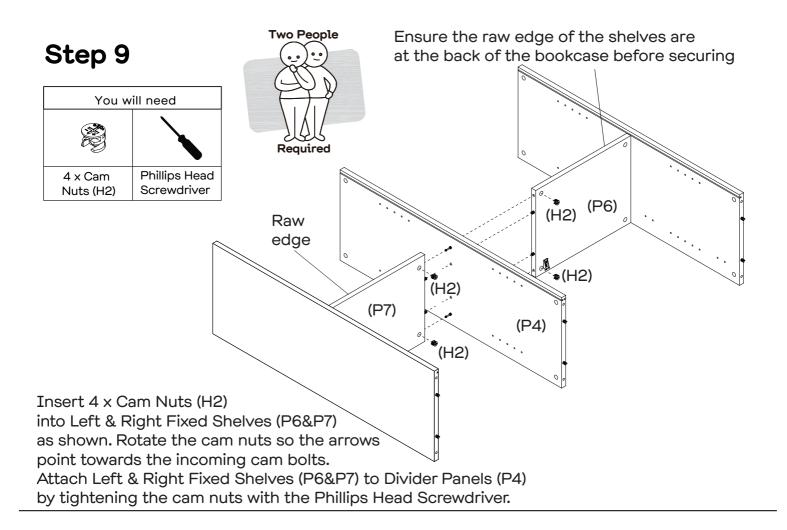

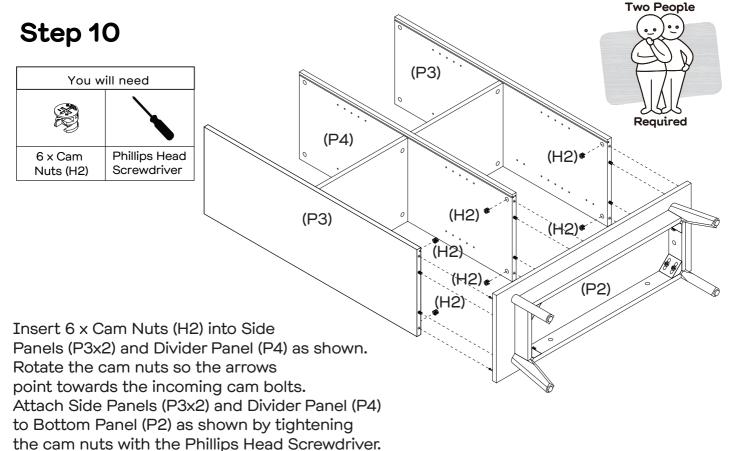

Slide Back Panels (P10x2) into the grooves of Side Panels (P3x2), Divider Panel (P4) and Bottom Panel (P2) as shown.

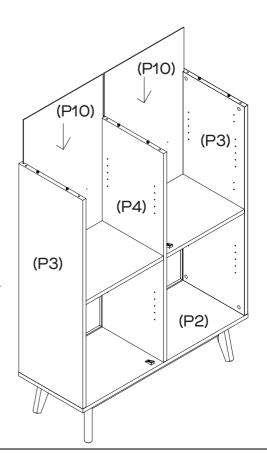

Step 12






Insert 6 x Cam Nuts (H2) into Side Panels (P3x2) and Divider Panel (P4) as shown.


Rotate the cam nuts so the arrows point towards the incoming cam bolts.
Attach Top Panel (P1) to Side Panels (P3x2) and Divider Panel (P4) by tightening the cam nuts with the Phillips Head Screwdriver.


Peel off the adhesive backing of 12 x Stickers (H21)

and paste them over the Cam Nuts (H2) on the Side Panels (P3x2) and Divider Panel (P4).

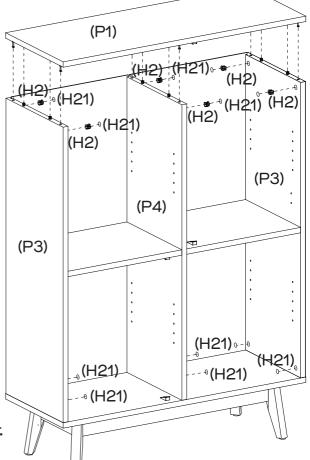

Fantastic

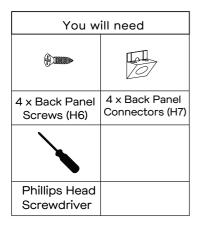


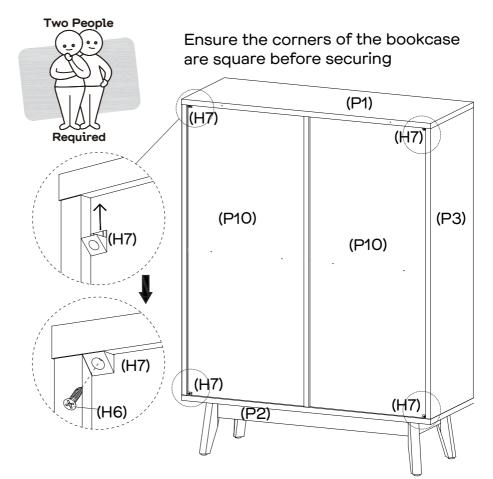

Insert 4 x Back Panel Connectors (H7) into the corners of the assembled bookcase as shown and secure with 4 x Back Panel Screws (H6) by tightening with the Phillips Head Screwdriver.

Step 14



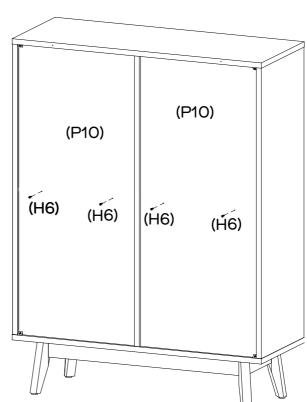

Secure Back Panels (P10x2) in place with 4 x Back Panel Screws (H6) as shown by tightening with the Phillips Head Screwdriver.







Insert 16 x Shelf Pins (H18) into Side Panels (P3x2) and Divider Panel (P4) at your desired height.

Place Shelf A & B (P8x2 & P9x2)

into bookcase as shown by resting on the shelf pins.


Ensure the shelves are firmly secured in place before using.

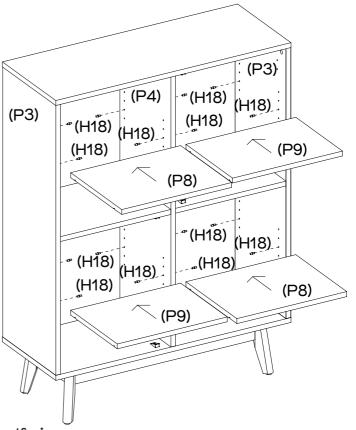

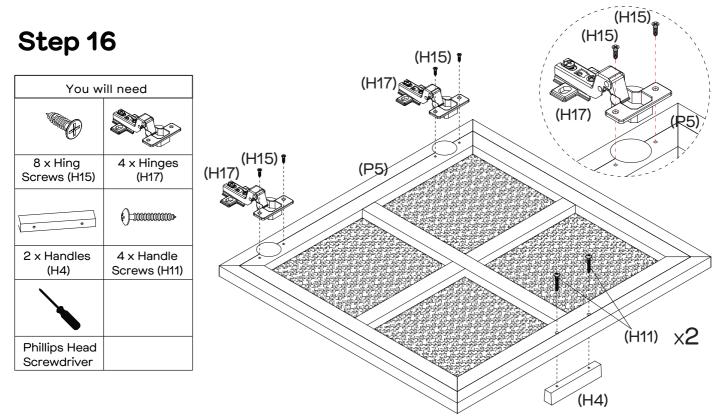


Attach 2 x Hinges (H17) to Door (P5) with 4 x Hinge Screws (H15) by tightening with the Phillips Head Screwdriver. Secure Handle (H4) to Door (P5) as shown with 2 x Handle Screws (H11) by tightening with the Phillips Head Screwdriver. Repeat steps for the second Door (P5).



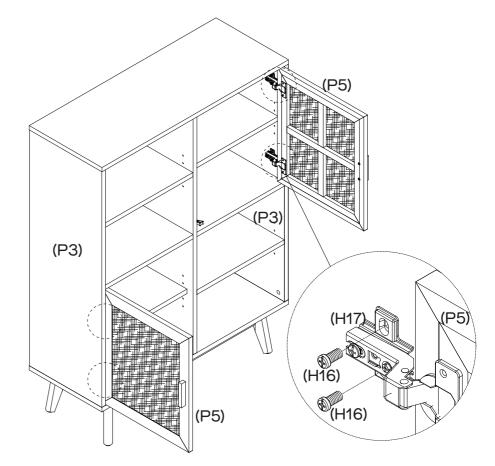


Attach 2 x Hinges (H17) on Doors (P5x2) to Side Panels (P3x2) as shown with 8×1000 x Tools (H16) by tightening with the Phillips Head Screwdriver.

Step 18

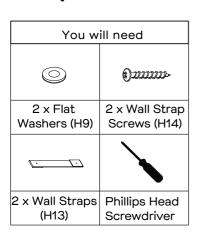


We strongly recommend that this product is permanently fixed to the wall or other suitable surface.

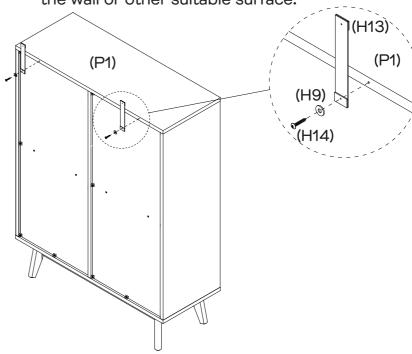


Attach Wall Straps (H13) to back of Top Panel (P1) with 2 x Flat Washers (H9) and 2 x Wall Strap Screws (H14) by tightening with the Phillips Head Screwdriver.



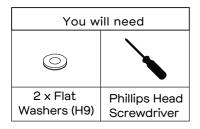



Seek advice from a qualified trades person on how to attach this wall strap to your specific wall.

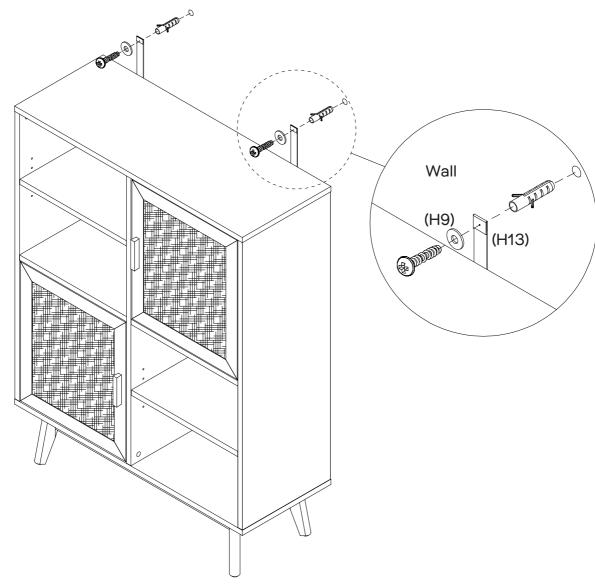


Screw and wall plug are not included. Please use appropriate fixtures for your wall.

With assistance, move the bookcase to the final position. Attach the wall straps to the wall with the appropriate fixtures. Make sure they are firmly attached and secure.


TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

STEP 1 Open the door.

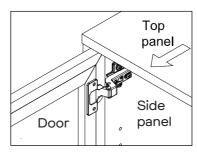


STEP 2

Adjust the door panel to be flush with side panel and top panel edge.

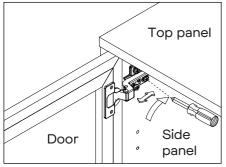


Slightly loosen the screw indicated and adjust the hinge to the desired position (see step 2a & 2b), then tighten the screw with a phillips head screwdriver.

STEP 2a MOVE DOOR OUT

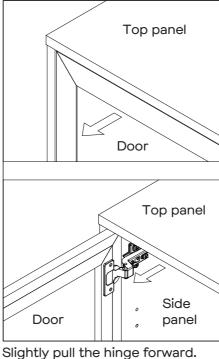


STEP 2b MOVE DOOR IN

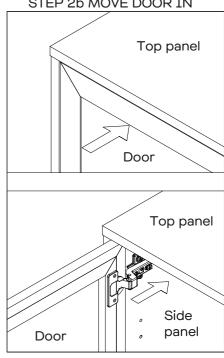


Slightly push the hinge back.

STEP 3 Adjust the gap between door panel and side panel.

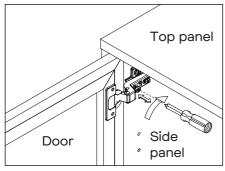


Slightly loosen or tighten the screw indicated and adjust the hinge to the desired position (see step 3a & 3b).

STEP 3a MOVE DOOR LEFT

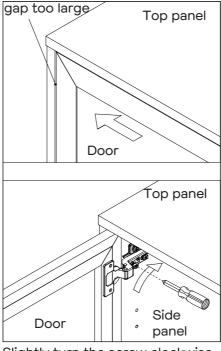


Slightly turn the screw clockwise to make the gap smaller.

STEP 3b MOVE DOOR RIGHT

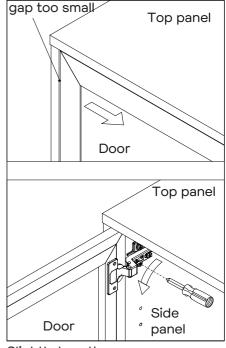

Slightly turn the screw counterclockwise to make the gap larger.



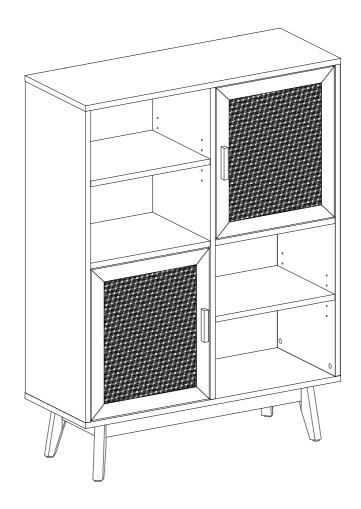

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.