


Version 1.0

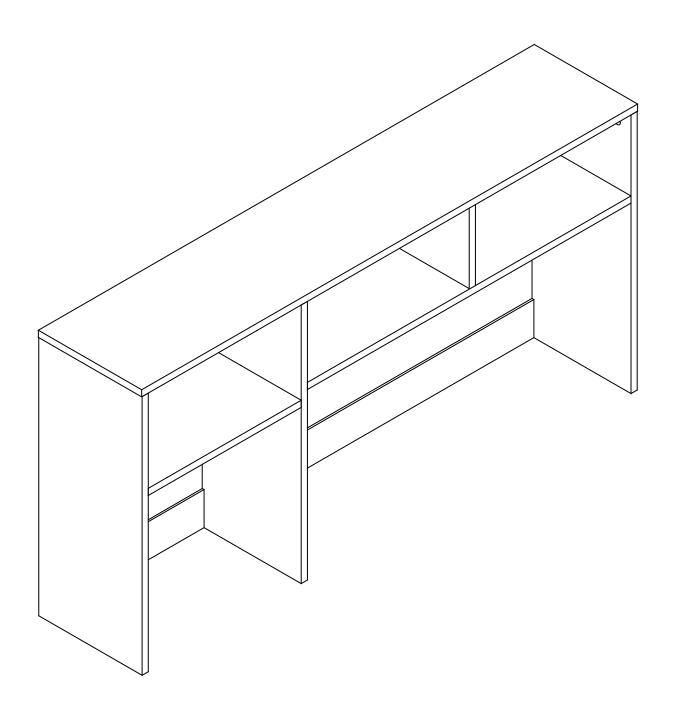



Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended Weight Capacity: 5kg/shelf

To reduce the risk of furniture tipover:




- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide

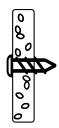


For plasterboard (without available wood stud)

Securing method:Self drilling plasterboard anchor.

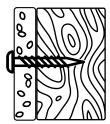

For plasterboard (with available wood stud)

Securing method:
Screw inserted directly into

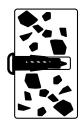



For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly Checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

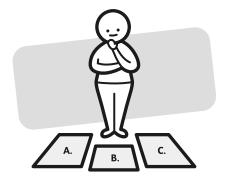

Identify and lay out all of the components before you begin assembly.

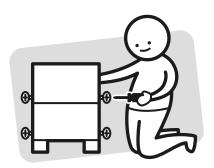


Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.


What you need

to assemble the product

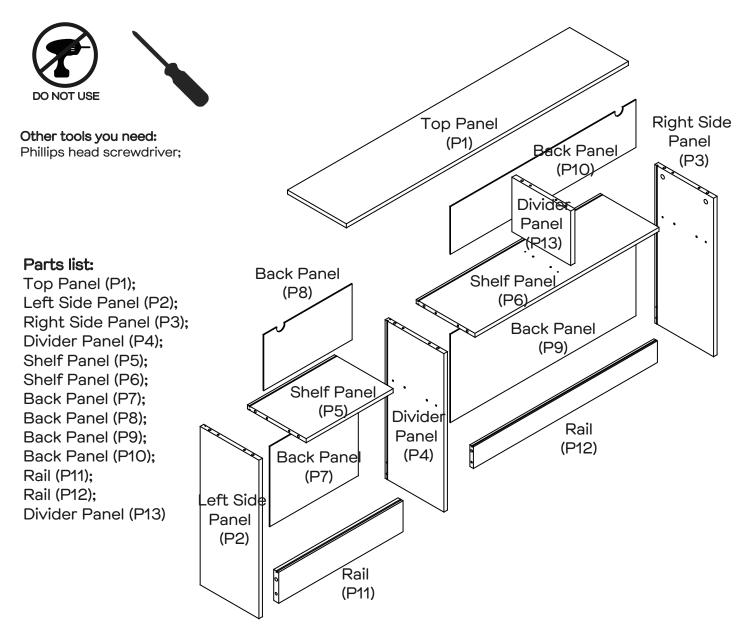


Hardware pack

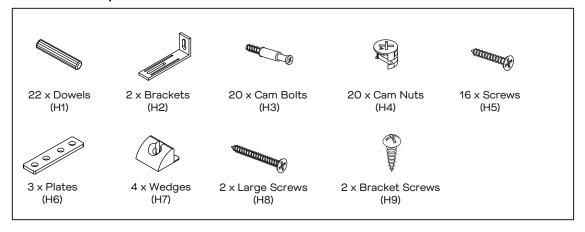

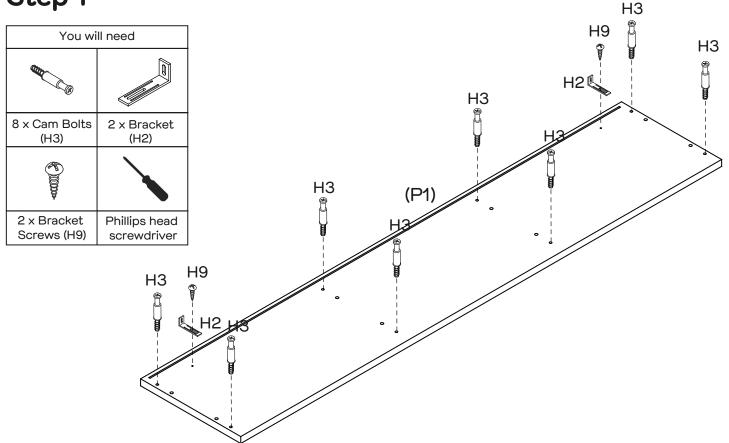


Secure 8 \times Cam Bolts (H3) to Top Panel (P1) by tightening with the Phillips Head Screwdriver. Attach 2 \times Brackets (H2) to Top Panel (P1) with 2 \times Bracket Screws (H9) by tightening with the Phillips Head Screwdriver.

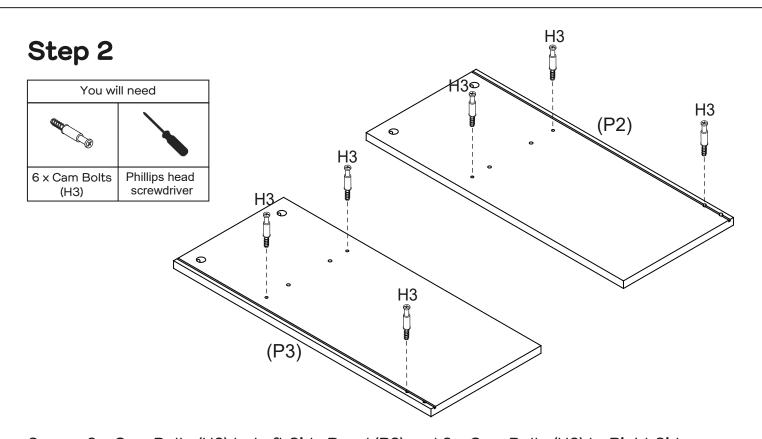


Secure 3 \times Cam Bolts (H3) to Left Side Panel (P2) and 3 \times Cam Bolts (H3) to Right Side Panel (P3) by tightening with the Phillips Head Screwdriver.



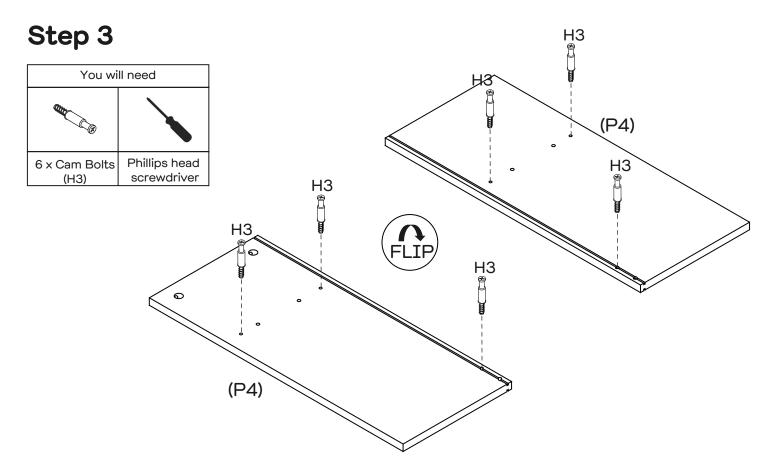


Secure 3 x Cam Bolts (H3) to Divider Panel (P4) by tightening with the Phillips Head Screwdriver. Flip the Divider Panel (P4) over and secure another 3 x Cam Bolts (H3) to the other side by tightening with the Phillips Head Screwdriver.

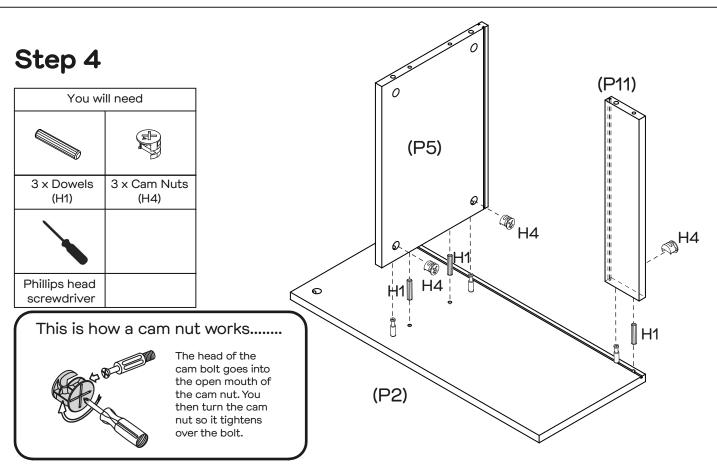

Insert 3 \times Dowels (H1) & 3 \times Cam Nuts (H4) into Shelf panel (P5) and Rail (P11). Attach Left panel (P2) to Shelf panel (P5) and Rail (P11), secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.



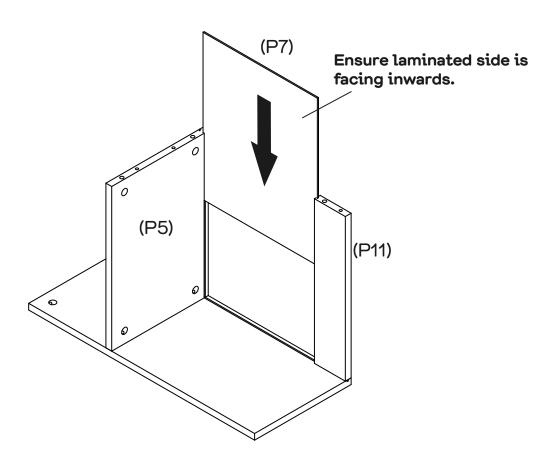



Slide Back panel (P7) into the grooves of the Shelf panel (P5) and Rail (P11) as shown.


Step 6



Insert 3 x Dowels (H1) & 3 x Cam Nuts (H4) into Shelf panel (P5) and Rail (P11). Attach Divider panel (P4) to Shelf panel (P5) and Rail (P11), secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.

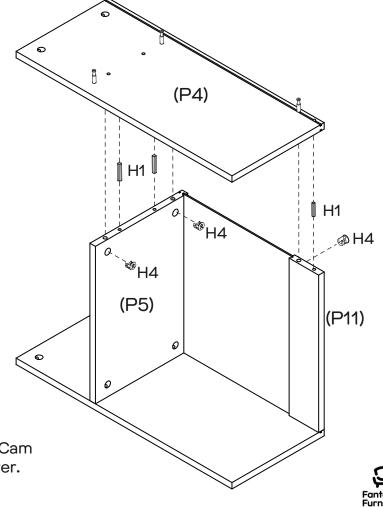

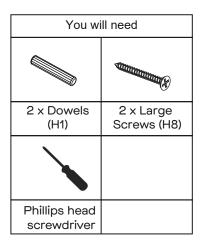

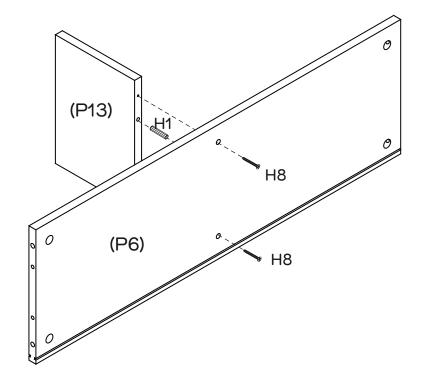


Insert 2 x Dowels (H1) into Shelf panel (P6), attach to Divider panel (P13) and secure with 2 x Large Screws (H8) by tightening with a Phillips Head Screwdriver.


Step 8



Insert 3 x Dowels (H1) & 3 x Cam Nuts (H4) into Shelf panel (P6) and Rail (P12). Attach Divider panel (P4) to Shelf panel (P6) and Rail (P12), secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.

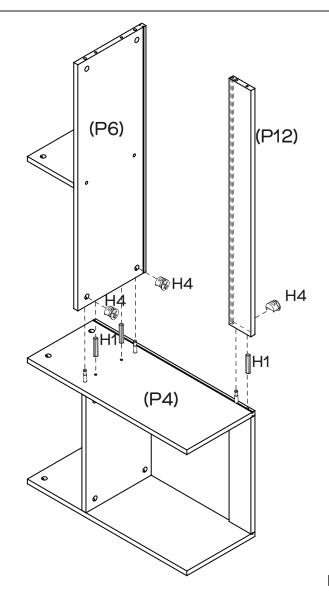




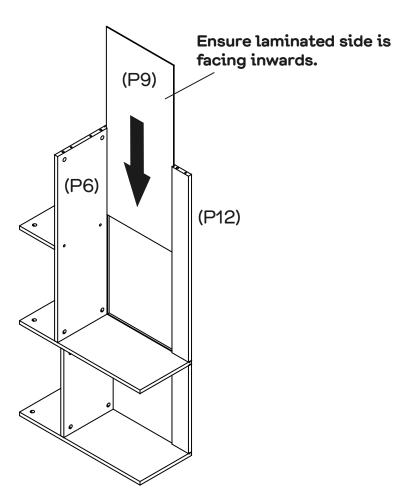


Slide Back panel (P9) into the grooves of the Shelf panel (P6) and Rail (P12) as shown.


Step 10

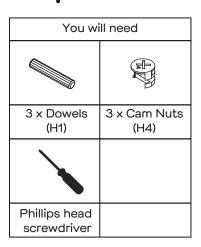

Insert 3 x Dowels (H1) & 3 x Cam Nuts (H4) into Shelf panel (P6) and Rail (P12). Attach Right Side panel (P3) to Shelf panel (P6) and Rail (P12), secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.

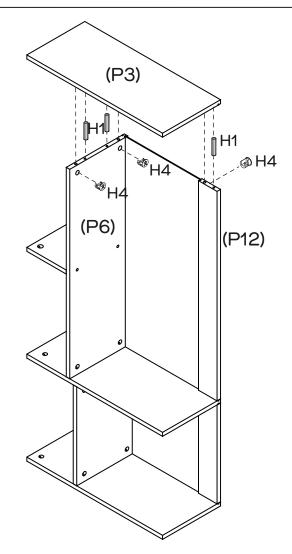




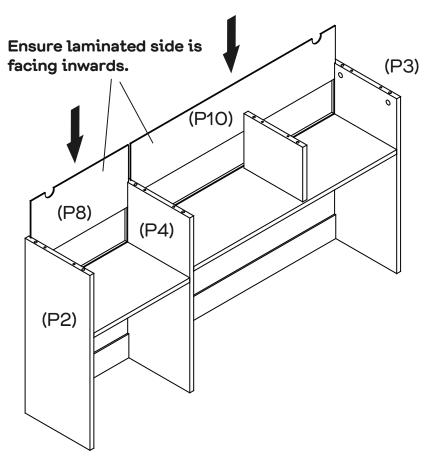


Slide Back panels (P8) & (P10) into the grooves of the Left panel (P2), Divider panel (P4) & Right panel (P3) as shown.


Step 12




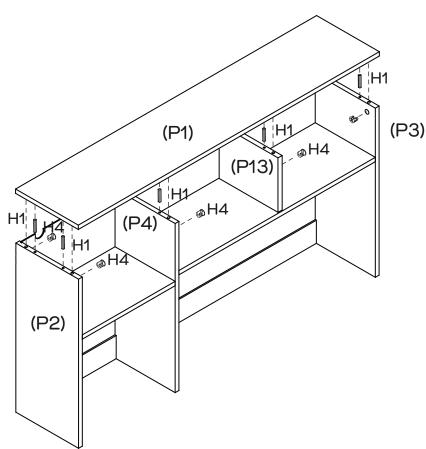

Insert 8 x Dowels (H1) & 8 x Cam Nuts (H4) into the Left Side Panel (P2), Right Side panel (P3), Divider Panel (P4) and Divider Panel (P13). Attach Top Panel (P1) to the unit and secure by tightening the Cam Nuts (H4) with the Phillips Head Screwdriver.

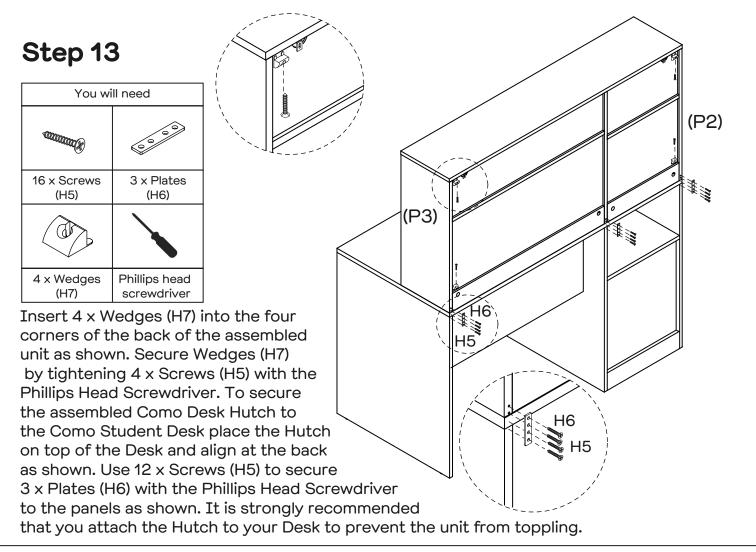

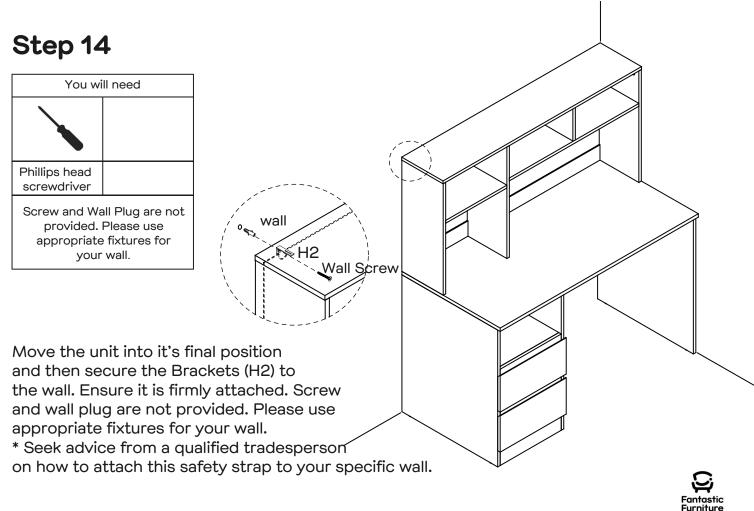

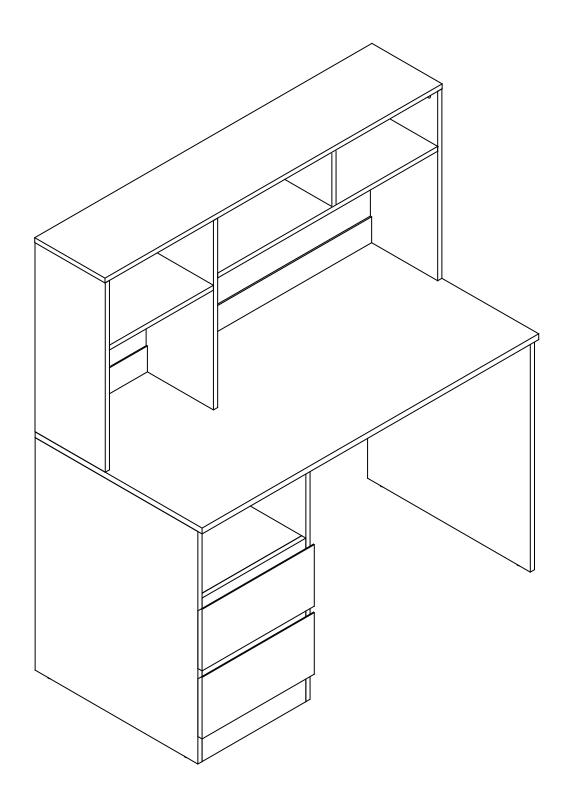

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.