


Version 1.1

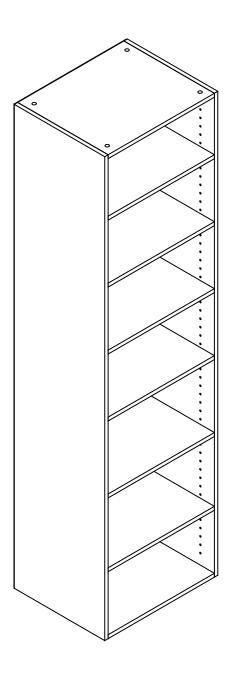



Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended Weight Capacity: 15kg/shelf

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide



For plasterboard (without available wood stud)

 Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method:
Screw inserted directly into



For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly Checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

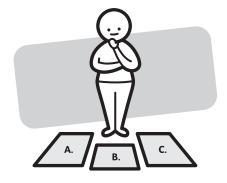

Identify and lay out all of the components before you begin assembly.

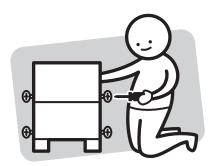

Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.


What you need Top/Bottom Panel Right Side to assemble the product (P1) Panel (P3) Adjustable **Back Panel** Shelf Panel (P6) (P4) Adjustable Other tools you need: Shelf Panel Phillips head screwdriver; (P4) Hammer; Tape Adjustable Shelf Panel (P4) Shelf Panel Left Side (P5) Panel (P2) Adjustable Shelf Panel (P4) Adjustable Parts list Shelf Panel 2 x Top/Bottom Panels (P1); (P4) Left Side Panel (P2); Right Side Panel (P3); 5 x Adjustable Shelf Panels (P4); Shelf Panel (P5);


Hardware pack

Back Panel (P6);

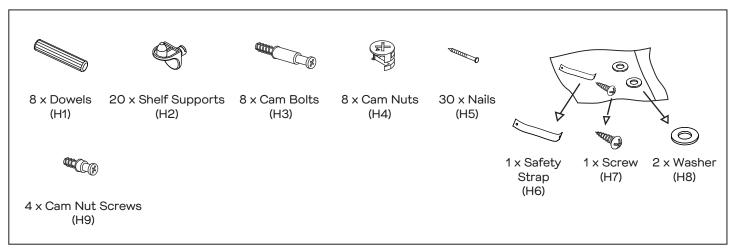


Top/Bottom Panel (P1)

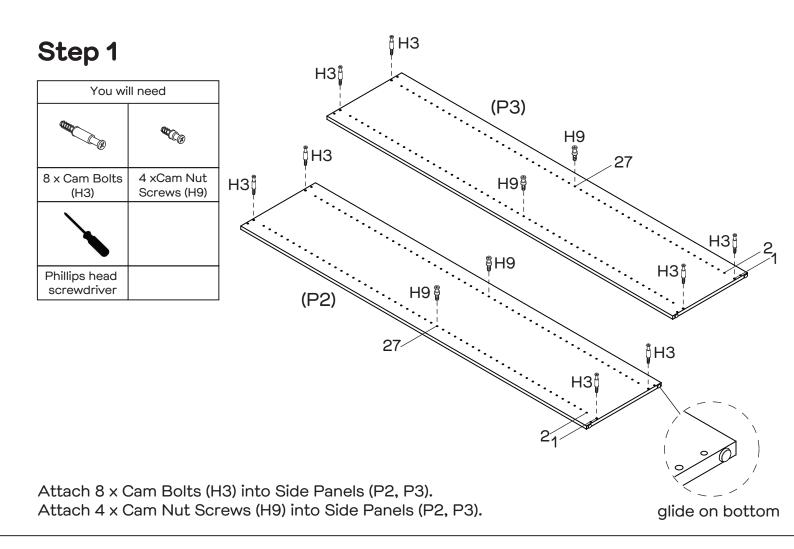

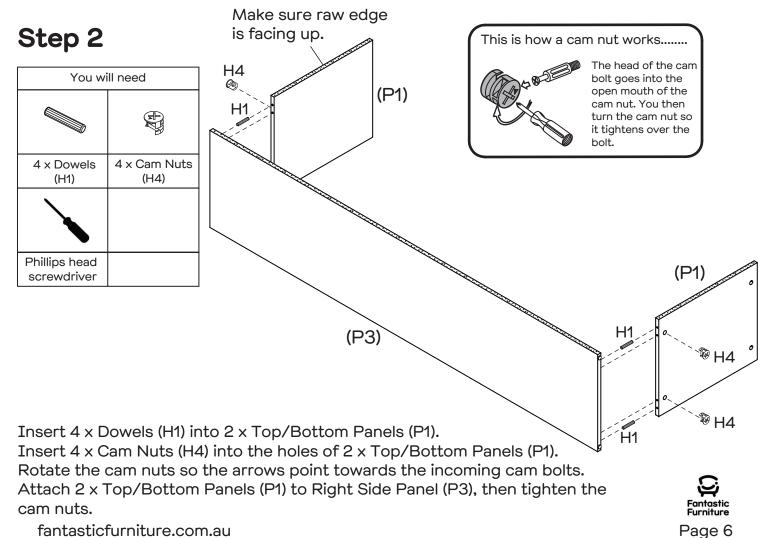

Step 3

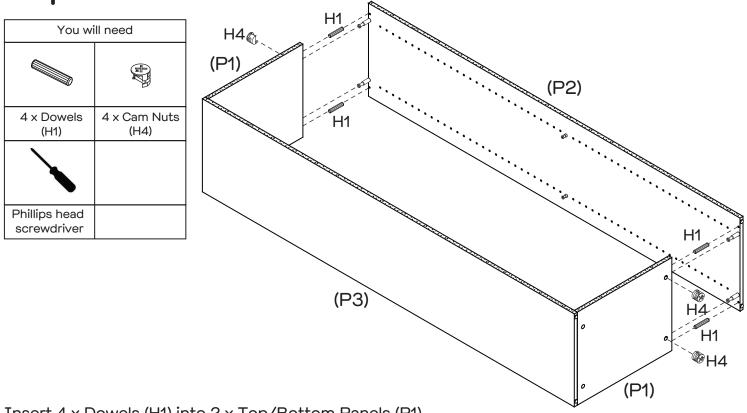


Insert 4 x Dowels (H1) into 2 x Top/Bottom Panels (P1).

Insert 4 x Cam Nuts (H4) into the holes of 2 x Top/Bottom Panels (P1).


Rotate the cam nuts so the arrows point towards the incoming cam bolts.

Push Left Side Panel (P2) into place and tighten the cam nuts.

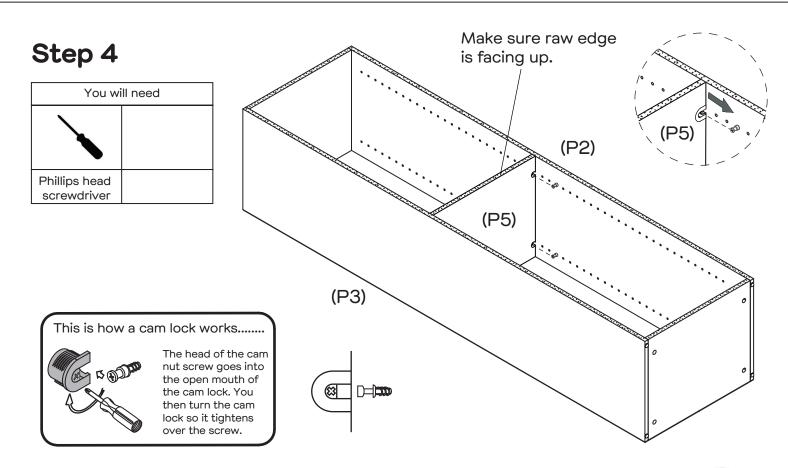


Adjust the opening of cam locks is facing the cam nut screws, then push Shelf Panel (P5) into place and tighten the cam locks. fantasticfurniture.com.au




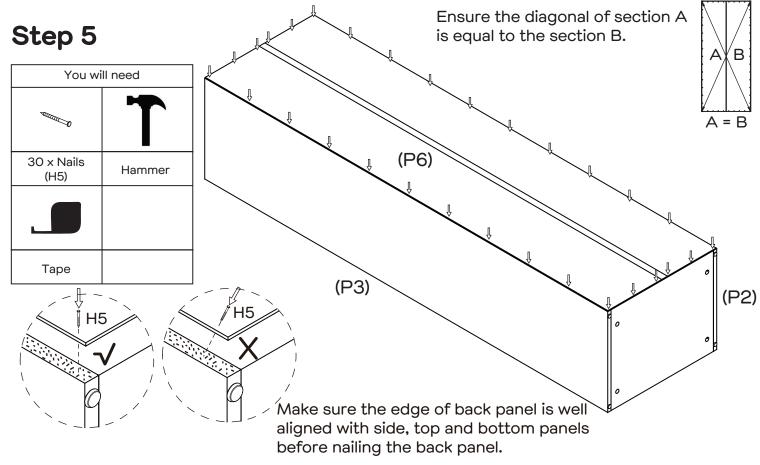


Attach Back Panel (P6) to the cabinet with 30 x Nails (H5) using hammer. Please measure with a tape to ensure that the spacing of the nails is consistent, and make sure the tip of the nails are vertically centered on the edge of the Side Panels(P2, P3) and Top/Bottom Panels (P1).

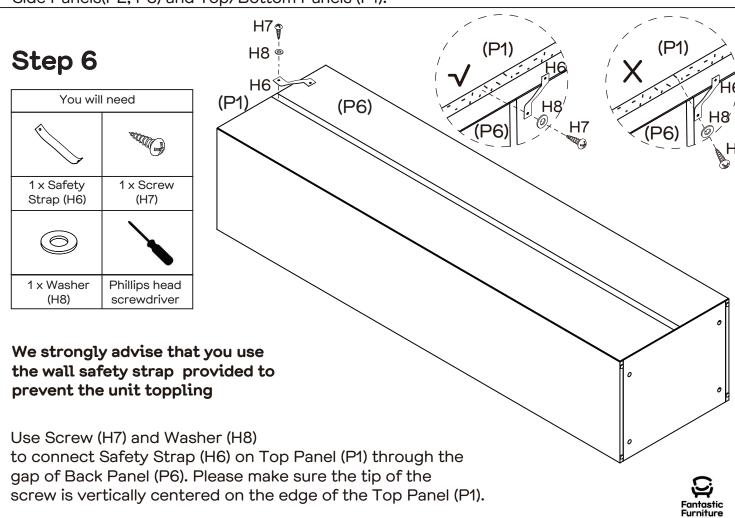


Step 7

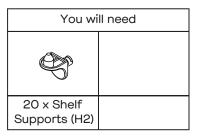

Insert 20 x Shelf Supports (H2) into the holes of Side Panels (P2, P3) as shown. Insert 5 x Adjustable Shelf Panels (P4) into the cabinet.

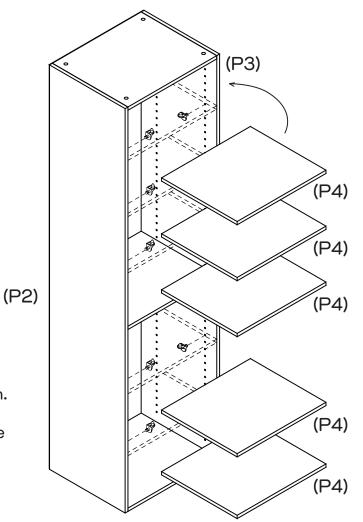


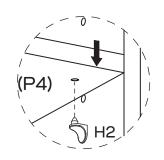


Align the Shelf Support to the hole of Adjustable Shelf Panel.

Step 8



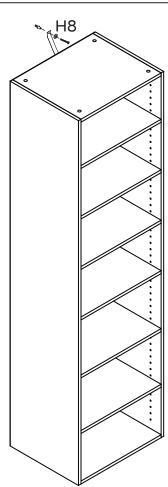


Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

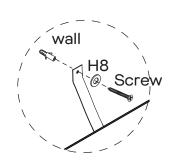

Move the cabinet to the final position. Attach the safety strap to the wall. Make sure it is firmly attached and make sure it is a snug fit.



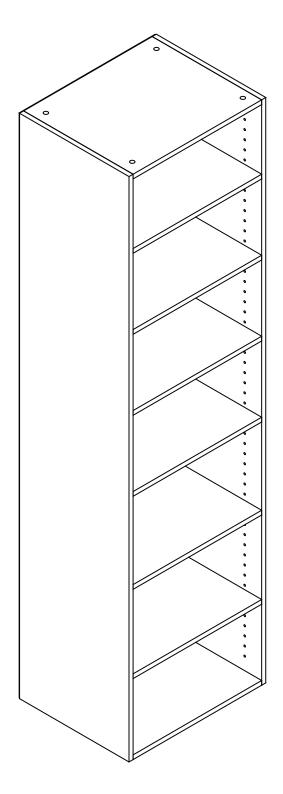

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.