





Enjoy Your purchase from Australia's Best Value Furniture Store





Scratches, chips, sudden changes in temperature and hairline fractures may cause the glass to break. This glass is designed to break into small, relatively harmless pieces and not sharp fragments.

Avoid placing hot or cold items directly onto the glass surface unless using a thick insulation material such as placemats or coasters.

Avoid dropping objects onto the glass. Do not allow hard or pointed objects to come into contact with the glass. Never use the top area as a chopping surface. Do not sit or stand on the glass surface.



ARNING: ENSURE THE WALL BRACKET IS ATTACHED TO AVOID SERIOUS INJURY.

To avoid any serious or fatal injury, this product has been fitted with a wall bracket to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.



Assembly checklist



Read through the instructions carefully before you begin.





Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

!Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

!The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

!Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.


!Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.


!Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.


!If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.



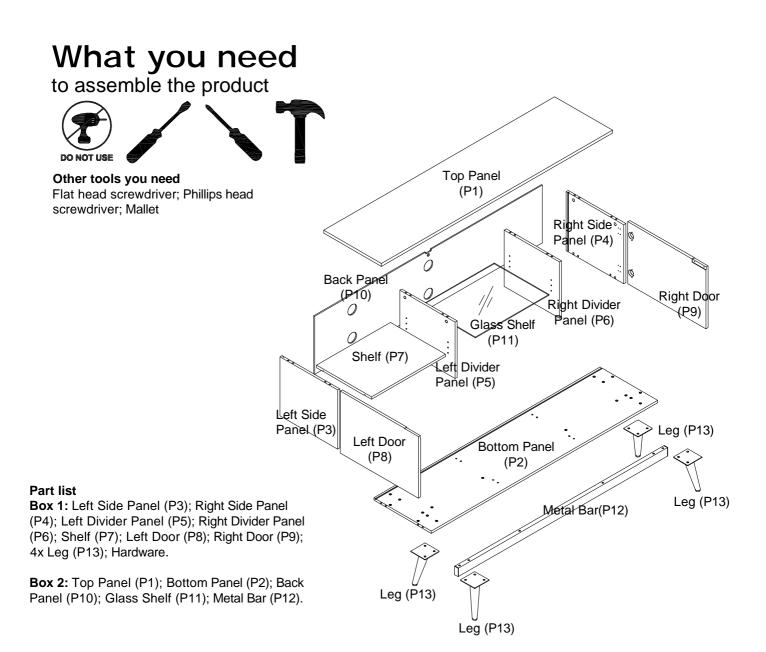


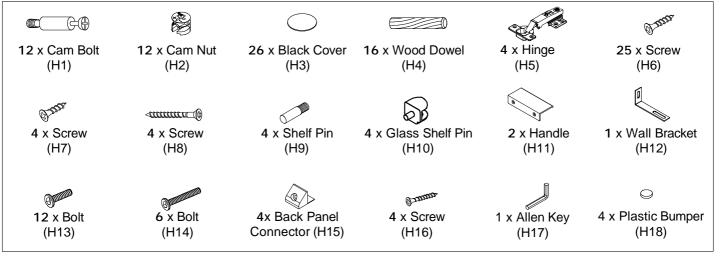



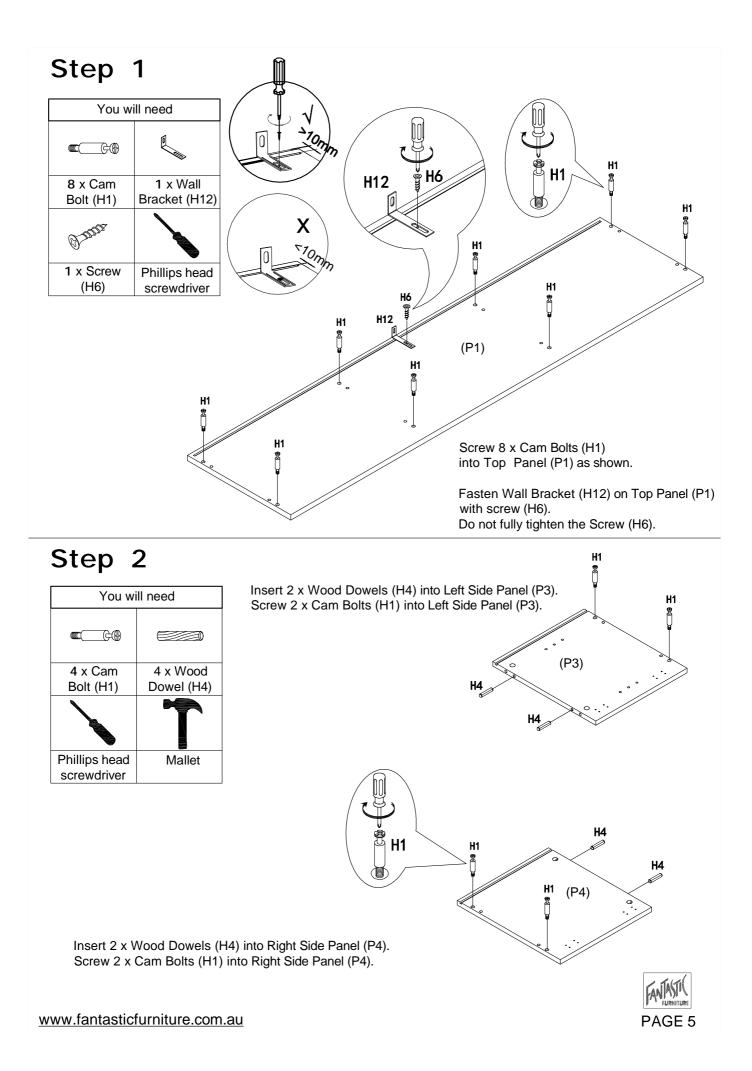


Step 3

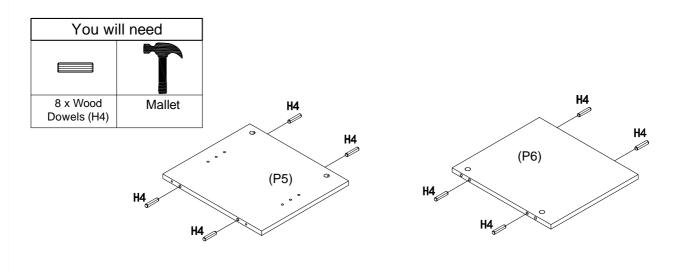

Insert 4 x Wood Dowels (H4) into Left Divider Panel (P5). Insert 4 x Wood Dowels (H4) into Right Divider Panel (P6).

Step 4


)

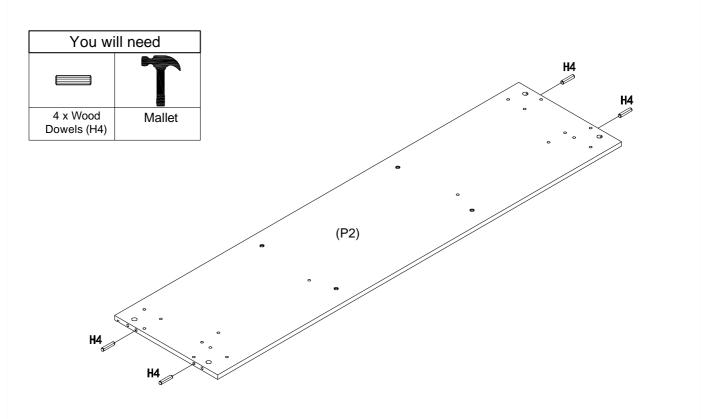


Insert 4 x Wood Dowels (H4) into Bottom Panel (P2).






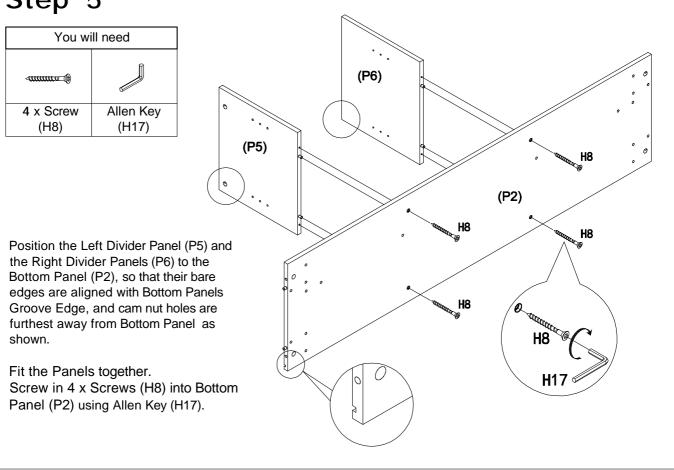

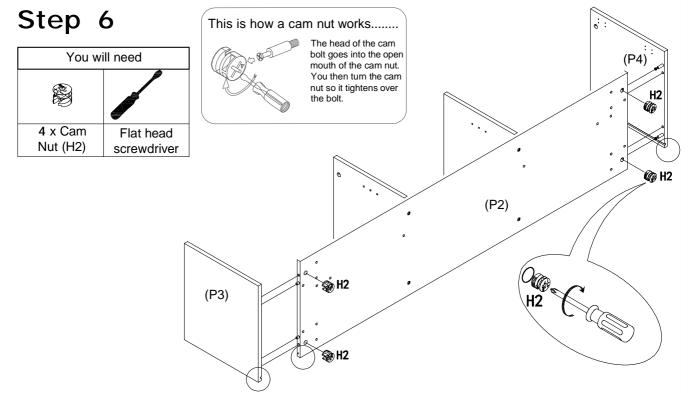


Position Left Side Panel (P3) and Right Side Panel (P4) onto Bottom Panel (P2), so that their grooves are aligned. Insert 4 x Big Cam Nuts (H2) into Bottom Panels (P2) and turn clockwise to lock.



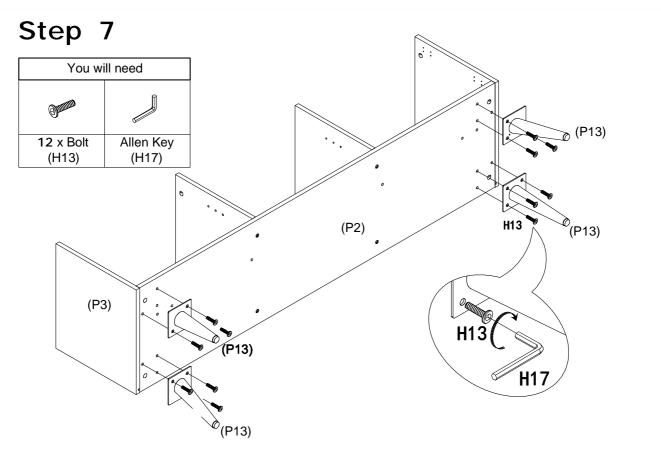



Fix each Metal Leg (P13) to Bottom Panel (P2) with 3 x Bolts (H13) using Allen Key (H17).

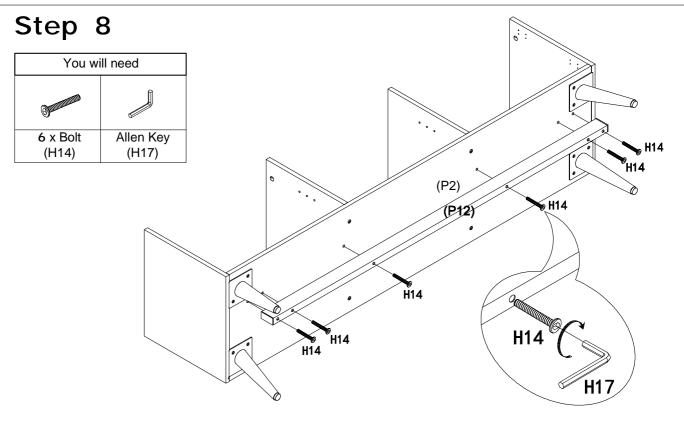

Attach Metal Bar (P12) onto Bottom Panel (P2) with 6 x Bolts (H14) using Allen Key (H17). With help, turn the assembled unit over carefully.




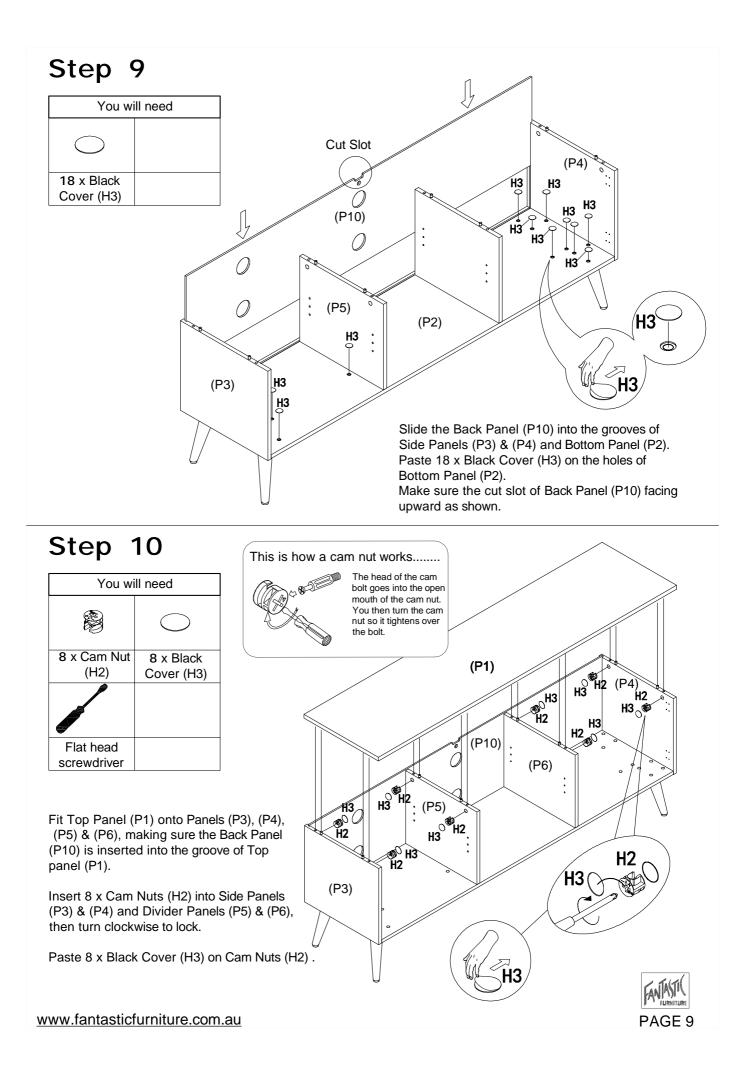


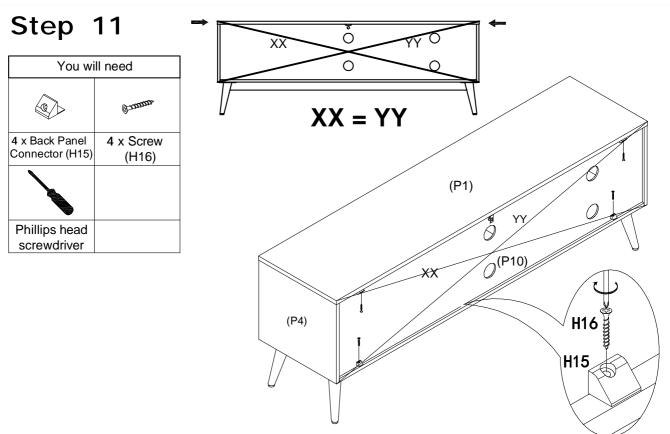


If necessary, gently adjust the Top Panel (P1) sideway in either direction until XX and YY are equal.

Fix the Back Panel Connectors (H15) with Screws (H16) as shown.

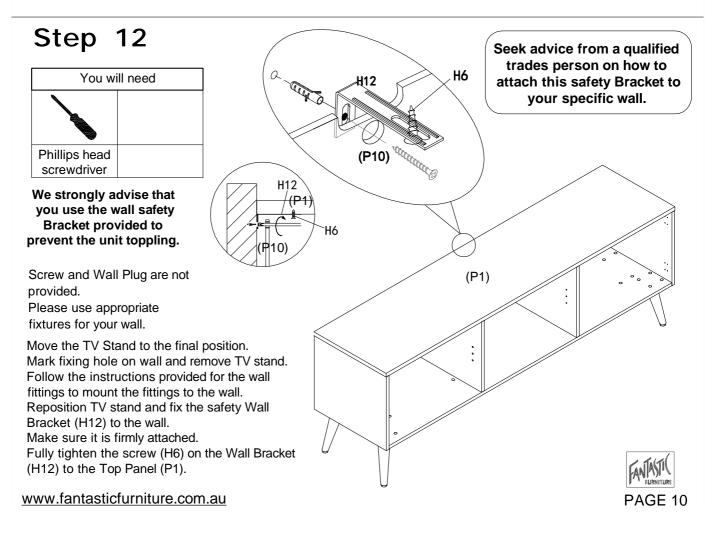


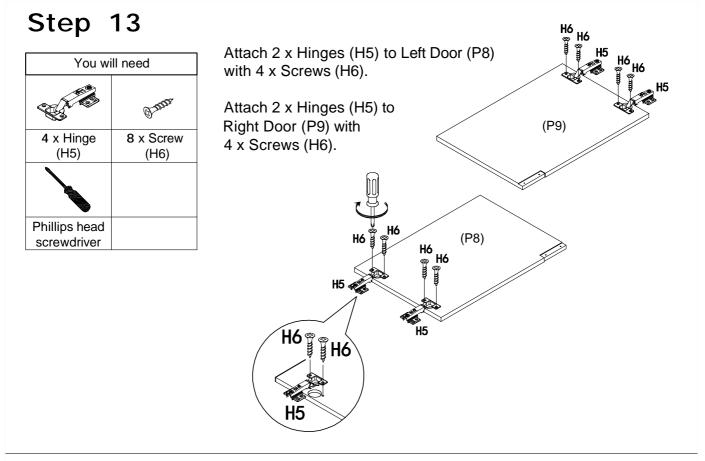


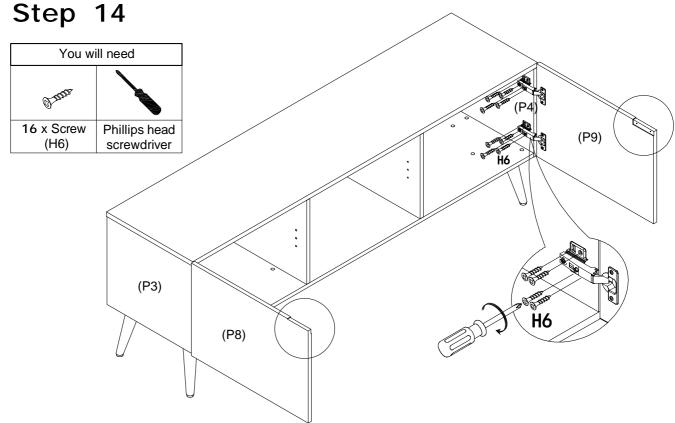


Attach 2 hinges on Left Door (P8) to Left Side Panel (P3) with 8 x Screws (H6) as shown. Attach 2 hinges on Right Door (P9) to Right Side Panel (P4) with 8x Screws (H6) as shown.




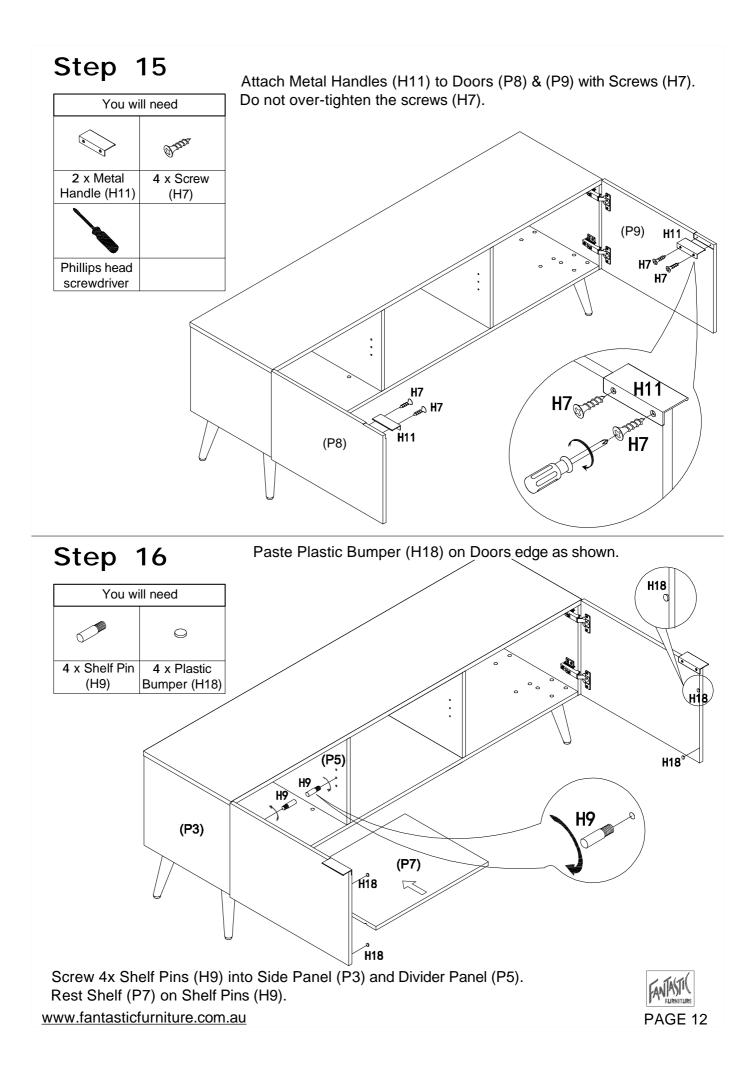

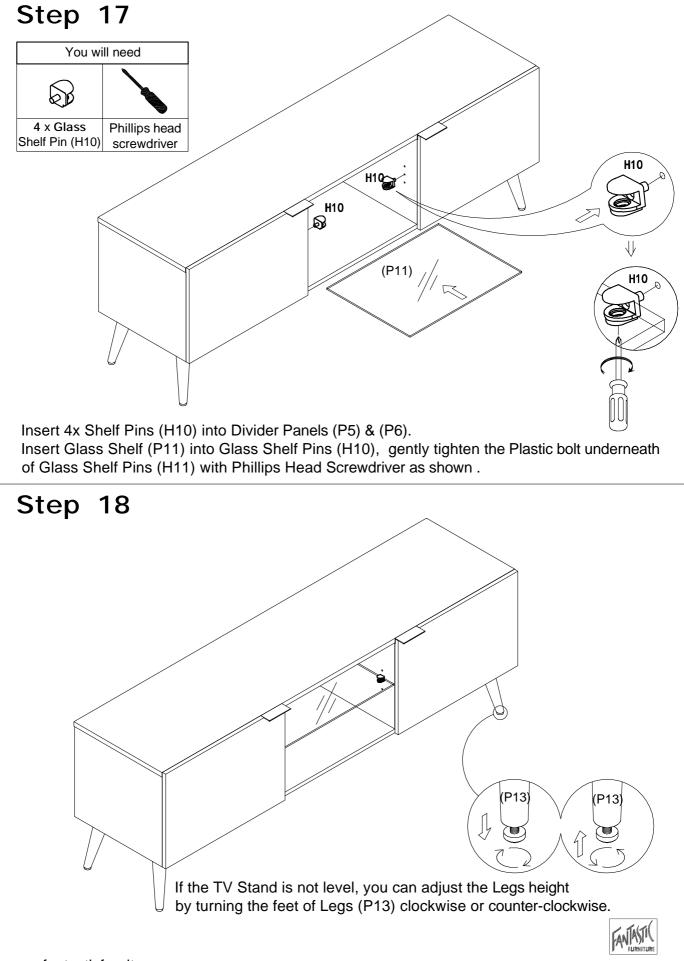

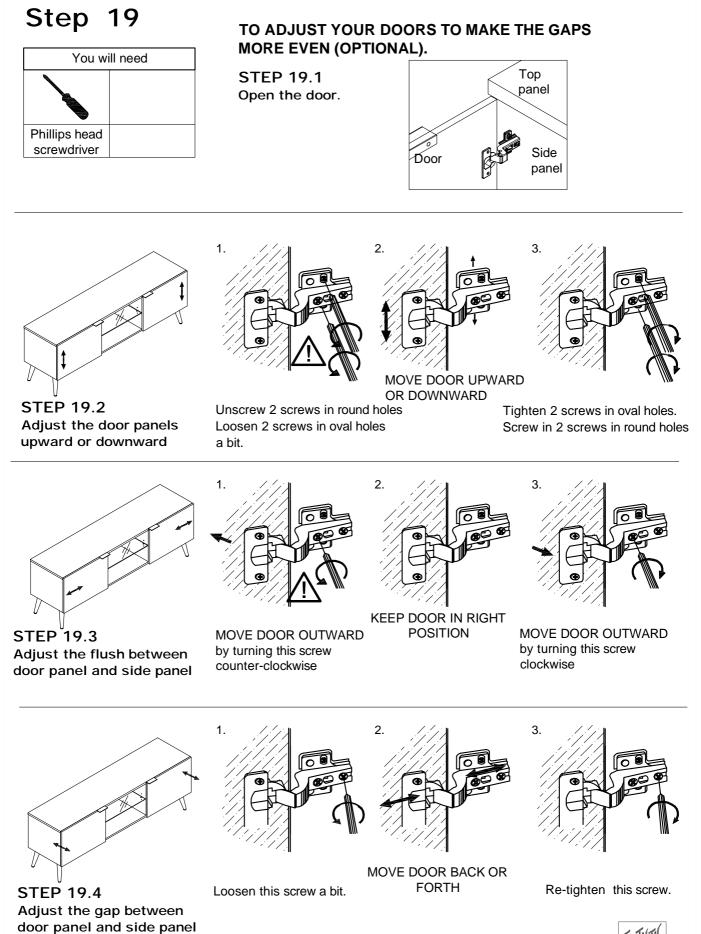



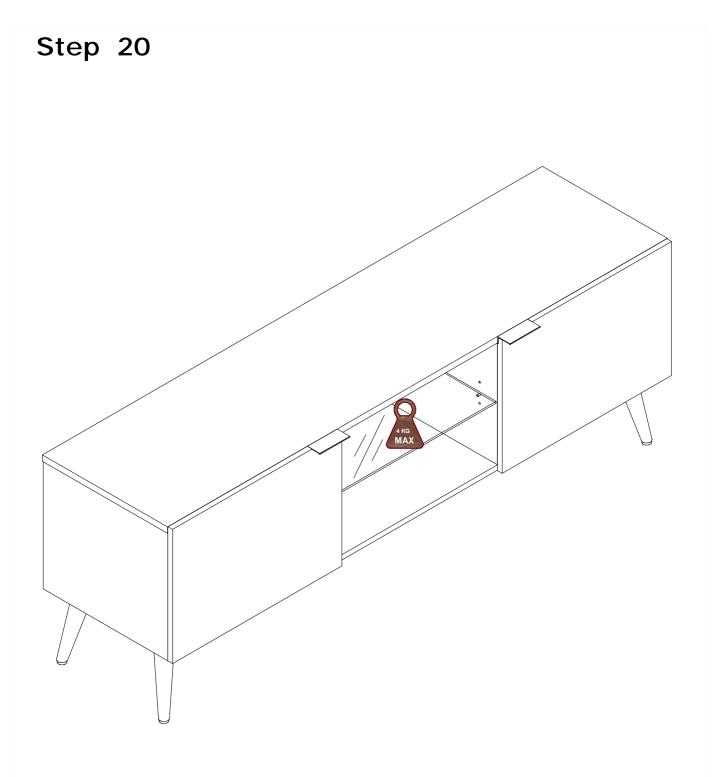

Job Complete !

In the interest of our environment Please dispose of all packaging thoughtfully.



THIS TOP IS FINISHED WITH A CLEAR PU LACQUER

Avoid placing hot items directly onto the surface unless using a thick insulation material such as placemats or coasters. Heat may lead to discolouration or other damage to the surface of the product.

Use a soft cloth that has been dampened in water to clean the surface of this product. Do not use abrasive cleaners, furniture wax or polish on the surface of this product, as it may damage the surface.

CAUTION: FREQUENT EXPOSURE TO DIRECT SUNLIGHT OR SIMILAR SOURCES MAY CAUSE THE SURFACE TO DISCOLOUR OR FADE.

