



Sonoma Clothes Rack Large

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Warning: Ensure the wall strap is attached to avoid serious injury.

To avoid any serious of fatal injury, a wall strap has been provided with this product to prevent topping. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Weight Limit: 20kgs per shelf




Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

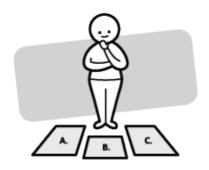

Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What You Need

to assemble the product






Other tools you need Phillips Head Screwdriver

Parts list


Box 1:


Large Top Panel (P1)
2 x Large Shelf Panels (P2)
Small Top Panel (P3)
5 x Small Shelf Panels (P4)
Top Left Frame (P5)
Lower Left Frame (P6)
4 x Back Supports (P7)
2 x Hanging Rails (P8)
Top Right Frame (P9)
Lower Right Frame (P10)
Top Middle Frame (P11)

Lower Middle Frame (P12)

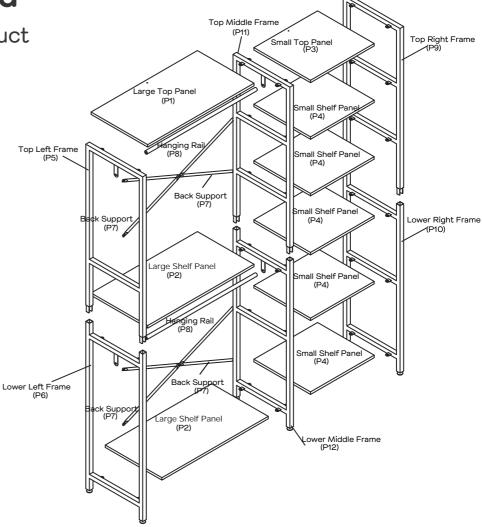

Hardware Pack:

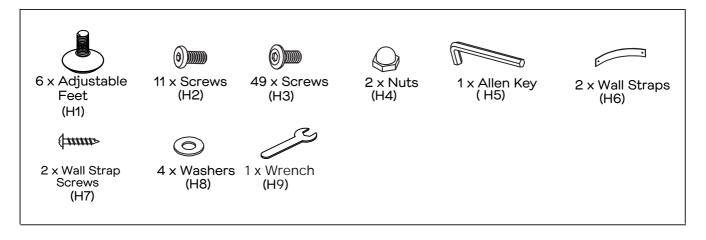


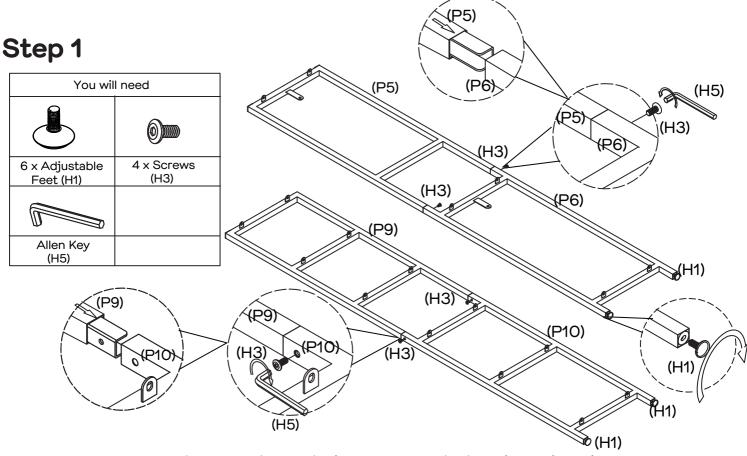

Attach Top & Lower Left Frames (P5&P6) with 2 x Screws (H3) by tightening with the Allen Key (H5).


Repeat steps for Top & Lower Right Frames (P9&P10).

Secure 4 x Adjustable Feet (H1) to the bottom of Lower Left & Right Frames (P6&P10) as shown.

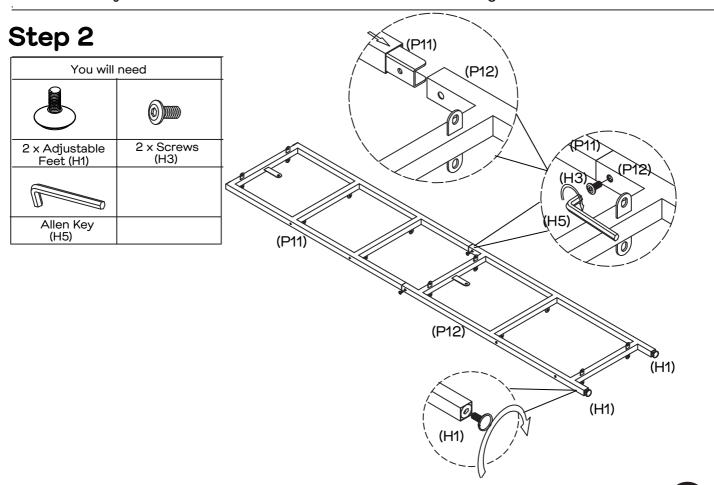


Attach Top & Lower Middle Frames (P11&P12) with 2×1 Screws (H3) by tightening with the Allen Key (H5). Secure 2×1 Adjustable Feet (H1) to the bottom of Lower Middle Frame (P12) as shown.



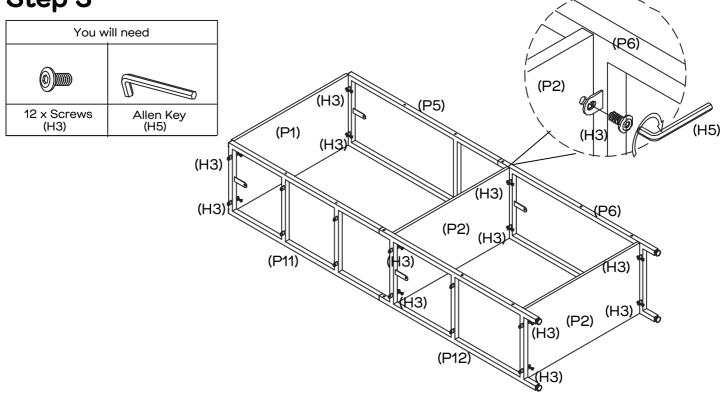


Attach Top & Lower Left Frames (P5&P6) and Top & Lower Middle Frames (P11&P12) to Large Top Panel (P1) and Large Shelf Panels (P2x2) with 12 x Screws (H3) as shown by tightening with the Allen Key (H5).

Step 4

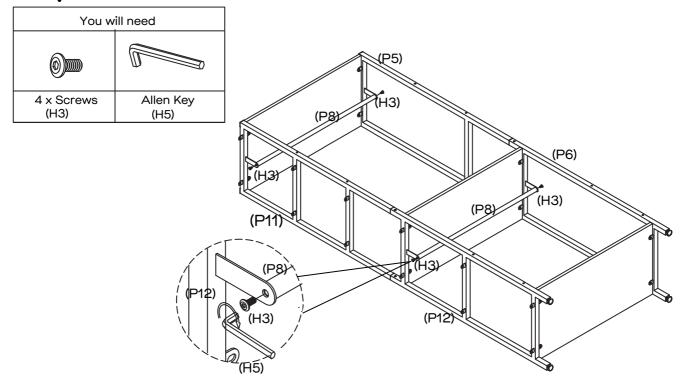

Secure Hanging Rails (P8x2) to Top & Lower Left Frames (P5&P6) and Top & Lower Middle Frames (P11&P12) with $4 \times \text{Screws}$ (H3) as shown by tightening with the Allen Key (H5).




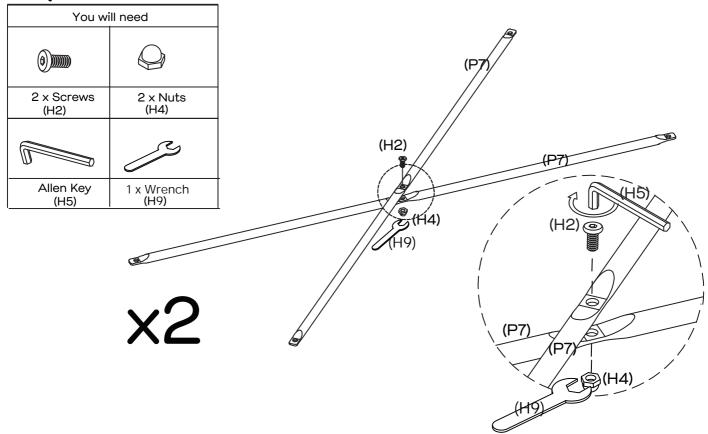

Secure Back Supports (P7x2) together as shown with 1 x Nut (H4) and 1 x Screw (H2) by tightening with the Allen Key (H5) and Wrench (H9).

Repeat steps for the second set of Back Supports (P7x2).


Step 6

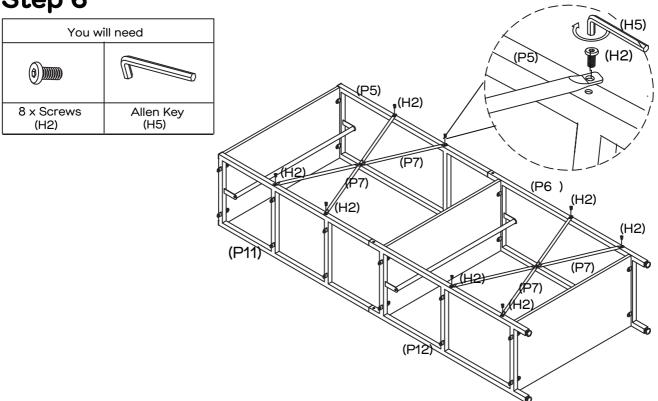


Attach Back Supports (P7x4) to Top & Lower Left Frames (P5&P6) and Top & Lower Middle Frames (P11&P12) as shown with 8 x Screws (H2) by tightening with the Allen Key (H5).


Fantastic Furniture Page 7

fantasticfurniture.com.au

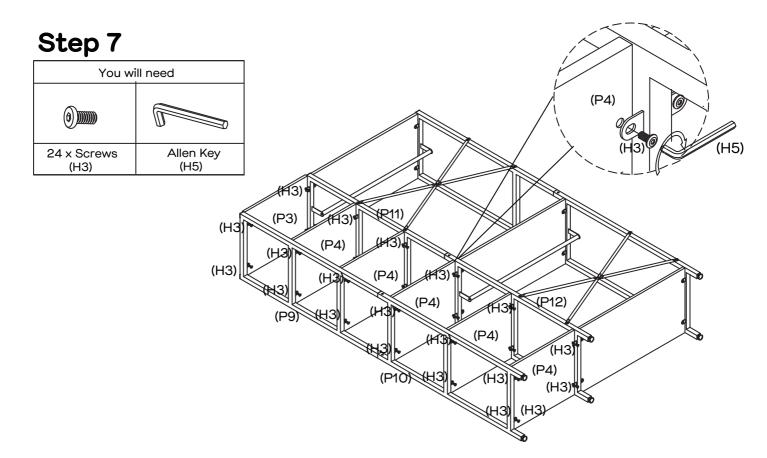

 Attach Small Top Panel (P3) and Small Shelf Panels (P4x5) to Top & Lower Middle Frames (P11&P12) and Top & Lower Right Frames (P9&P10) with 24 x Screws (H3) as shown by tightening with the Allen Key (H5).

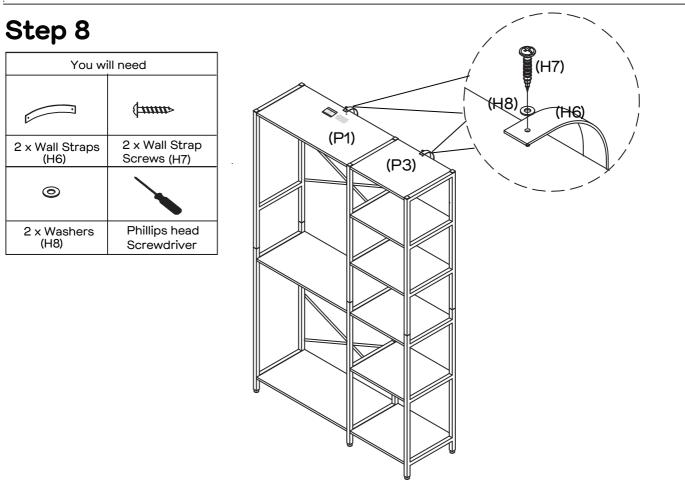






You will need	
0	
2 x Washers (H8)	

Screws and wall plugs are not provided please use appropriate fixtures for your wall.

We strongly suggest using the wall strap to prevent this unit from toppling.


Seek advice from a qualified trades person on how to attach this to your specific wall.

Move furniture to its final position, then connect the ends of 2 x Wall Straps (H6) to the wall.Make sure it is firmly attached and a snug fit.

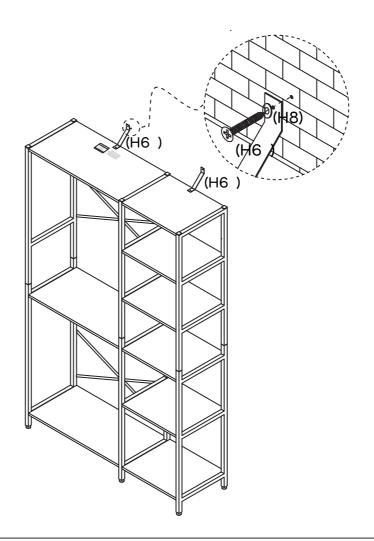


Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

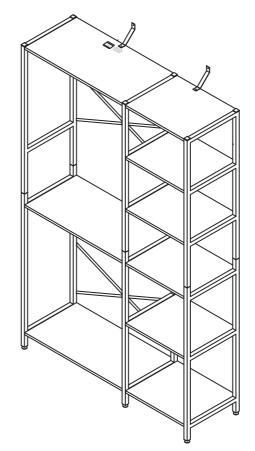



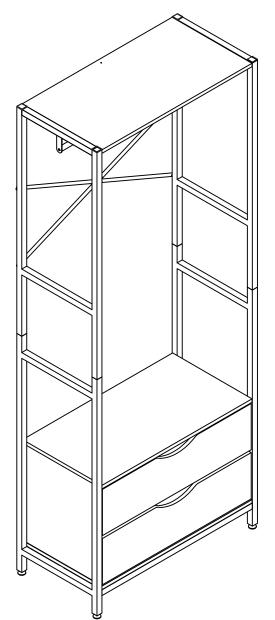



Sonoma

Clothes Rack 2 Drawer

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Warning: Ensure the wall strap is attached to avoid serious injury.

To a void any serious of fatal injury, a wall strap has been provided with this product to prevent topping. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Weight Limit: 20kgs per shelf



Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.




Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

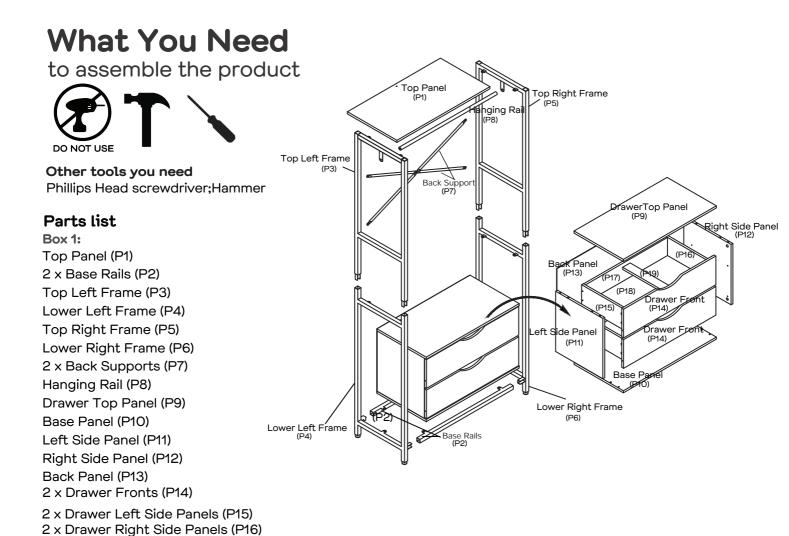


Hardware Pack:

2 x Drawer Back Panels (P17) 2 x Drawer Bottom Panels (P18) 2 x Drawer Support Panels (P19)

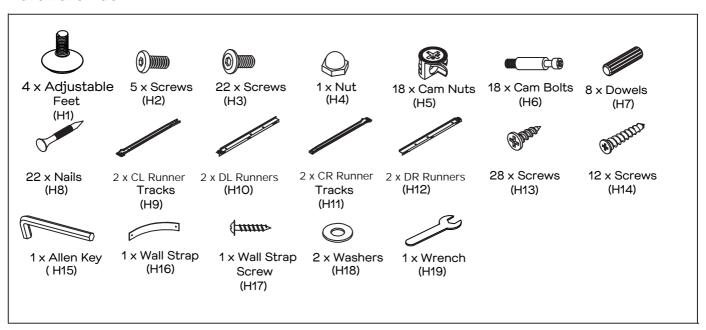


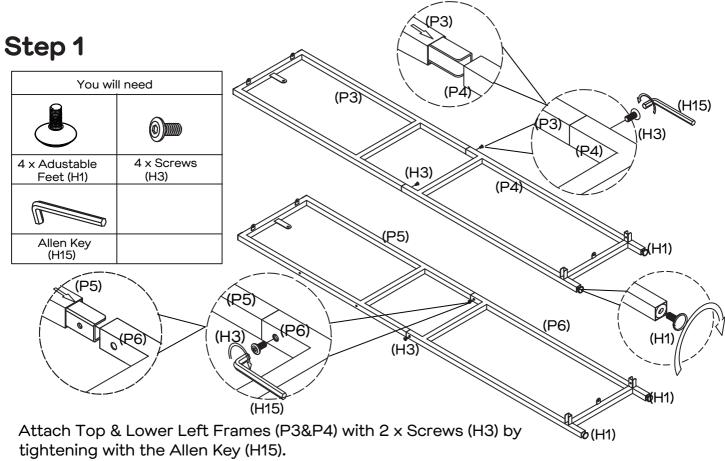

Repeat steps for Top & Lower Right Frames (P5&P6). Secure 4 x Adjustable Feet (H1)to the bottom of Lower Left & Right Frames (P4&P6) as shown.

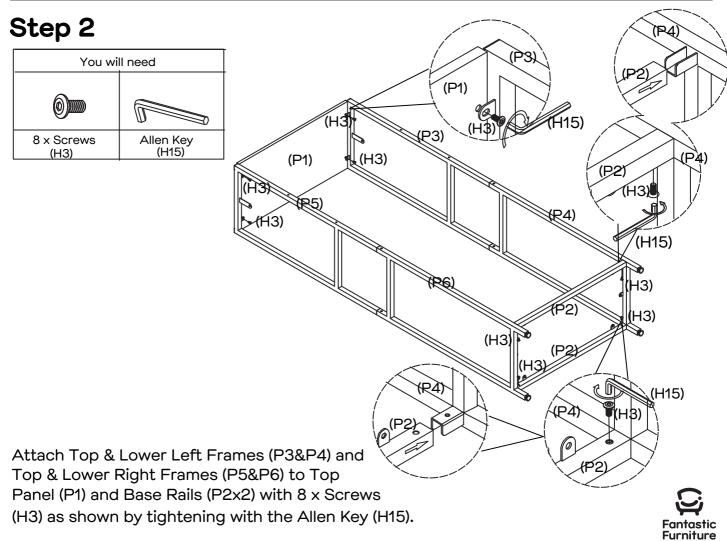


Page 5

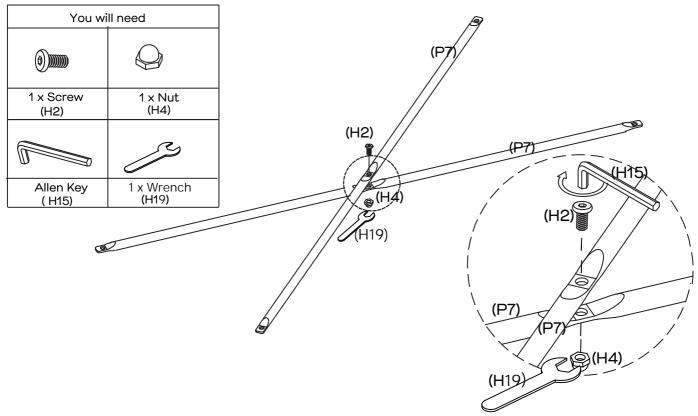

Secure Back Supports (P7x2) together as shown with $1 \times \text{Nut}$ (H4) and $1 \times \text{Screw}$ (H2) by tightening with the Allen Key (H15) and Wrench (H19).




fantasticfurniture.com.au

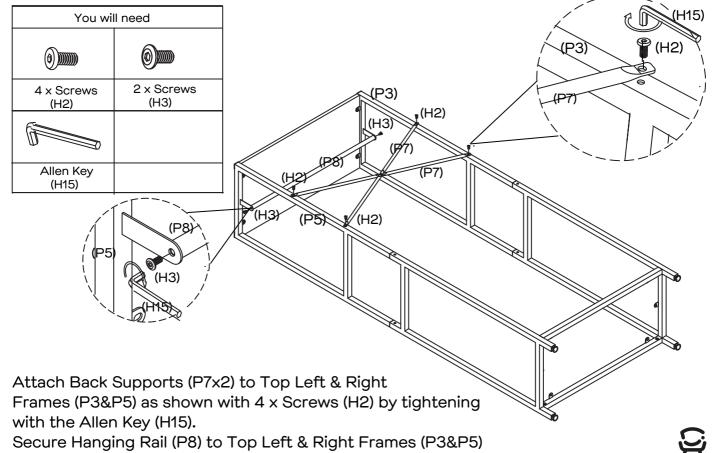

Fantastic Furniture

Page 6


as shown with 2 x Screws (H3) by tightening with the Allen Key (H15).

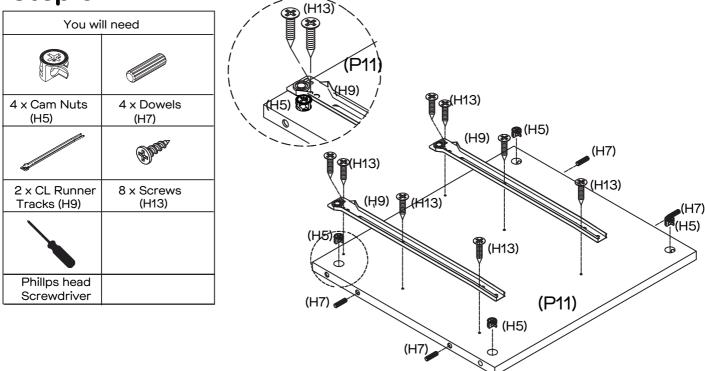

Attach 2 x CL Runner Tracks (H9) to Left Side Panel (P11) with 8 x Screws (H13) as shown by tightening with the Phillips Head Screwdriver.

Insert 4 x Dowels (H7) and 4 x Cam Nuts (H5) into Left Side Panel (P11) as shown.

Step 6

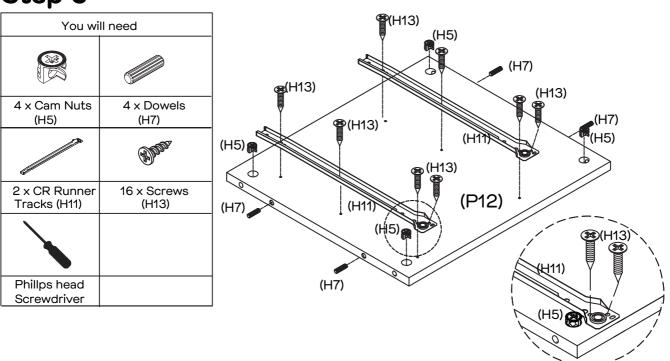


Attach 2 x CR Runner Tracks (H11) to Right Side Panel (P12) with 8 x Screws (H13) as shown by tightening with the Phillips Head Screwdriver.

Fantastic Furniture Page 7

Insert 4 x Dowels (H7) and 4 x Cam Nuts (H5) into Right Side Panel (P12) as shown.


Step 7 _[](H6) You will need _(H6) Ç(B) 8 x Cam Bolts Phillps head (H6) Screwdriver (H6) (P9) (H6)_(H6) _(H6) (P10) # (H6) (H6) _(H6)

Attach 8 x Cam Bolts (H6) to Drawer Top Panel (P9) and Base Panel (P10) as shown by tightening with the Phillips Head Screwdriver.

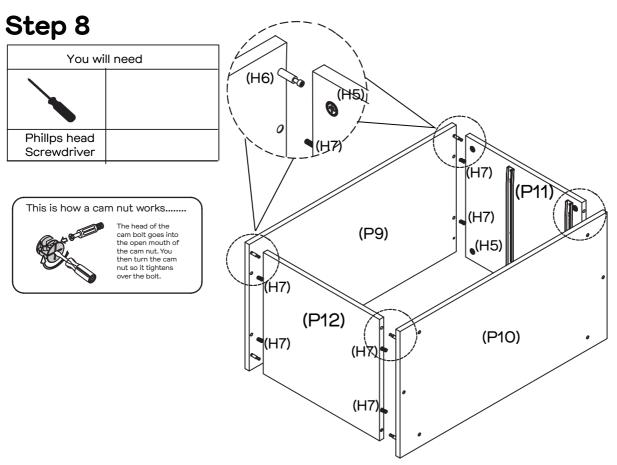


Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts. Secure the Drawer Top Panel (P9) and Base Panel (P10) to Left & Right Side Panels (P11&P12) as shown by tightening 8 x Cam Nuts (H5) with the Phillips Head Screwdriver. fantasticfurniture.com.au



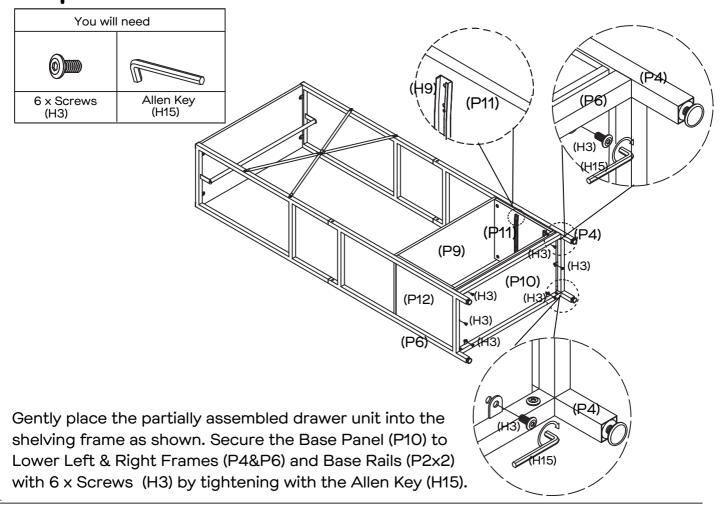

Step 10

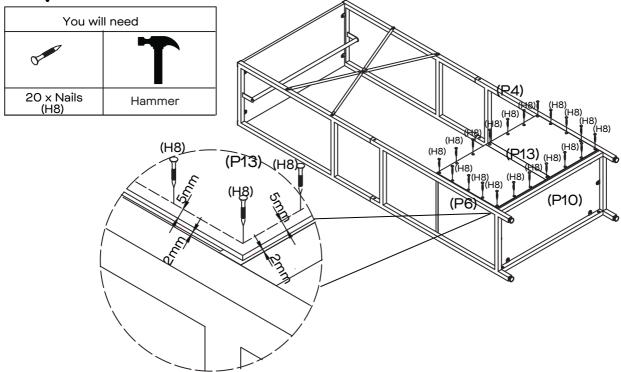


Secure Back Panel (P13) to the back of the partially assembled drawer unit as shown with 20 x Nails, approximately 5mm from the edge, using the Hammer. Ensure the Back Panel is sitting square in the unit before securing, with about 2mm around each edge.



Step 11 You will need (H6) (H6) Phillps head 10 x Cam Bolts (P14) (H6)Screwdriver (H6) $\times 2$ (H6)(P14) (H6) (H6)

Secure 5 x Cam Bolts (H6) to Drawer Front (P14) by tightening with the Phillips Head Screwdriver.


Repeat steps for the second Drawer.

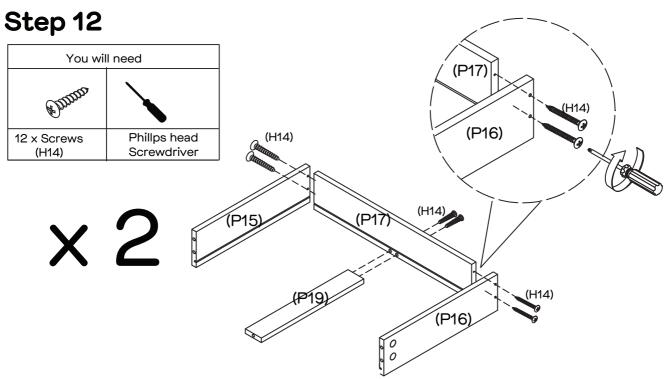

Secure Left & Right Drawer Sides (P15&P16) to Back Panel (P17) with 4 x Screws (H14) by tightening with the Phillips Head Screwdriver. Attach Drawer Support Panel (P19) to Back Panel (P17) with 2 x Screws (H14) by tightening with the Phillips Head Screwdriver. Repeat steps for the second Drawer.


Furniture

Page 10

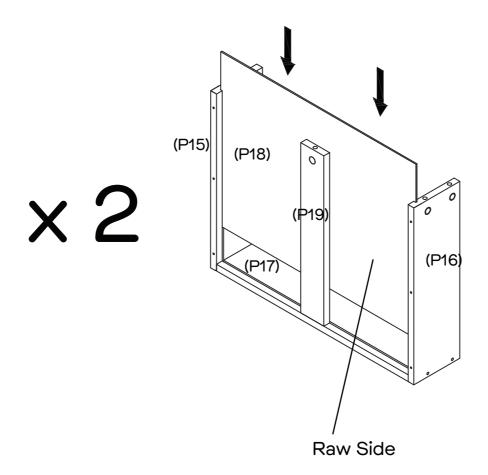

Slide Drawer Base (P18) into the grooves of Left & Right Drawer Sides (P15&P16) and Back Panel (P17).

Repeat steps for the second Drawer.

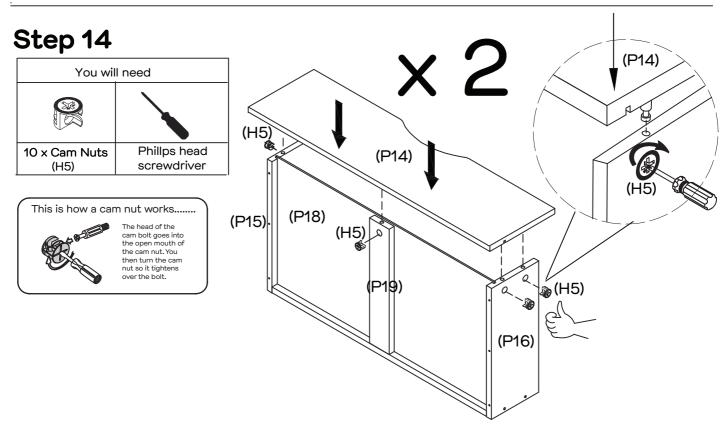


Insert 5 x Cam Nuts (H5) into Left & Right Drawer Sides (P15&P16) and Drawer Support Panel (P19) as shown. Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts. Secure the Drawer Front (P14) to Drawer Left & Right Side Panels (P15&P16) and Drawer Support Panel (P19) as shown by tightening 5 x Cam Nuts (H15) with the Phillips Head Screwdriver.

Fantastic Furniture

Page 11

Repeat steps for the second Drawer.

fantasticfurniture.com.au

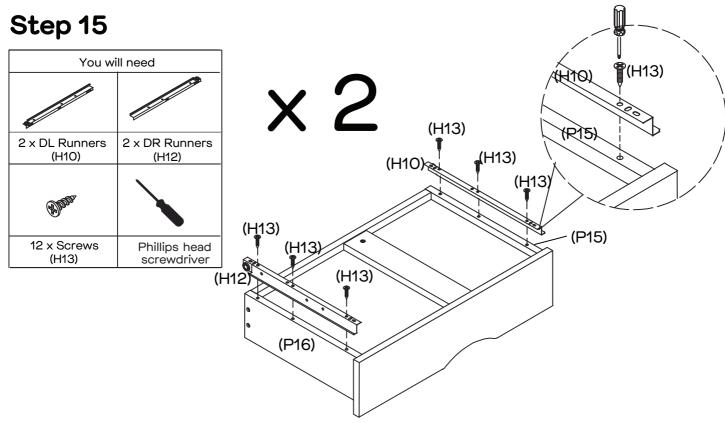


Secure 1 x DL Runner (H10) to Drawer Left Side Panel (P15) and 1 x DR Runner (H12) to Drawer Right Side Panel (P16) as shown with 6×10^{12} x Screws (H13) by tightening with the Phillips Head Screwdriver.

Repeat steps for the second Drawer.



You will need	
	(11111>
1 x Wall Strap (H16)	1 x Wall Strap Screw (H17)
©	
1 x Washer (H18)	Phillps head Screwdriver

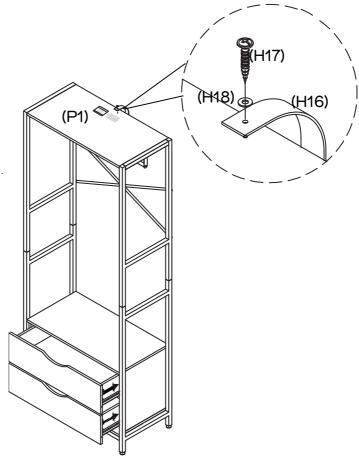

Carefully insert the assembled drawers into the unit by gently guiding the runners into the tracks.






You will need	
0	
1 x Washer (H18)	


Screws and wall plugs are not provided please use appropriate fixtures for your wall.

We strongly suggest using the wall strap to prevent this unit from toppling.

Seek advice from a qualified trades person on how to attach this to your specific wall.

Move furniture to its final position, then connect the end of Wall Strap (H16) to the wall.Make sure it is firmly attached and a snug fit.

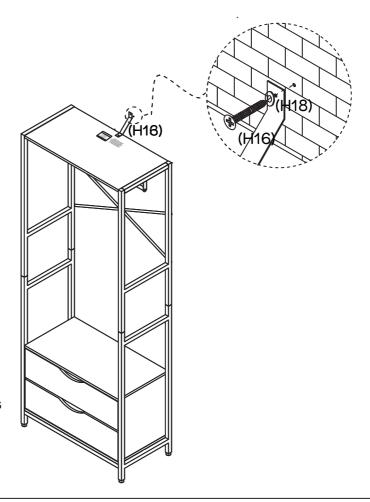

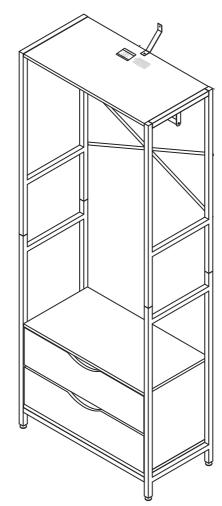


Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.





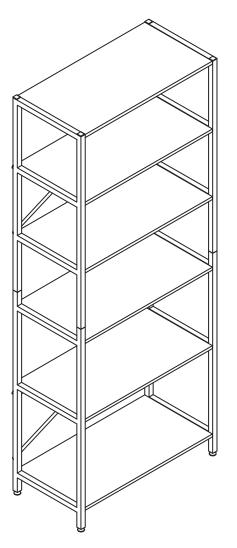



Sonoma Utility 6 Shelf

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Warning: Ensure the wall strap is attached to avoid serious injury.

To avoid any serious of fatal injury, a wall strap has been provided with this product to prevent topping. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Weight Limit: 20kgs per shelf




Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

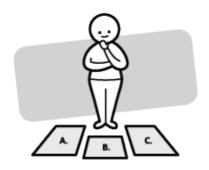

Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What You Need

to assemble the product







Other tools you need Phillips Head Screwdriver


Parts list Box 1:

Top Panel (P1) 5 x Shelf Panels (P2) Top Left Frame(P3) Lower Left Frame(P4) Top Right Frame(P5) Lower Right Frame(P6) 4 x Back Supports (P7)

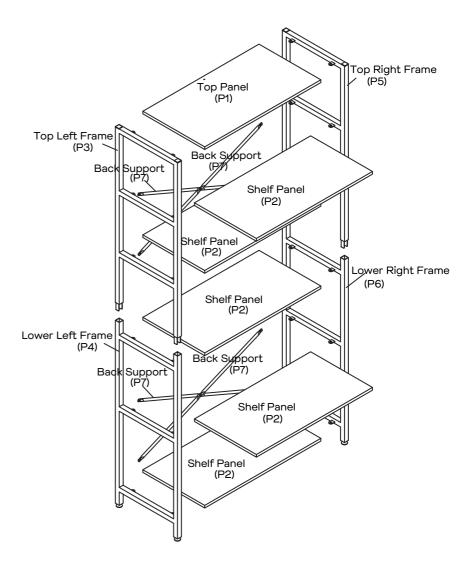

Hardware Pack:

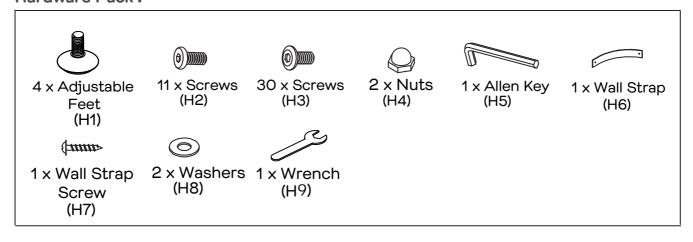


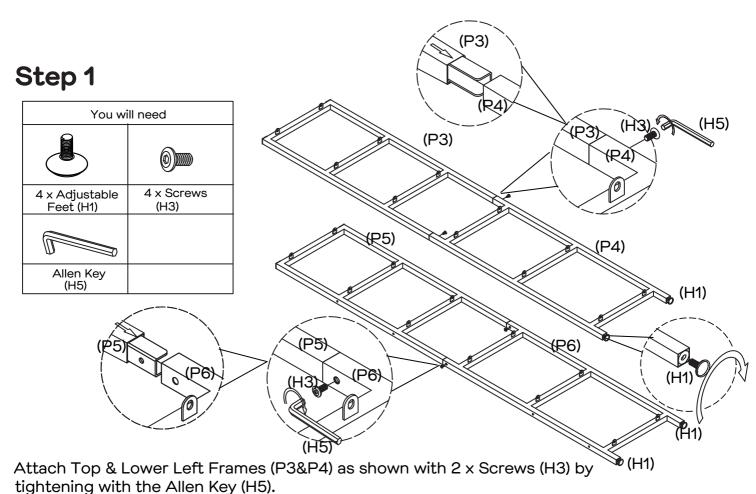

Repeat steps for Top & Lower Right Frames (P5&P6).


Secure 4 x Adjustable Feet (H1) to the bottom of Lower Left & Right Frames (P4&P6) as shown.

Step 2

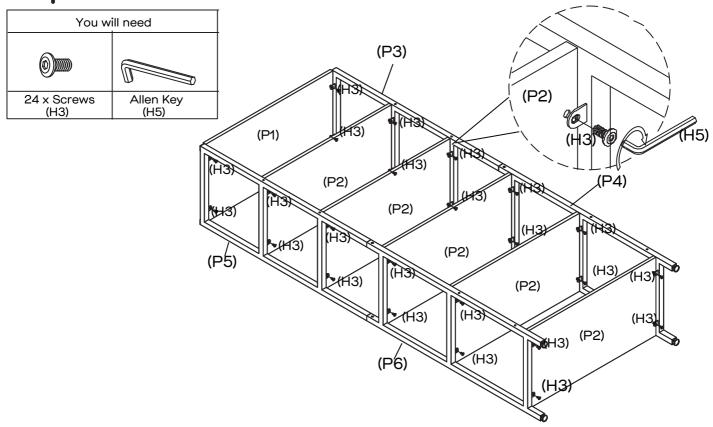


Secure Top Panel (P1) and Shelf Panels (P2x5) to Top & Lower Left/Right Frames (P3,P4,P5&P6) with 24 x Screws (H3) as shown by tightening with the Allen Key (H5). fantasticfurniture.com.au



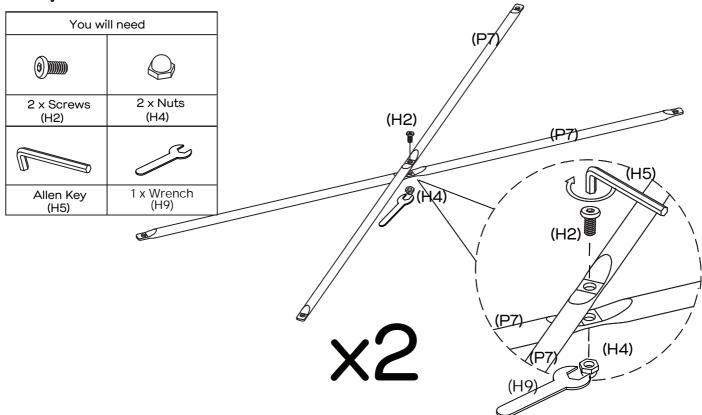

Secure Back Supports (P7×2) together as shown with 1 x Nut (H4) and 1 x Screw (H2) by tightening with the Allen Key (H5) and Wrench (H9).


Repeat steps for the second set of Back Supports (P7×2).

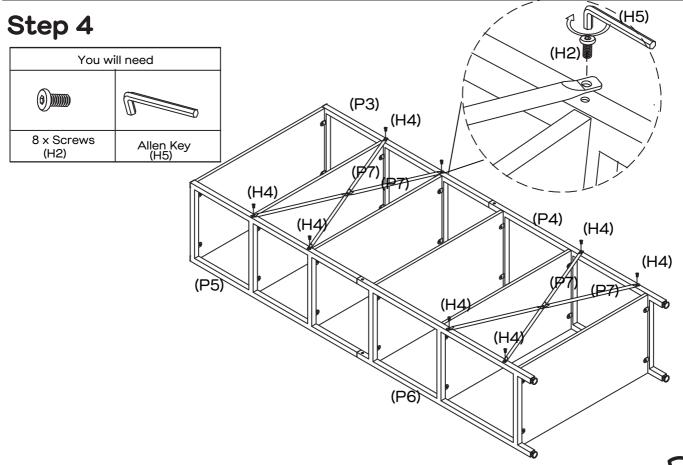

Attach Back Supports (P7x4) to Top & Lower Left/Right Frames (P3,P4,P5&P6) as shown with 8 x Screws (H2) by tightening with the Allen Key (H5). fantasticfurniture.com.au

Page 6

You will need	
	('''''' >
1 x Wall Strap (H6)	1 x Wall Strap Screw(H7)
0	
1 x Washer	Phillips head screwdriver

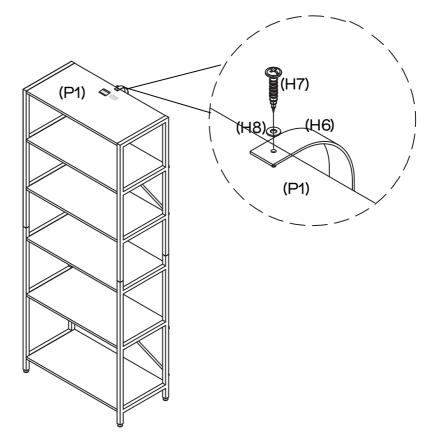

Attach the Wall Strap (H6) to Top Panel (P1) with 1 x Washer (H8) and 1 x Wall Strap Screw (H7) by tightening with the Phillips Head Screwdriver.

Step 6


You will need		
0		
1 x Washer (H8)		

Screws and wall plugs are not provided please use appropriate fixtures for your wall.

We strongly suggest using the wall strap to prevent this unit from toppling.

Seek advice from a qualified trades person on how to attach this to your specific wall.

Move furniture to its final position, then connect the end of Wall Strap (H6) to the wall.Make sure it is firmly attached and a snug fit.

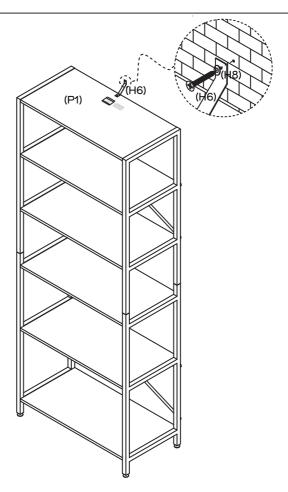



Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

