


Version 1.0

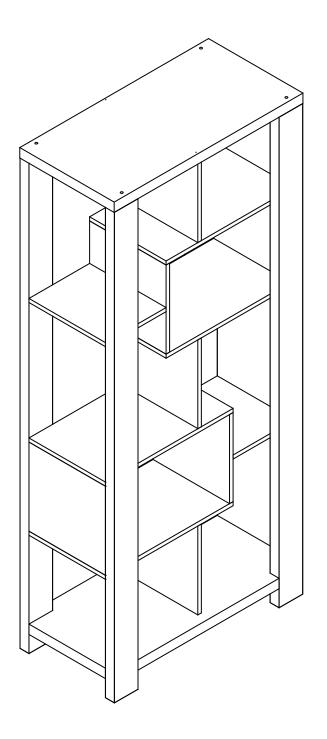







Secure it!

Reduce the risk of furniture tip-over accidents



WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended Weight Capacity :10kg/shelf

To reduce the risk of furniture tipover:



- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.
- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

Securing method: Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.

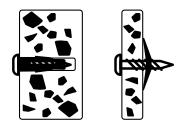

For masonry wall

Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Assembly Checklist



Read through the instructions carefully before you begin.

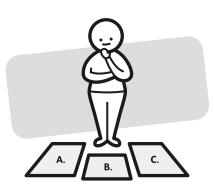


Identify and lay out all of the components before you begin assembly.




- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.




Make sure you have all the required tools. Never use power tools unless instructed.

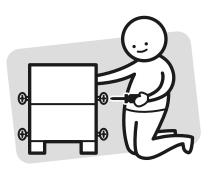


Unless instructed, do not fully tighten screws until the item is fully assembled.

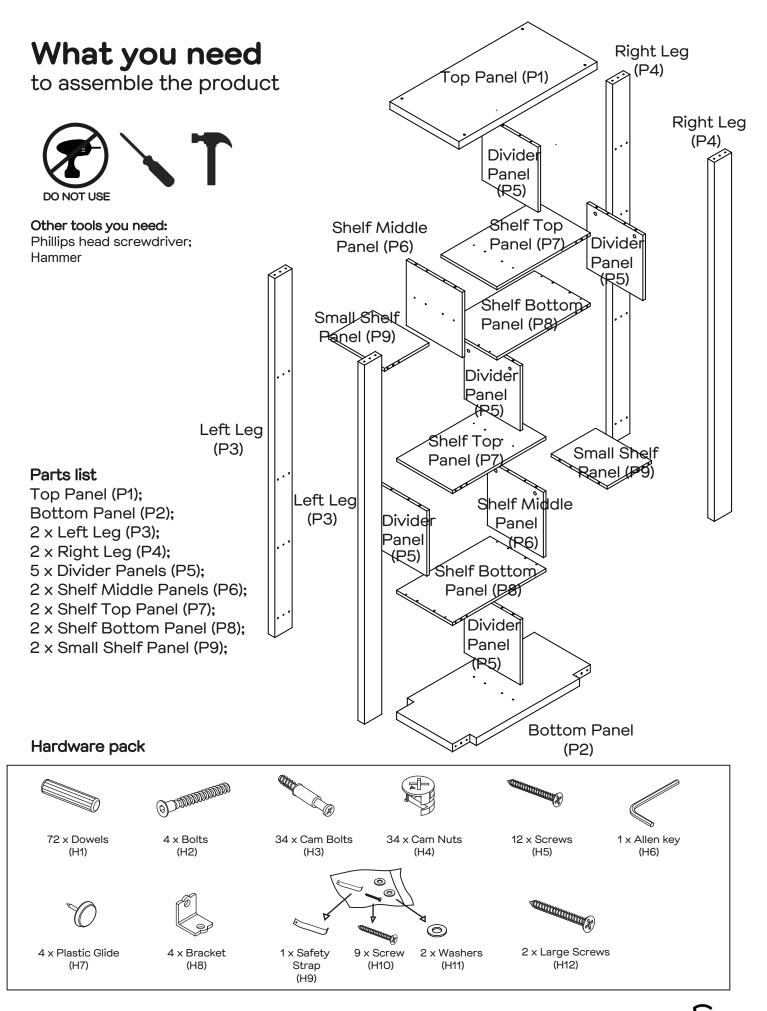


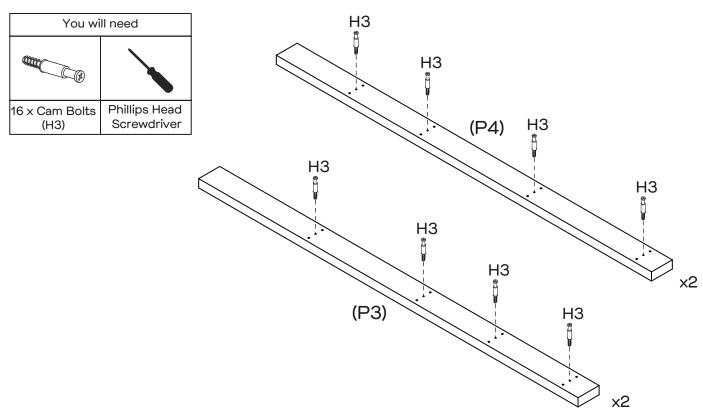

Secure 4 x Cam Bolts (H3) to each Left Leg (P3x2) and 4 x Cam Bolts (H3) to each Right Leg (P4x2) by tightening Cam Bolts (H3) with a Phillips Head Screwdriver.


Step 2

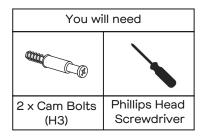

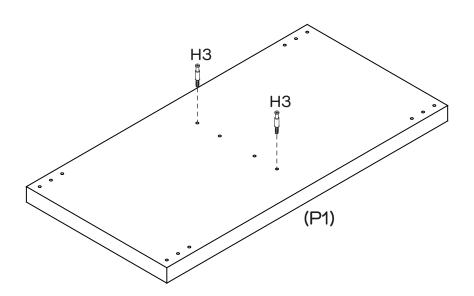


Secure 2 \times Cam Bolts (H3) to Top Panel (P1) by tightening Cam Bolts (H3) with a Phillips Head Screwdriver.



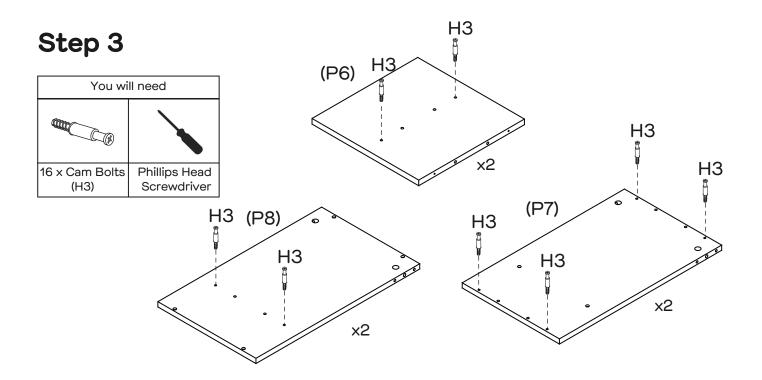


Secure 2 x Cam Bolts (H3) to each Shelf Middle Panel (P6x2), 2 x Cam Bolts (H3) to each Shelf Bottom Panel (P8x2) and 4 x Cam Bolts (H3) to Shelf Top Panel (P7) by tightening Cam Bolts (H3) with a Phillips Head Screwdriver.

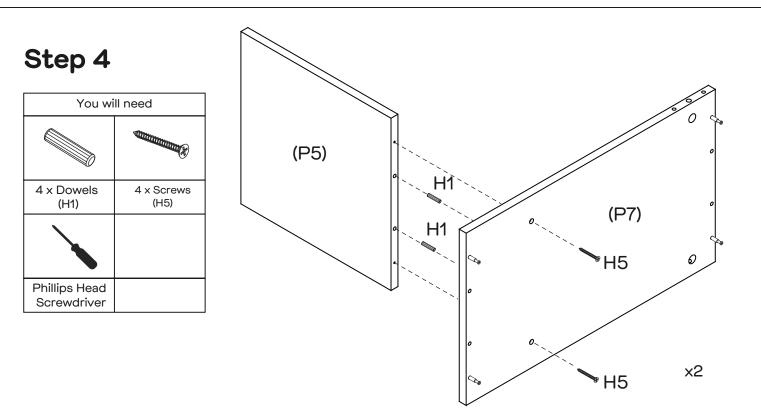


Insert 2 x Dowels (H1) into Shelf Top Panel (P7) and attach Divider Panel (P5) with 2 x Screws (H5) by tightening with a Phillips Head Screwdriver. Repeat this step for the second Shelf Top Panel (P7) and Divider Panel (P5).



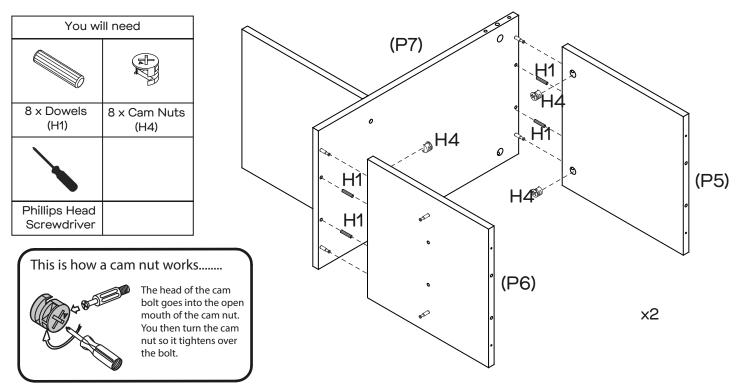

Insert 4 x Dowels (H1) into Divider Panel (P5) and Shelf Middle Panel (P6),attach to Shelf Top Panel (P7). Insert 4 x Cam Nuts (H4) into Divider Panel (P5) and Shelf Middle Panel (P6), make sure the arrow on Cam Nuts is facing incoming Cam Bolt, secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.


Step 6

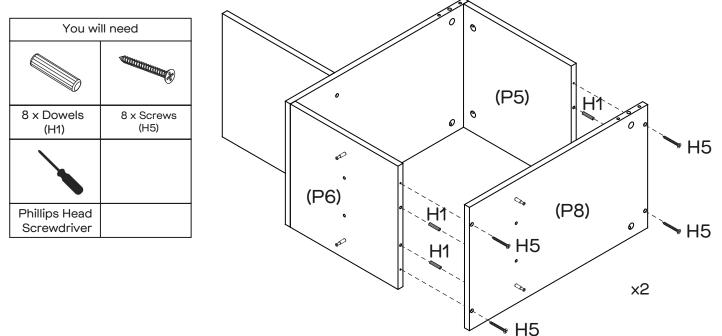


Insert 4 x Dowels (H1) into Divider Panel (P5) and Shelf Middle Panel (P6), attach to Shelf Bottom Panel (P8) and secure with 4 x Screws (H5) by tightening with a Phillips Head Screwdriver.





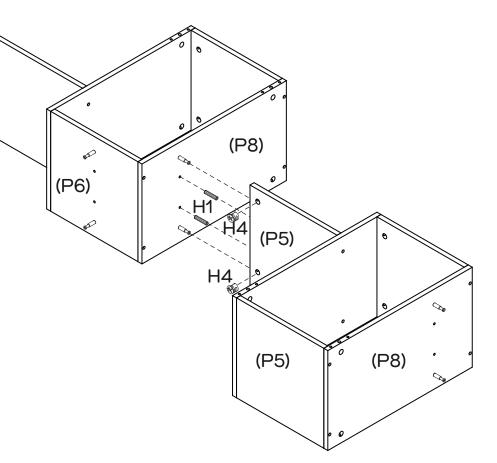


Insert 2 x Dowels (H1) into Divider Panel (P5). Attach to Shelf Bottom Panel (P8). Insert 2 x Cam Nuts (H4) into Divider Panel (P5) and secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.

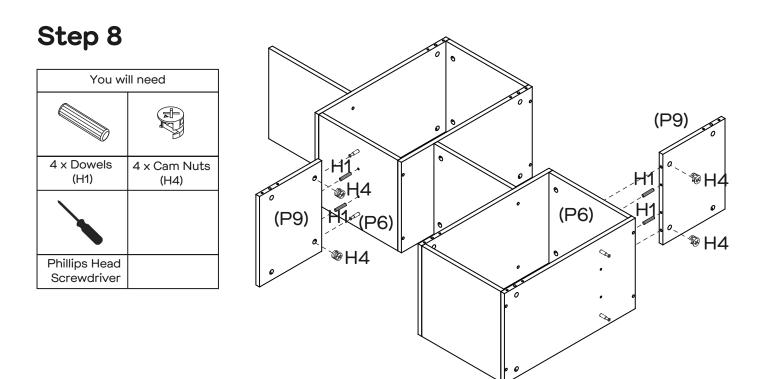


Insert 4 x Dowels (H1) into Small Shelf Panels (P9x2). Attach to Shelf Middle Panels (P6x2). Insert 4 x Cam Nuts (H4) into Small Shelf Panels (P9x2) and secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.



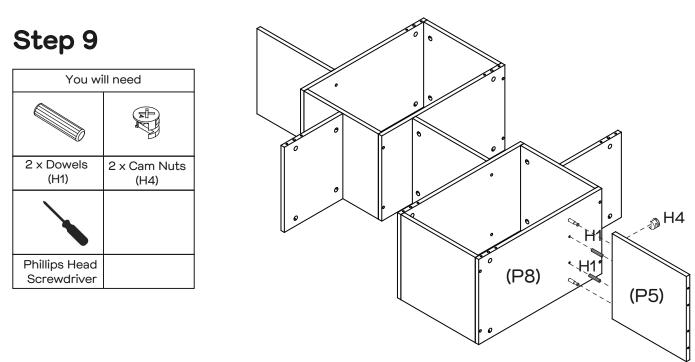


Insert 2 x Dowels (H1) into Divider Panel (P5). Attach to Shelf Bottom Panel (P8). Insert 2 x Cam Nuts (H4) into Divider Panel (P5) and secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.


Step 10

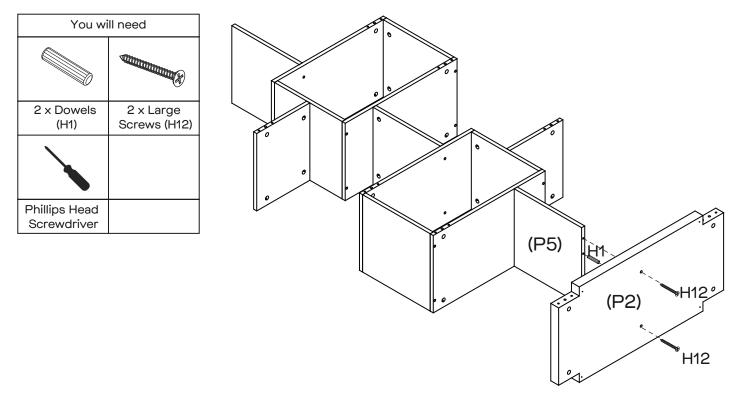



Insert 2 x Dowels (H1) into Divider Panel (P5), attach to Bottom Panel (P2) and secure with 2 x Large Screws (H12) by tightening with a Phillips Head Screwdriver.

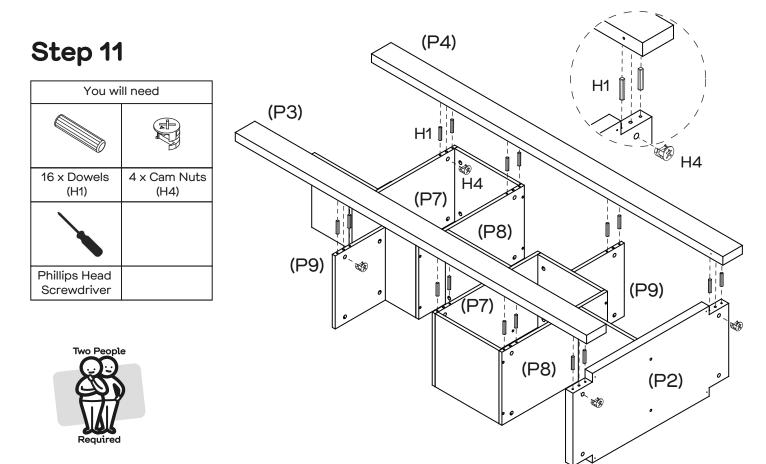

Insert 16 x Dowels (H1) into Shelf Top Panels (P7x2), Shelf Bottom Panels (P8x2), Small Shelf Panels (P9x2) and Bottom Panel (P2). Attach to Leg (P3,P4). Insert 4 x Cam Nuts (H4) into Shelf Top Panels (P7), Bottom Panel (P2) and Small Shelf Panels (P9) secure by tightening Cam Nuts (H4) with a Phillips Head Screwdriver.

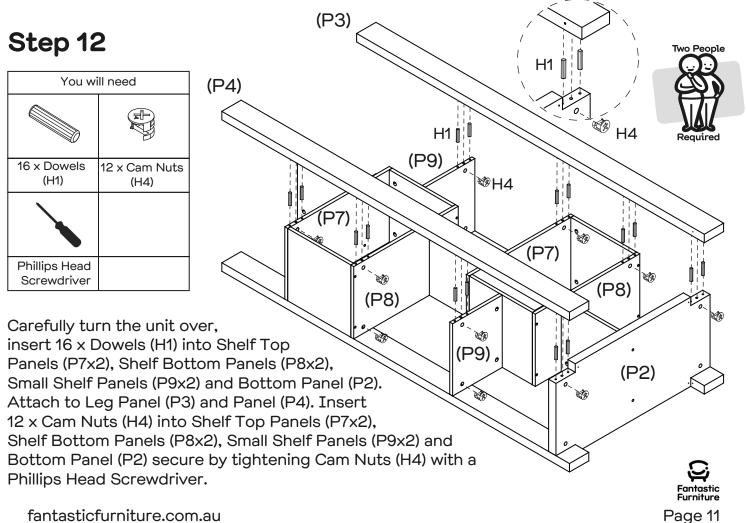

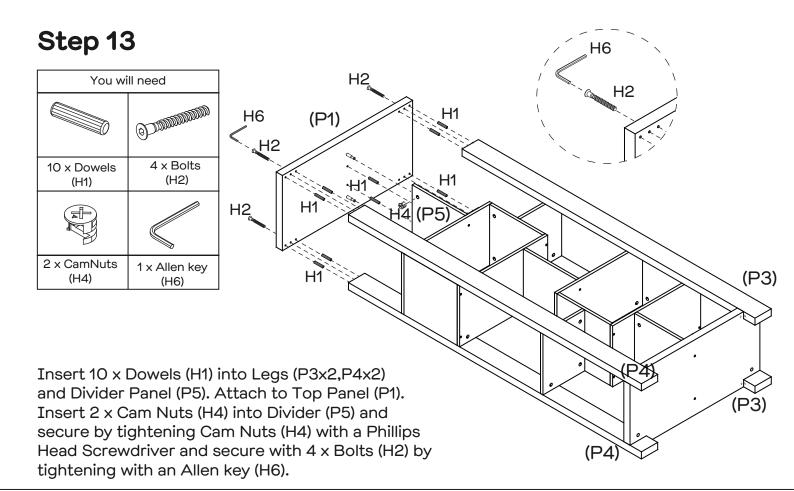


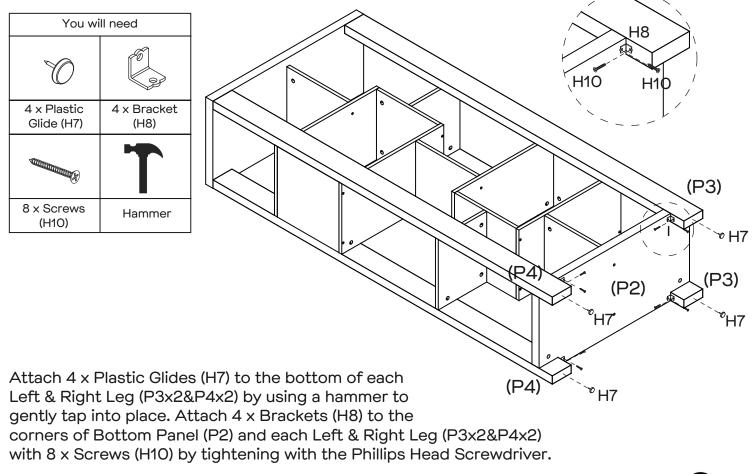


Fantastic Furniture Page 12



Secure the Safety Strap (H9) to the Top Panel (P1) as shown use 1 x Washer (H11) and secure by tightening 1 x Screw (H10) with the Phillips Head Screwdriver. * We strongly advise that you use the wall safety strap provided to prevent the unit toppling.

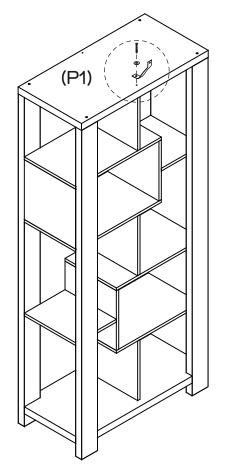


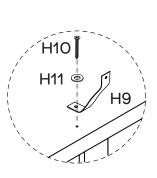


Step 16

You will need	
\bigcirc	
1 x Washer (H11)	Phillips Head Screwdriver
Screw and Wall Plug are not provided. Please use appropriate fixtures for your wall.	

Move the unit into it's final position and then secure the Safety Strap to the wall. Ensure it is firmly attached. Screw and wall plug are not provided. Please use appropriate fixtures for your wall. * Seek advice from a qualified tradesperson on how to attach this safety strap to your specific wall.

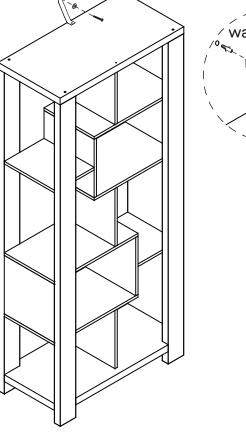

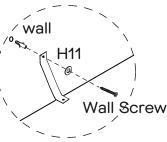

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

