


Version 1.0

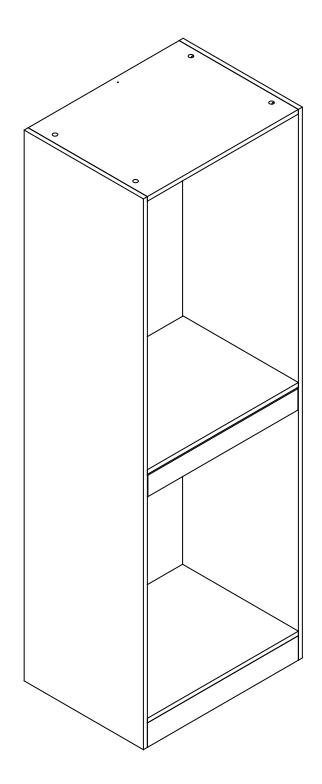



Secure it!

Reduce the risk of furniture tip-over accidents





To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended Weight Capacity :15kg/hanging rail or drawer rack

To reduce the risk of furniture tipover:



- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.
- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

Securing method: Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.

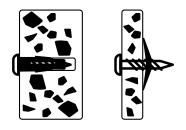

For masonry wall

Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Assembly Checklist



Read through the instructions carefully before you begin.

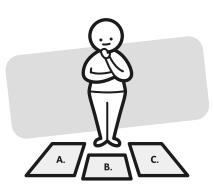


Identify and lay out all of the components before you begin assembly.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.




Make sure you have all the required tools. Never use power tools unless instructed.

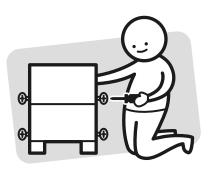


Unless instructed, do not fully tighten screws until the item is fully assembled.

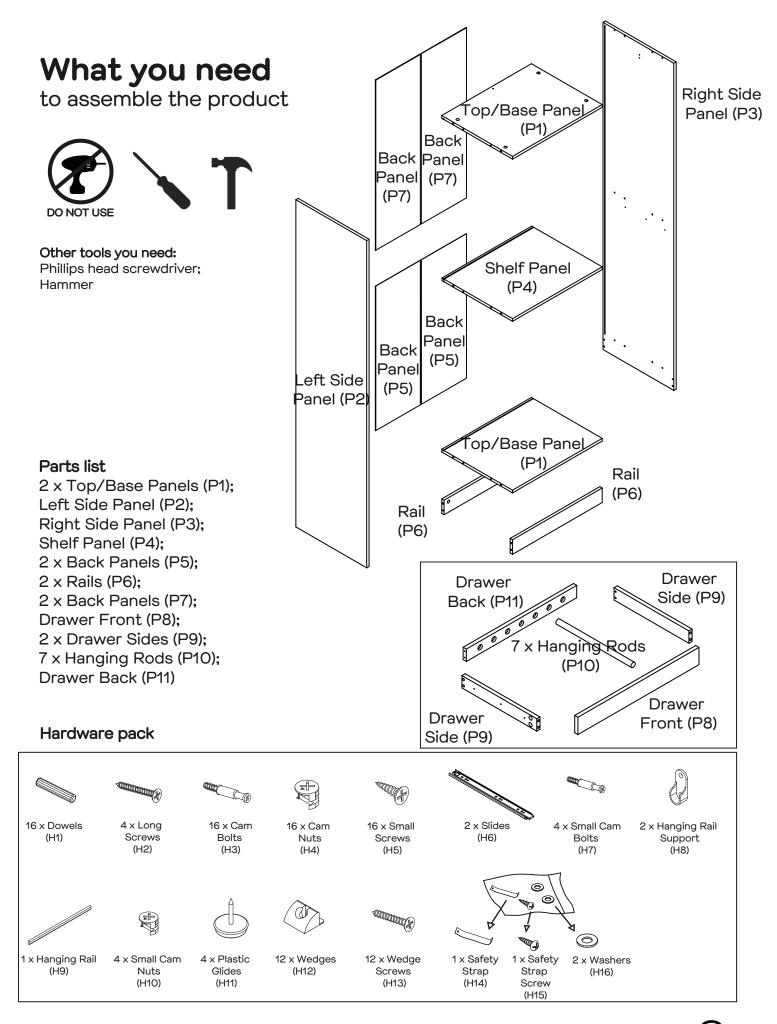


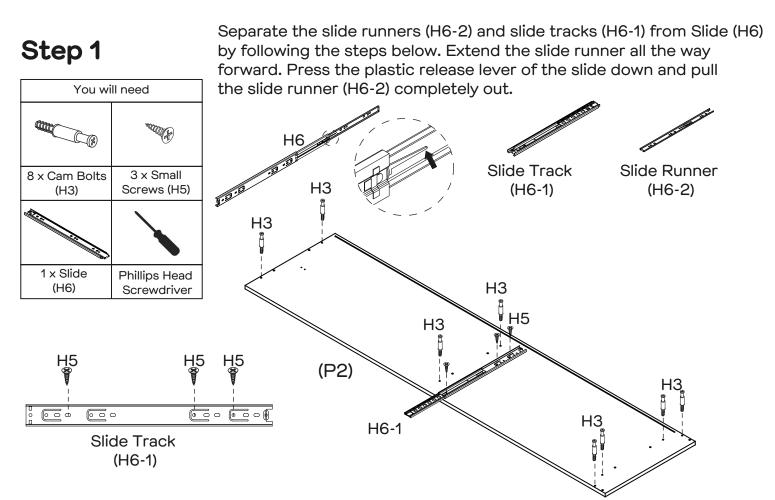



Attach 8 x Cam Bolts (H3) to Left Side Panel (P2) as shown by tightening with the Phillips Head Screwdriver. Attach 1 x Slide Track (H6-1) to Left Side Panel (P2) with 3 x Small Screws (H5) as shown by tightening with the Phillips Head Screwdriver.

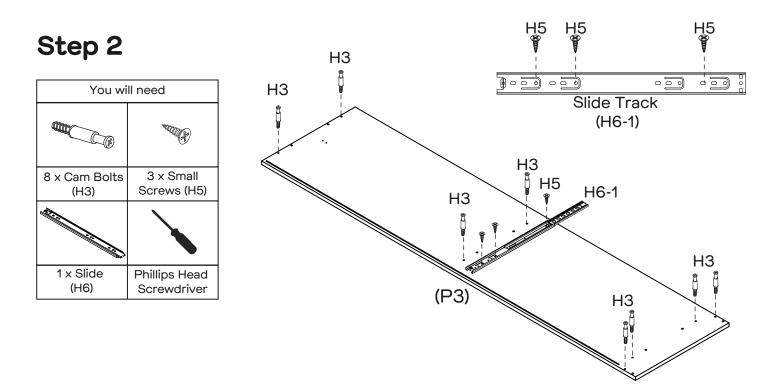


Attach 8 x Cam Bolts (H3) to Right Side Panel (P3) as shown by tightening with the Phillips Head Screwdriver. Attach 1 x Slide Track (H6-1) to Right Side Panel (P3) with 3 x Small Screws (H5) by as shown tightening with the Phillips Head Screwdriver.

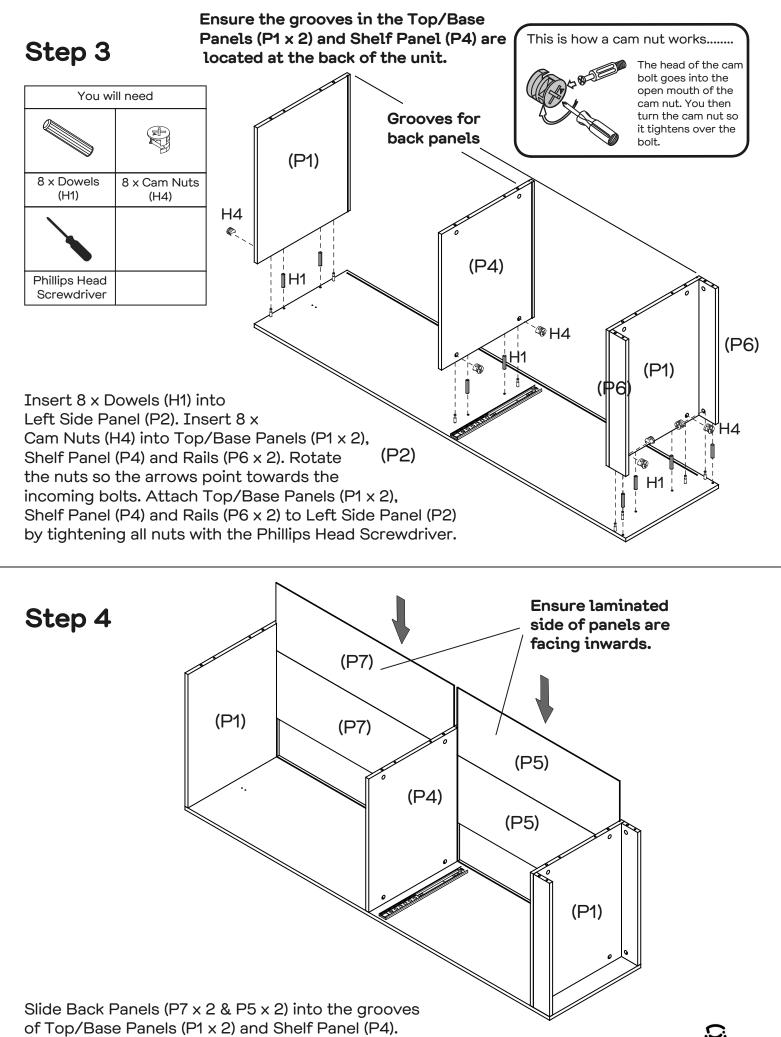

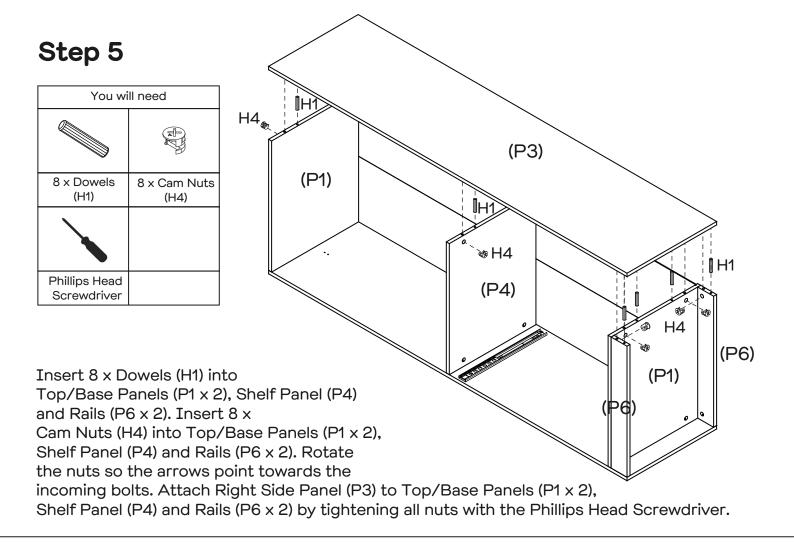


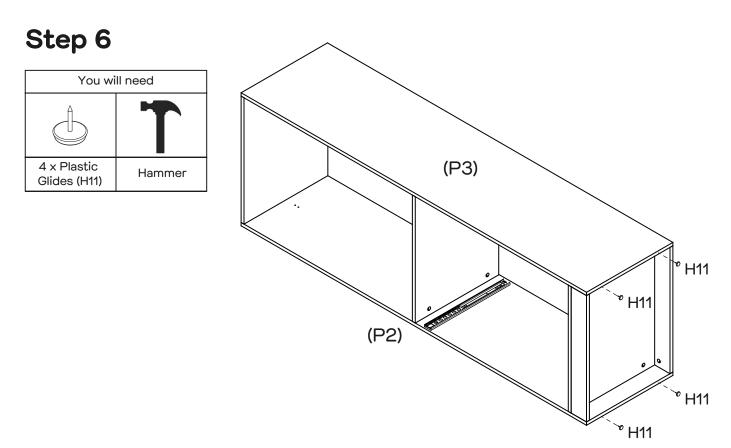

Secure 4 x Plastic Glides (H11) to the bottom of Left & Right Side Panels (P2 & P3) as shown using the Hammer.

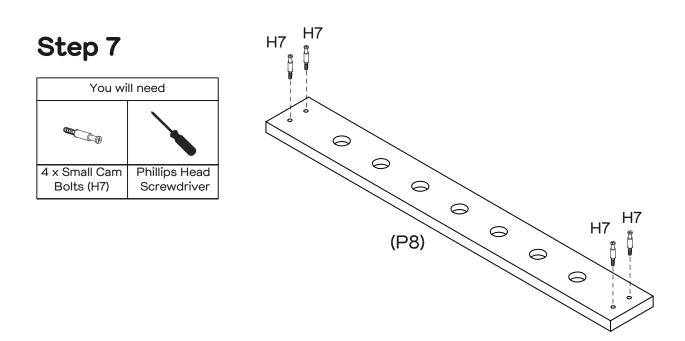


Attach 4 x Small Cam Bolts (H7) to Drawer Front (P8) as shown by tightening with the Phillips Head Screwdriver.

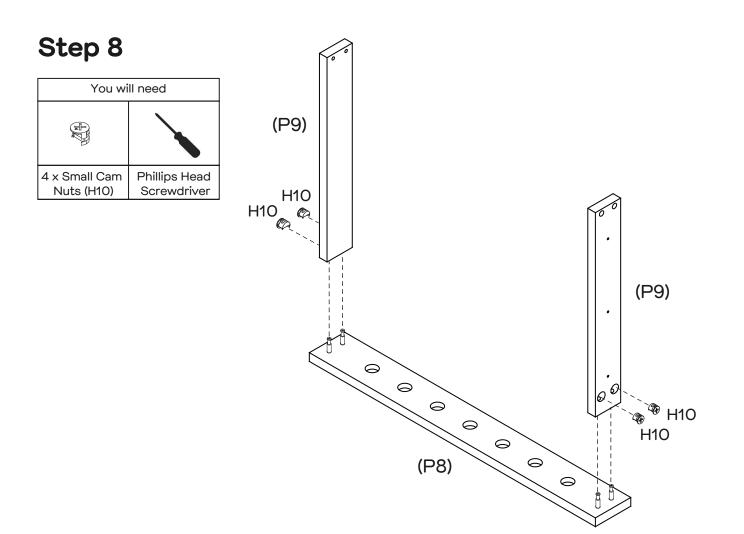

Insert 4 x Small Cam Nuts (H1O) into the holes of Drawer Sides (P9 x 2). Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Drawer Sides (P9 x 2) to Drawer Front (P8) by tightening the cam nuts with the Phillips Head Screwdriver.




Step 9

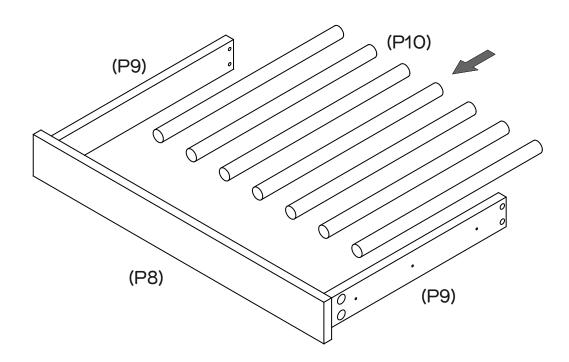


Insert 7 \times Hanging Rods (P10) into the holes of Drawer Front (H8) as shown.

Step 10

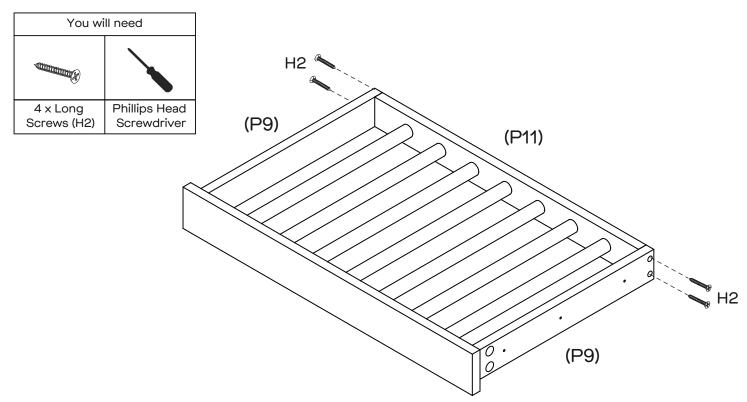


Attach Drawer Back (P11) to Drawer Sides (P9 \times 2) with 4 \times Long Screws (H2) by tightening with the Phillips Head Screwdriver.



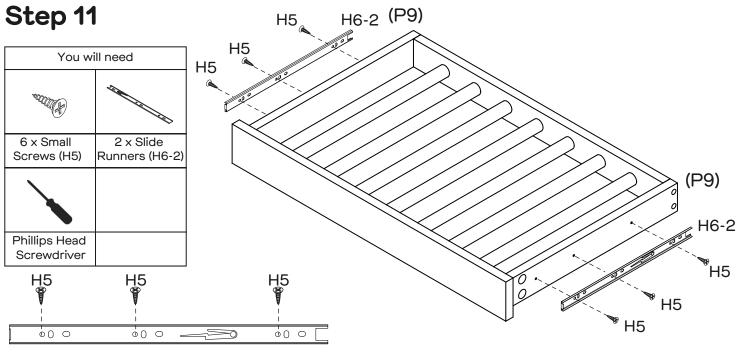

Slide Runner (H6-2)

Attach 2 x Slide Runners (H6-2) to Drawer Sides (P9 x 2) with 6 x Small Screws (H5) as shown by tightening with the Phillips Head Screwdriver.

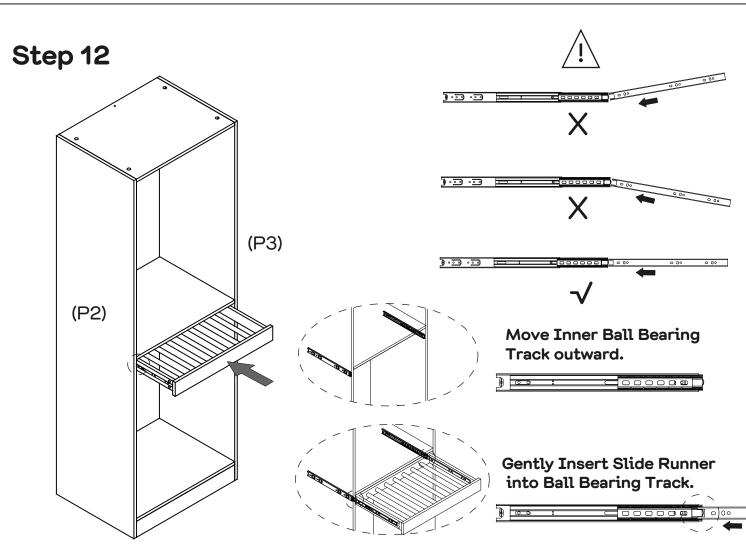


Position drawer so that slide runner (H6-2) aligns with slide track (H6-1) as shown. Gently push drawer into the closed positon.



Step 13



Secure 2 x Hanging Rail Supports to Left & Right Side Panels (P2 & P3) with 4 x Small Screws (H5) as shown by tightening with the Phillips Head Screwdriver. Place the Hanging Rail (H9) in the unit by resting it on the Hanging Rail Supports (H8 x 2).

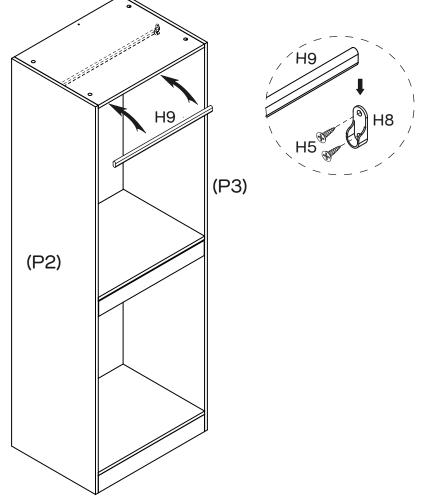

Step 14

You will need	
	(K) manual
12 x Wedges (H12)	12 x Wedge Screws (H13)
Phillips Head Screwdriver	


(P7) (P7) (P7) (P7) (P7) (P7) (P5) (P5) (P5) (P5) (P5) Page 12

Secure Back Panels (P7 x 2 & P5 x 2) in place with 12 x Wedges (H12) and 12 x Wedge Screws (H13) by tightening with the Phillips Head Screwdriver.


Step 15

You will need	
	THE AND A DECEMBER
1 x Safety Strap (H14)	1 x Safety Strap Screw (H15)
0	
1 x Washer (H16)	Phillips Head Screwdriver

Attach the Safety Strap (H14) to the Top Panel (P1) with 1 × Safety Strap Screw (H15) & 1 × Washer (H16) by tightening with the Phillips Head Screwdriver.

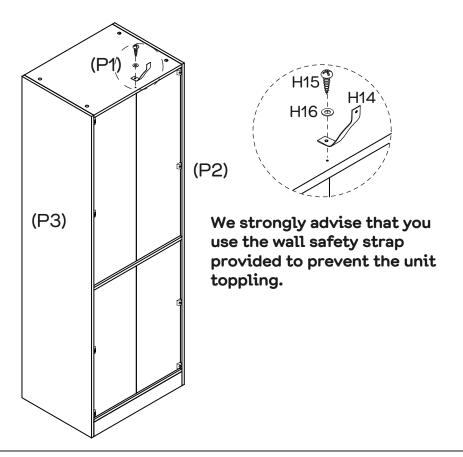

Step 16

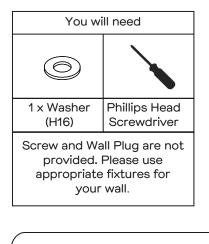

Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

Move the unit to the final position, and attach the safety strap to the wall securely. Make sure it is firmly attached and snug fit.

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.



fantasticfurniture.com.au

curely.

