


Version 2.0

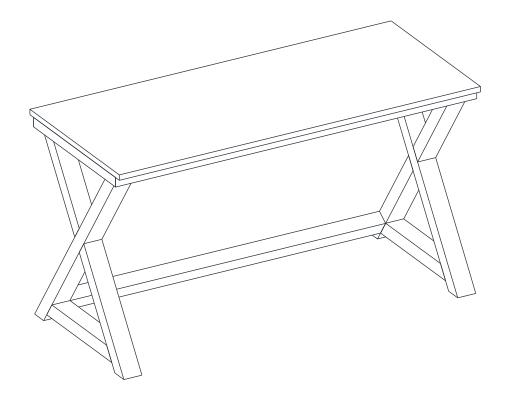





fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

WEIGHT CAPACITY: 80 KGS

To reduce the risk of furniture tipover:



- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.



 
- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- · Avoid putting a TV on this product.

Wall attachment guide



For plasterboard (without available wood stud)

Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Assembly Checklist



Read through the instruction carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is full assembled.

Useful Information

! Never use power tools unless specifically instructed. They can damage your components or hardware if use incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your products to avoid scratching or damaging the surface of product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.


! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

! Please see page 2 for any safety requirements or weight restrictions.

What you need


To assemble the product



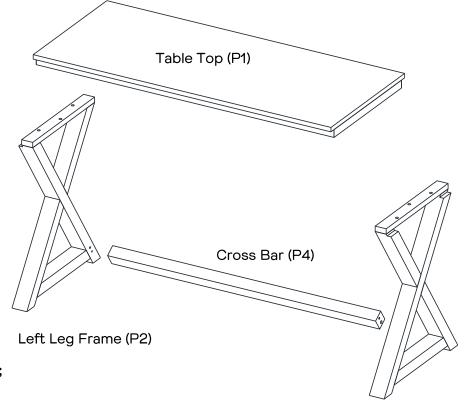

Parts list Table Top (P1); Left Leg Frame (P2); Right Leg Frame (P3); Cross Bar (P4).


Hardware Pack

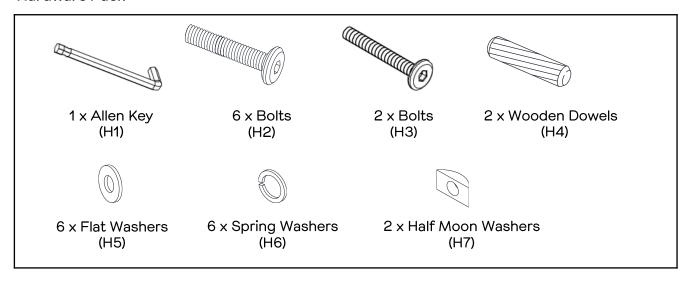

Right Leg Frame (P3)

Step 1

Note: Assemble the Desk on a soft flat surface to prevent unit from being damaged during assembly.

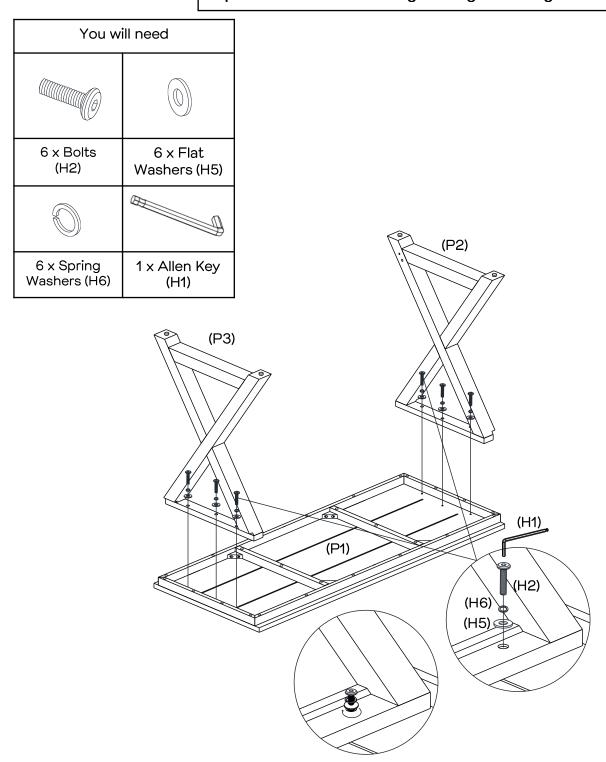


Lay the Table Top (P1) upside down, attach Left Leg Frame (P2) with 3×9 Spring Washers (H6) 3×9 Flat Washers (H5), 3×9 Bolts (H2), using the Allen Key (H1). Only Tighten 3×9 Bolts (H2) to 80%.


Repeat process for Right Leg Frame (P3) as shown.



Step 2

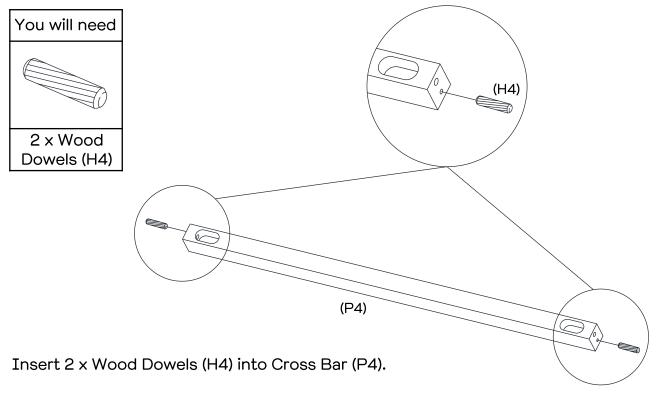


Step 3

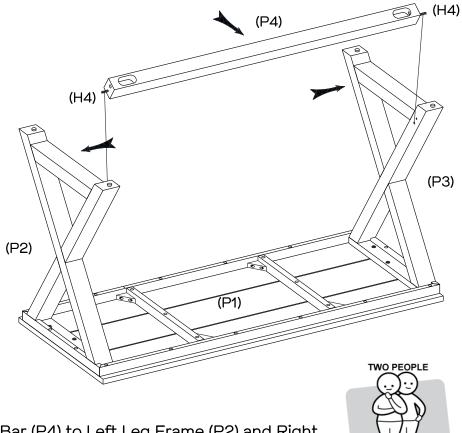


Attach Cross Bar (P4) to Left Leg Frame (P2) and Right Leg Frame (P3) as shown.




Step 4

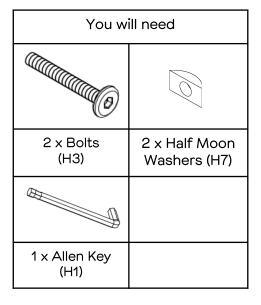

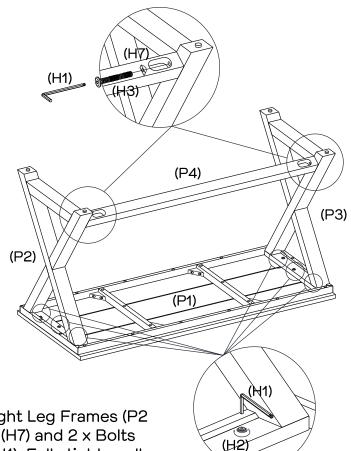

Secure Cross Bar (P4) to Left & Right Leg Frames (P2 & P3) with 2 x Half Moon Washers (H7) and 2 x Bolts (H3) by tightening with Allen Key (H1). Fully tighten all Bolts as shown.

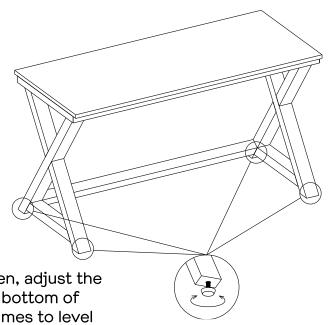

If your floor is uneven, adjust the levelling feet on the bottom of Right & Left Leg Frames to level the desktop.

Job complete!

In the interest of our environment please dispose off all packaging thoughtfully.

