


Version 1.0

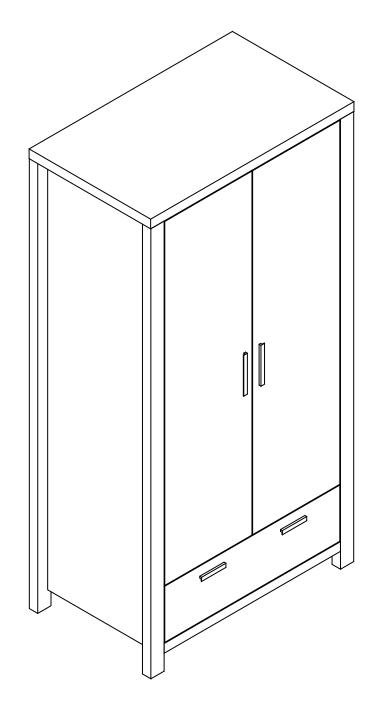







Secure it!

Reduce the risk of furniture tip-over accidents



WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended Weight Capacity :10kg/shelf

To reduce the risk of furniture tipover:



- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.
- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

Securing method: Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.

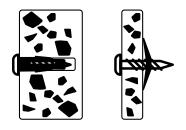

For masonry wall

Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Assembly Checklist



Read through the instructions carefully before you begin.

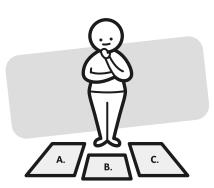


Identify and lay out all of the components before you begin assembly.




- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.




Make sure you have all the required tools. Never use power tools unless instructed.

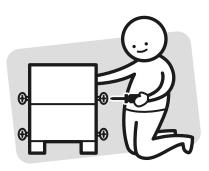



Unless instructed, do not fully tighten screws until the item is fully assembled.

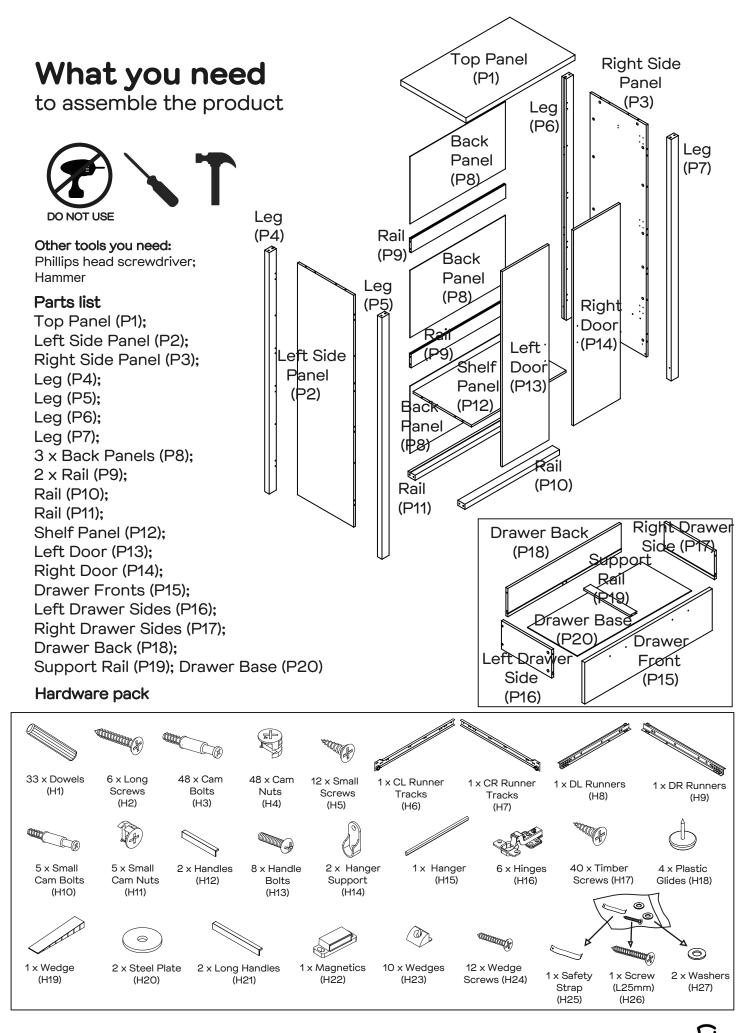

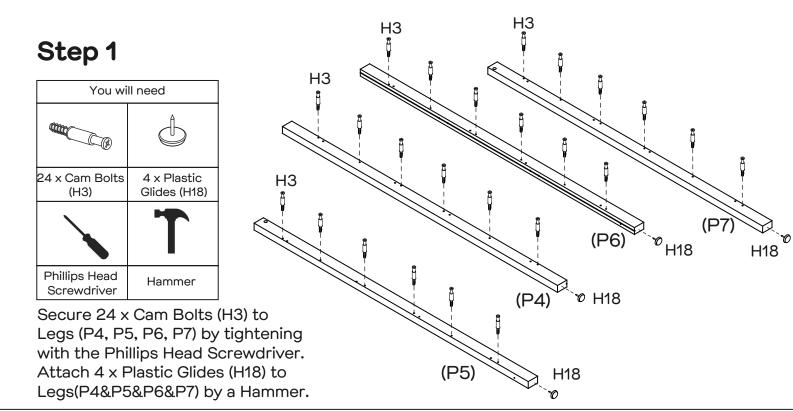




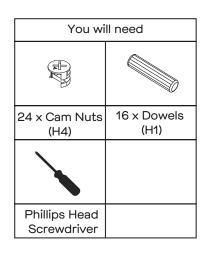

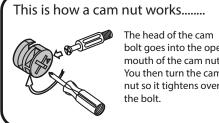


bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over

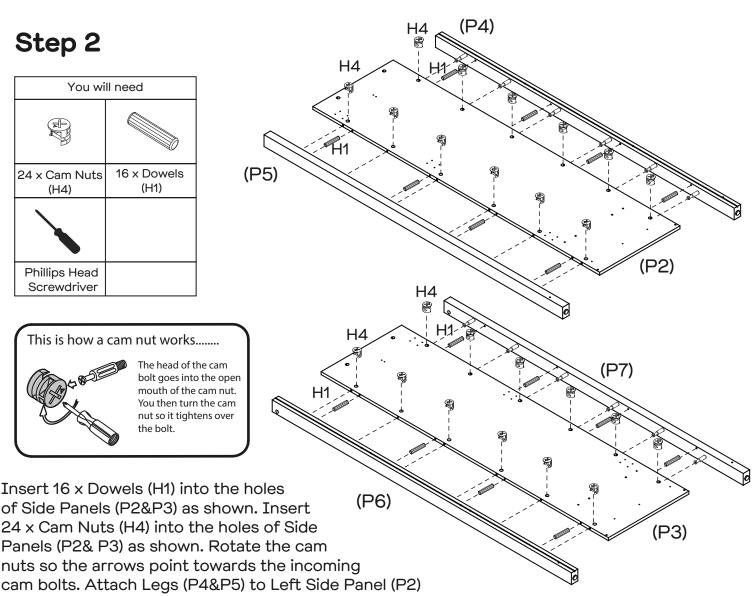


and Legs (P6&P7) to Right Side Panel (P3). Tightening Cam Nuts with the Phillips Head Screwdriver.

Fantastic Page 6

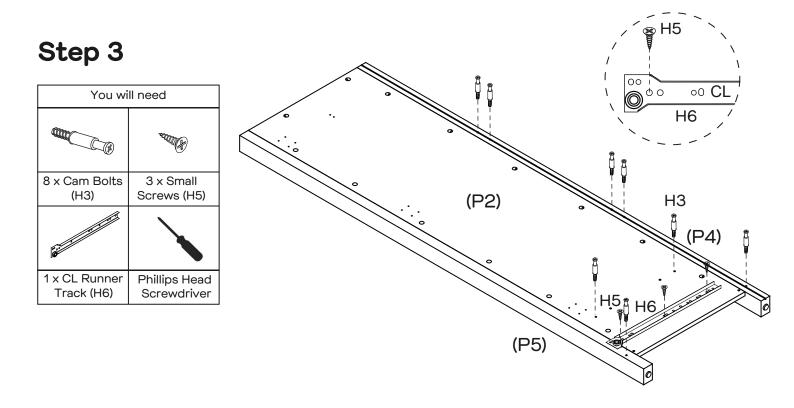



Secure 8 x Cam Bolts (H3) to Legs (P4&P5) and Side Panel (P2) as shown by tightening with the Phillips Head Screwdriver. Attach 1x CL Runner (H6) to Left Side Panel (P2) with 3 x Small Screws (H5) by tightening with the Phillips Head Screwdriver.

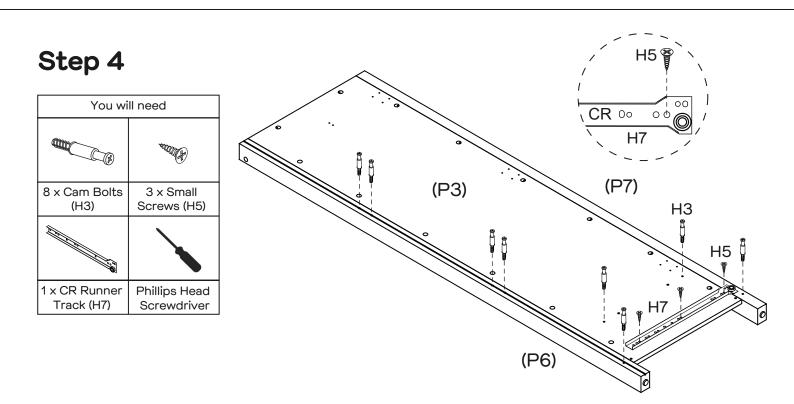

Secure 8 x Cam Bolts (H3) to Legs (P6&P7) and Right Panel (P3)as shown by tightening with the Phillips Head Screwdriver. Attach 1x CR Runner (H7) to Right Side Panel (P3) with 3 x Small Screws (H5) by tightening with the Phillips Head Screwdriver.




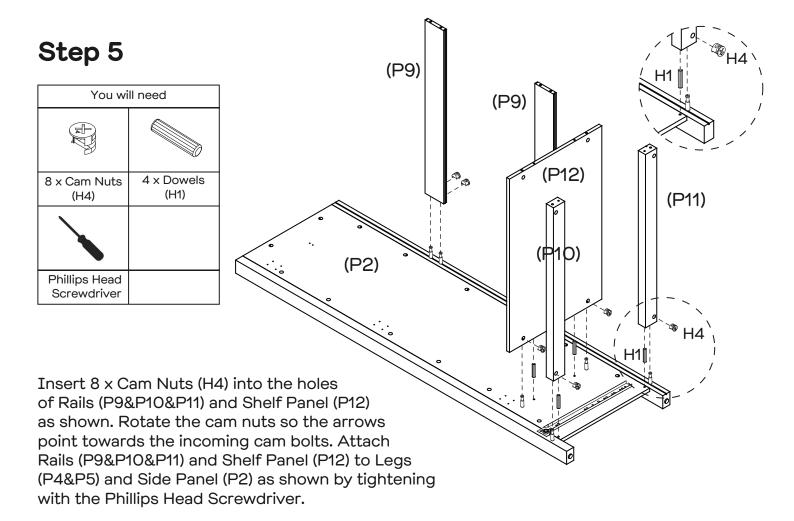

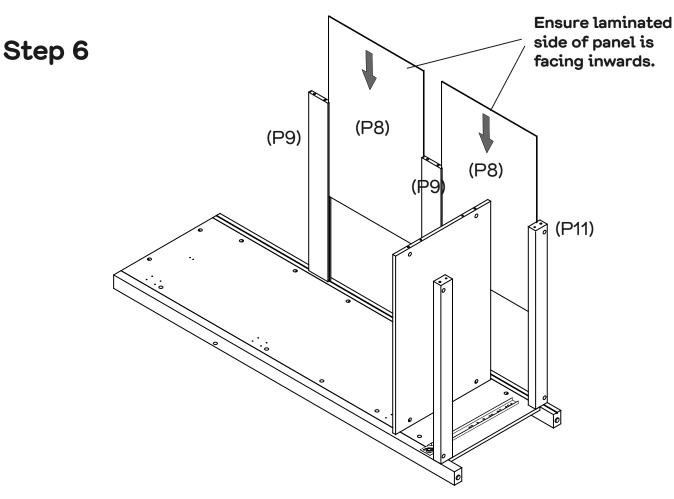

Slide the Back Panels (P8x2) into the grooves of Rails (P9x2 &P11) as shown.



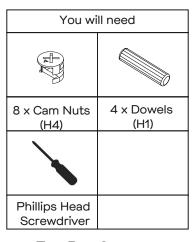

Two People

Insert 4 x Dowels (H1) into the holes of Rails (P10&P11) and Shelf Panel (P12) as shown. Insert 8 x Cam Nuts (H4) into the holes of Rails (P9&P10&P11) and Shelf Panel (P12) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Legs (P6&P7) and Side Panel (P3) to Rails (P9&P10&P11) and Shelf Panel (P12) as shown by tightening with the Phillips Head Screwdriver.

(P3)

(P9)


Ø.

H1

🖗 H4


(P11)

(PP10)

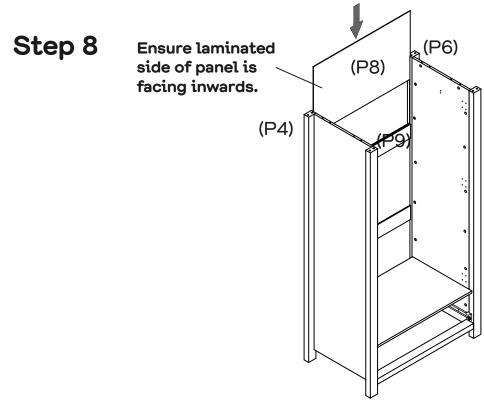

Slide the Back Panel (P8) into the grooves of legs (P4 &P6) as shown.



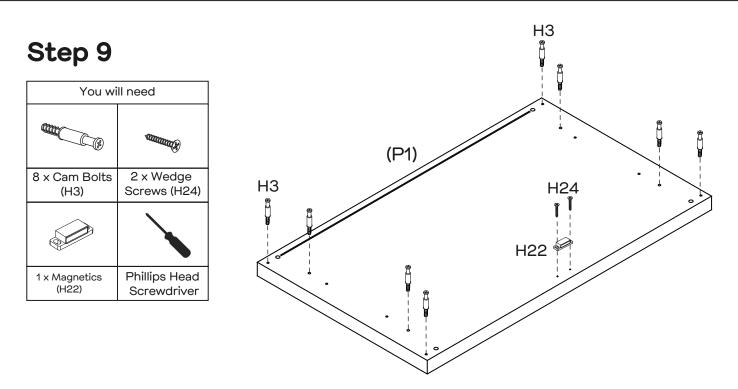


Secure 8 x Cam Bolts (H3) to Top Panel (P1) by tightening with the Phillips Head Screwdriver. Attach 1 x Magnetics (H22) to Top Panel (P1) using Wedge Screws (H24) by tightening with the Phillips Head Screwdriver.


Step 10


You will need	
A T	
8 x Cam Nuts (H4)	8 x Dowels (H1)
Phillips Head Screwdriver	

Insert 8 x Dowels (H1) into the holes of Legs (P4&P5&P6&P7) and Side Panels (P2&P3) as shown. Insert 8 x Cam Nuts (H4) into the holes of Legs (P4&P5&P6&P7) and Side Panels (P2&P3) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Top Panel (P1) to the unit as




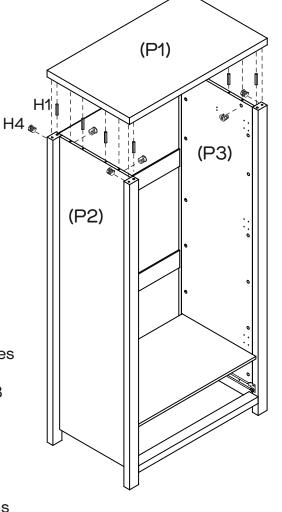

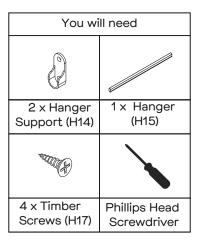

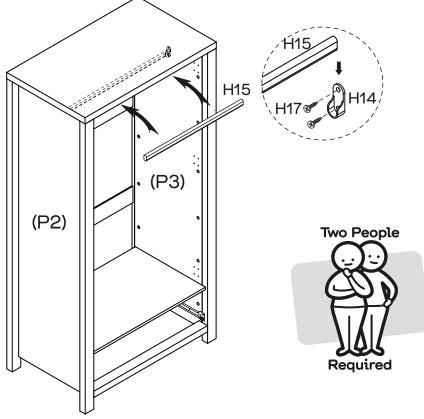


Attach 2 x Hanger Support (H14) to Side Panels (P2&P3) with 4x Timber Screws (H17) by tightening with the Phillips Head Screwdriver. Attach 1 x Hanger (H15) to the holes of Hanger Support as shown.

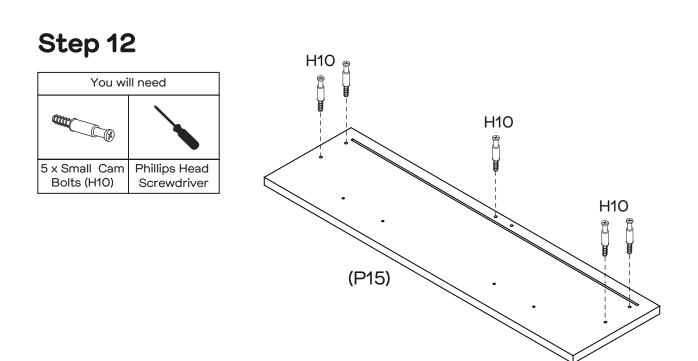


Secure 5x Small Cam Bolts (H10) to Drawer Front (P15) by tightening with the Phillips Head Screwdriver.




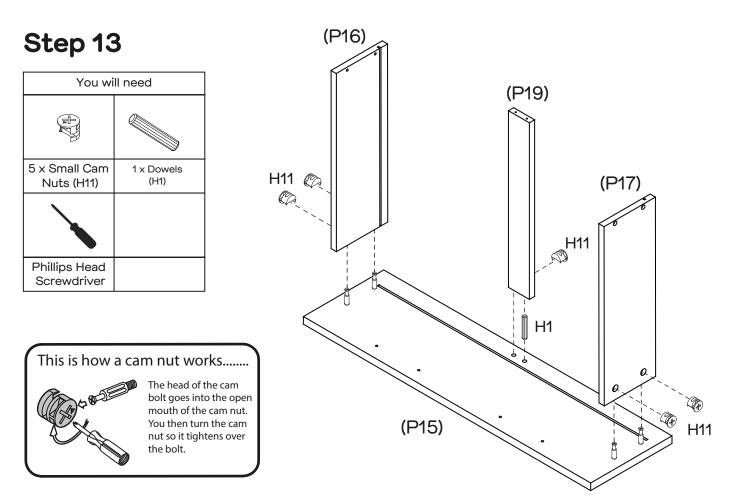


Insert 1 x Dowel (H1) into the hole of Drawer Front (P15). Insert 5 x Small Cam Nuts (H11) into Left & Right Drawer Sides (P16&P17), Support Rail (P19) and attach to Drawer Front (P15) by tightening Cam Nuts with the Phillips Head Screwdriver. Rotate the cam nuts so the arrows point towards the incoming cam bolts.

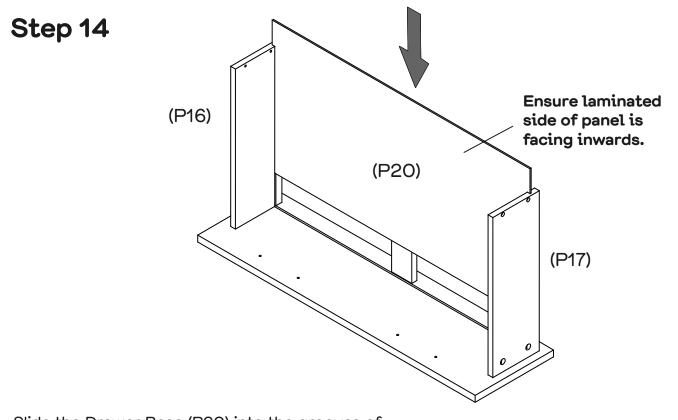

Slide the Drawer Base (P2O) into the grooves of Left & Right Drawer Sides (P16&P17) as shown.

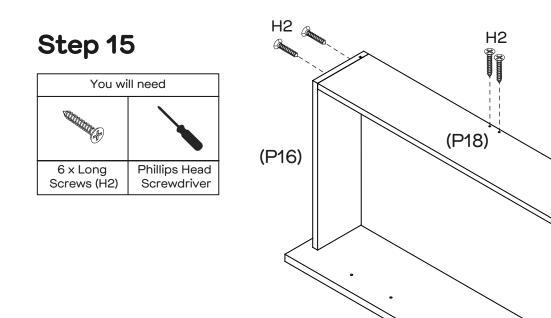

Attach Drawer Back (P18) to Left & Right Drawer Sides (P16&P17) and Rail (P19) with 6 x Long Screws (H2) by tightening with the Phillips Head Screwdriver. Before securing - Ensure the Bottom Panel lines up with the grooves the whole way around the drawer.

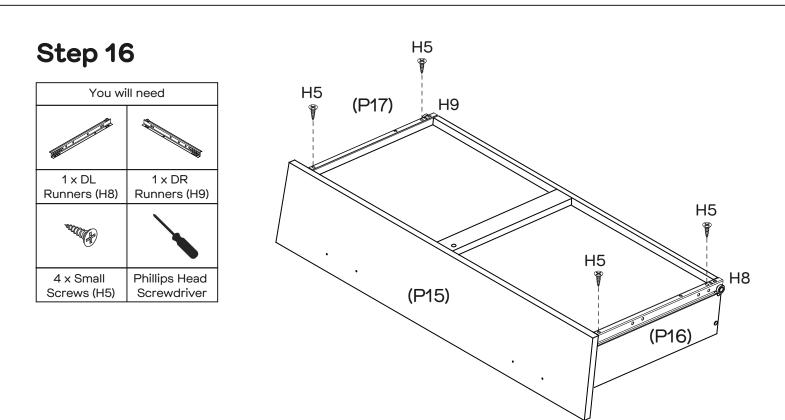



Attach 1 x DL Runner (H8) to Left Drawer Side (P16) and 1 x DR Runner (H9) to Right Drawer Side (P17) with 4 x Small Screws (H5) by tightening with the Phillips Head Screwdriver.




H2

(P17)

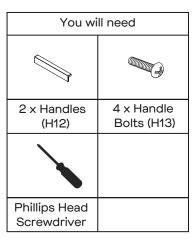

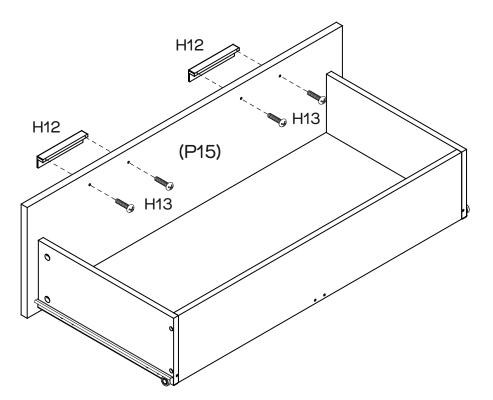


Attach 2 x Handles (H12) to Drawer Front (P15) with 4 x Handle Bolts (H13). Tighten Screws and Bolts using a Phillips head screwdriver.

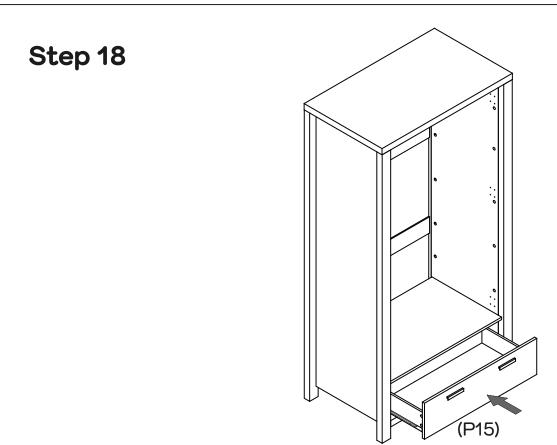



Insert the assembled drawer into the unit by gently guiding the drawer runners into place.




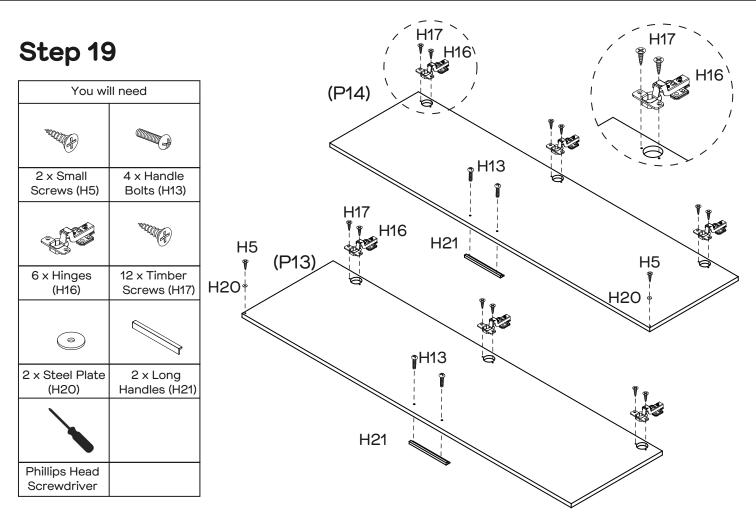

Attach 2 x Steel Plates (H2O) to Doors (P13&P14) with 2 x Small Screws (H5). Attach 6 x Hinges (H16) to Doors (P13&P14) with 12 x Timber Screws (H17). Attach 2 x Long Handles (H21) to Doors (P13&P14) with 4 x Handle Bolts (H13). Tighten Screws and Bolts using a Phillips head screwdriver.

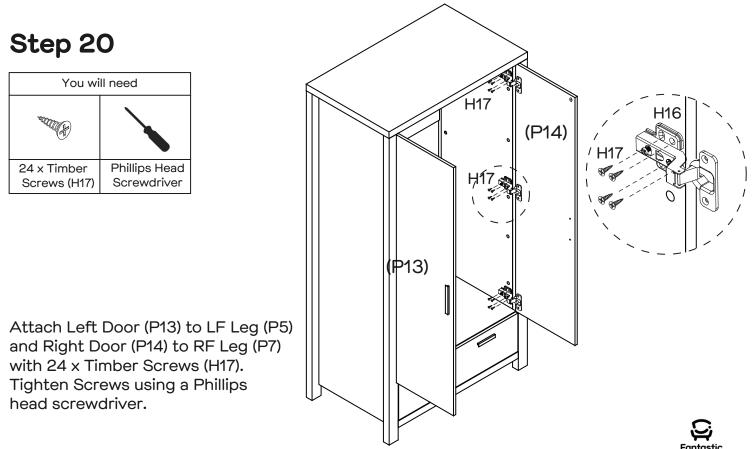

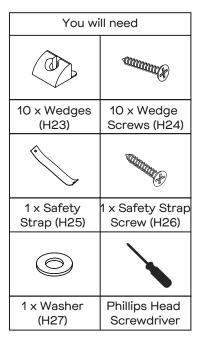


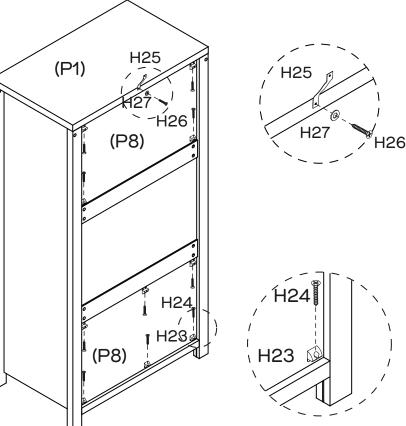

Attach 1 x Safety Strap (H25) to Top Panel (P1) with 1 x Safety Strap


Screw (H26) and 1 x Washer (H27) by tightening

with the Phillips Head Screwdriver. Secure Back Panels (P8x3) in place with 10 x Wedges (H23) using 10 x Wedge Screws (H24) by tightening with the Phillips Head Screwdriver.

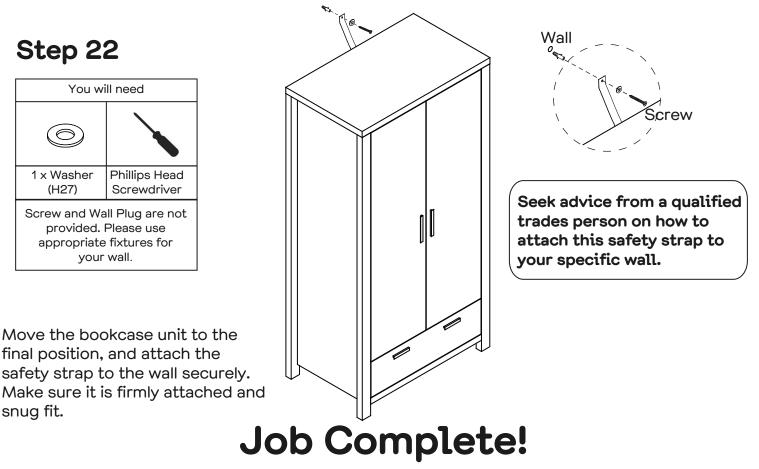

In the interest of our environment please dispose of all packaging thoughtfully.



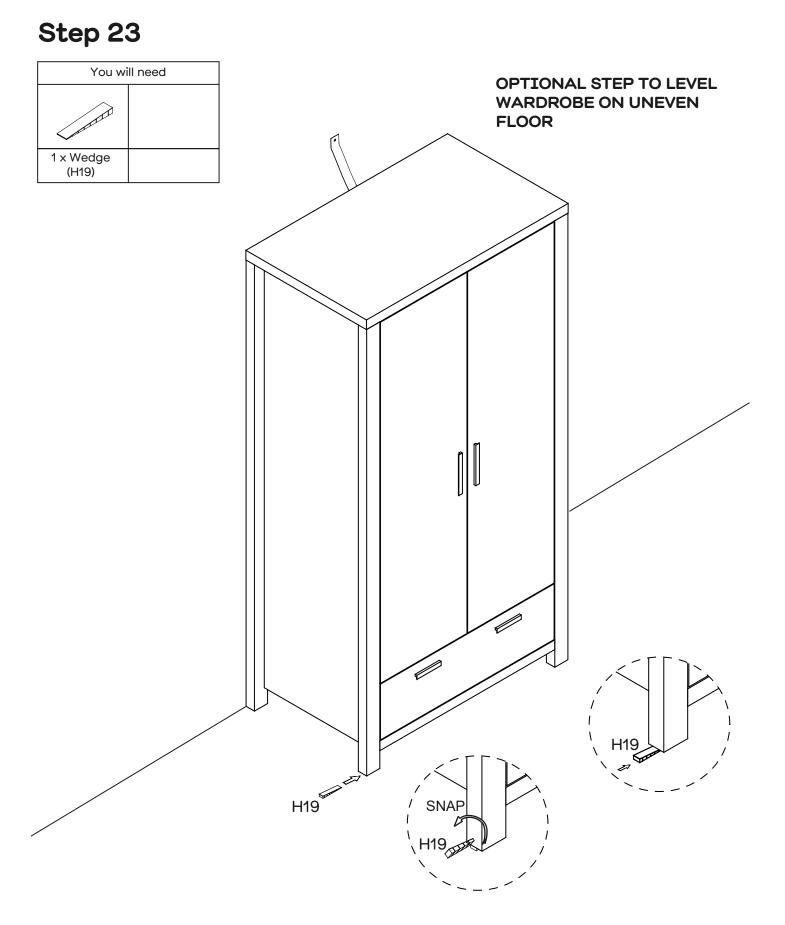


Insert the wedge (H19) under the wardrobe at the point where the floor is lowest. Push in until wardrobe is level, then snap off the excess wedge sections.



TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN


STEP 1

Open the door.

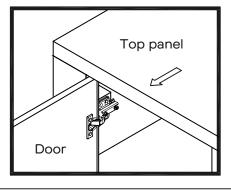


STEP 2


Adjust the door move in or out a little

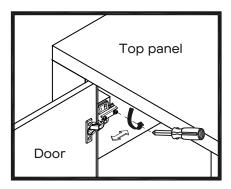

Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2B), then tighten screw. STEP 2a MOVE DOOR IN

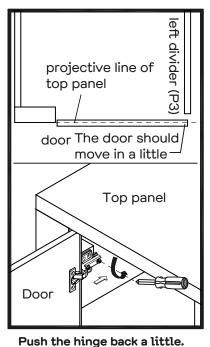



STEP 26 MOVE DOOR OUT

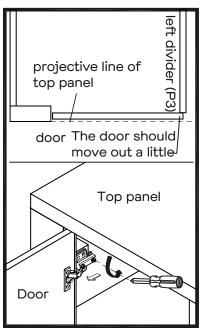


Pull the hinge forward a little.

STEP 3

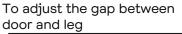


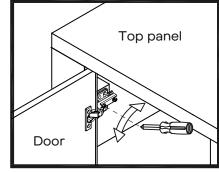

Loosen or tighten the screw indicated a little to adjust the gap between door and leg (see step 3a & step 3b)

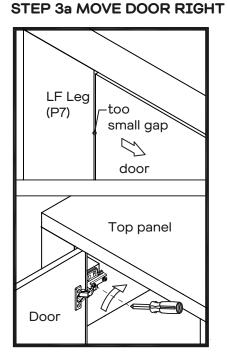

Turn the screw clockwise a litte as shown to make the gap big.

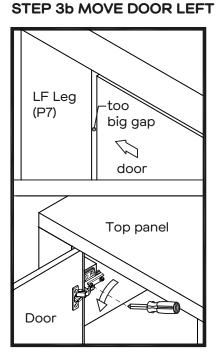

Turn the screw counterclockwise a litte as shown to make the gap small.

