 


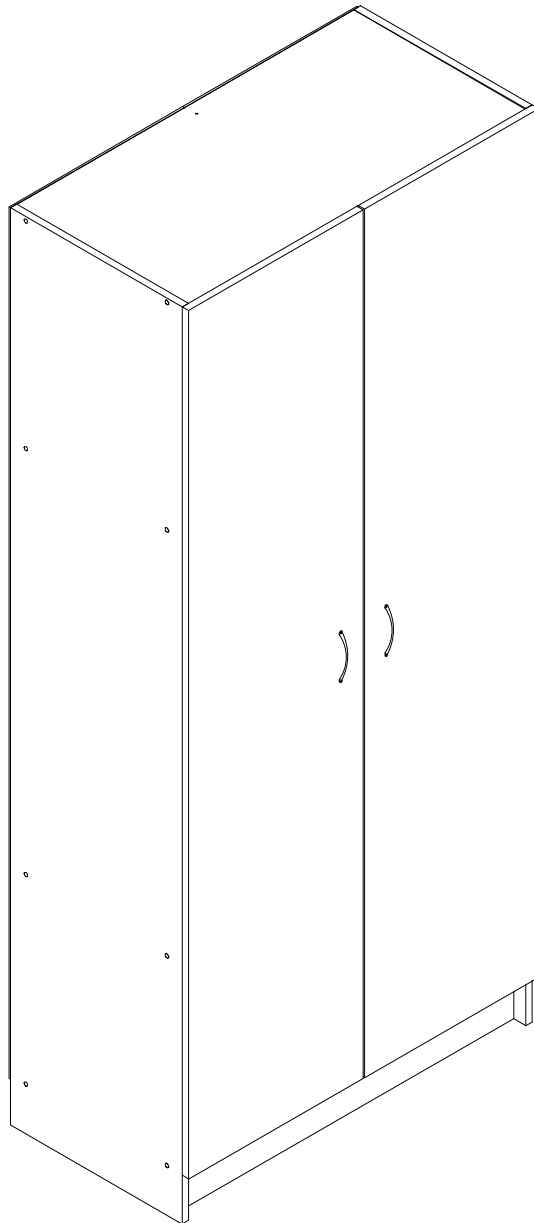

**Fantastic
Furniture**
Version 1.0



Two People



Required

Reed
Utility Broom 2 Door

fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents



WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

WEIGHT LIMIT: 10 KGS PER SHELF

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide

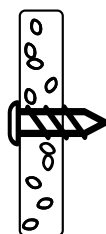


For plasterboard
(without available wood stud)

 Securing method:
Self drilling plasterboard anchor.

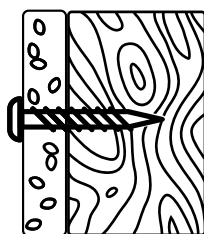

For plasterboard
(with available wood stud)

 Securing method:
Screw inserted directly into stud.

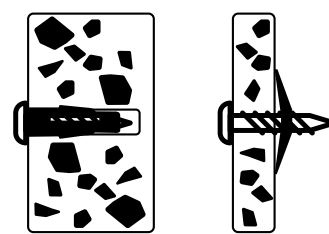

For masonry wall

Securing method:
Solid wall: Plug with screw
Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture

 
Assembly Checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

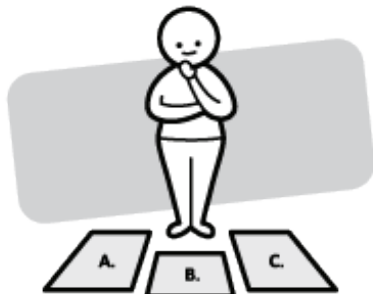

 Identify and lay out all of the components before you begin assembly.

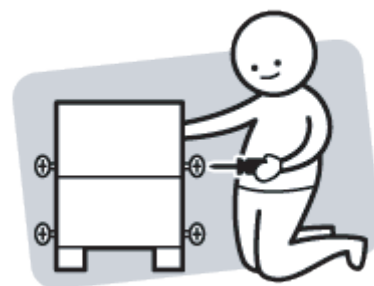

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

 
- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What You Need

to assemble the product



DO NOT USE

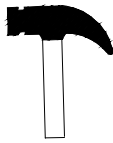

Other tools you need

Phillips head screwdriver; Hammer.

Parts list

Box 1:

Top Panel (P3)

Bottom Panel (P4)

2 x Fixed Panel (P6)

Adjustable Panel(P7)

Base Panel(P8).

Door Panel (P11) x 2.


Box 2:

Side Panel (L) (P1)

Side Panel (R) (P2)

Middle Partition Panel(P5)

 Back Panel(P9,P10)

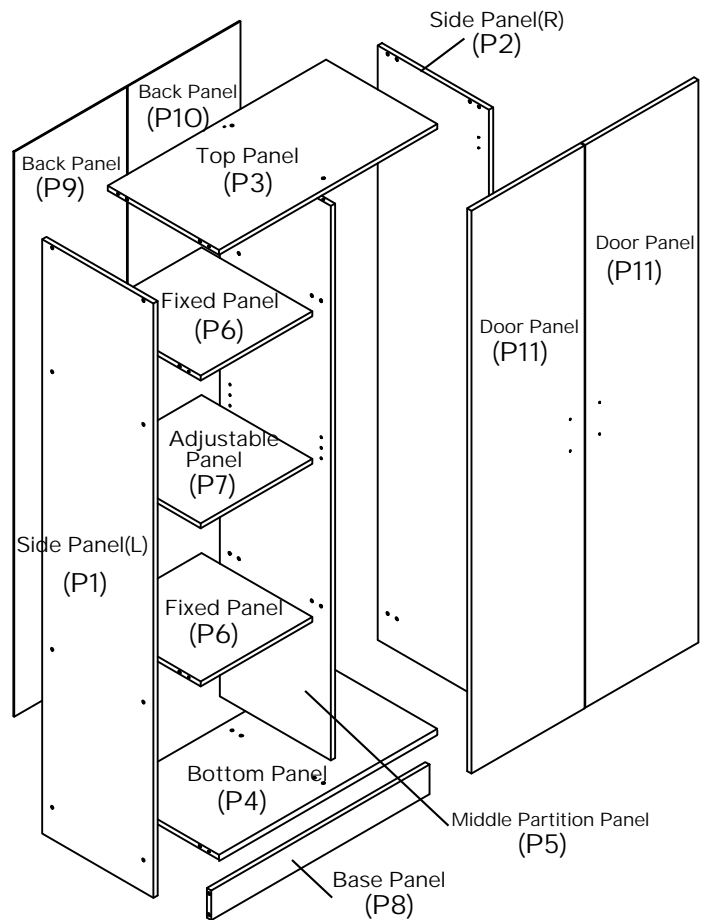

Hardware list

Box 1 :



20X Screw
(H1)



18X Plastic Cap
(H2)



24X Plastic Dowel
(H3)



6x Hinges
(H4)



24X Screw
(H5)



4X Shelf Support
(H6)



2X Metal Handle
(H7)



4X Screw
(H8)



40X Nail
(H9)



6X Screw
(H10)



1X Wall Strap
(H11)



1X Screw
(H12)








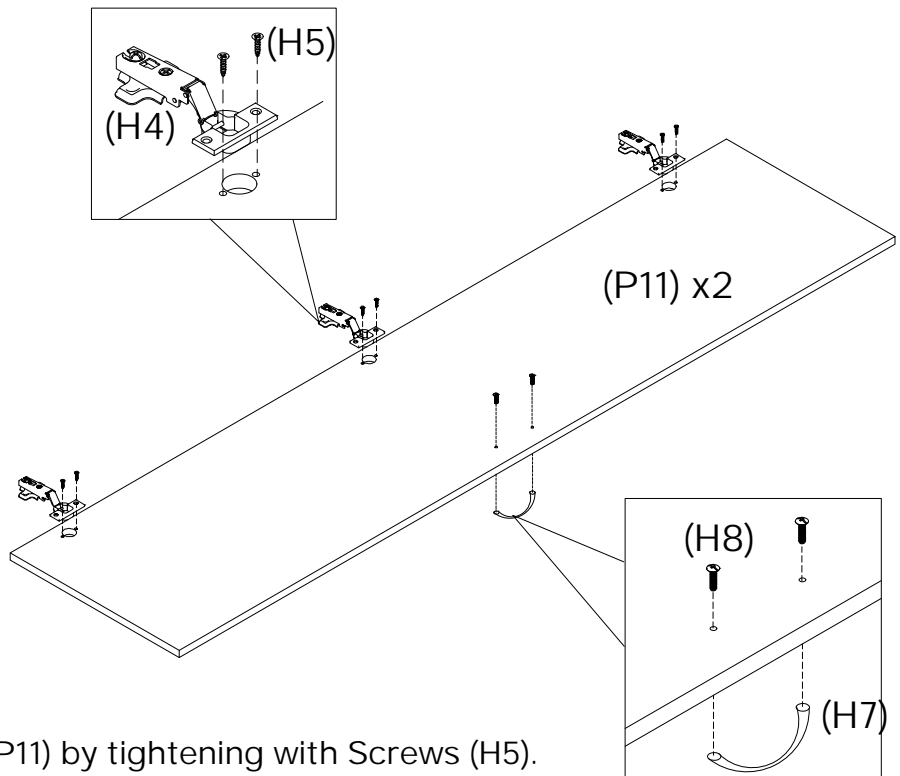 
6X Leg Stud
(H13)



2X Washer
(H14)


Step 1


You will need	
	
6X Hinges (H4)	12X Screw (H5)
	
2X Metal Handle (H7)	4X Screw (H8)
	
Phillipshead screwdriver	



Fix Hinges (H4) to Door Panel (P11) by tightening with Screws (H5).
Line Handle (H7) to pre drilled holes and tighten with Screws (H8).
Repeat for Second Door Panel (P11).



 Step 2

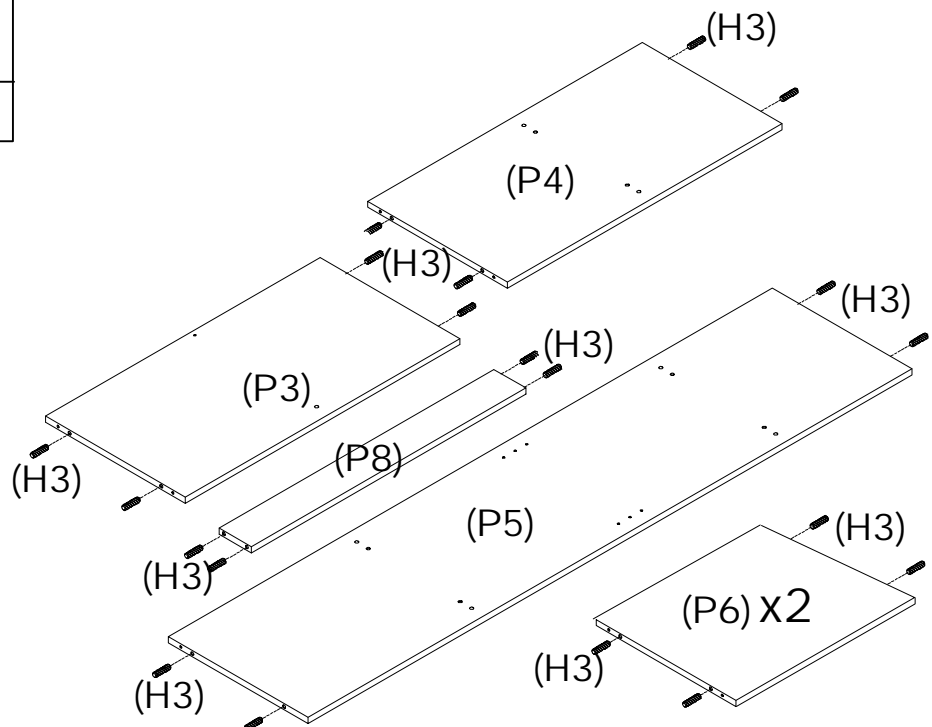
You will need	
	
24X Plastic Dowel (H3)	



Fix Plastic Dowels (H3) to Panels (P3, P4, P5, P6x2 and P8) one by one.



 Step 3

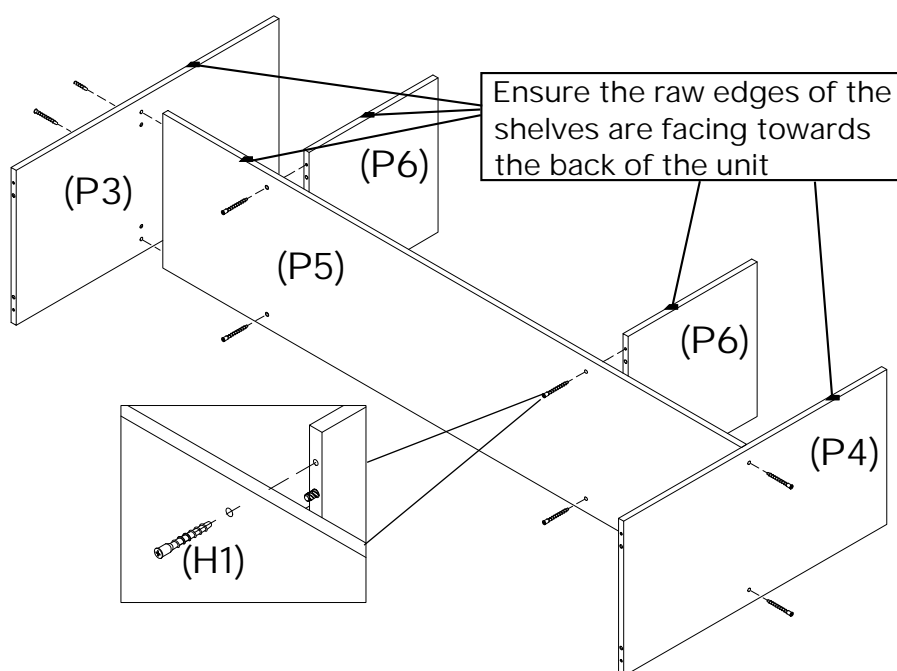
You will need	
	
8X Screw (H1)	Phillipshead screwdriver



Fix Top and Bottom Panels (P3+P4) to Middle Partition Panel (P5) by tightening with Screws (H1).
Fix Shelf Panels (P6x2) to Middle Panel (P5) by tightening with Screws (H1).

Step 4


You will need	
	
12X Screw (H1)	Phillipshead screwdriver

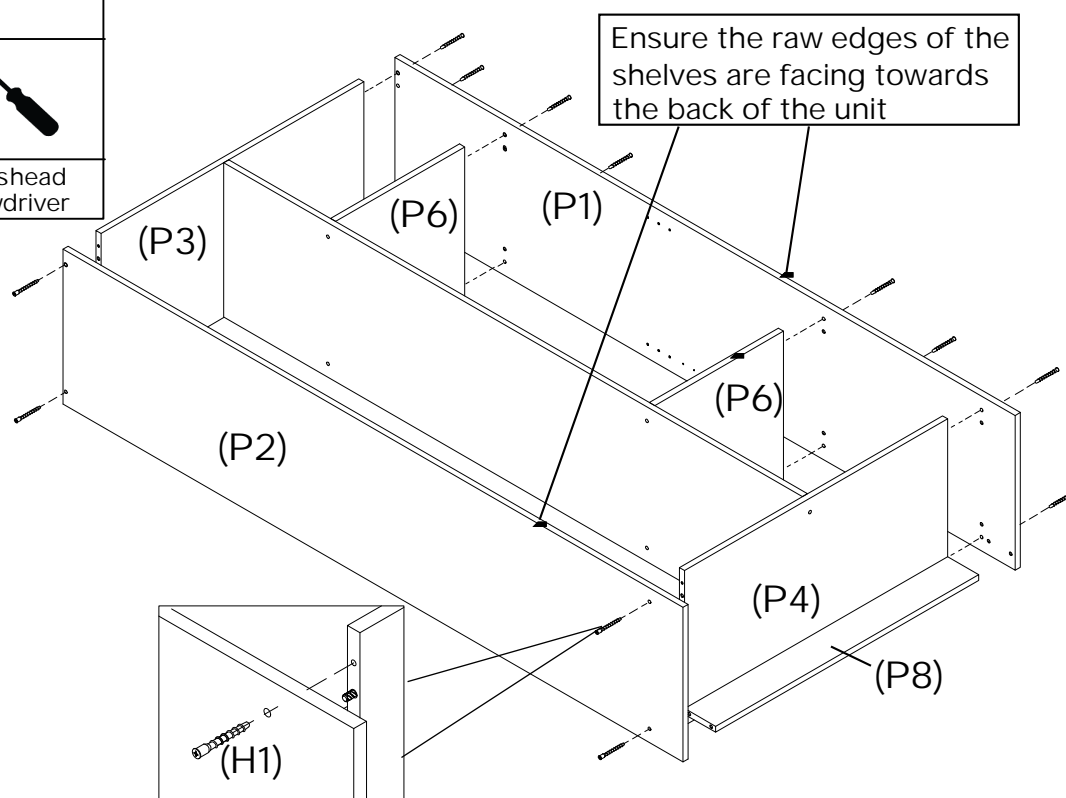 

Fix Side Panel (P1) to Panels (P3, P4, P6x2) and Base Panel (P8) by tightening with Screws (H1).
Fix Side Panel (P2) to Panels (P3+P4) and Base Panel (P8) by tightening with Screws (H1).

Step 5

You will need	
	
40X Nail (H9)	6X Screw (H10)
	
Phillips head screwdriver	Hammer

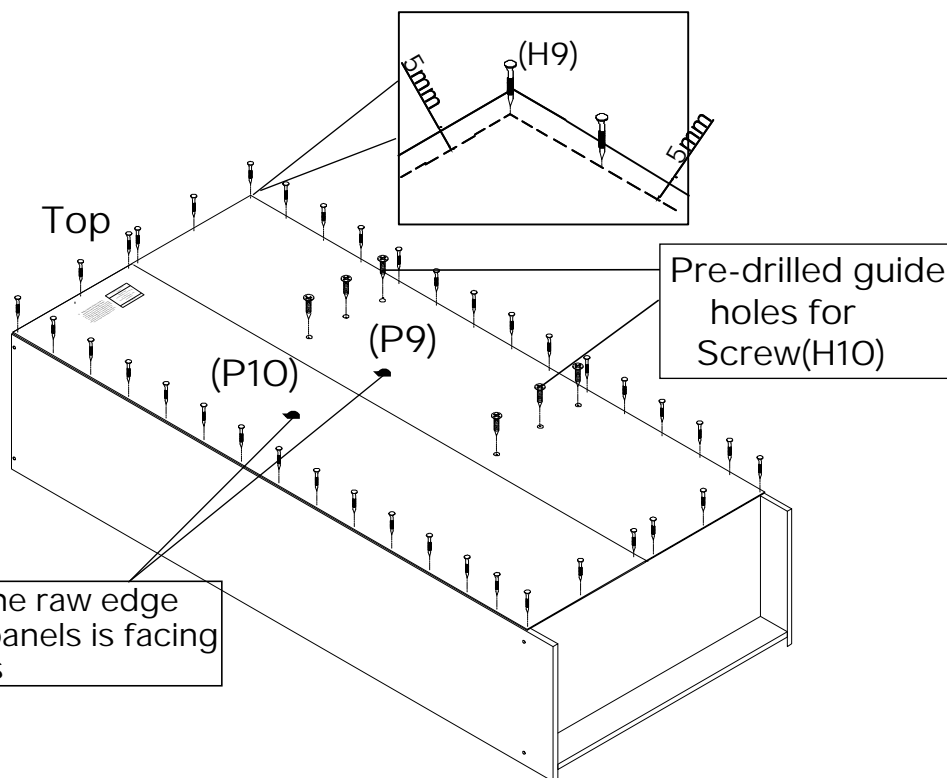 




Fix Back Panel (P9,P10) to assembled unit using Nails (H9).

Fix Back Panel (P9) to Fixed Shelves (P6×2) using Screws (H10).

*Ensure the predrilled screw holes line up with the Fixed Shelf Panels (P6×2) before fixing back panel.


Step 6


You will need	
	
6X Leg Stud (H13)	Hammer

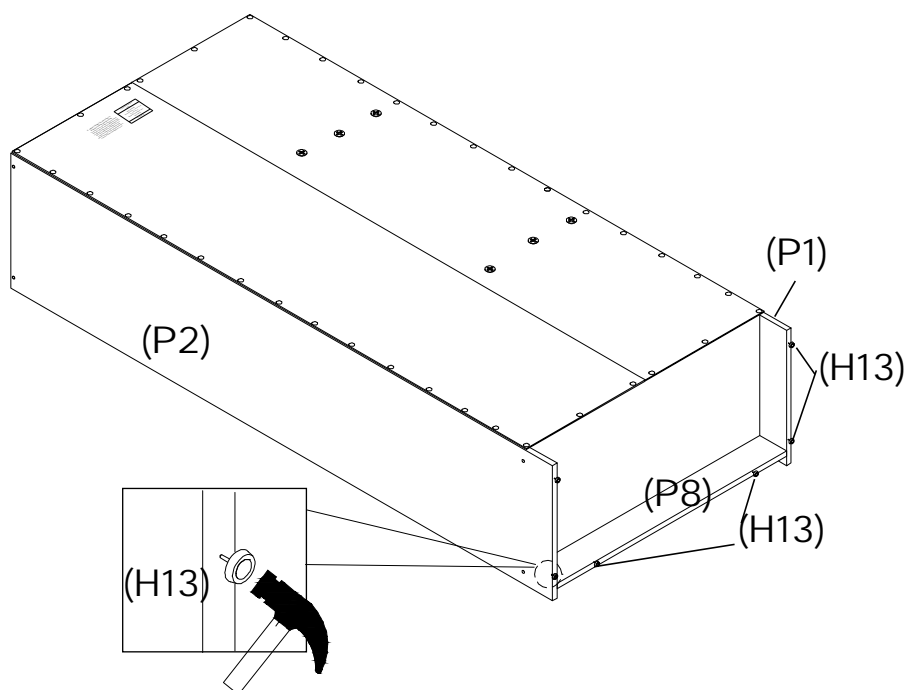 

Fix Leg Studs (H13) to the Bottom of Panels (P1, P2 and P8).
fantasticfurniture.com.au



 Step 7

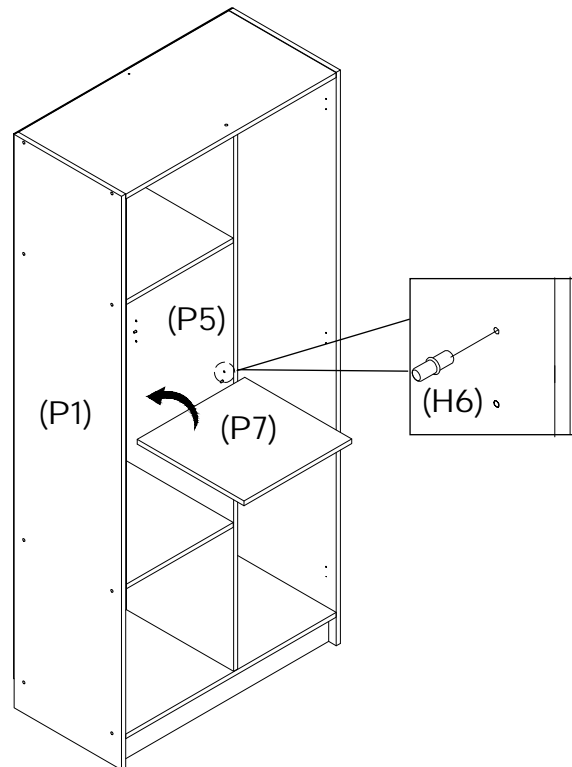
You will need	
	
4X Shelf Support (H6)	



Place Shelf Supports(H6) into side Panels (P1,P5) at preferred height.
Place Adjustable Panel (P7) into secured shelf supports.

Step 8


You will need	
	
12X Screw (H5)	Phillipshead screwdriver

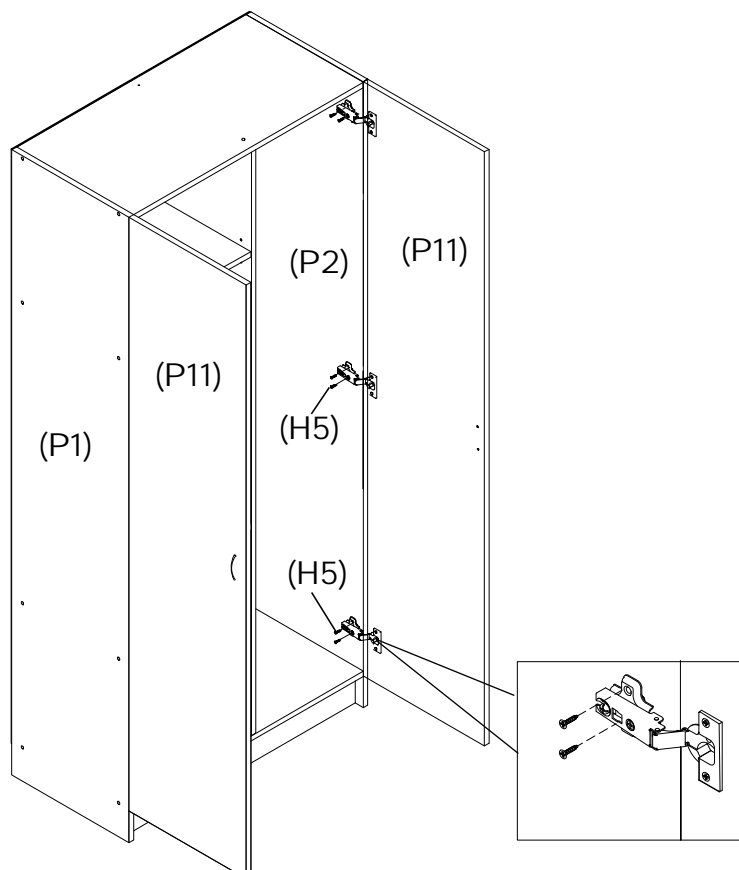 


Fix Door Panels (P11x2) to Side Panels (P1, P2) using Screws (H5).

Step 9

 
Adjusting possibilities

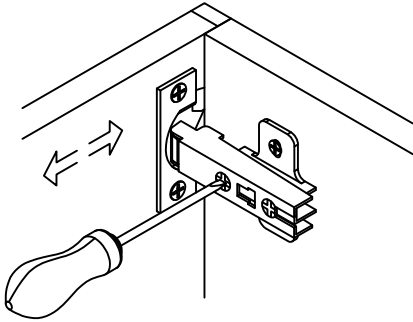

  - Lateral adjustment by screw adjustment

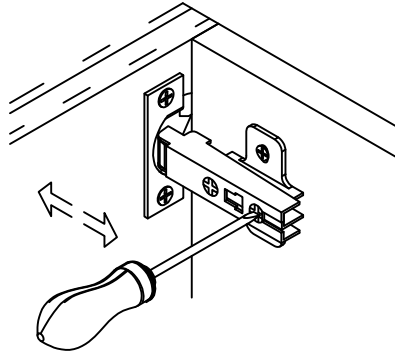


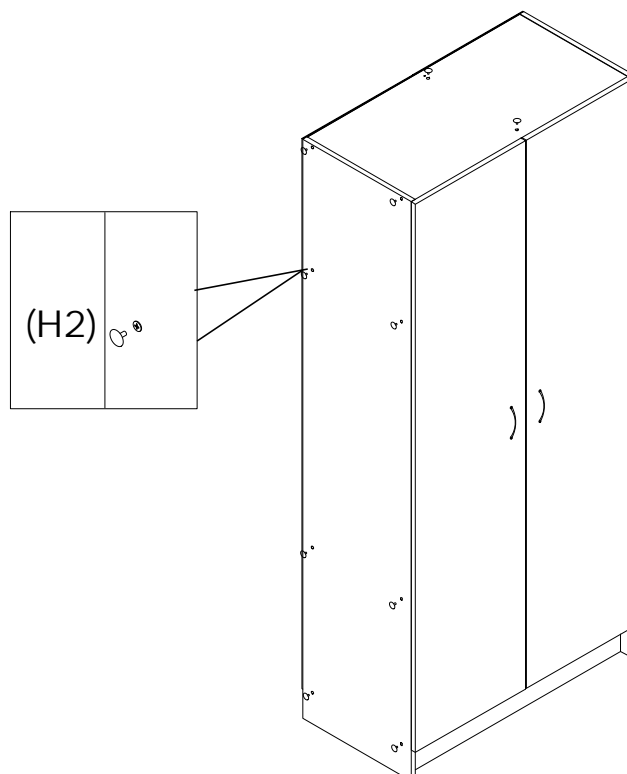 
- Front-to-back by slackening the hinge-arm mounting screw

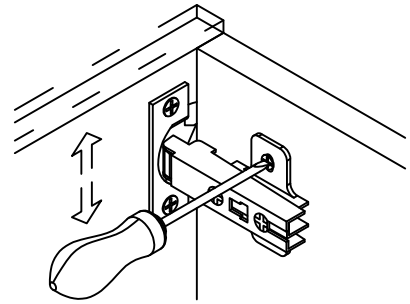

- Vertical adjustment via mounting plate(via slots or, if in two pieces ,by screws)





Step 10


You will need	
	
18X Plastic Cap (H2)	



  Use Plastic Caps (H2) to cover all screws.

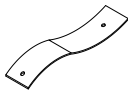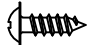Step 11


You will need	
	
1X Wall Strap (H11)	1X Screw (H12)
	
1X Washer (H14)	Phillipshead screwdriver

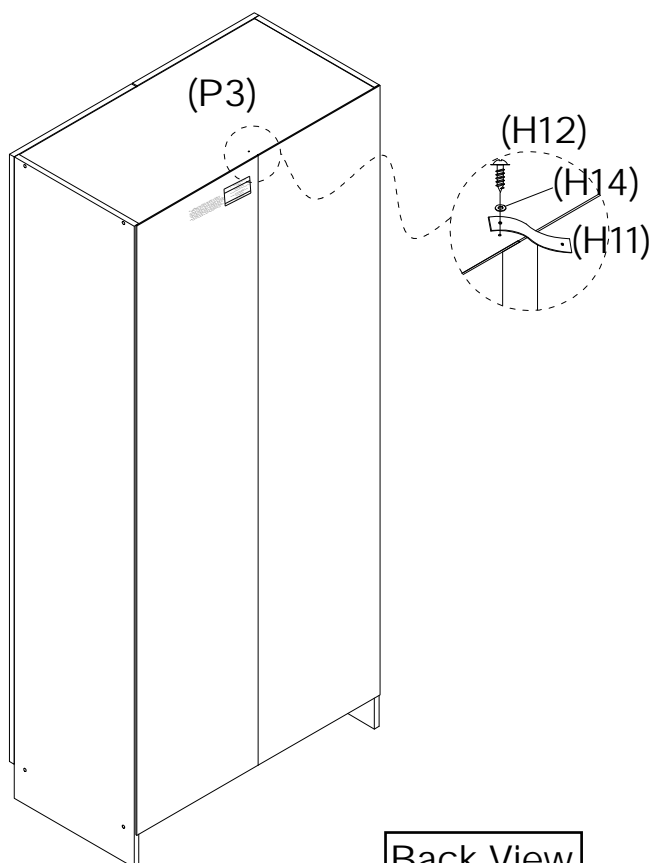 


Back View

Use the Screw (H12) and Washer (H14) to connect the Wall Strap (H11) to the Top Panel(P3);

Step 12

You will need	
	
1X Washer (H14)	

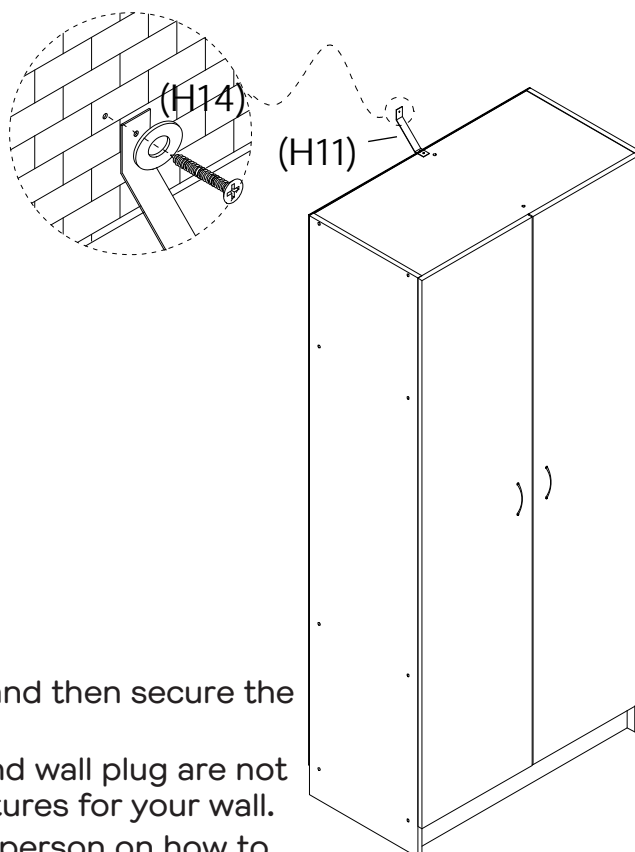 

Screws and wall plugs are not provided please use appropriate fixtures for your wall.

Move the unit into it's final position and then secure the Safety Strap to the wall.

Ensure it is firmly attached. Screw and wall plug are not provided. Please use appropriate fixtures for your wall.

*Seek advice from a qualified tradesperson on how to attach this safety strap to your specific wall.

Step 13

Job Complete!

In the interest of our environment
please dispose of all
packaging thoughtfully.

