

Reed

Pantry 2 Door Narrow

fantasticfurniture.com.au



## Secure it!

Reduce the risk of furniture tip-over accidents





## WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

#### **WEIGHT LIMIT: 25 KGS PER SHELF**

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
   Check anchors regularly.
- Avoid putting a TV on this product.

#### Wall attachment guide



For plasterboard (without available wood stud)

 **Securing method:**Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.



For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



#### Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



#### **Assembly Checklist**



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

#### **Useful information**

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



# What You Need to assemble the product



Other tools you need Phillips head screwdriver; Hammer.

Parts list

Box:

Side Panel (L) (P1)

Side Panel (R) (P2)

Top Panel (P3)

Bottom Panel (P4)


2 x Fixed Panel (P5)

2 x Adjustable Panel(P6)


Base Panel(P7)


2 x Back Panel(P8)

2 x Door Panel (P9)

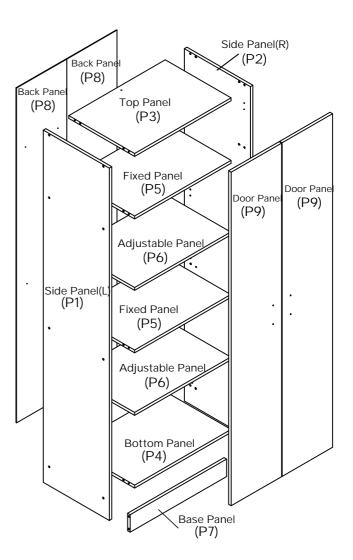


#### **Hardware Pack:**

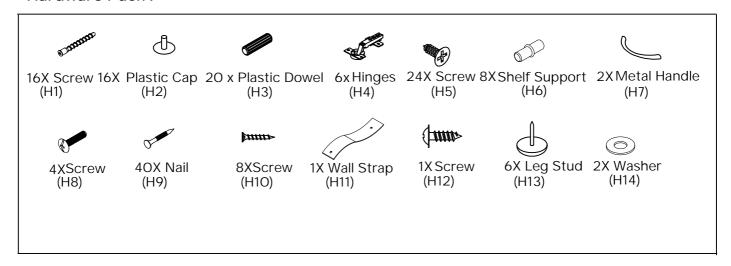

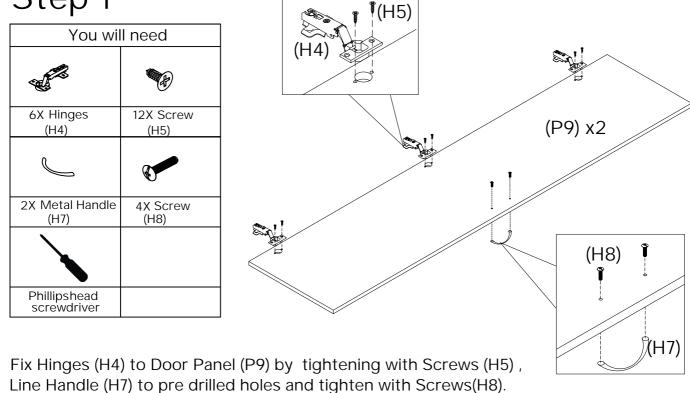


Step 2

Repeat for Second Door Panel (P9).

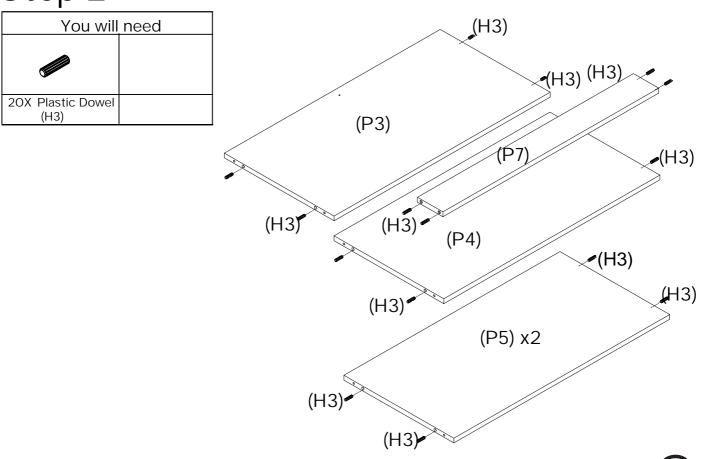


Fix Plastic Dowels (H3) to Panels (P3,P4,P5x2 and P7) one by one. fantasticfurniture.com.au



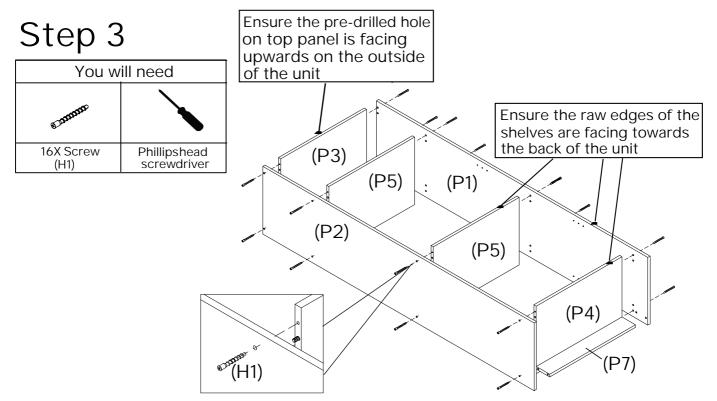

Fix Top and Bottom Panels (P3+P4), Base Pane (P7) and Fixed Shelves (P5x2) to Side Panel (P1) by tightening with Screws (H1). Repeat for Side Panel (P2).

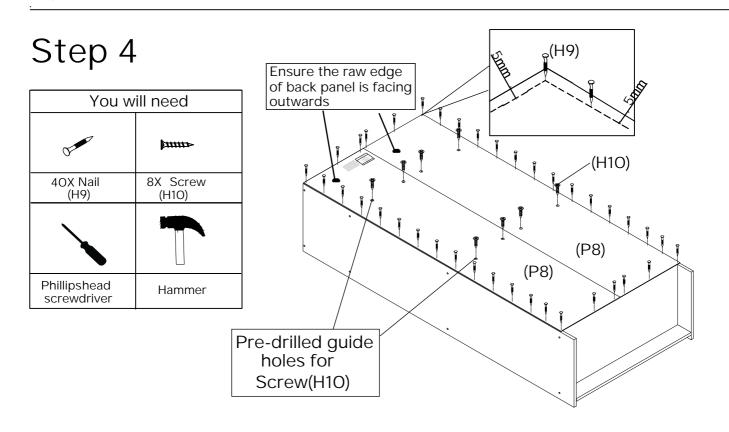


Fix Back Panel(P8) to assembled unit using Nails(H9).

Fix Back Panel (P8) to Fixed Shelves (P5x2) using Screws (H1O).

\*Ensure the predrilled screw holes line up with the Fixed Shelf Panels (P5x2) before fixing Back Panel.







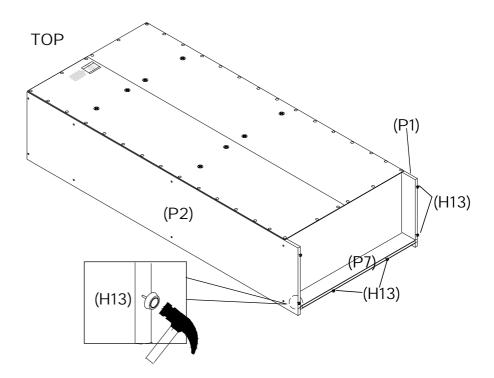

Fix Leg Studs (H13) to the bottom of Panels (P1, P2 and P7)

## Step 6

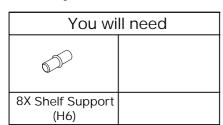


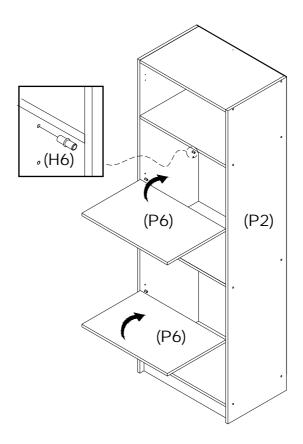

Place Shelf Supports (H6) into Side Panels (P1,P2) at preferred height. Place Adjustable Panels (P6x2) into secured shelf supports . fantasticfurniture.com.au




You will need	
12XScrew (H5)	Phillipshead screwdriver

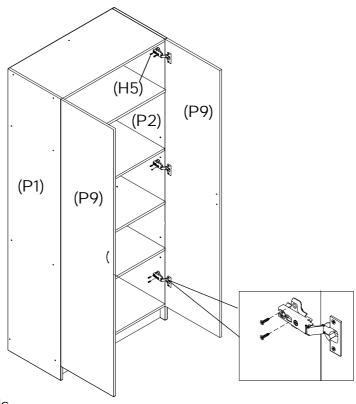

Fix Door Panels (P9x2) to Side Panels (P1,P2) using Screws (H5).

#### Step 8


#### Adjusting possibilities

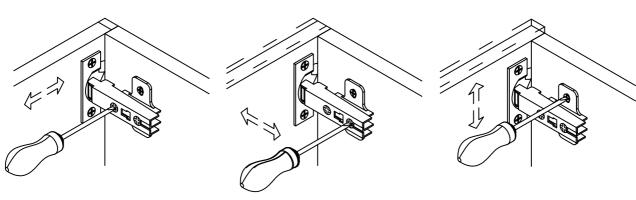

 Front-to-back by slackening the hinge-arm mounting screw

 Vertical adjustment via mounting plate(via slots or, if in two pieces ,by screws)

You will need	
d)	
16X Plastic Cap (H2)	

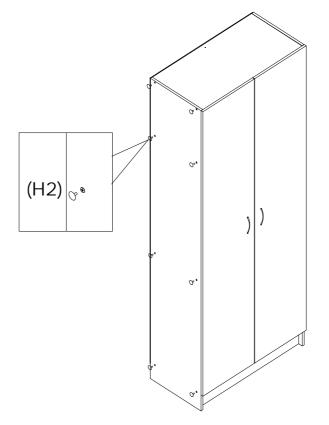

Use Plastic Caps (H2) to cover all screws.

#### Step10

■		
You will need		
	( <b>  mm&gt;</b>	
1X Wall Strap (H11)	1X Screw (H12)	
1X Washer (H14)	Phillipshead screwdriver	

(H12) (H14) (H11) Back View For


Use the Screw (H12) and Washer (H14) to connect the Wall Strap (H11) to the Top Panel(P3).

fantasticfurniture.com.au



You will need	
1X Washer (H14)	

Screws and wall plugs are not provided please use appropriate fixtures for your wall.

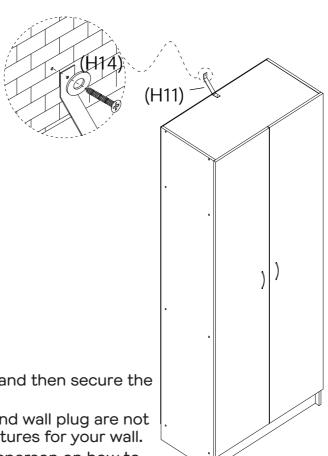

Move the unit into it's final position and then secure the Safety Strap to the wall.

Ensure it is firmly attached. Screw and wall plug are not provided. Please use appropriate fixtures for your wall.

\*Seek advice from a qualified tradesperson on how to attach this safety strap to your specific wall.

## Step 12

## Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

