


Version 3.0

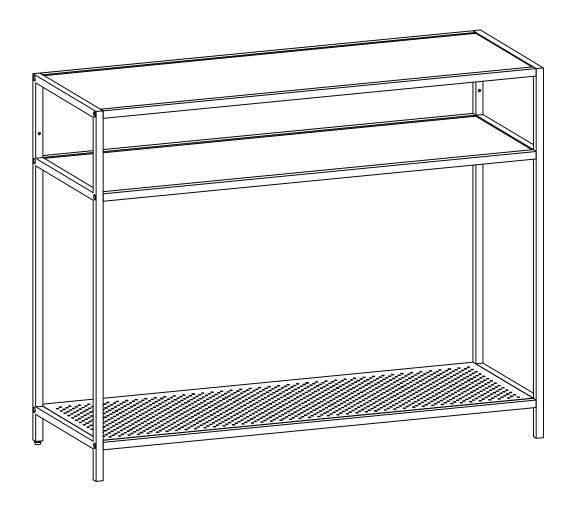



Seaforth Console Table Oak with Mesh

fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

 Securing method: Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

 Securing method:
Screw inserted directly into





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!


@fantasticfurniture




Assembly checklist



Read through the instructions carefully before you begin.

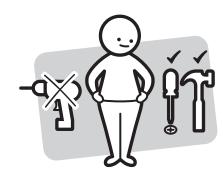

Make sure you have all the required tools. Never use power tools unless instructed.

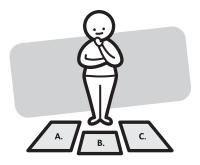

before you begin assembly.



Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



What you need


to assemble the product







Other tools you need:

Phillips head screwdriver;

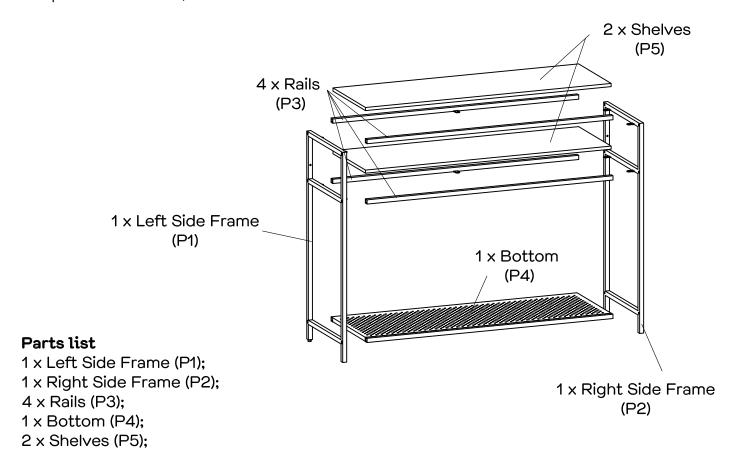


Hardware pack

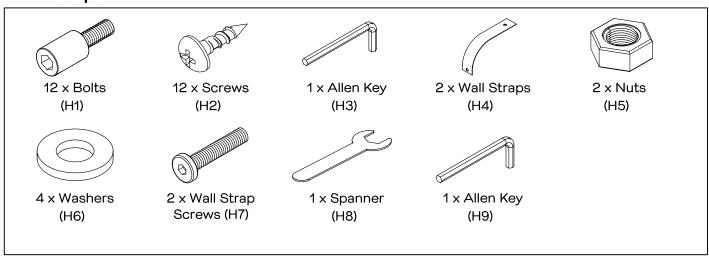

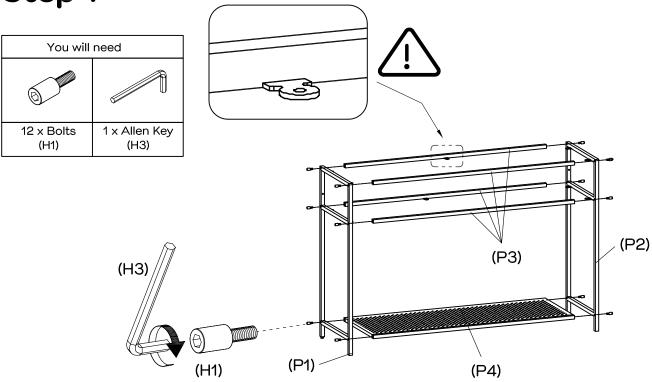



Attach the 4 x Rails (P3) and the Bottom (P4) to the Left & Right Side Frames (P1, P2) with 12 x Bolts (H1) using the Allen Key (H3). Ensure the metal tabs on the $2 \times \text{Rails}$ (P3) face inwards towards each other as shown. Tighten the bolts (H1) using the Allen Key (H3) so the parts are secure but not fully tightened.

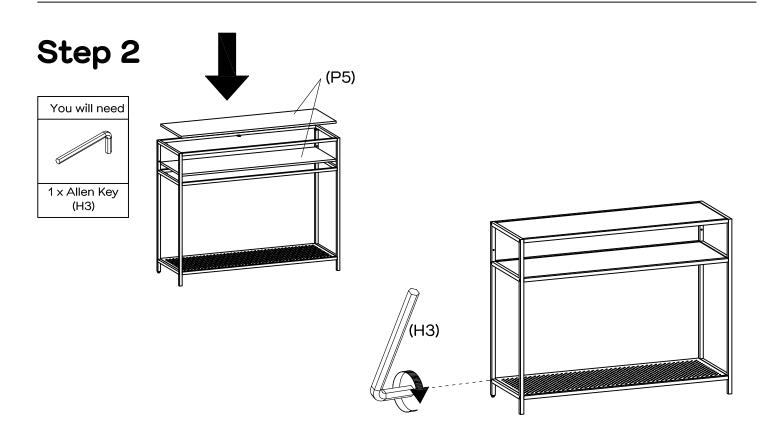

Place the $2 \times \text{Shelves}$ (P5) into the assembled frame as shown. Completely tighten all bolts (H1) using the Allen Key (H3).




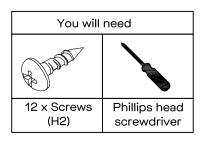


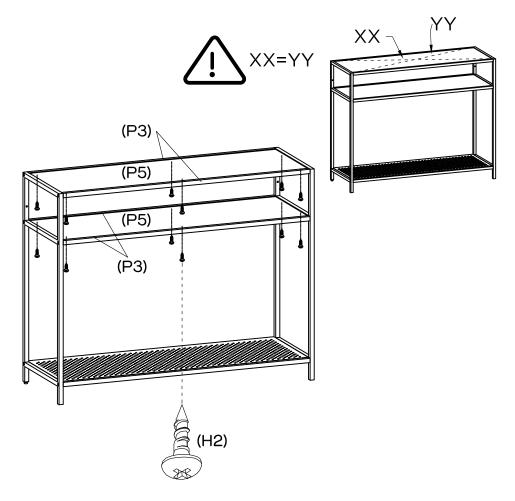

Please ensure that XX=YY measure are equal. Secure the 2 x Shelves (P5) to the $4 \times Rails$ (P3) with 12 x Screws (H2), tightening with a Phillips Head Screwdriver.


Step 4

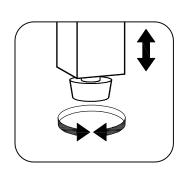

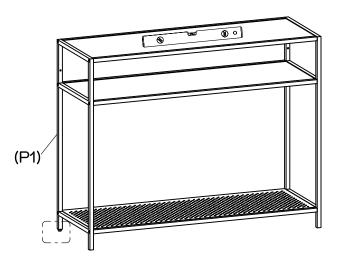


If the floor is uneven, adjust the feet on the bottom of the Left Side Frame (P1) to balance the unit if needed.



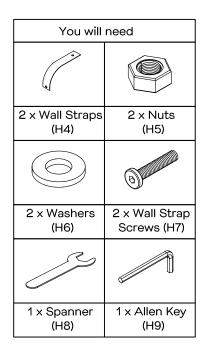

We strongly advise that you use the wall straps provided to prevent the unit from toppling

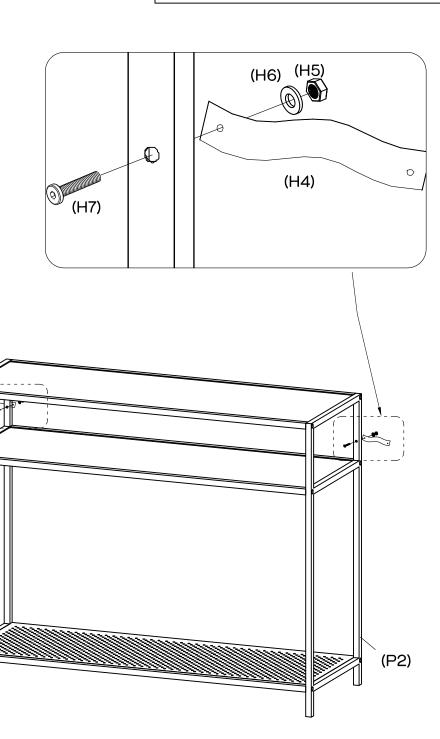

Use 2 x Wall Strap Screws (H7), 2 x Nuts (H5) and 2 x Washers (H6) to connect $2 \times \text{Wall Straps}$ (H4) to the Left and Right Frames (P1, P2), using the Allen Key (H9) and Spanner (H8).




(P1)




Screws and wall plugs are not provided, please use appropriate fixtures for your wall.

Seek advice from a qualified trades person on how to attach this to your specific wall.

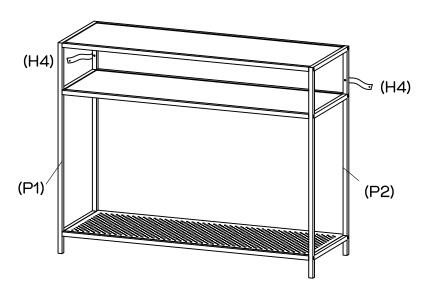


Attaching wall strap to wall

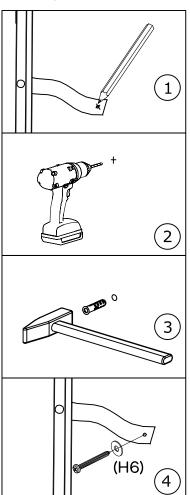

Move the Console Table to its final position. Connect the wall straps ($2 \times H4$) to the wall. Make sure it is firmly attached and a snug fit.

Step 7

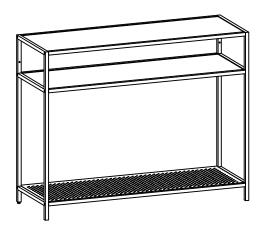

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

