

Version 1.0



# Delorean

Gaming Desk

fantasticfurniture.com.au

## Secure it!

Reduce the risk of furniture tip-over accidents





## WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

### Weight capacity: 60kgs on top

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
   Check anchors regularly.
- Avoid putting a TV on this product.

#### Wall attachment guide




For plasterboard (without available wood stud)

 **Securing method:**Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

 Securing method:
Screw inserted directly into stud.





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

## Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



## Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture

## Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

### Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

## What You Need

to assemble the product







#### Parts list


#### Box 1:


Desk Top (P1)
Right Leg (P2)
Left Leg (P3)
Desk Top Bar (P4)
Support Bar (P5)
2 x Small Support Bar (P6)
Cup Holder (P7)
Headphone Hook (P8)

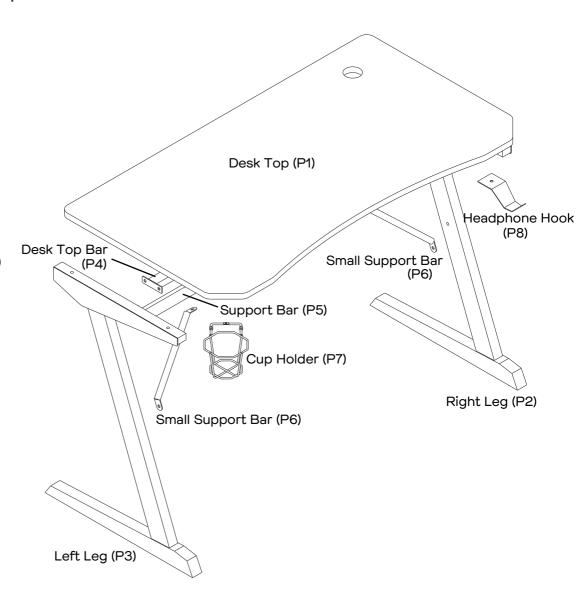

#### Hardware list:

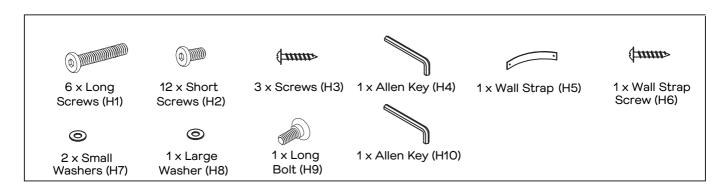

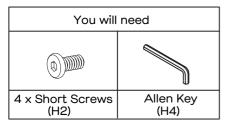


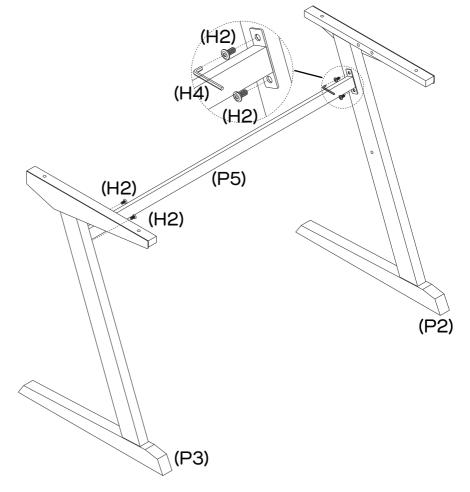

Secure Right & Left Legs (P2 &P3) to Support Bar (P5) with 4 x Short Screws (H2) as shown by tightening with the Allen Key (H4).


## Step 2



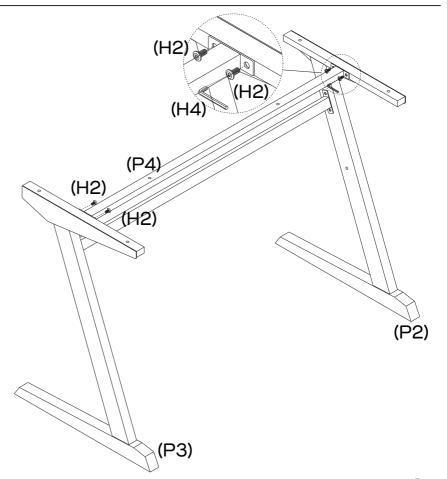


Secure Desk Top Bar (P4) to Right & Left Legs (P2 & P3) with 4 x Short Screws (H2) by tightening with the Allen Key (H4).



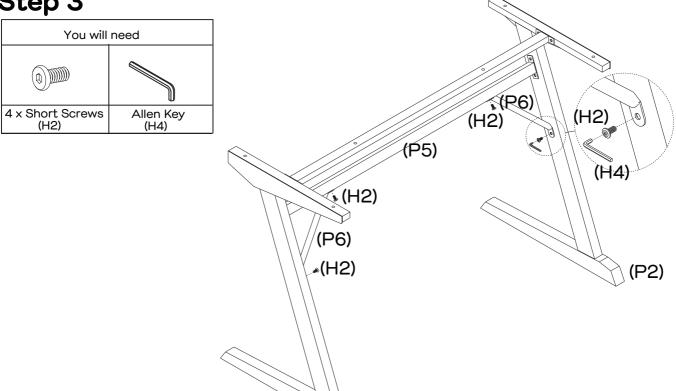

Secure Small Support Bars (P6  $\times$  2) to Support Bar (P5) and Right & Left Legs (P2 & P3) with 4  $\times$  Short Screws (H2) as shown by tightening with the Allen Key (H4).


(P3)

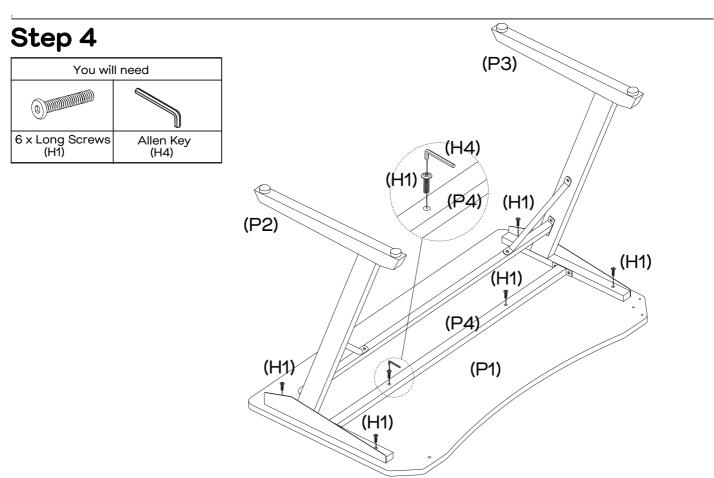

Attach Desk Top Bar (P4) and Right & Left Legs (P2 & P3) to the underside of the Desk Top (P1) with 6 x Long Screws (H1) as shown by tightening with the Allen Key (H4).





You will need	
( <del>  111111&gt;</del>	
3 x Screws (H3)	Phillips head
	screwdriver

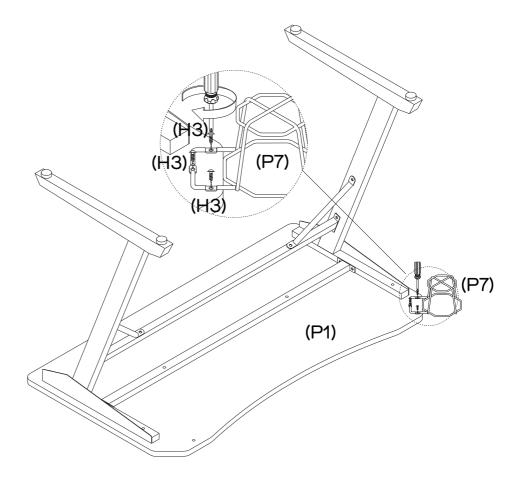

Attach Cup Holder (P7) to the underside of the Desk Top (P1) with 3  $\times$  Screws (H3) as shown by tightening with the Phillips Head Screwdriver.



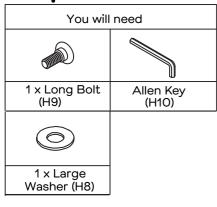


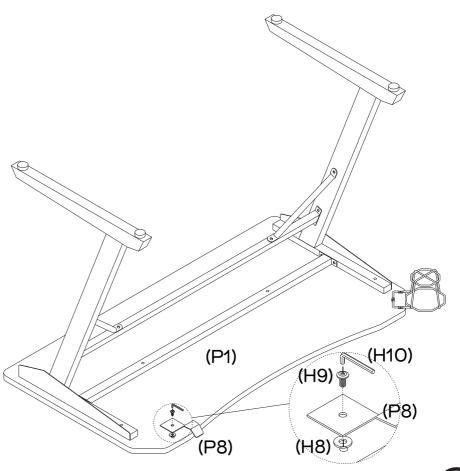

Attach Headphone Hook (P8) to the underside of the Desk Top (P1) with  $1 \times \text{Large}$  Washer (H8) and  $1 \times \text{Long}$  Bolt (H9) as shown by tightening with the Allen Key (H10). fantastic furniture.com.au




You will need	
	( <del>''''''</del> >
1 x Wall Strap (H5)	1 x Wall Strap Screw(H6)
0	
1 x Small Washer (H7)	Phillips head screwdriver

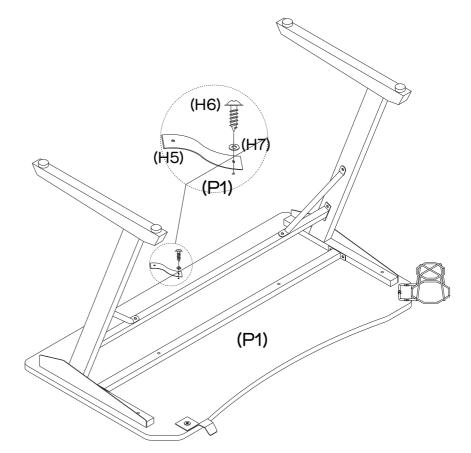

Page 9

Attach Wall Strap (H5) to the underside of the Desk Top (P1) with 1 x Small Washer (H7) and 1 x Wall Strap Screw (H6) as shown by tightening with the Phillips Head Screwdriver.

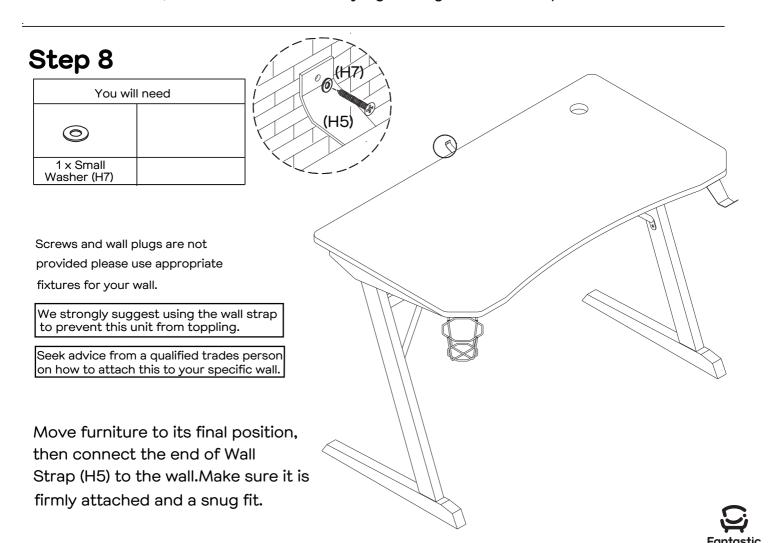



## Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.