


Version 1.0

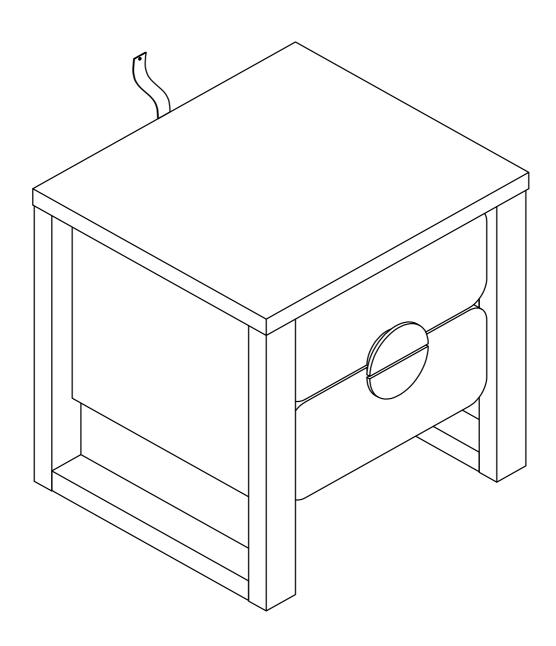





Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended weight capacity: 60kg on Top 10kg/Drawer

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

 Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

 Securing method:Screw inserted directly into stud.





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Assembly checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product



Other tools you need

Phillips Head Screwdriver; Hammer


Parts list

Top Panel (P1) Support Panel (P2) Left Side Panel (P3) Right Side Panel (P4) Base Panel (P5) Support Panel (P6) Back Panel (P7)


- 2 x Drawer Back Panels (P8)
- 2 x Drawer Side Panel (L) (P9)
- 2 x Drawer Side Panel (R) (P10)
- 2 x Drawer Base Panels (P11)

Top Drawer Front Panel (P12)

Bottom Drawer Front Panel (P13)

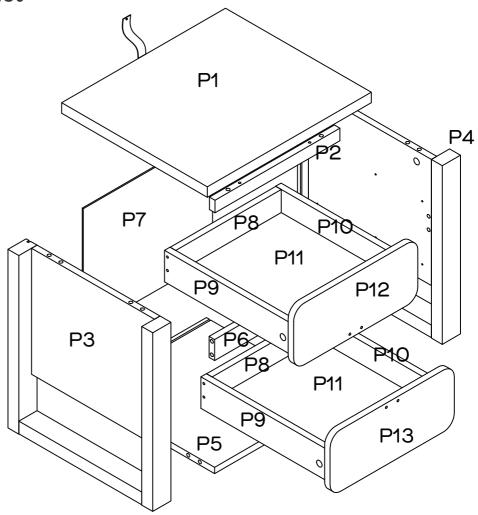


Hardware Pack:

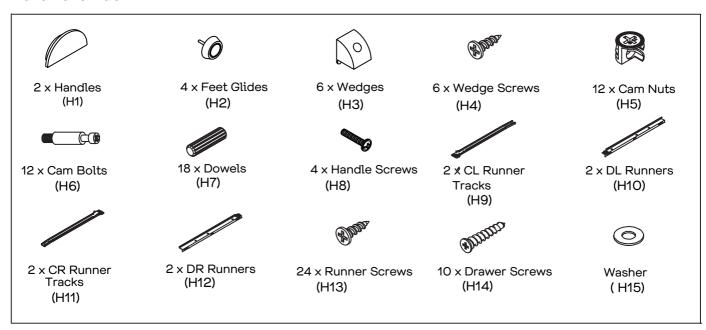

You will need You will need 2 x CR Runner Tracks (H9) 12 x Runner Screws (H13) Phillips head Screwdriver (H9) (H9) (H9)

Attach 2 x CL Runner Tracks (H9) to the Left Side Panel (P3) with 6 x Runner Screws (H13), by tightening with a Phillips Head Screwdriver.


Repeat process to attach 2 x RL Runner Tracks (H11) to the Right Side Panel (P4).

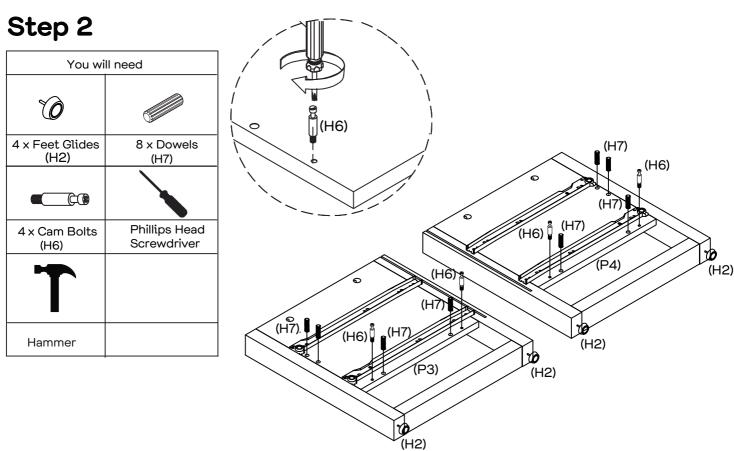


Insert 4 x Cam Bolts (H6) into the Left Side Panel (P3) and Right Side Panel (P4), by tightening with a Phillips Head Screwdriver.

Insert 8 x Dowels (H7) into the Left Side Panel (P4) and Right Side Panel (P4). Insert 4 x Feet Glides (H2) on to the underside of the legs by gently using a Hammer as shown.



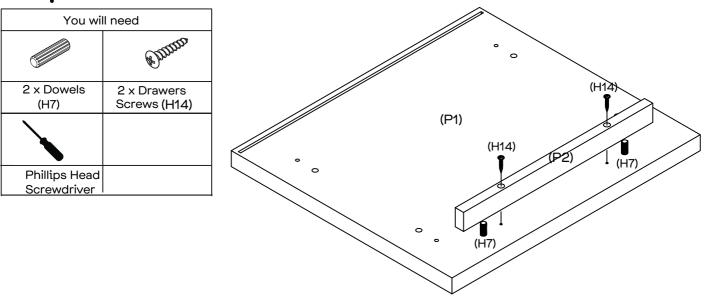


Attach Support Panel (P2) to the Top Panel (P1) with 2×1 Dowels (H7) and 2×1 Drawer Screws (H14), by tightening with the Phillips Head Screwdriver.

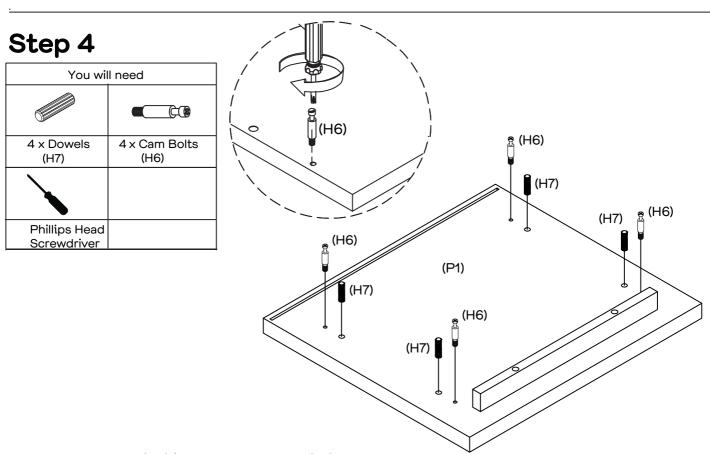

Insert 4 x Dowels (H7) into the Top Panel (P1).

Insert 4 x Cam Bolts (H6) into the Top Panel (P1), by tightening with a Phillips Head Screwdriver.

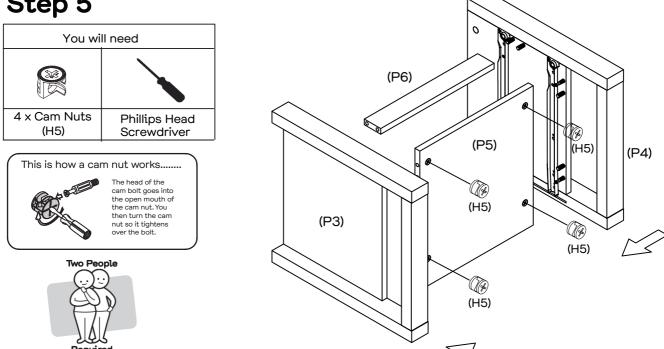

Insert 4 x Cam Nuts (H5) into the Base Panel (P5).


Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts.

Attach the Base Panel (P5) and Support Panel (P6) to the Left Side Panel (P3) by aligning the Dowels and Cam Bolts to the holes.

Tighten the Cam Nuts (H5) with the Phillips Head Screwdriver in the Left Side Panel (P3) to lock into position.

Repeat process to attach the Base Panel (P5) and Support Panel (P6) to the Right Side Panel (P4).


Step 6

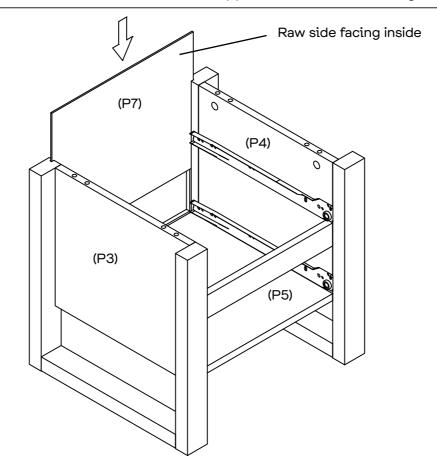


 Slot the Back Panel (P7) into the grooves of panels (P3, P4 & P5) as shown.







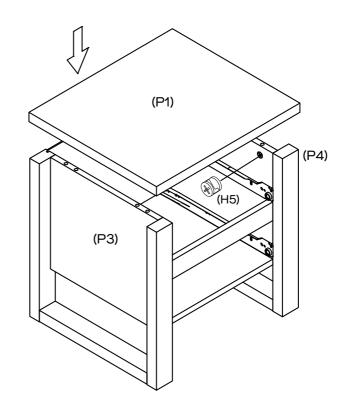

Insert 4 x Cam Nuts into Left Side Panel (P3) and Right Side Panel (P4).


Rotate the Cam Nuts so the arrows point towards the incoming cam bolts.


Attach the Top Panel (P1) to the Left Side Panel (P3) and Right Side Panel (P4) by aligning the Dowels (H7) and Cam Bolts (H6) to the holes as shown.

Ensure that the Back Panel (P7) is slotted into the groove of the Top Panel (P1) as well.

Tighten the Cam Nuts (H5) with the Phillips Head Screwdriver in the Left Side Panel (P3) and Right Side Panel (P4) to lock into position.


Step 8

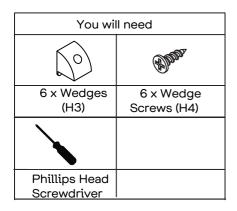

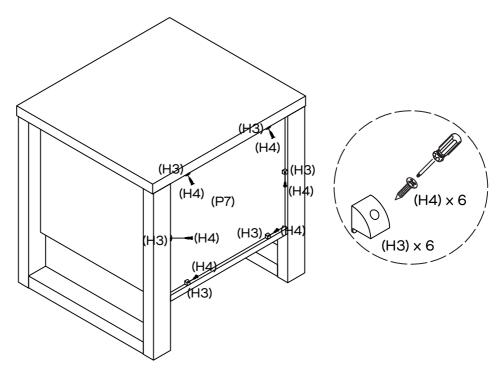


Secure Back Panel (P7) in place with 6 x Wedges (H3) using 6 x Wedge Screws (H16) by tightening with the Phillips Head Screwdriver.



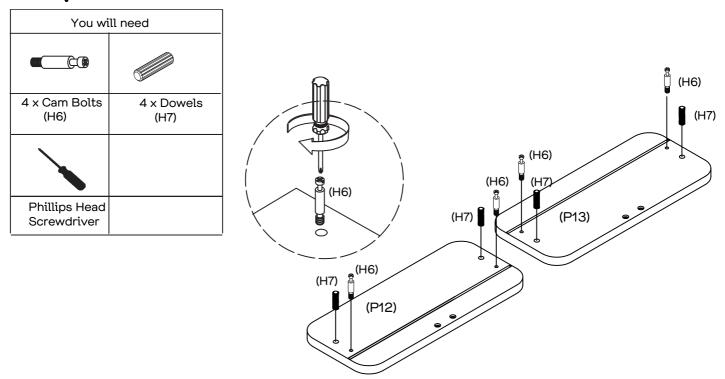


Insert 4×100 Inser

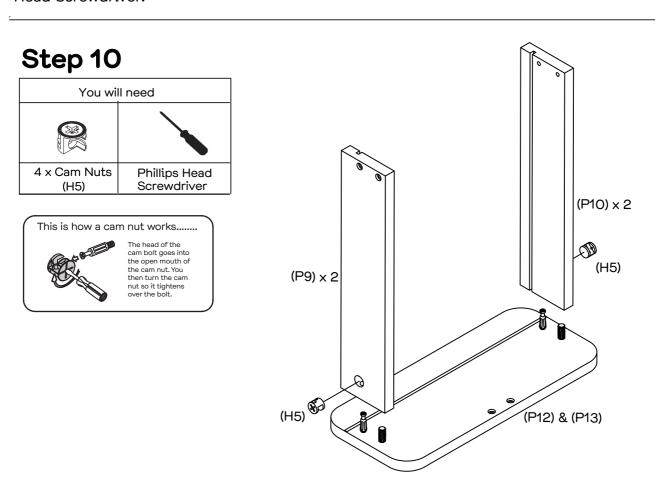


Insert 4 x Cam Nuts into the Drawer Side Panels (P9 & P10). Rotate the Cam Nuts so the arrows point towards the incoming cam bolts. Attach the Drawer Front Panels (P12 & P13) to the Drawer Side Panels (P9 & P10), by tightening Cam Nuts with the Phillips Head Screwdriver.




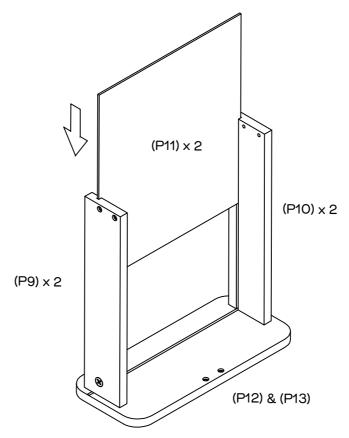

Slot in the Drawer Base Panel (P11) into the grooves of panels (P9, P10, P12 & P13) as shown.

 Step 12




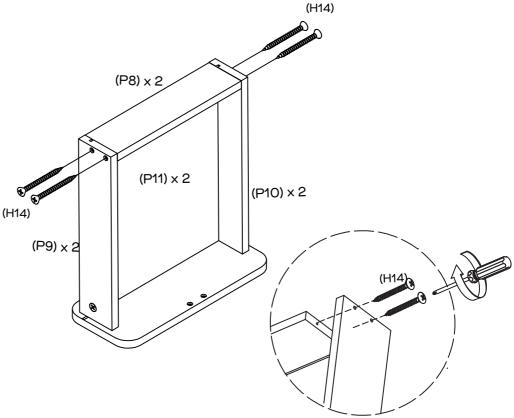


Attach the Drawer Back Panels (P8) to the Drawer Side Panels (P9 & P10) with 8 x Drawer Screws (H14), by tightening with a Phillips Head Screwdriver. Before securing, ensure the Drawer Base Panel (P11) lines up with the grooves the whole way around the drawer.





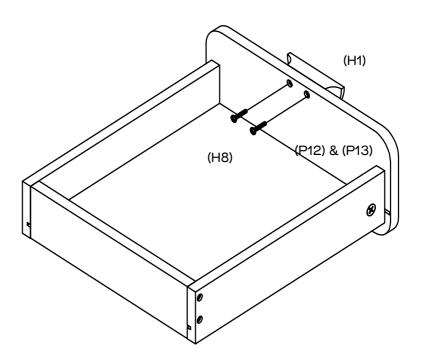


Attach the 2 x Handles to the Drawer Fronts (P12 & P13) with 2 x Handle Screws (H8), by tightening with a Phillips Head Screwdriver.

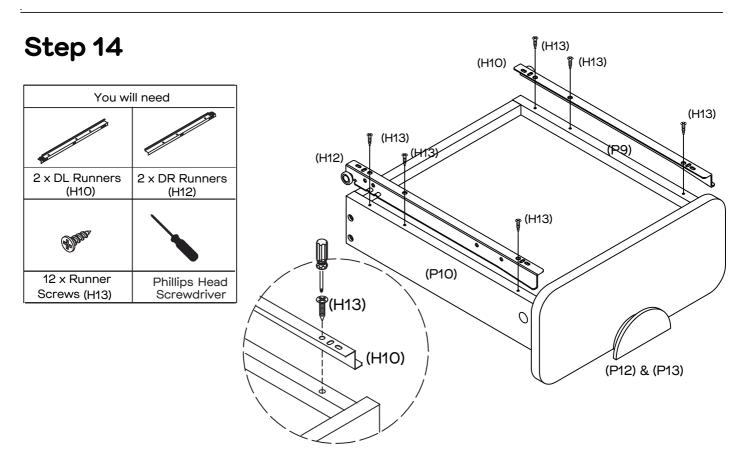

Attach 1 x DL Runner (H10) to the bottom of Drawer Side Panel L (P9) and 1 x DR Runner (H12) to the bottom of Drawer Side Panel R (P10) with 6 x Runner Screws (H5) by tightening with the Phillips Head Screwdriver. Repeat process for the remaining drawer.

Page 12

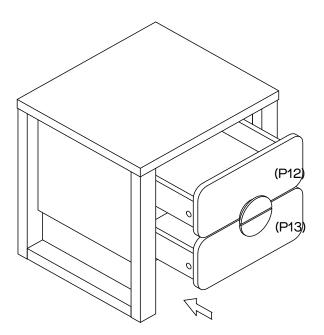



Insert the assembled drawers into the corresponding compartments as shown. Ensure the drawers slide easily along the rails.

Step 16

You will need	
0	
1 x Washer (H15)	
Screw and Wall Plug are not provided. Please use appropriate fixtures for your wall.	

Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

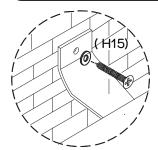

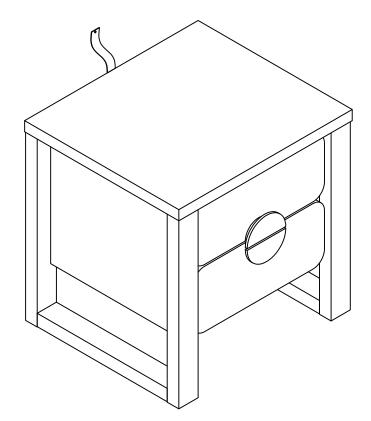

Move the unit to the final position, and attach the safety strap to the wall securely. Make sure it is firmly attached and snug fit.

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

