


Version 1.0

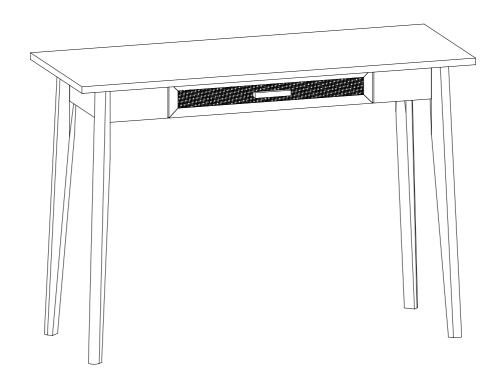





Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

RECOMMENDED WEIGHT CAPACITY: 60kgs on top

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

 Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

 Securing method:
Screw inserted directly into stud.





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Rattan

Rattan is a natural material that will respond to humidity in the environment. Low humidity may cause the rattan to shrink. High humidity may cause the rattan to absorb moisture and expand, causing the weaving to look loose and wavy.

This is a natural phenomenon and not a defect.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture

Assembly Checklist



Read through the instructions carefully before you begin.

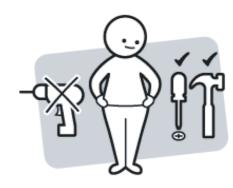

Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product




Other tools you need Phillips Head Screwdriver

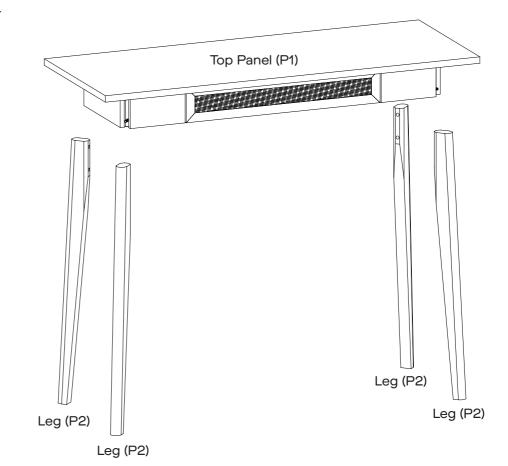



Parts list 1 x Top Panel (P1) 4 x Legs (P2)

Hardware Pack

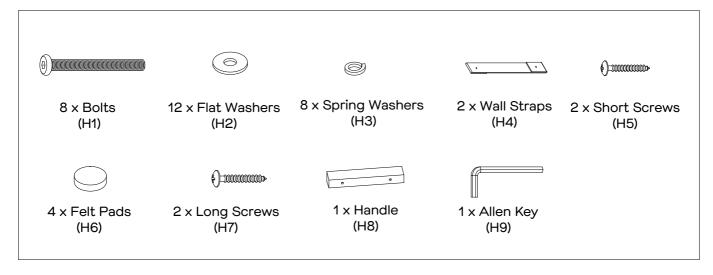


Step 1

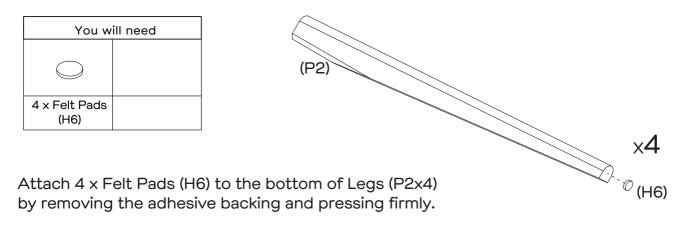

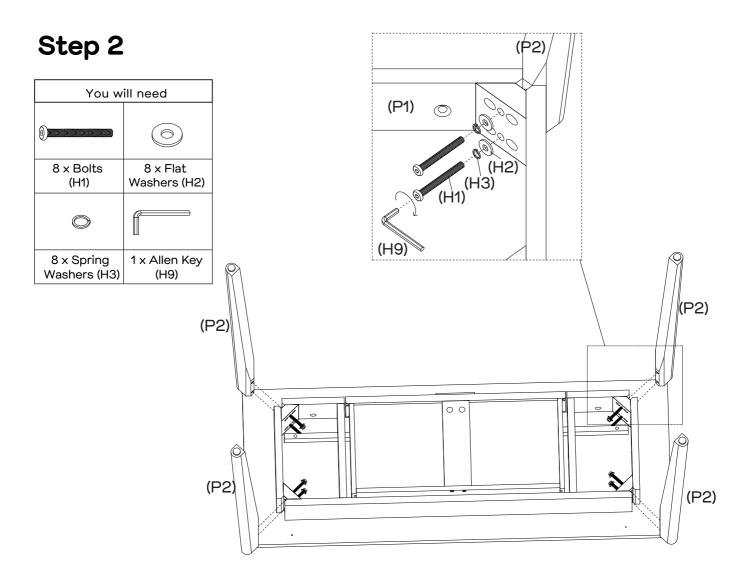


Attach Legs (P2x4) to Top Panel (P1) with $8 \times Bolts$ (H1), $8 \times Spring$ Washers (H3) and $8 \times Flat$ Washers (H2) as shown by tightening with Allen Key (H9).

Step 3

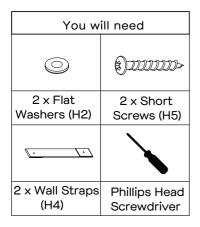



We strongly recommend that this product is permanently fixed to the wall or other suitable surface.

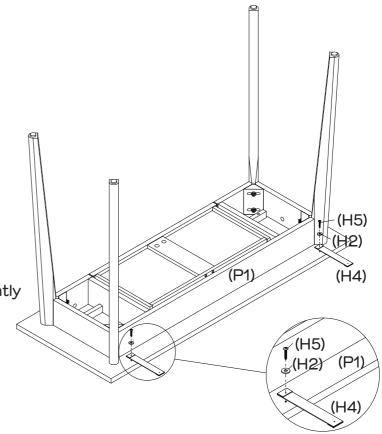

Attach 2 x Wall Straps (H4) to Top Panel (P1) with 2 x Short Screws (H5) and 2 x Flat Washers (H2) as shown by tightening with the Phillips Head Screwdriver.

Step 4

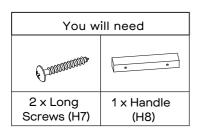


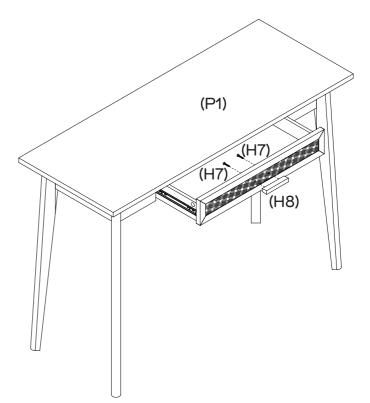

Gently stand the desk upright.

Attach Handle (H8) to drawer front on Top Panel (P1) as shown with 2 x Long Screws (H7) by tightening with the Phillips Head Screwdriver.

Step 5

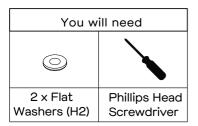

Seek advice from a qualified trades person on how to attach this wall strap to your specific wall.

(H2) (H4) Screw

(H4) Screw

Our wall.

e final position.

Screw and wall plug are not included. Please use appropriate fixtures for your wall.

With assistance, move the desk to the final position.

Attach the wall straps to the wall.

Make sure they are firmly attached and secure.



Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.

