


Version 1.0



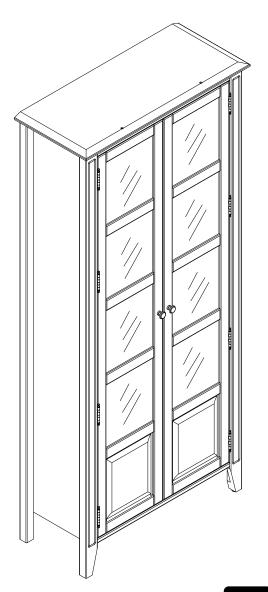

Torkay

Display Cabinet 2 Door White Walnut

fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

NOTE: WEIGHT CAPACITY 20KGS/SHELF.

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide



For plasterboard (without available wood stud)

 Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method:
Screw inserted directly into





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Assembly checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.





before you begin assembly.

Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk bed should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



Wha **you n**eed

to assemble the product




Other Tools You Need Phillips Head Screwdriver Hammer

Part List Carton 1:

- 1 x Top Panel (P1);
- 1 x Front Upper Rail (P4);
- 1 x Back Rail (P5);
- 2 x Adjustable Shelves (P6);
- 2 x Shelves (P7);
- 1 x Bottom Shelf (P8);

Carton 2:

- 1 x Left Side (P2);
- 1 x Right Side (P3);
- 1 x Back Panels (P9);
- 1 x Left Door (P10):
- 1 x Right Door (P11);

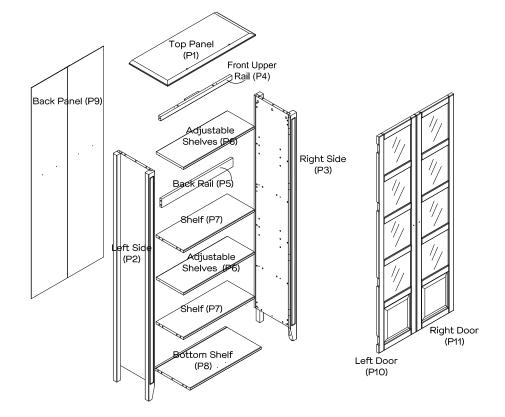

Hardware Pack











2 x Large











24 x Cam Bolts 24 x Cam Nuts



20x Dowels

Screws (H4)

2 x Back Panel

2 x Back Panel 2x Handle Support Support(H5) Screws (H6)

2 x Handles Screws (H8) (H7)



8 x Hinges

(H10)



Supports

(H11)





Screws

(H12)

2 x Door Magnets (H13)



4 x Magnet 4 x Washer Screws Screws (H14) (H15)



4 x Washers (H16)



2 x Medium 2 x Wall Screws Straps (H17) (H18)




4 x Washers (H19)

Please make sure you have all these parts before you start.







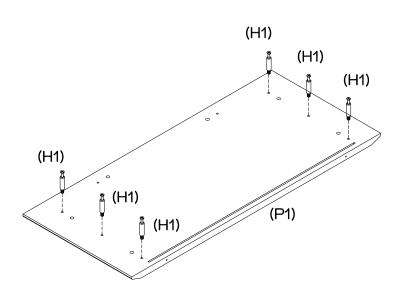


Attach 6 x Cam Bolts to Top Panel (P1) as shown by tightening with the Phillips Head Screwdriver.

Step 2

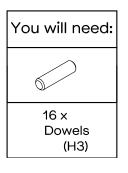

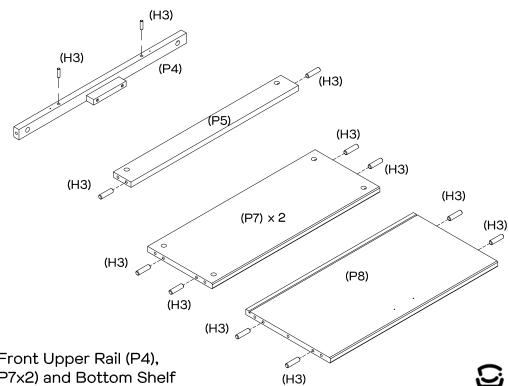


Insert 16 x Dowels into Front Upper Rail (P4), Back Rail (P5), Shelves (P7x2) and Bottom Shelf (P8) as shown.

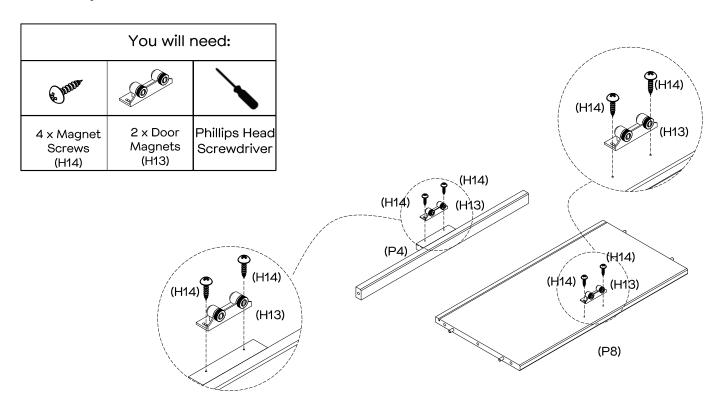


Attach Door Magnet (H13) to Upper Rail (P4) with $2 \times Magnet$ Screws (H14) by tightening with the Phillips Head Screwdriver. Attach the second Door Magnet (H13) to Bottom Shelf (P8) with the remaining $2 \times Magnet$ Screws (H14) by tightening with the Phillips Head Screwdriver.

Step 4

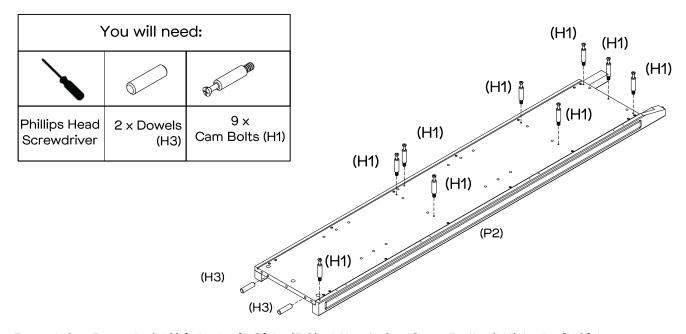


Insert 2 \times Dowels (H3) into Left Side (P2). Attach 9 \times Cam Bolts (H1) to Left Side (P2) as shown by tightening with the Phillips Head Screwdriver.



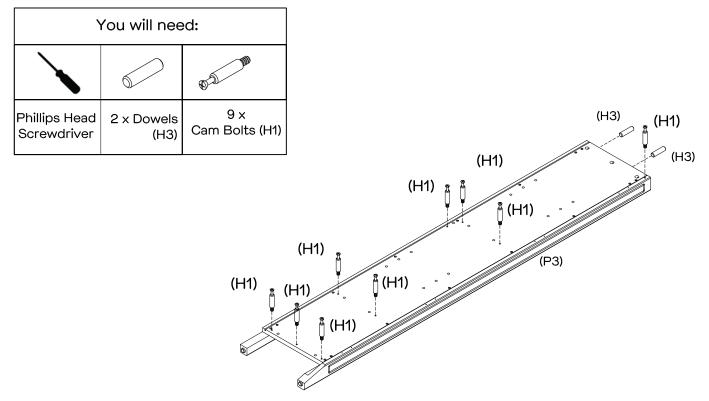

Insert 2 x Dowels (H3) into Right Side (P3). Attach 9 x Cam Bolts (H1) to Right Side (P3) as shown by tightening with the Phillips Head Screwdriver.




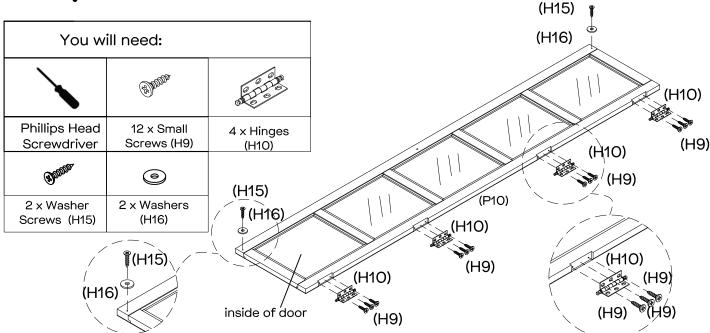


Attach 4 x Hinges (H10) to Left Door (P10) as shown with 12 x Small Screws (H9) by tightening with the Phillips Head Screwdriver. Secure 2 x Washers (H16) with 2 x Washer Screws (H15) to the corners of Left Door (P10) by tightening with the Phillips Head Screwdriver.

Fantastic Furniture

Page 7

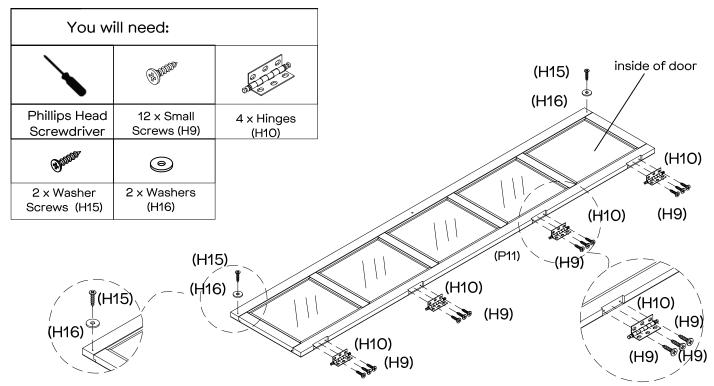



Attach 4 x Hinges (H10) to Right Door (P11) as shown with 12 x Small Screws (H9) by tightening with the Phillips Head Screwdriver. Secure 2 x Washers (H16) with 2 x Washer Screws (H15) to the corners of Right Door (P11) by tightening with the Phillips Head Screwdriver.

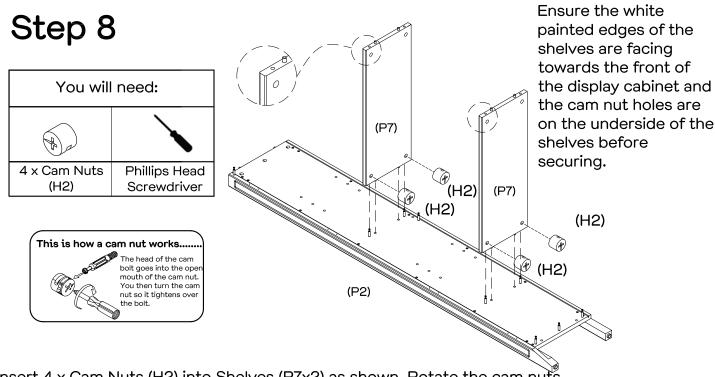

 
Insert 4 x Cam Nuts (H2) into Shelves (P7x2) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Shelves (P7x2) to Left Side (P2) by tightening the cam nuts with the Phillips Head Screwdriver.



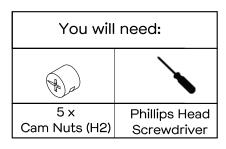





Ensure the groove on the bottom panel lines up with the grooves on the back of the display cabinet before securing.

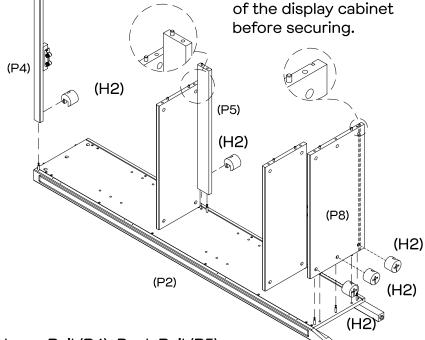


Insert $5 \times \text{Cam}$ Nuts (H2) into Front Upper Rail (P4), Back Rail (P5) and Bottom Shelf (P8) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Front Upper Rail (P4), Back Rail (P5) and Bottom Shelf (P8) to Left Side (P2) by tightening the cam nuts with the Phillips Head Screwdriver.

 Step 10

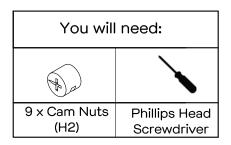



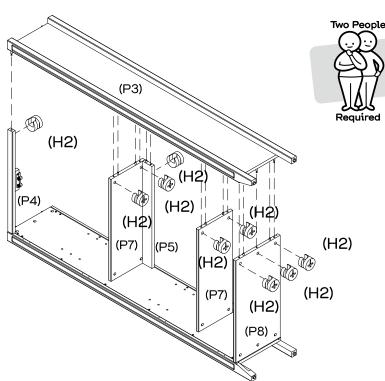


Insert 9 x Cam Nuts (H2) into Front Upper Rail (P4), Back Rail (P5), Shelves (P7x2) and Bottom Shelf (P8) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts and attach the Right Side (P3) by tightening all the cam nuts with the Phillips Head Screwdriver.

Fantastic Furniture

fantasticfurniture.com.au


Page 9




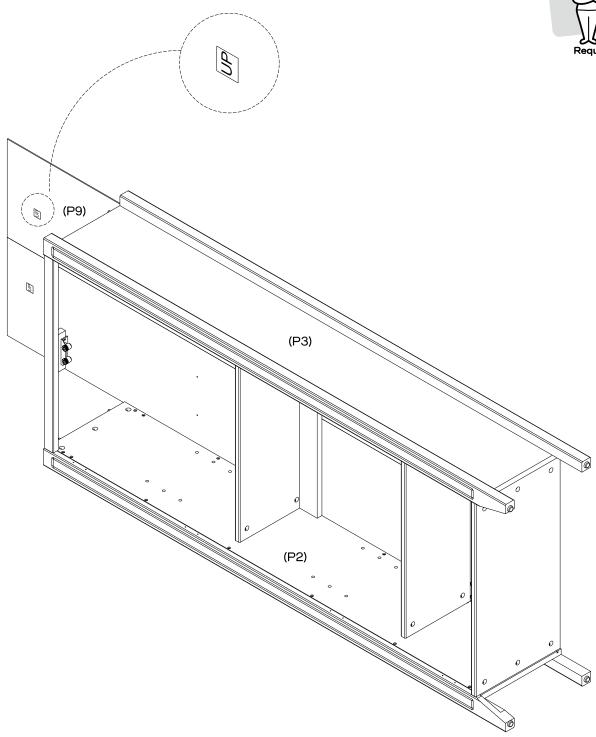

Insert the Back Panel (P9) into the grooves of Left & Right Sides (P2&P3) and Bottom Shelf (P8).



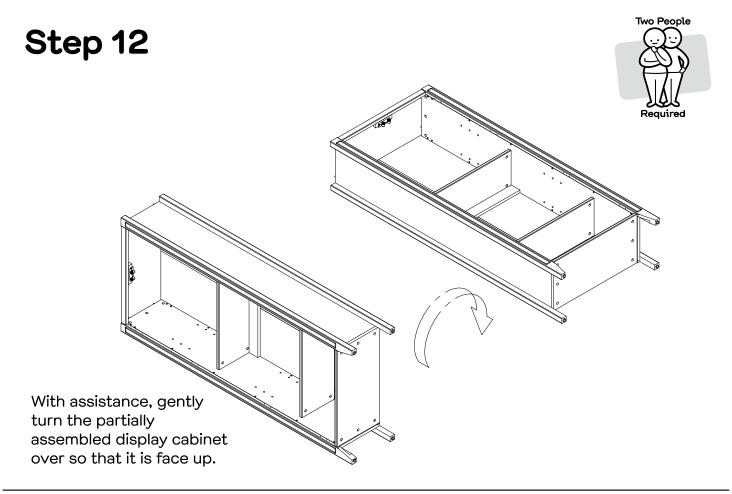


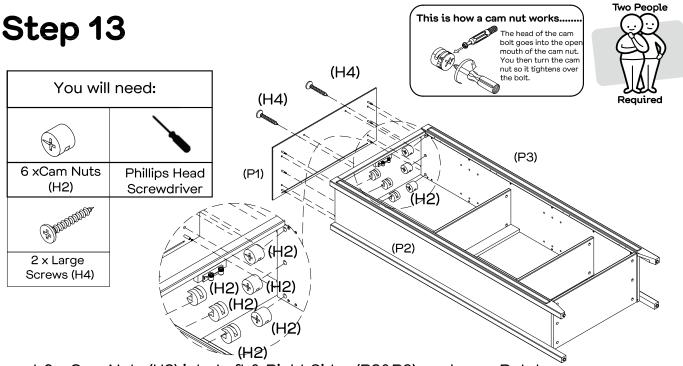

Insert 6 x Cam Nuts (H2) into Left & Right Sides (P2&P3) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts and attach the Top Panel (P1) by tightening all the cam nuts with the Phillips Head Screwdriver. Secure the Top Panel (P1) to Front Upper Rail (P4) with 2 x Large Screws (H4) by tightening with the Phillips Head Screwdriver. fantasticfurniture.com.au







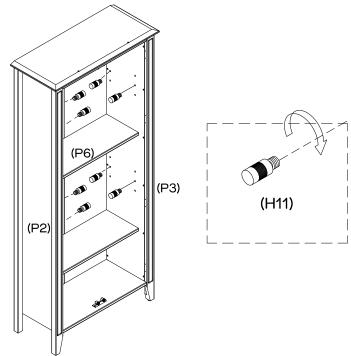


Secure 8 x Shelf Supports to Left & Right Sides (P2&P3) at your desired height by screwing in clockwise.

 Step 15

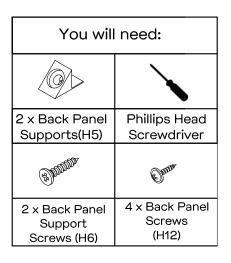

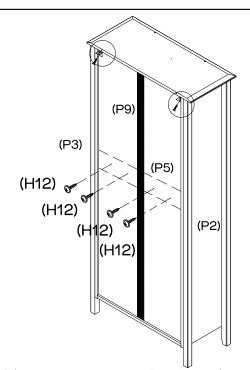




Insert 2 x Back Panel Supports (H5) into the corners of Left & Right Sides (P2&P3) and Top Panel (P1), secure with 2 x Back Panel Support Screws (H6) by tightening with the Phillips Head Screwdriver. Use the predrilled holes on the Back Panel (P9) as a guide to secure $4 \times Back$ Panel Screws (H12) to the back of the fixed shelf by tightening with the Phillips Head Screwdriver.








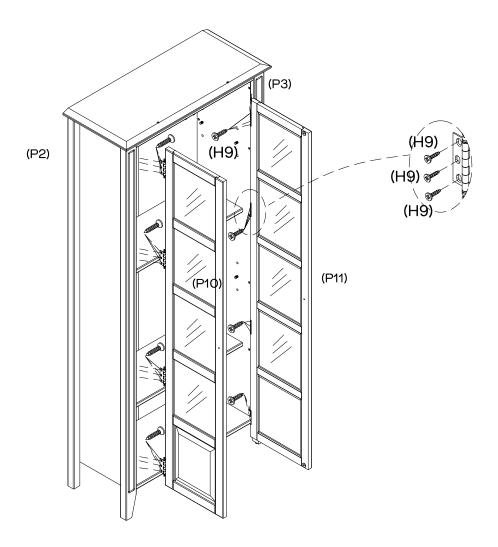

With assistance, carefully align hinges on Right Door (P11) to Right Side (P3) and secure with 12 x Small Screws (H9) by tightening with the Phillips Head Screwdriver. Repeat for the Left Door (P10) to secure to Left Side (P2).





You will need:	
	9
2x Door Handle Screws (H7)	2 x Door Handles (H8)

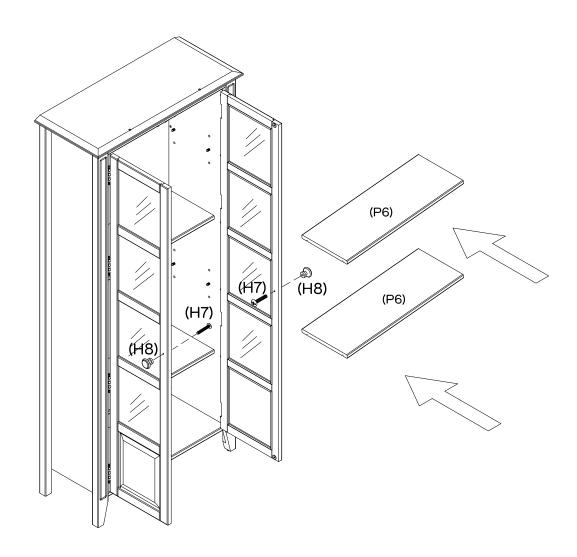

Secure 2 x Door Handles (H8) to Left & Right Doors (P10&P11) with 2 x Door Handle Screws (H7) by tightening with the Phillips Head Screwdriver. Place Adjustable Shelves (P6x2) in the display cabinet and rest on the shelf supports. Ensure the shelves are secured firmly.




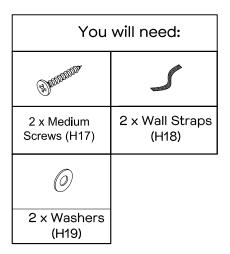

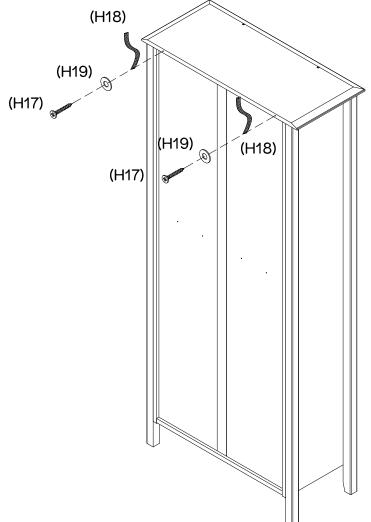


Attach 2 \times Wall Straps (H8) to the back of Top Panel (P1) as shown with 2 \times Washers (H19) and 2 \times Medium Screws (H17) by tightening with the Phillips Head Screwdriver.



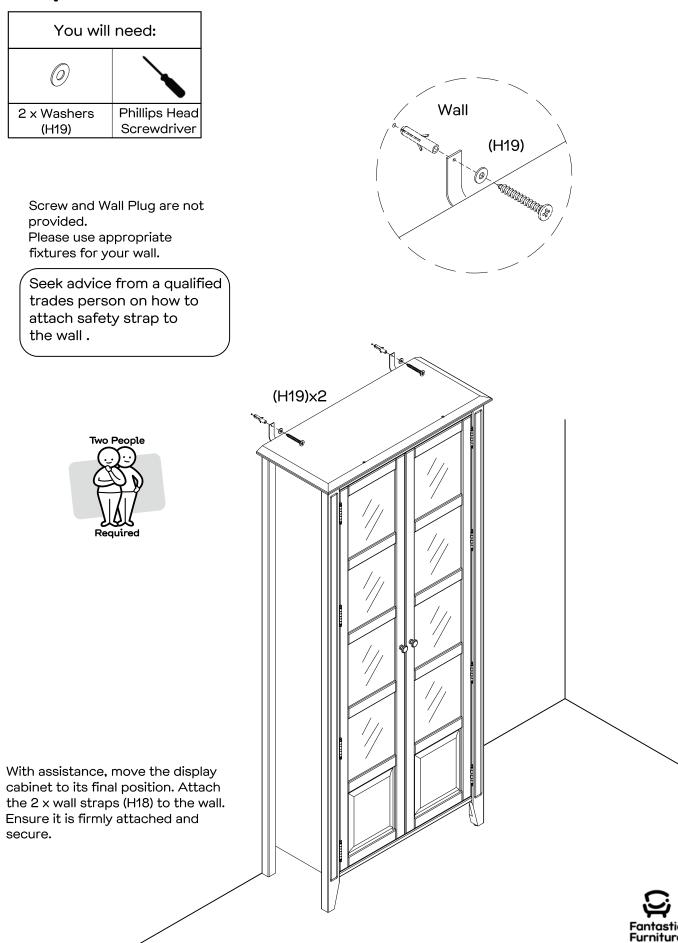

fantasticfurniture.com.au

Page 16

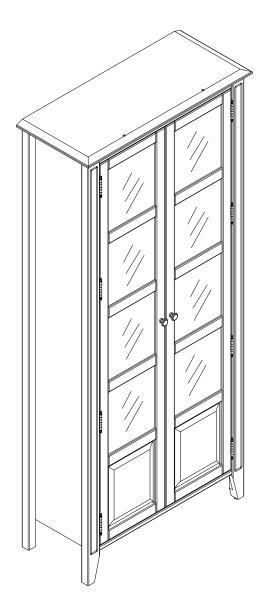

Job Complete!

In the interest of our environment please dispose of all packing thoughtfully.