

Version 1.0



Required

Sonoma Clothes Rack Large

fantasticfurniture.com.au

# Secure it!

Reduce the risk of furniture tip-over accidents





# WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

#### **WEIGHT LIMIT: 20 KGS PER SHELF**

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
   Check anchors regularly.
- Avoid putting a TV on this product.

#### Wall attachment guide

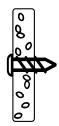


For plasterboard (without available wood stud)

 **Securing method:**Self drilling plasterboard anchor.

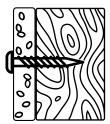

For plasterboard (with available wood stud)

 Securing method:
Screw inserted directly into stud.

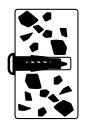



For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



# Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



# Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

## **Useful information**

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

## What You Need

to assemble the product






Other tools you need Phillips Head Screwdriver


#### Parts list


#### **Box 1:**

Large Top Panel (P1)
2 x Large Shelf Panels (P2)
Small Top Panel (P3)
5 x Small Shelf Panels (P4)
Top Left Frame (P5)
Lower Left Frame (P6)
4 x Back Supports (P7)
2 x Hanging Rails (P8)
Top Right Frame (P9)
Lower Right Frame (P10)
Top Middle Frame (P11)
Lower Middle Frame (P12)

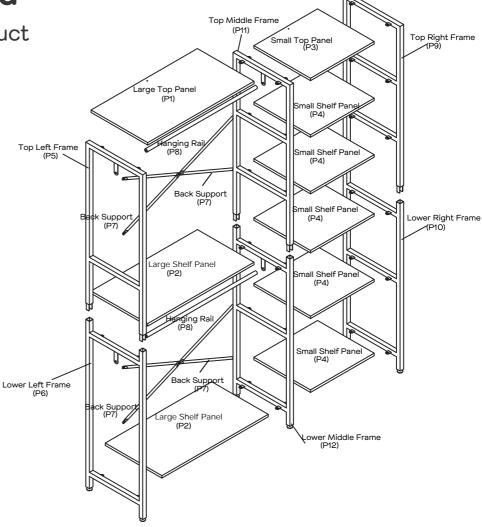

#### Hardware Pack:

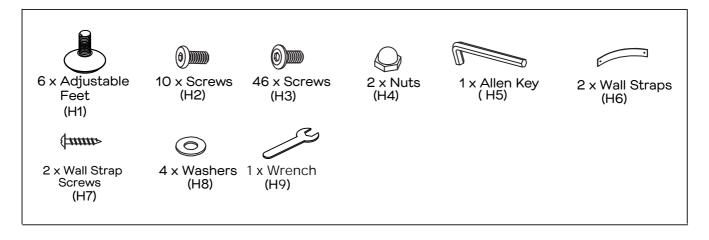


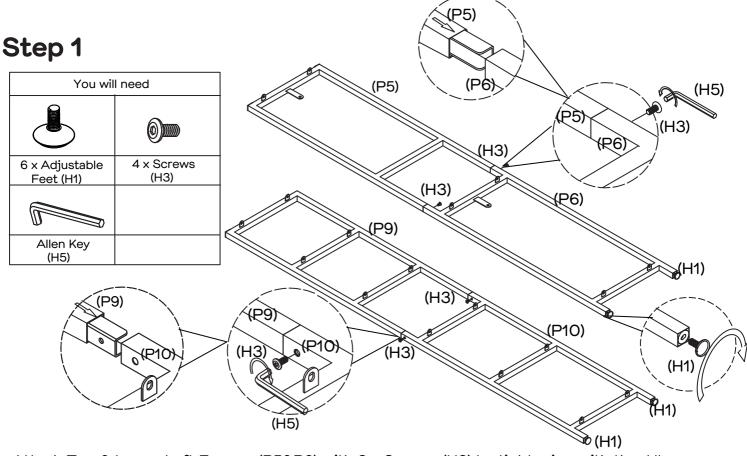

Attach Top & Lower Left Frames (P5&P6) with 2 x Screws (H3) by tightening with the Allen Key (H5).

Repeat steps for Top & Lower Right Frames (P9&P10).

Secure 4 x Adjustable Feet (H1) to the bottom of Lower Left & Right Frames (P6&P10) as shown.

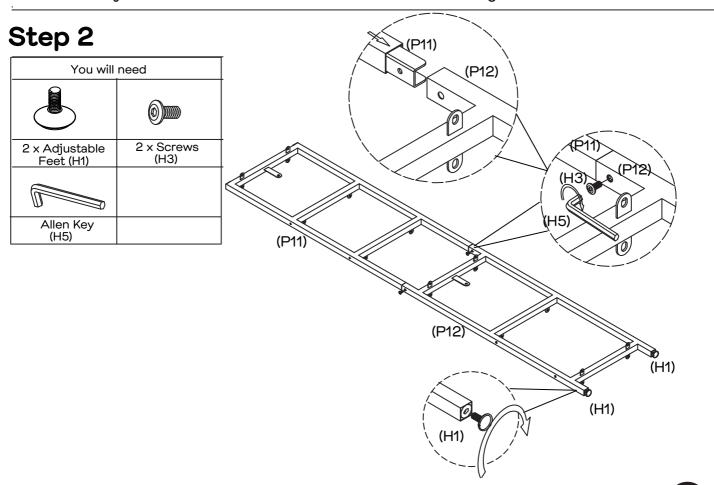


Attach Top & Lower Middle Frames (P11&P12) with  $2 \times 1$  Screws (H3) by tightening with the Allen Key (H5). Secure  $2 \times 1$  Adjustable Feet (H1) to the bottom of Lower Middle Frame (P12) as shown.



#### Step 3 Ensure the top panel is rotated so the pre-drilled hole is facing You will need on the top of the unit. (P2) (H3) 12 x Screws Allen Key (H3) (H5)(H3)(H3) (H3)(P2) (H3) (H3) (H3) (P2) (H3) **∜**H3)

Attach Top & Lower Left Frames (P5&P6) and Top & Lower Middle Frames (P11&P12) to Large Top Panel (P1) and Large Shelf Panels (P2x2) with 12 x Screws (H3) as shown by tightening with the Allen Key (H5).


## Step 4

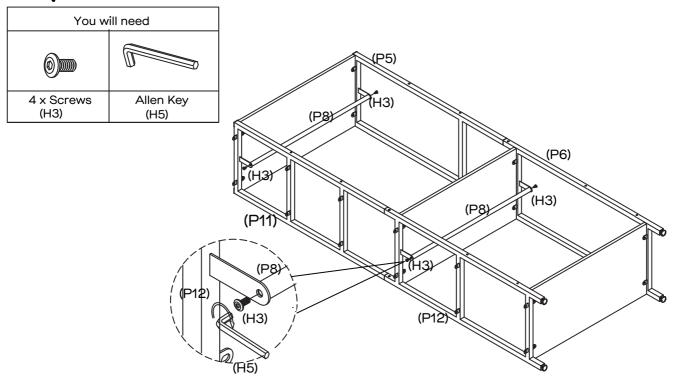

Secure Hanging Rails (P8x2) to Top & Lower Left Frames (P5&P6) and Top & Lower Middle Frames (P11&P12) with 4 x Screws (H3) as shown by tightening with the Allen Key (H5).




## Step 5

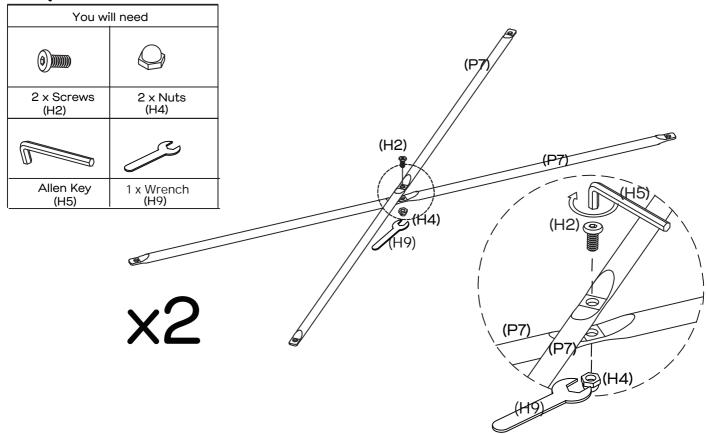


Secure Back Supports (P7x2) together as shown with 1 x Nut (H4) and 1 x Screw (H2) by tightening with the Allen Key (H5) and Wrench (H9).
Repeat steps for the second set of Back Supports (P7x2).

# Step 6

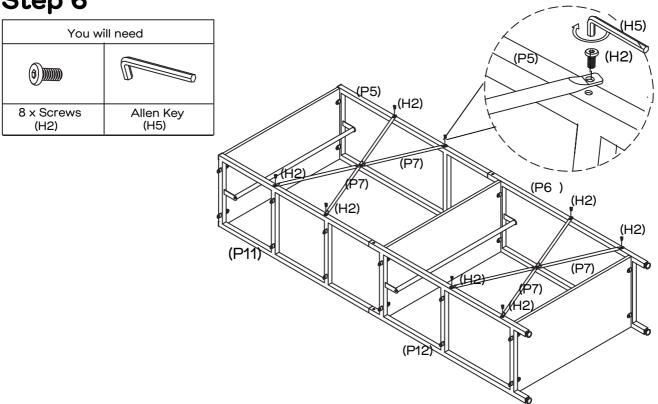



Attach Back Supports (P7x4) to Top & Lower Left Frames (P5&P6) and Top & Lower Middle Frames (P11&P12) as shown with 8 x Screws (H2) by tightening with the Allen Key (H5).

Fantastic Furniture Page 8

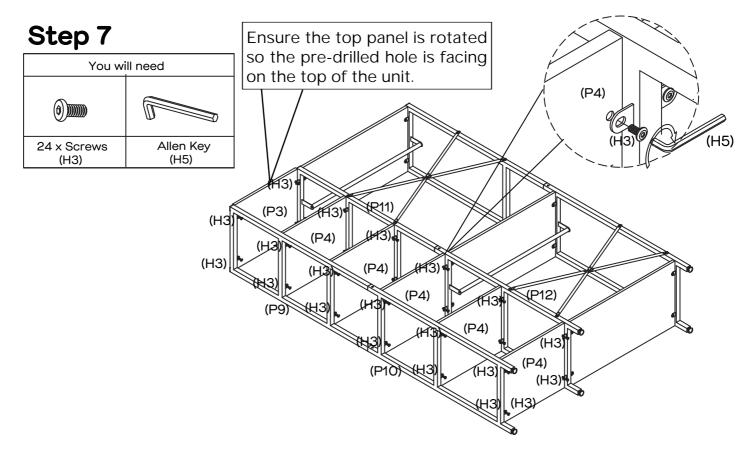

 Attach Small Top Panel (P3) and Small Shelf Panels (P4x5) to Top & Lower Middle Frames (P11&P12) and Top & Lower Right Frames (P9&P10) with 24 x Screws (H3) as shown by tightening with the Allen Key (H5).

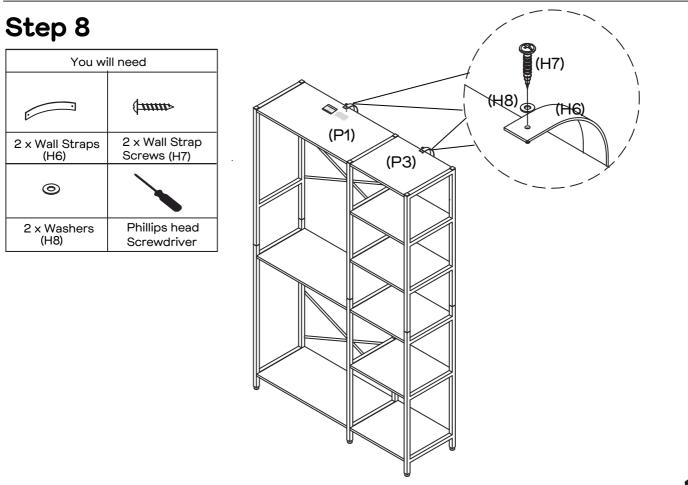

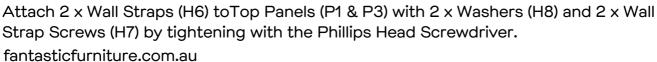



## Step 9


You will need	
0	
2 x Washers (H8)	

Screws and wall plugs are not provided please use appropriate fixtures for your wall.

Move the unit into it's final position and then secure the Safety Strap to the wall.

Ensure it is firmly attached. Screw and wall plug are not provided. Please use appropriate fixtures for your wall.

\*Seek advice from a qualified tradesperson on how to attach this safety strap to your specific wall.

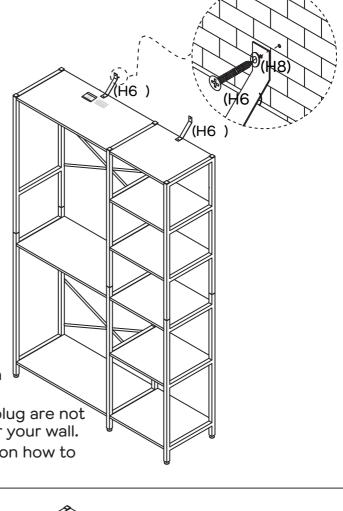

# Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

