


Version 1.3



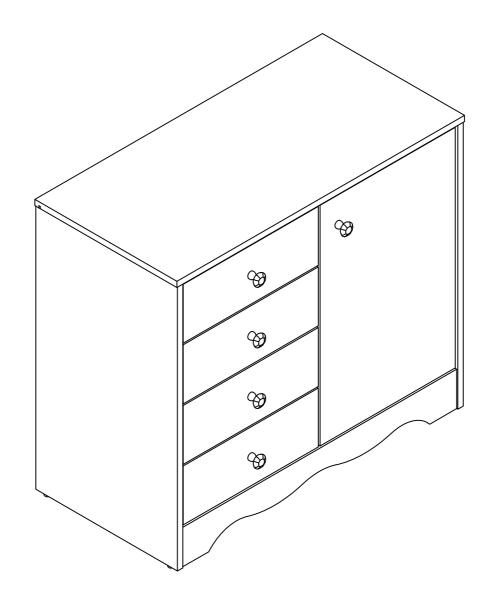

Amirah

Dresser

fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.



WARNING: WEIGHT LIMIT ON TOP IS 80kg.
WARNING: WEIGHT PLACED IN DRAWER NOT TO
EXCEED 10KG.

WARNING: WEIGHT ON INTERNAL SHELF NOT TO EXCEED 20KG.

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.



- · Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- · Avoid putting a TV on this product.

Wall attachment guide



For plasterboard (without available wood stud)

Securing method: Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.



Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!


@fantasticfurniture




Assembly checklist




Read through the instructions carefully before you begin.

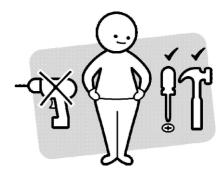

Make sure you have all the required tools. Never use power tools unless instructed.

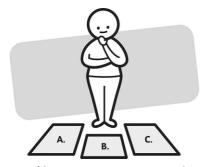

Identify and lay out all of the components before you begin assembly.

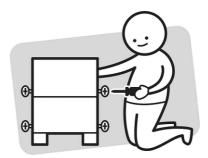

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most commom mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasterners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



What you need

to assemble the product







Other tools you need

Phillips head screwdriver, soft headed mallet.

Parts list

Top Panel (P1);

Left Panel (P2);

Right Panel (P3);

Center Panel (P4);

Shelf Panel (P5);

Door (P6);

Bottom Panel (P7);


Back Plinth Panel (P8);

Front Plinth Panel (P9);


- 4 x Drawer Back Panel (P10);
- 4 x Drawer Left Panel (P11);
- 4 x Drawer Right Panel (P12);
- 4 x Drawer Front Panel (P13);
- 4 x Drawer Bottom Panel (P14);

Right Back Panel (P15);


Left Back Panel (P16).

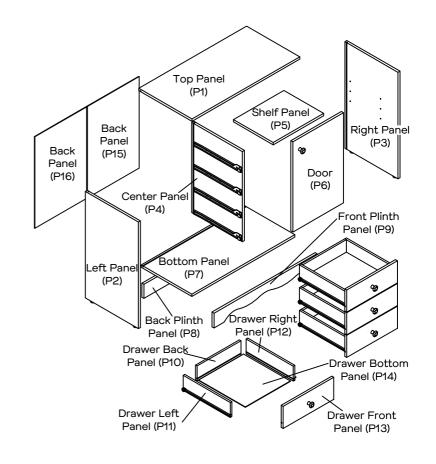

Hardware pack

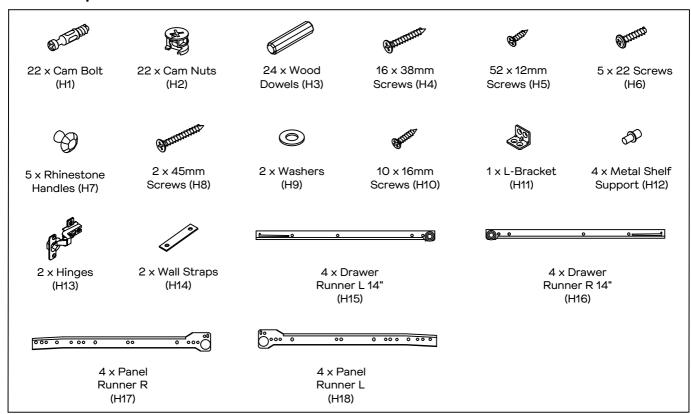



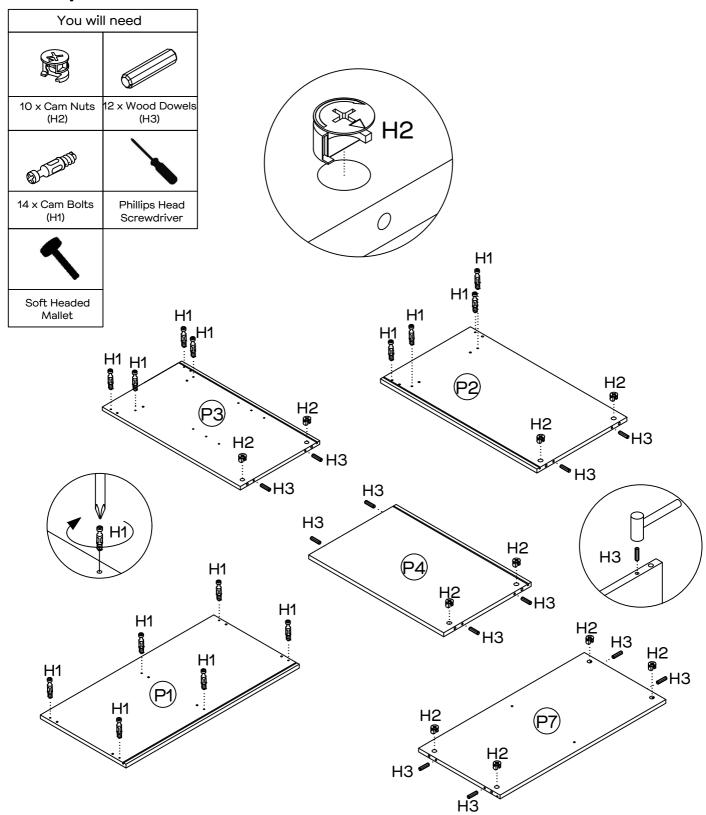


Prepare the frame:

Insert 10 x cam nuts (H2) into panels (P2), (P3), (P4) & (P7). Rotate the cam nuts so the arrows point towards the incoming bolt.

Insert 12 x dowels (H3) into panels (P2), (P3), (P4) & (P7) by hand or gently using a soft headed mallet.


Screw 14 \times cam bolts (H1) into panels (P1), (P2) & (P3) using a phillips head screwdriver.

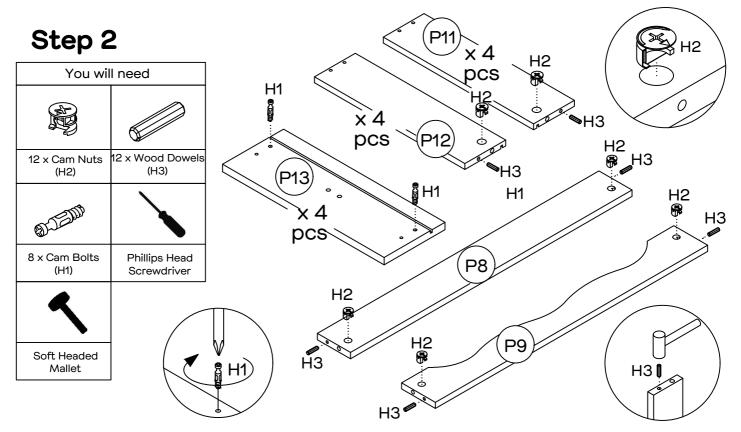

Insert 12 x cam nuts (H2) into panels (P8), (P9), (P11) & (P12). Rotate the cam nuts so the arrows point towards the incoming bolt.

Insert 12 x dowels (H3) into panels (P8), (P9), (P11) & (P2) by hand or gently using a soft head mallet.

Screw 8 x cam bolts (H1) into panels (P13) using a phillips head screwdriver.

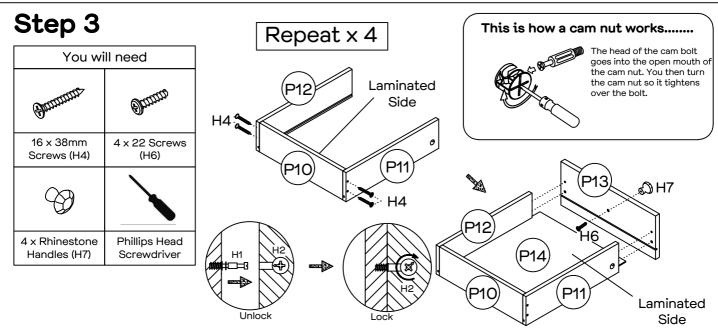

Begin assembling the drawers:

To attach panels (P11 & P12) to panel (P10), insert 4 x 38mm screws (H4) and tighten with a phillips head screwdriver.


Slide in the drawer bottom panel (P14) into the grooves of panels (P11, P12 & P10) with the laminated side facing up.

Attach the panel (P13) to panel (P11 & P12) and ensure the drawer bottom panel (P14) slides into the groove on panel (P13).

Turn the cam nuts on panels (P11 & P12) clockwise with a phillips head screwdriver to lock in position.

Attach the handle (H7) to panel (P13) with 1 \times 22mm screw (H6) using a phillips head screwdriver. Repeat this process for the remaining drawers.




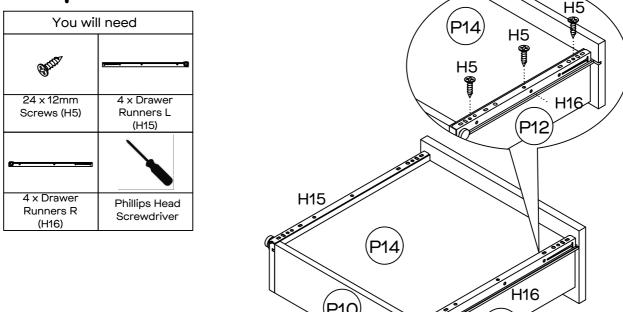

Attach the drawer runner L (H15) and the drawer runner R (H16) to the underside of the drawer with 6 x 12mm screws (H5) using a phillips head screwdriver. Repeat this process for the other 3 drawers.

Repeat x 4

P12

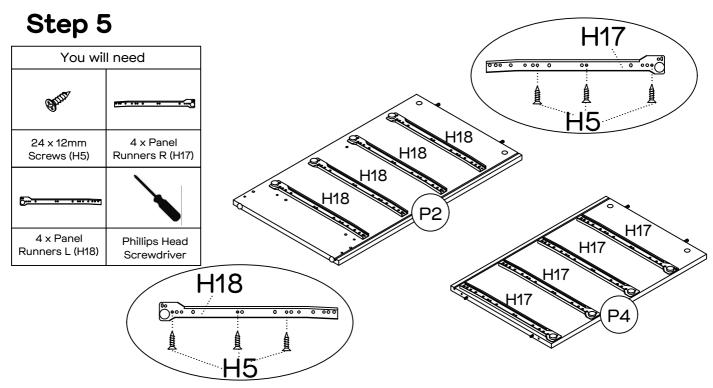

Attach 4 x panel runners R (H17) to the right side panel (P4) with 3 x 12mm screws (H5) using a phillips head screwdriver.

Attach 4 x panel runners L (H18) to the left side panel (P2) with 3 x 12mm screws (H5) using a phillips head screwdriver.






This is how a cam nut works......



The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

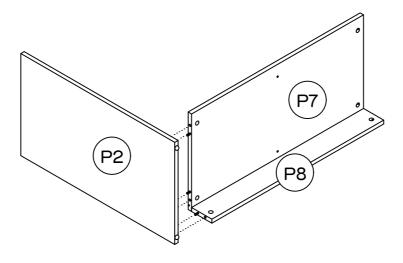


Attach panels (P7), (P8) to panel (P2) by aligning the dowels & cam bolts with the corresponding holes.

Turn the cam nut on panels (P7), (P8) clockwise motion with a phillips head screwdriver to lock in position.

Step 7



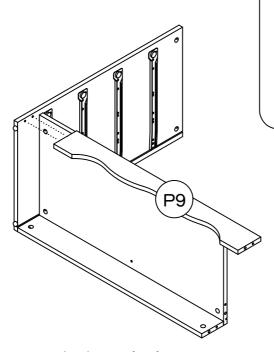

This is how a cam nut works......




The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

Attach panel (P9) to panel (P2) by aligning the dowels & cam bolts with the corresponding holes.


Turn the cam nut on panel (P9) clockwise motion with a phillips head screwdriver to lock in position.

Fantastic

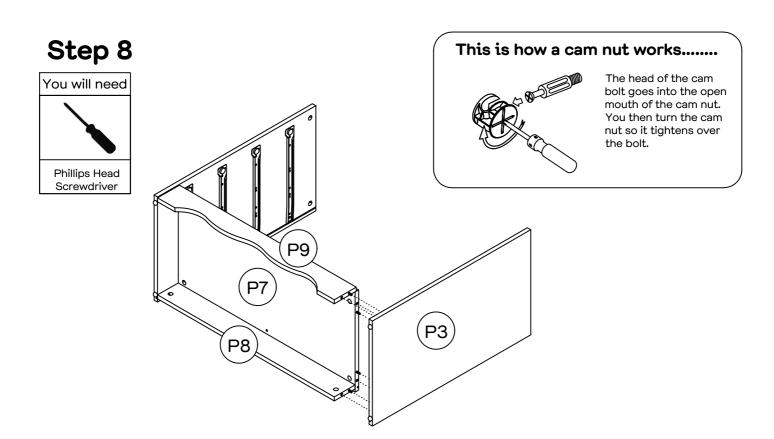


Attach panel (P3) to panels (P7), (P8) & (P9). Turn the cam nut on panels (P7), (P8) & (P9) clockwise motion with a phillips head screwdriver to lock in position.

Secure 1 x L-bracket to (P7) & (P9) with 4 x 12mm screws (H5) using a phillips

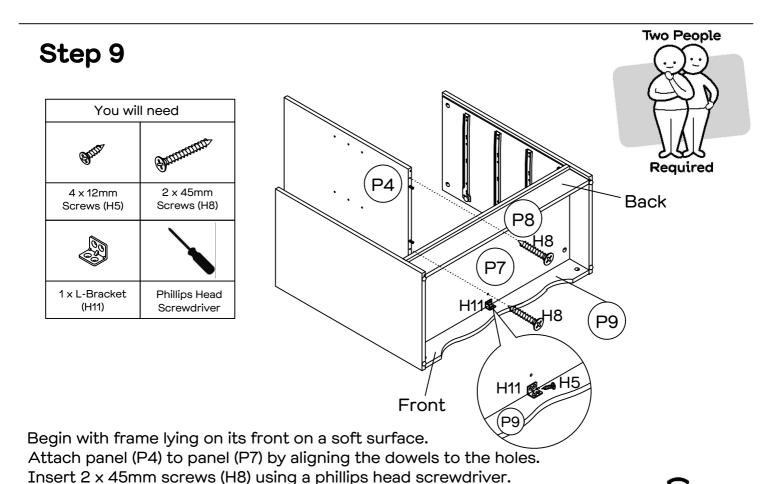

fantasticfmurniture.com.au

head screwdriver.

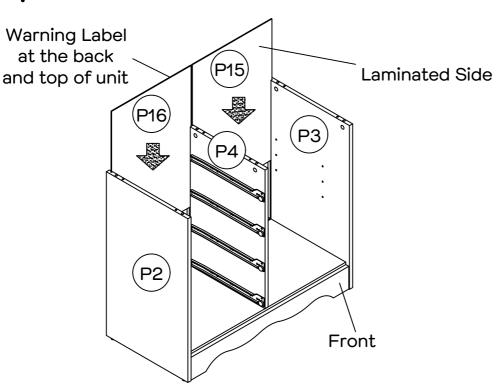




Slide panels (P15) & (P16) into the grooves in panels (P2), (P3) & (P4) with the laminated side facing the front for panel (P15).

Step 11



)

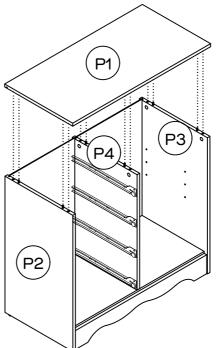



This is how a cam nut works......



The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.


Attach panel (P1) to panels (P2), (P3) & (P4) by aligning the dowels and cam bolts to the holes.


Ensure the back panels (P16) & (P15) slide in the groove of panel (P1). Turn the cam nuts on panels (P2), (P3) & (P4) clockwise with a phillips head screwdriver to lock in position.

fantasticfurniture.com.au




Step 12 You will need

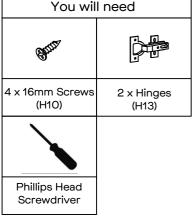

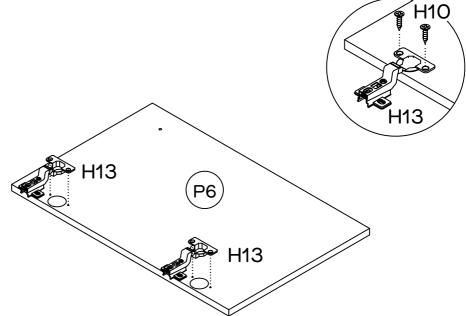

Attach 2 x hinges (H13) to door panel (P6) with 4×16 mm screws (H10) using a phillips head screwdriver.

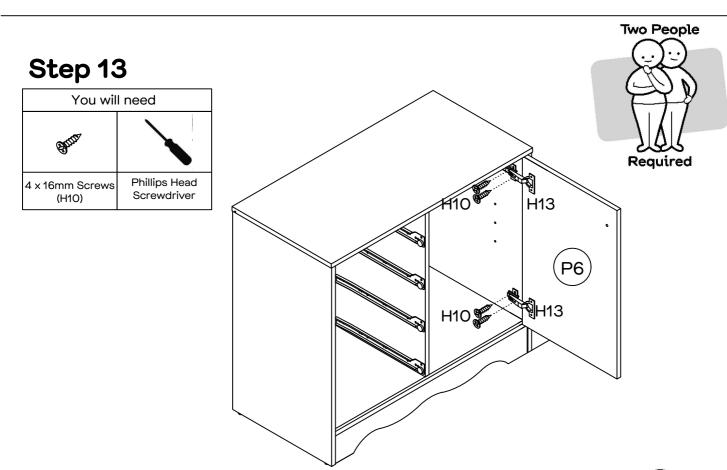


Attach the door (P6) to side panel (P3) by attaching the hinges to panel (P3) with 4×16 mm screws (H10) using a philips head screwdriver.

fantasticfurniture.com.au






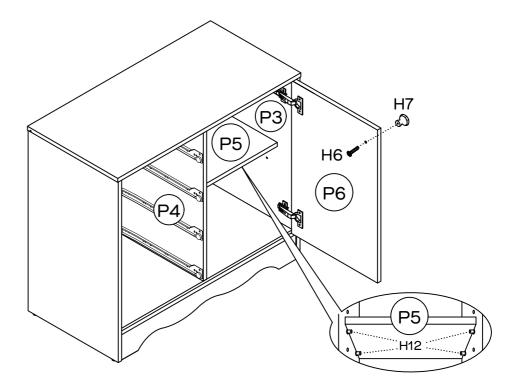

Attach the handle (H7) to panel (P6) with 1×22 mm screw (H6) using a phillips head screwdriver.

Insert 4 x shelf support (H12) into desired holes in panels (P3) & (P4). Place adjustable shelf (P5) onto shelf support.

Step 15

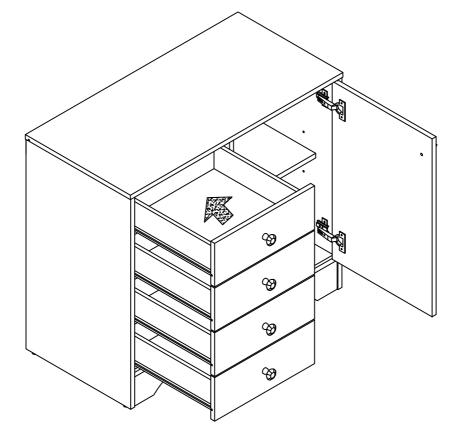


Put in the drawers one at a time, starting at the bottom.



TO ADJUST THE DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

Step 16a


Adjust the door move in or out a little.

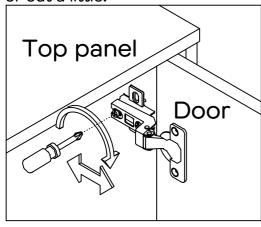

Loosen the screw indicated a little, adjust the hinge to right position, then tighten the screw.

Step 16b


Move Door In

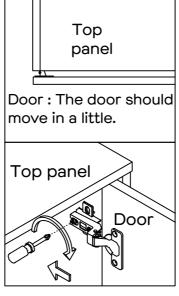

Push the hinge back a little.

Step 16c


Move Door Out

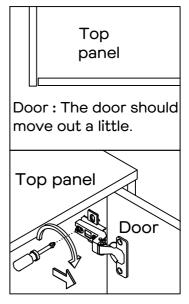

Push the hinge forward a little.

Step 16d


To adjust the gap between door and side.

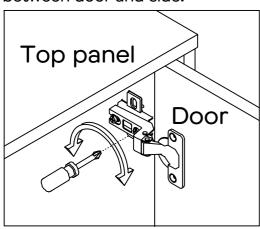

Loosen or tighten the screw indicated a little to adjust the gap between door and leg.

Step 16e


Move Door Right

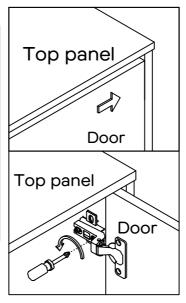


Turn the screw clockwise a little as shown to make the gap big.

Step 16f

Move Door Left

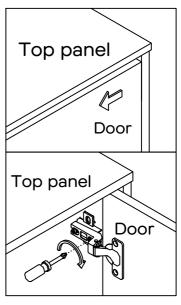

Turn the screw counterclockwise a little as shown to make the gap small.

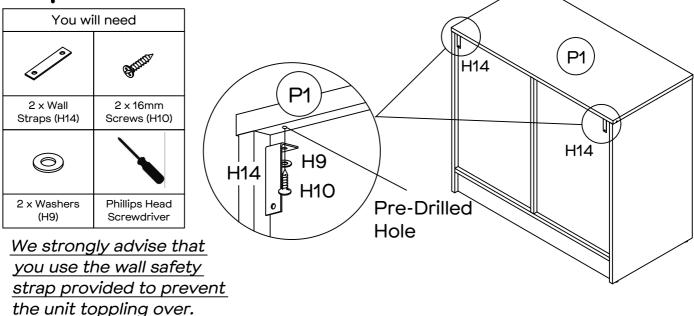


Attach wall fixing strap to panel (P1) with 2×16 mm screws (H10) and 2×4 washers (H9) using a phillips head screwdriver.

Move the chest to the final position.

Attach the safety strap to the wall. Make sure it is firmly attached and make sure it is a snug fit.

The screws and wall plug are not provided. Please use appropriate fixtures for your wall.

Seek advice from a qualified trades person on how to attach these wall straps to your specific wall.

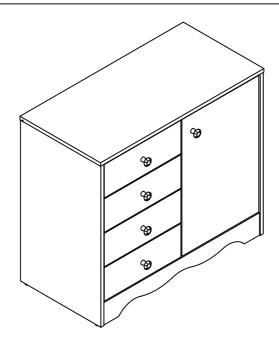

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.