


Version 1.0

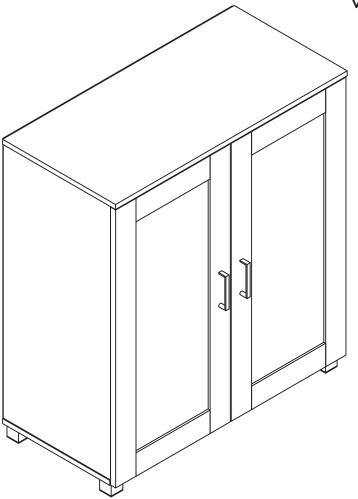





fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Weight Limit: 20kgs per shelf

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

 Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

 Securing method: Screw inserted directly into





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.




Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What You Need

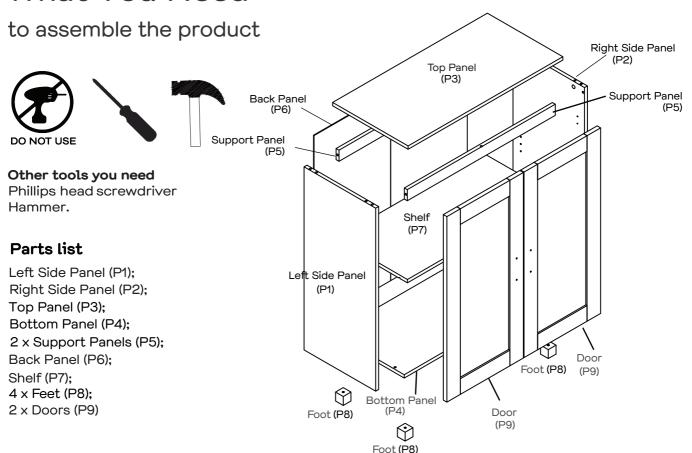


Hardware Pack:

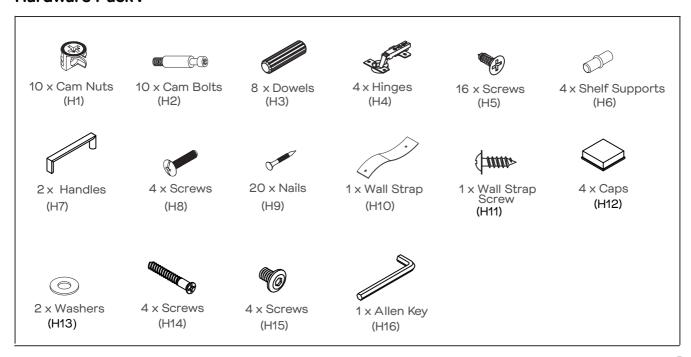


Step 1 (H5) You will need (H5) (H4) 8 x Screws 4 x Hinges (H4) (H5) (H8) 4 x Screws (H8) 2 x Handles **1**(H8) (H7) $(P9) \times 2$ Phillips head

Attach 2 x Hinges (H4) to Door (P9) as shown with 4 x Screws (H5) by tightening with the Phillips Head Screwdriver. Secure 1 x Handle (H7) to the front of Door (P9) with 2 x Screws (H8) by tightening with the Phillips Head Screwdriver. Repeat steps for the second Door (P9).

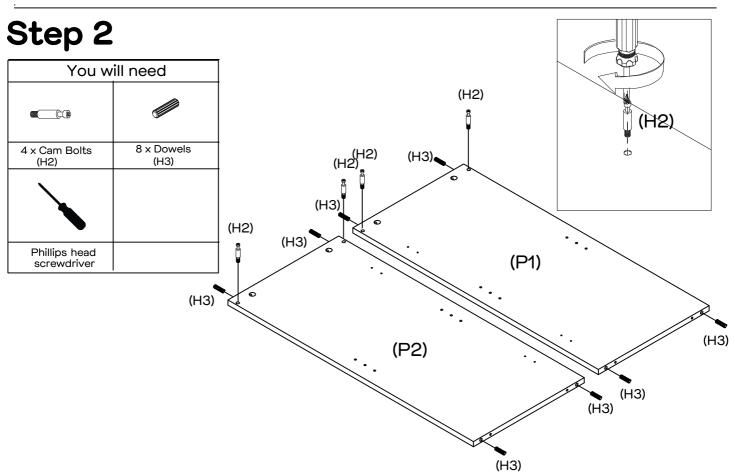


Attach 4 x Cam Bolts (H2) to Left & Right Side Panels (P1 & P2) as shown by tightening with the Phillips Head Screwdriver. Insert 8 x Dowels (H3) into Left & Right Side Panels (P1 & P2).

screwdriver

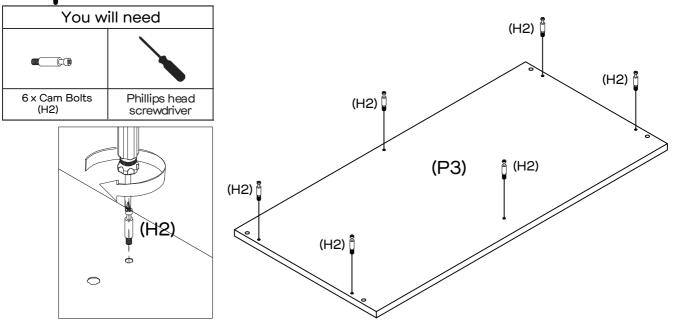


Attach 6 x Cam Bolts (H2) to Top Panel (P3) by tightening with the Phillips Head Screwdriver.

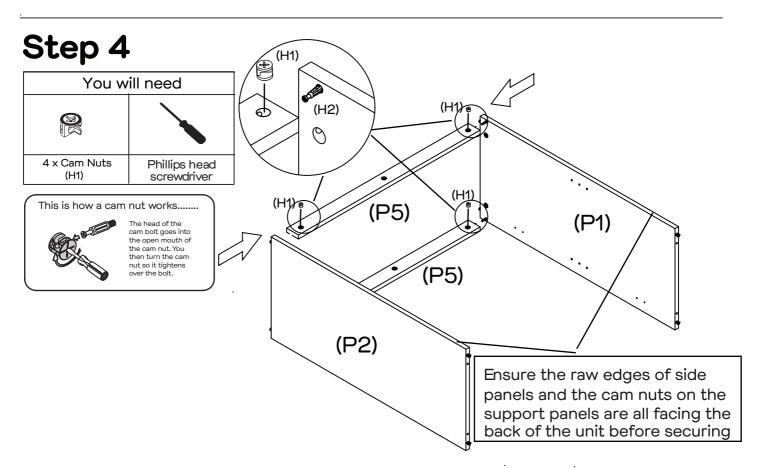


Insert 4 x Cam Nuts (H1) into Support Panels (P5 x 2). Rotate the Cam Nuts so the arrows point towards the incoming cam bolts. Attach Left & Right Side Panels (P1&P2) to Support Panels (P5 x 2) by tightening the Cam Nuts with the Phillips Head Screwdriver.

Fantastic Furniture Page 7

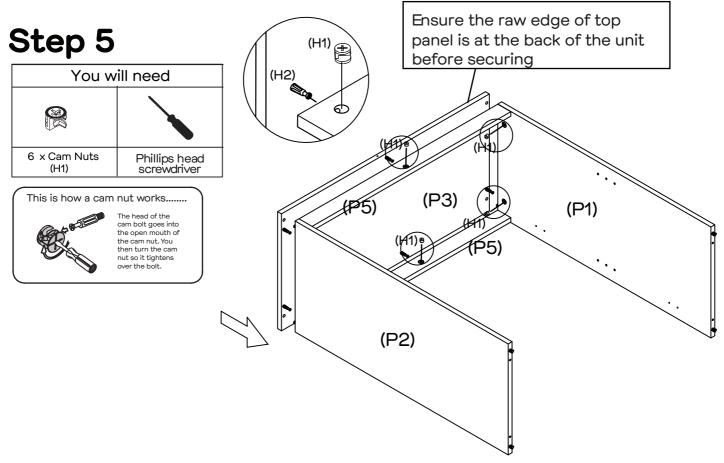


Insert 6 x Cam Nuts (H1) into Left & Right Side Panels (P1&P2) and Support Panels (P5 x 2) as shown. Rotate the Cam Nuts so the arrowspoint towards the incoming cam bolts. Attach Top Panel (P3) to Left & Right Side Panels (P1&P2) and Support Panels (P5 x 2) by tightening the Cam Nuts with the Phillips Head Screwdriver.

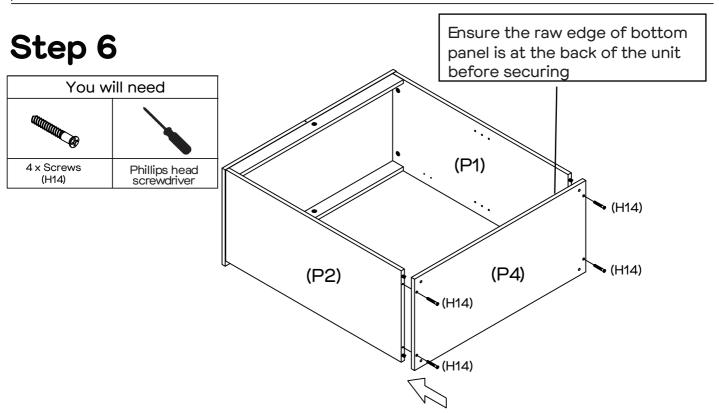

Attach Bottom Panel (P4) to Left & Right Side Panels (P1&P2) with 4 x Screws (H14) by tightening with the Phillips Head Screwdriver.




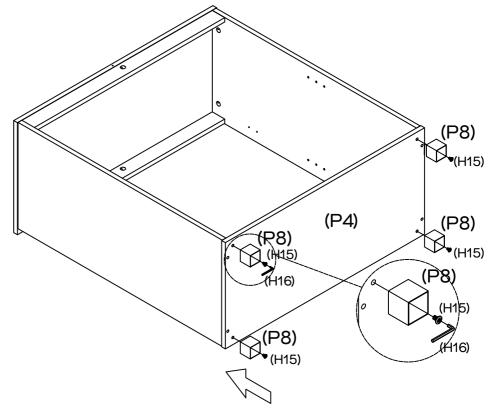

Attach Feet (P8x4) to Bottom Panel (P4) with 4 x Screws (H15) by tightening with the Allen Key (H16).


Step 8

You will need	
4 x Caps (H12)	

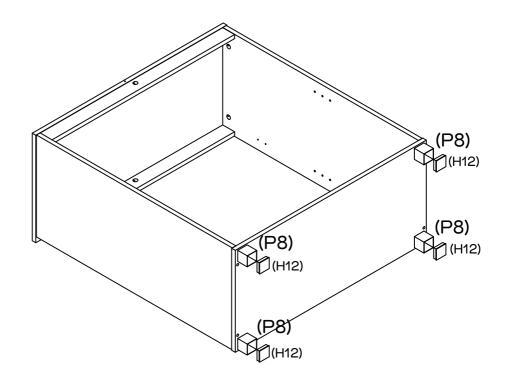


Attach 4 x Caps (H12) to Feet (P8x4) by pressing firmly into place. Ensure they are secured well.



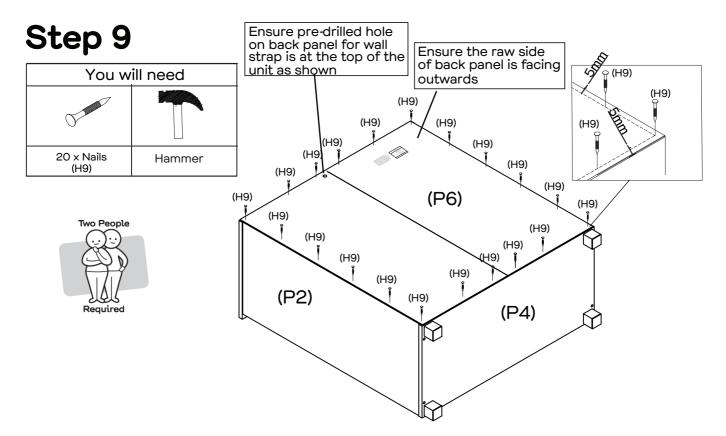


Align the Back Panel (P6) with the edges of the partially assembled unit. Attach Back Panel (P6) to Left,Right,Top&Bottom Panels (P1,P2,P3&P4) with 20 x Nails (H9) with the Hammer.Ensure the nails are evenly spaced out as shown an are placed approximately 5mm from the edge of the back panel.

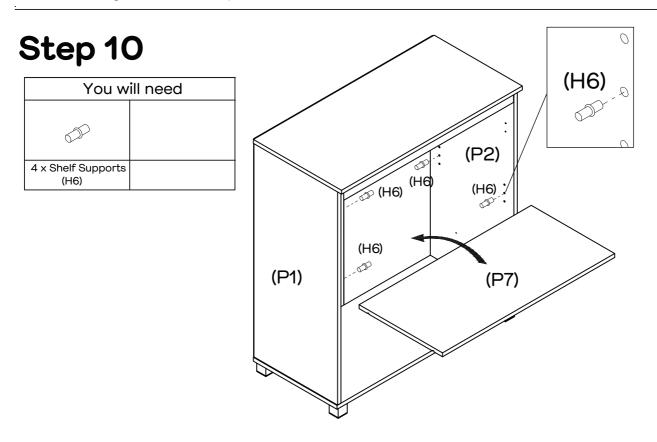

Insert 4 x Shelf Supports (H6) into Left & Right Side Panels (P1&P2) as shown at your desired height. Place Adjustable Shelf (P7) into the unit and rest on shelf supports. Ensure the shelves are firmly secured.







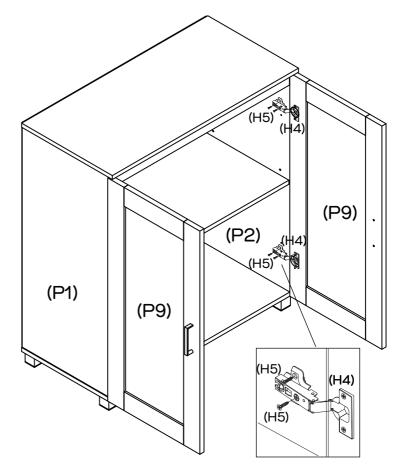


With assistance carefully align the 2 x Hinges (H4) on the Door (P9) to Right Side Panel (P2) and secure with 4 x Screws (H5) by tightening with the Phillips Head Screwdriver. Repeat steps for the second Door (P9).

 Step 12




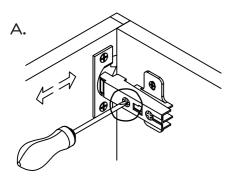

This will adjust the door back or forwards

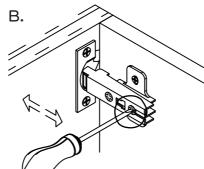

This will adjust the door left or right

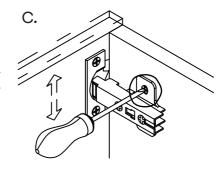


This will adjust the door up or down

If after assembling the unit the doors are uneven, you can adjust the hinges with the Phillips Head Screwdriver.





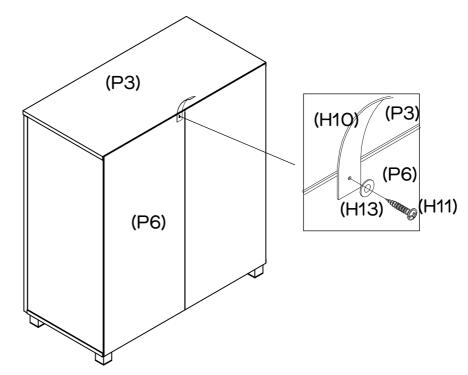

Attach Wall Strap (H10) to Top Panel (P3) with $1 \times \text{Washer}$ (H13) and $1 \times \text{Wall}$ Strap Screw (H11) as shown by tightening with the Phillips Head Screwdriver.

Step 14


You will need	
0	
1 x Washer (H13)	

Screws and wall plugs are not provided please use appropriate fixtures for your wall.


We strongly suggest using the wall strap to prevent this unit from toppling.

Seek advice from a qualified trades person on how to attach this to your specific wall.

Move furniture to its final position, then connect the end of Wall Strap (H10) to the wall. Make sure it is firmly attached and a snug fit.

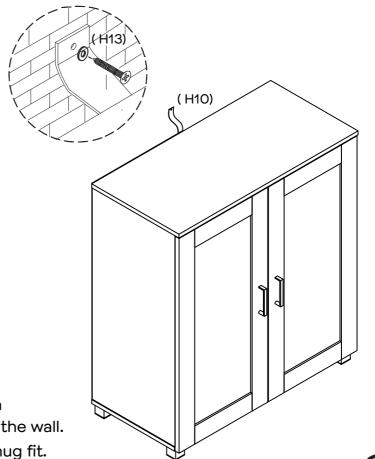

Page 12

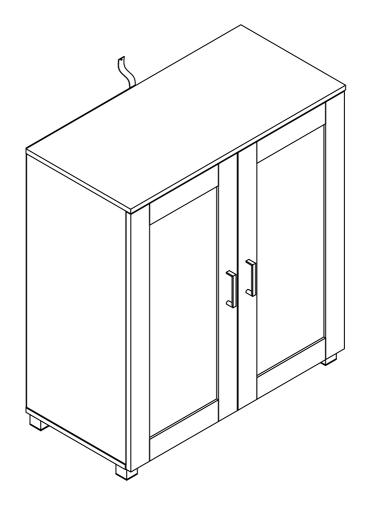

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

