 


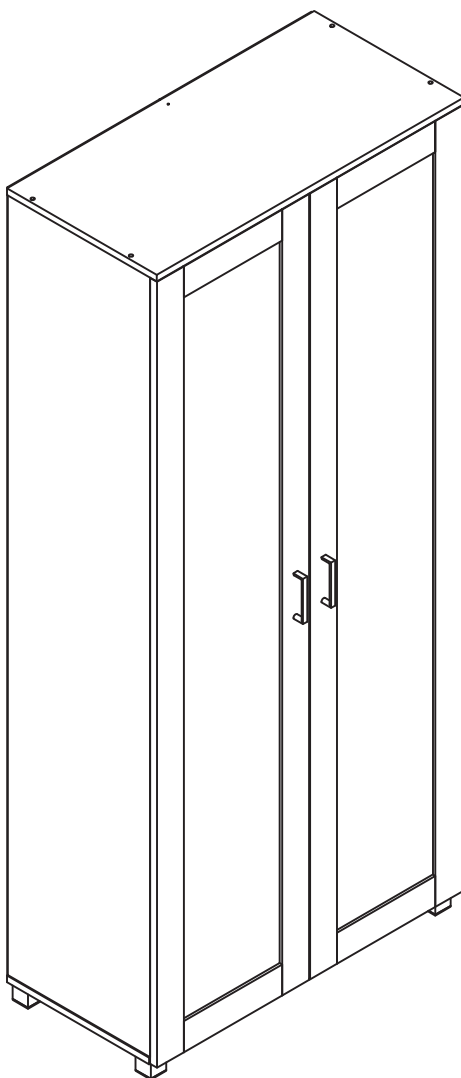

**Fantastic
Furniture**

Version 1.0



Two People



Required

 
Milford

Pantry 2 Door

fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents

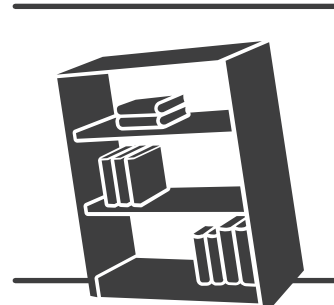

WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Weight Limit: 20kgs per shelf

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard
(without available wood stud)

 Securing method:
Self drilling plasterboard anchor.

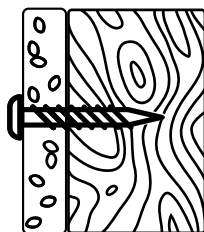

For plasterboard
(with available wood stud)

 Securing method:
Screw inserted directly into stud.

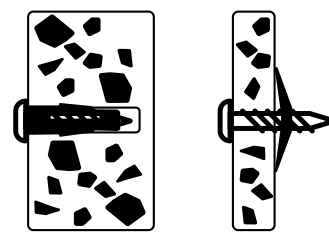

For masonry wall

Securing method:
Solid wall: Plug with screw
Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture

 
Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

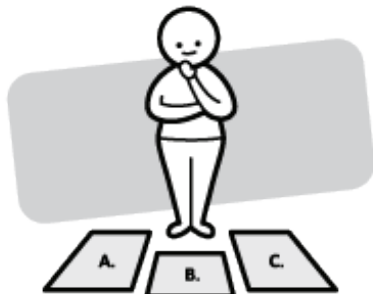

Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What You Need

to assemble the product



 
DO NOT USE



Other tools you need
Phillips head screwdriver
Hammer.

Parts list



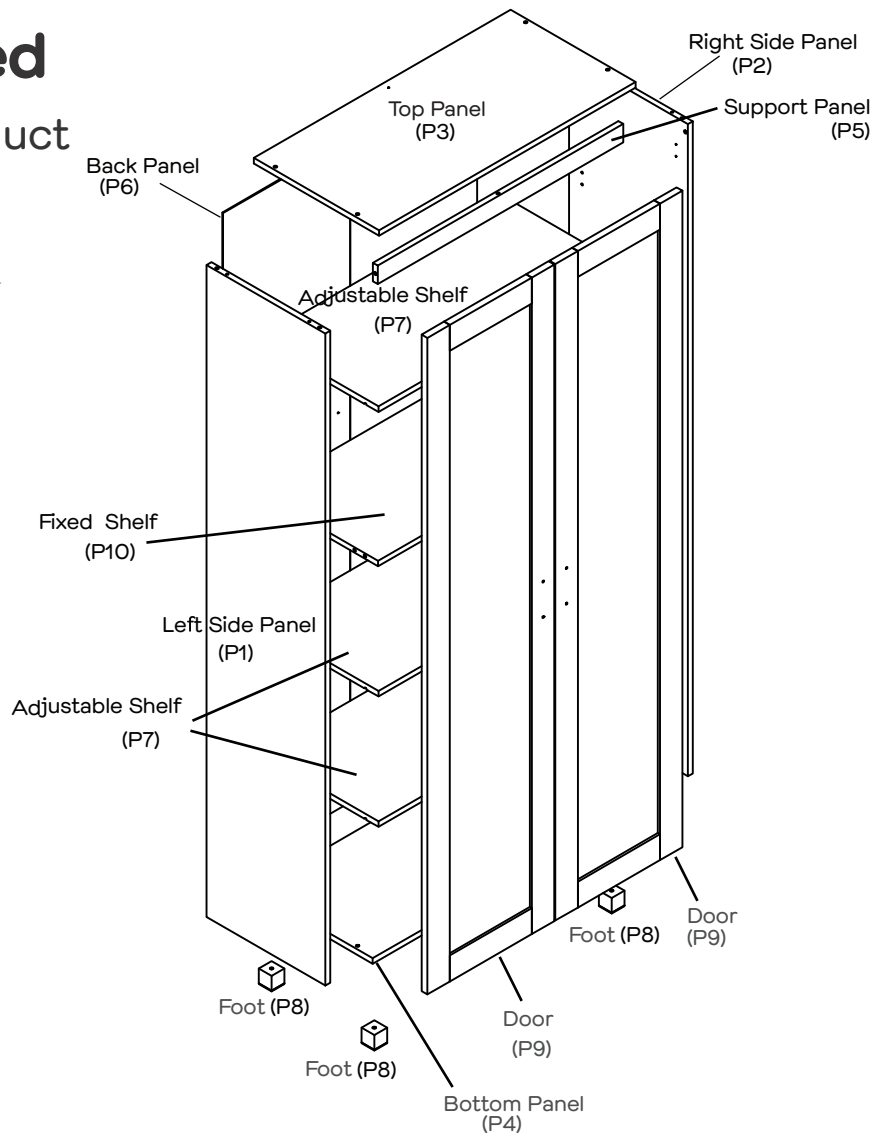


Left Side Panel (P1);
Right Side Panel (P2);
Top Panel (P3);
Bottom Panel (P4);
Support Panel (P5);
Back Panel (P6);
3 x Adjustable Shelves (P7);
4 x Feet (P8);
2 x Doors (P9);
Fixed Shelf (P10)




Hardware Pack :

7 x Cam Nuts (H1)	7 x Cam Bolts (H2)	12 x Dowels (H3)	6 x Hinges (H4)	24 x Screws (H5)	12 x Shelf Supports (H6)
2 x Handles (H7)	4 x Screws (H8)	40 x Nails (H9)	1 x Wall Strap (H10)	1 x Wall Strap Screw (H11)	4 x Caps (H12)
2 x Washers (H13)	8 x Screws (H14)	4 x Screws (H15)	1 x Allen Key (H16)	6 x Screws (H17)	

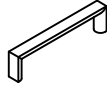

 
Step 1

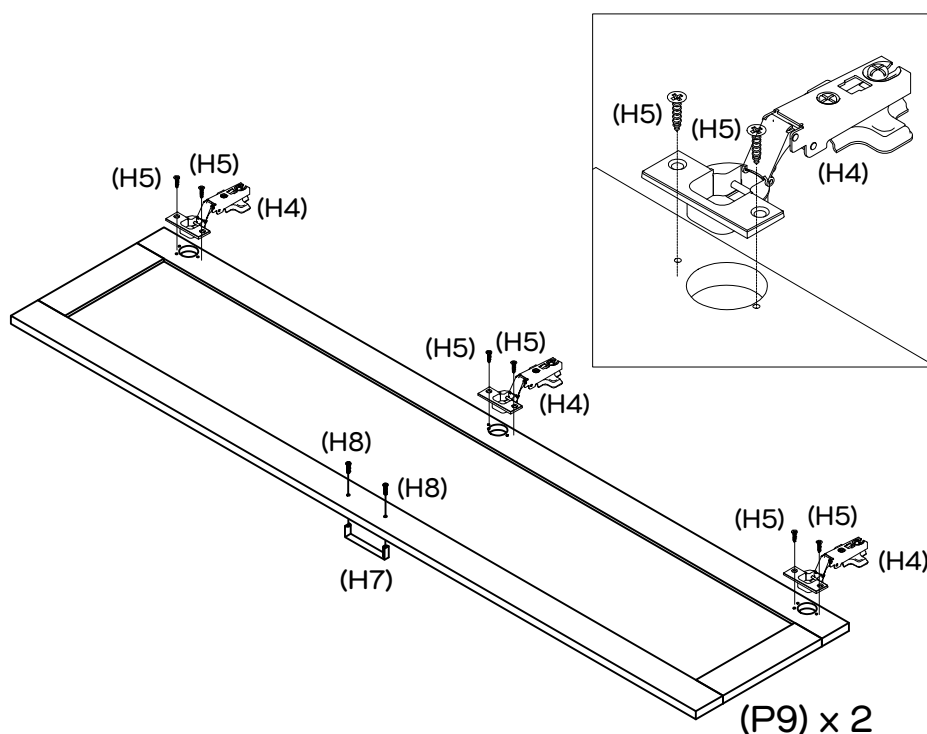
You will need	
	
6 x Hinges (H4)	12 x Screws (H5)
	
2 x Handles (H7)	4 x Screws (H8)
	
Phillips head screwdriver	



Attach 3 x Hinges (H4) to Door (P9) as shown with 6 x Screws (H5) by tightening with the Phillips Head Screwdriver. Secure 1 x Handle (H7) to the front of Door (P9) with 2 x Screws (H8) by tightening with the Phillips Head Screwdriver. Repeat steps for the second Door (P9).



Step 2



You will need	
	
6 x Cam Bolts (H2)	8 x Dowels (H3)
	
Phillips head screwdriver	

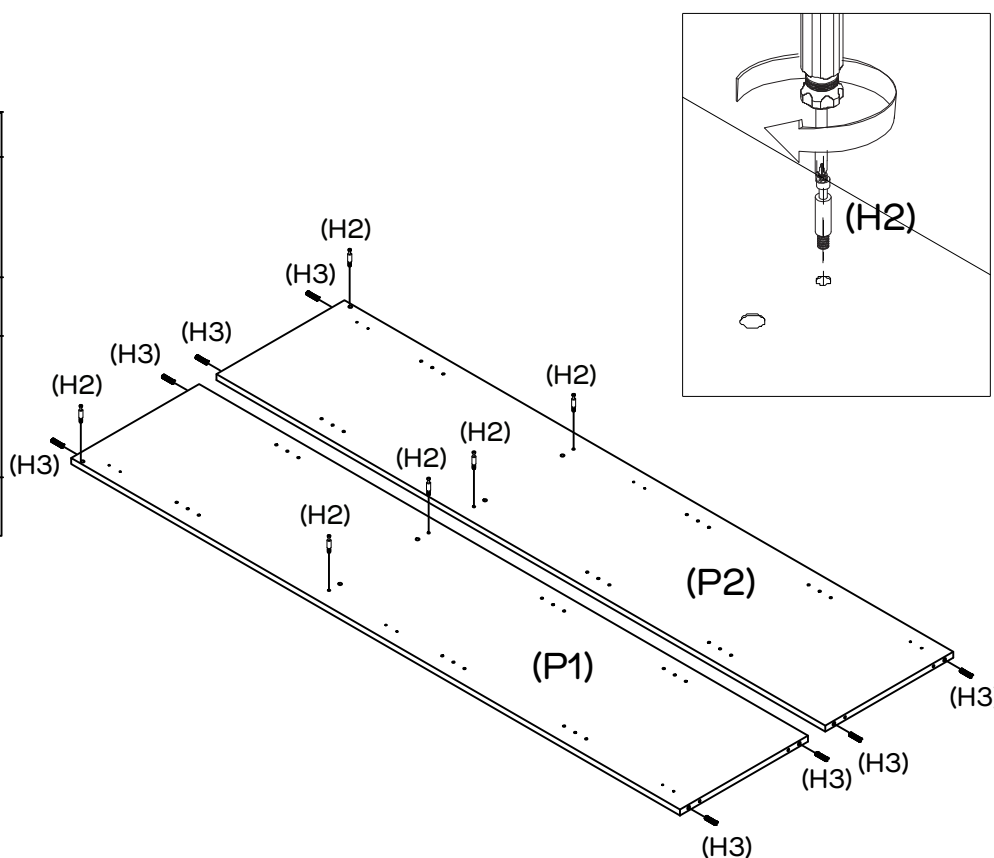 

Attach 6 x Cam Bolts (H2) to Left & Right Side Panels (P1 & P2) as shown by tightening with the Phillips Head Screwdriver. Insert 8 x Dowels (H3) to Left & Right Side Panels (P1 & P2).

 
Step 3


You will need	
	
1 x Cam Bolt (H2)	Phillips head screwdriver

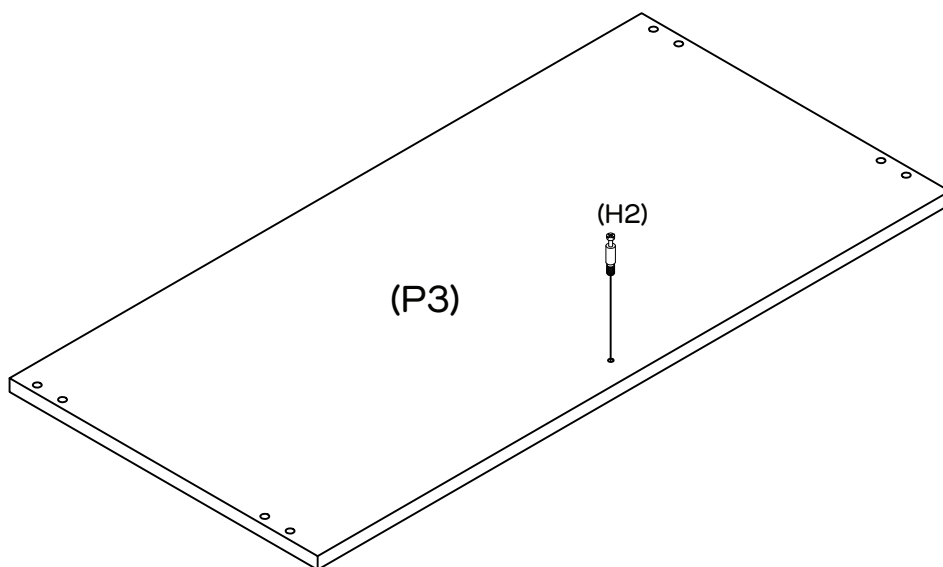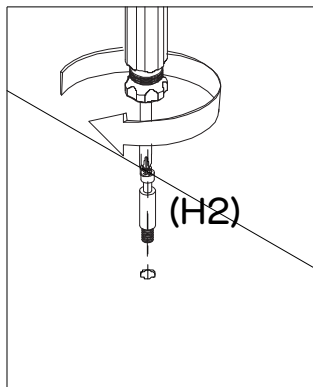  

Attach Cam Bolt (H2) to Top Panel (P3) by tightening with the Phillips Head Screwdriver.

 Step 4

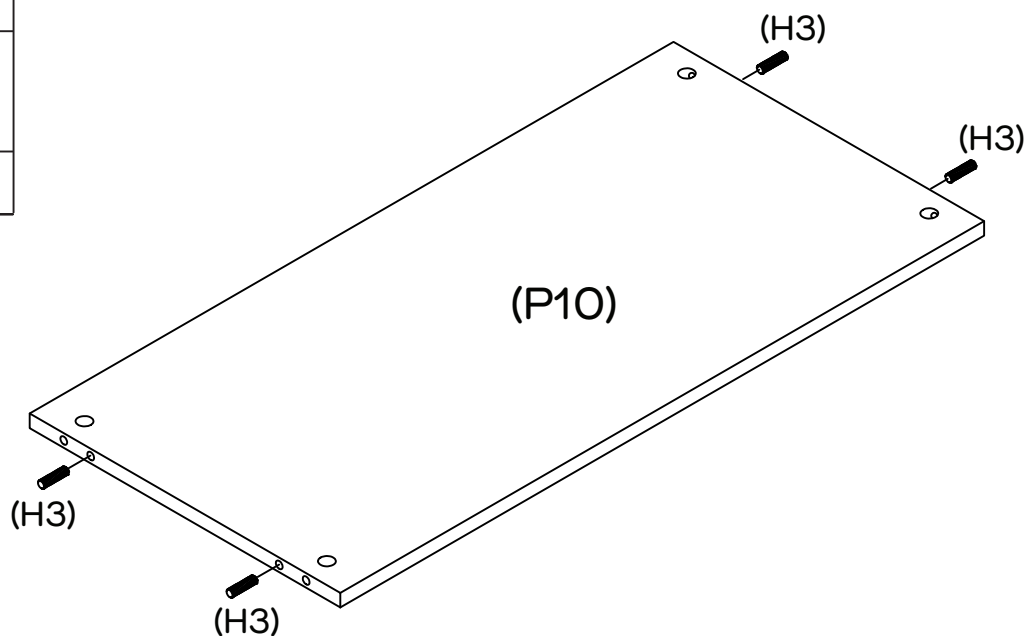

You will need	
	
4 x Dowels (H3)	



Insert 4 x Dowels (H3) into Fixed Shelf (P10).

Step 5

You will need


	
6 x Cam Nuts (H1)	Phillips head screwdriver

This is how a cam nut works.....



 The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

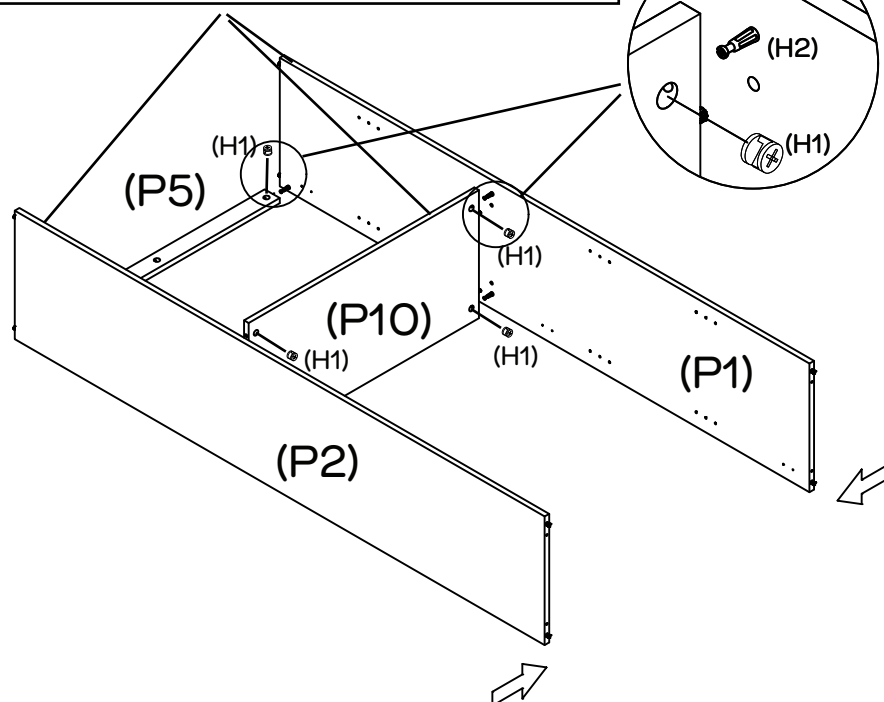


Ensure the raw edges of side & shelf panels are at the back of the unit and Cam Nuts are on the underside of the shelf before securing



Insert 4 x Cam Nuts (H1) into Fixed Shelf (P10). Insert 2 x Cam Nuts (H1) into Support Panel (P5). Rotate the Cam Nuts so the arrows point towards the incoming cam bolts. Attach Left & Right Side Panels (P1&P2) to Fixed Shelf (P10) and Support Panel (P5) by tightening the Cam Nuts with the Phillips Head Screwdriver.

Step 6

You will need


	
8 x Screws (H14)	Phillips head screwdriver
	
1 x Cam Nut (H1)	

This is how a cam nut works.....



 The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.


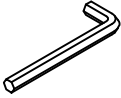
Ensure the raw edges of top & bottom panels are at the back of the unit before securing

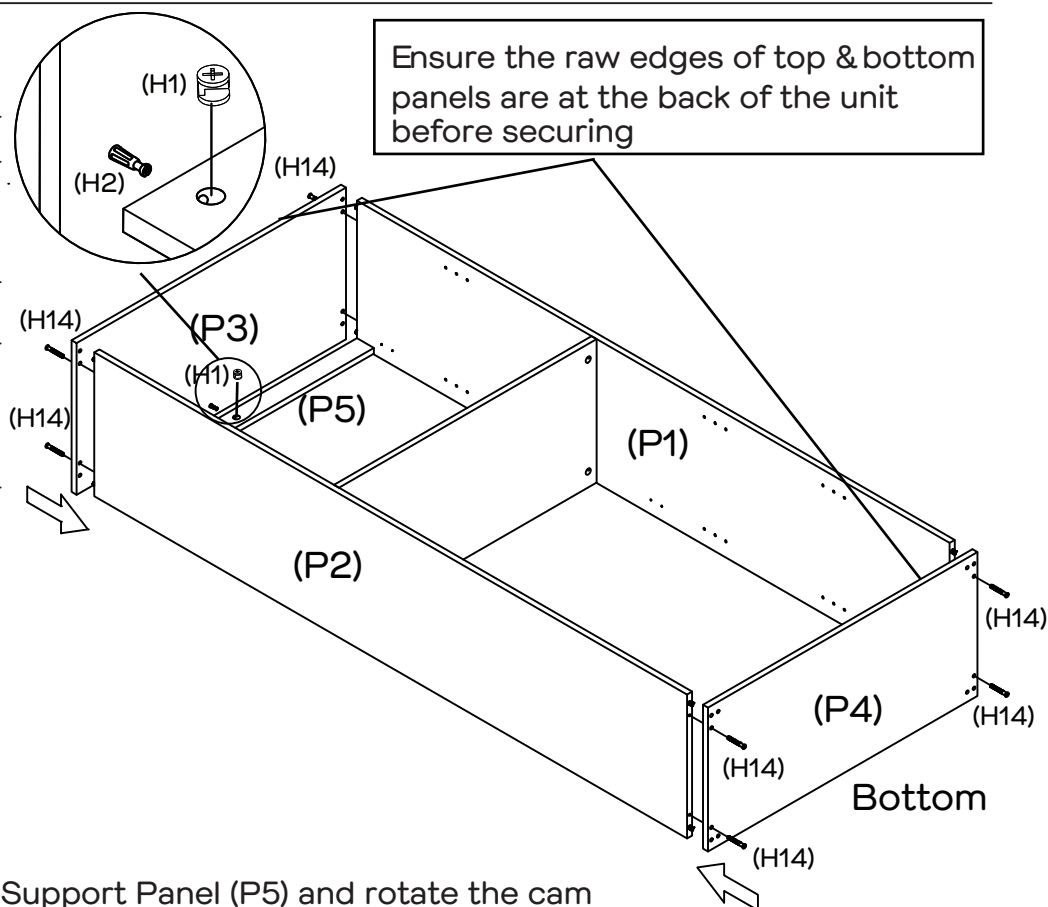


Insert 1 x Cam Nut (H1) into Support Panel (P5) and rotate the cam nut so the arrow points towards the incoming cam bolt. Secure Top Panel (P3) to Support Panel (P5) by tightening the Cam Nut with the Phillips Head Screwdriver. Attach Top & Bottom Panels (P3&P4) to Left & Right Side Panels (P1&P2) with 8 x Screws (H14) as shown by tightening with the Phillips Head Screwdriver.

fantasticfurniture.com.au


Step 7


You will need	
	
4 x Screws (H15)	1 x Allen Key (H16)

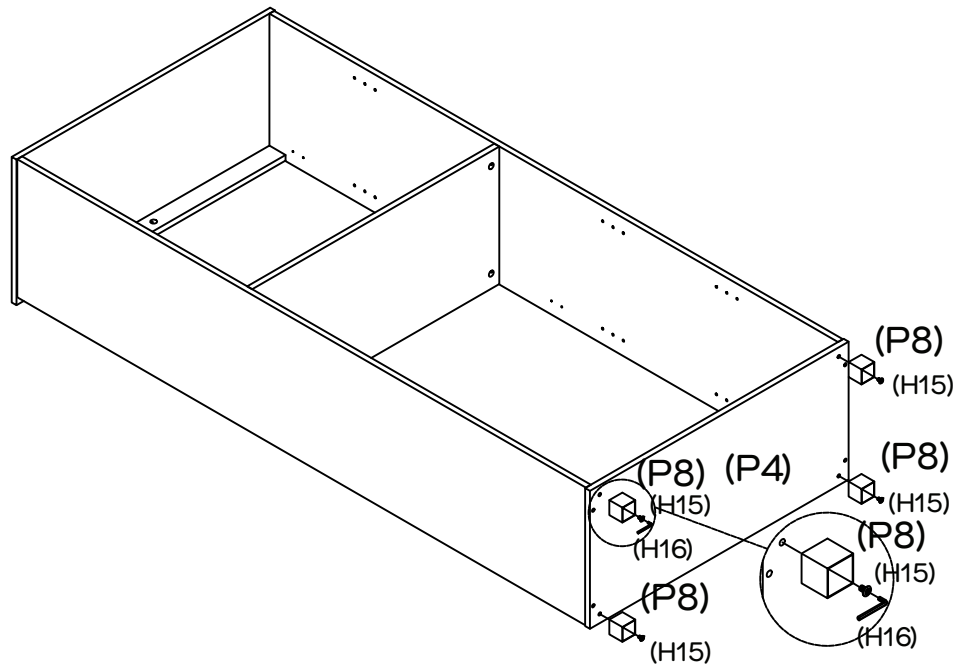 

Attach Feet (P8x4) to Bottom Panel (P4) with 4 x Screws (H15) by tightening with the Allen Key (H16).

Step 8


You will need	
	
4 x Caps (H12)	

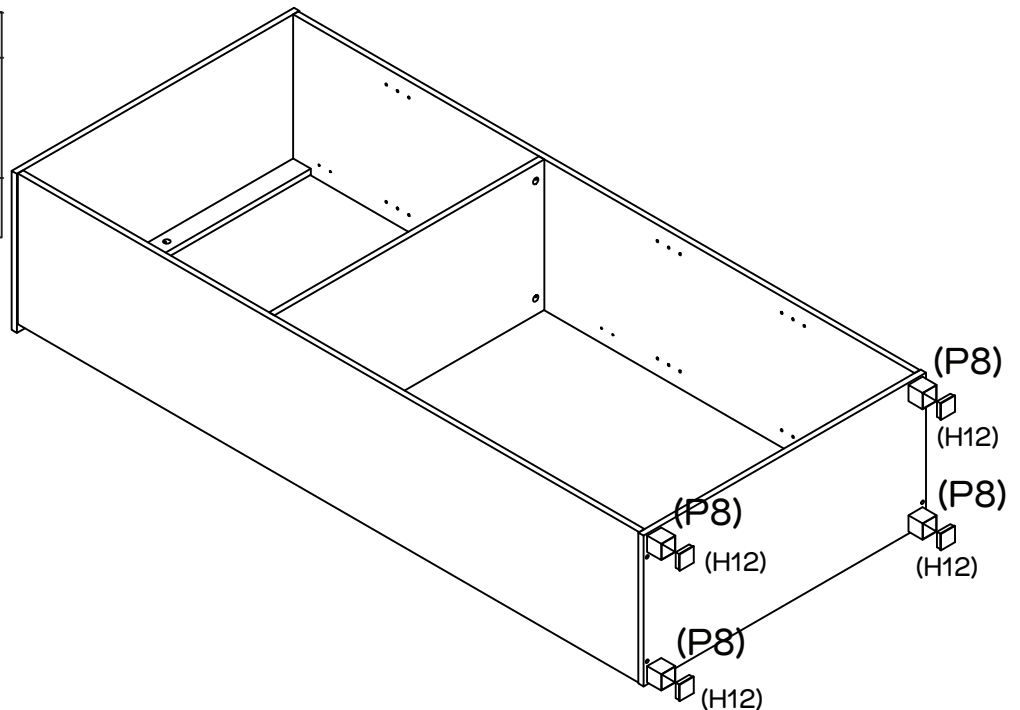 

Attach 4 x Caps (H12) to Feet (P8x4) by pressing firmly into place. Ensure they are secured well.


Step 9


You will need	
	
40 x Nails (H9)	6 x Screws (H17)
	
Phillips head screwdriver	Hammer

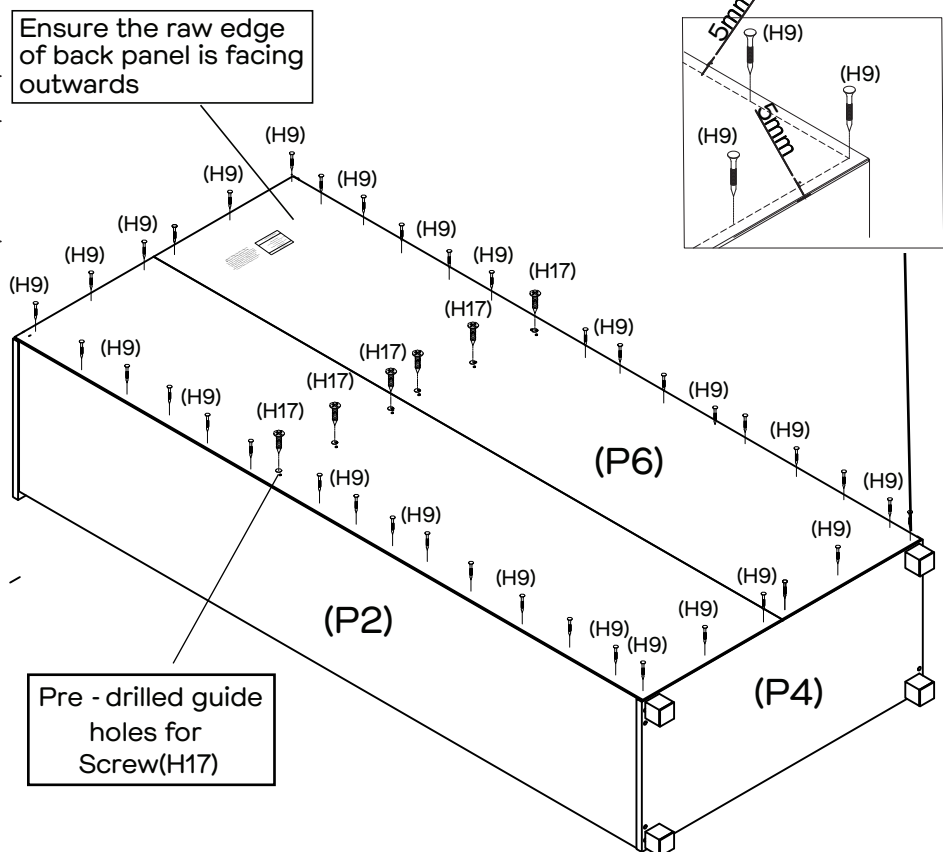 

Align the Back Panel (P6) with the edges of the partially assembled unit and the pre-drilled holes with the back of the fixed shelf. Attach Back Panel (P6) to the back of Fixed Shelf (P5) with 6 x Screws (H17) by tightening with the Phillips Head Screwdriver. Attach Back Panel (P6) to Left, Right, Top & Bottom Panels (P1,P2,P3&P4) with 40 x Nails (H9) with the Hammer. Ensure the nails are evenly spaced out as shown and are placed approximately 5mm from the edge of the back panel.



 Step 10

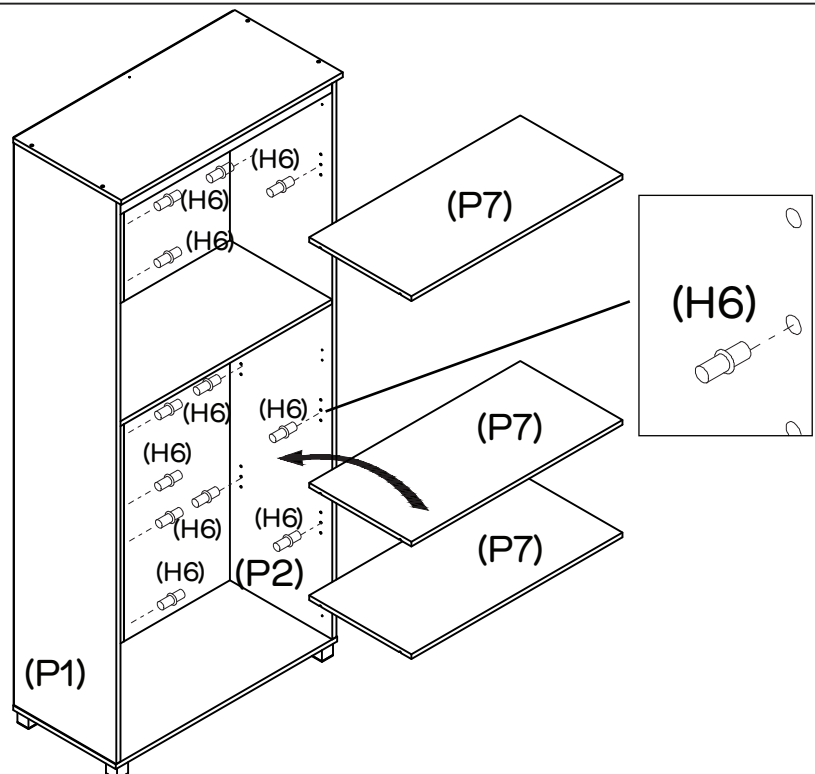
You will need	
	
12 x Shelf Supports (H6)	



Insert 12 x Shelf Supports (H6) into Left & Right Side Panels (P1&P2) as shown at your desired height. Place Adjustable Shelves (P7x3) into the unit and rest on shelf supports. Ensure the shelves are firmly secured.


Step 11


You will need	
	
12 x Screws (H5)	Phillips head screwdriver

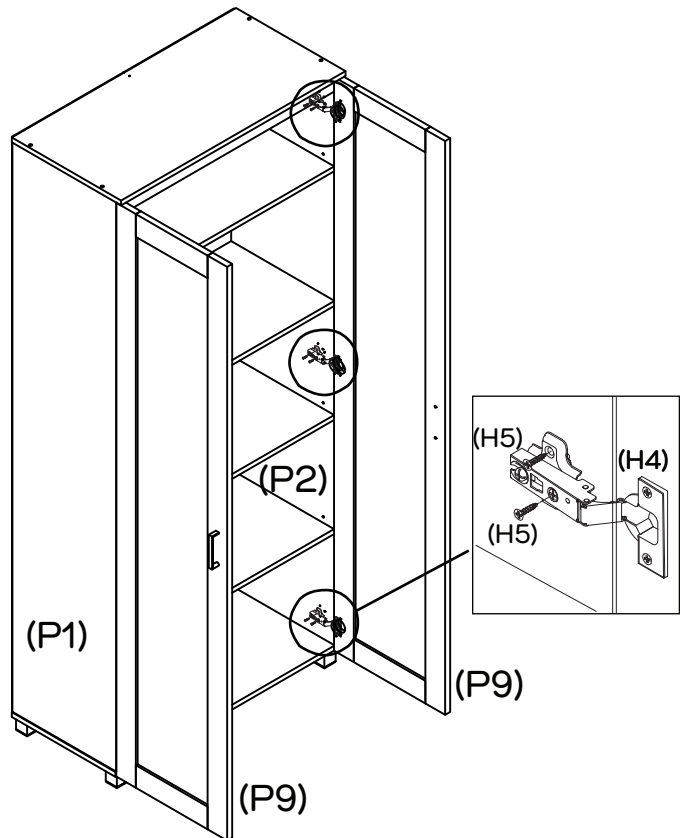 


With assistance carefully align the 3 x Hinges (H4) on the Door (P9) to Right Side Panel (P2) and secure with 6 x Screws (H5) by tightening with the Phillips Head Screwdriver. Repeat steps for the second Door (P9).

Step 12


You will need	
	
Phillips head Screwdriver	

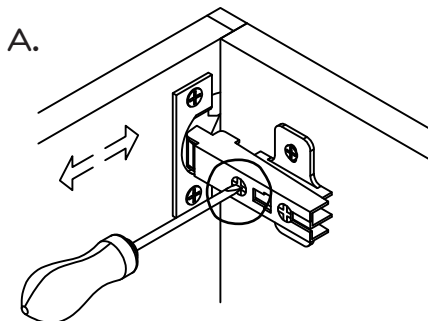 

 This will adjust the door back or forwards

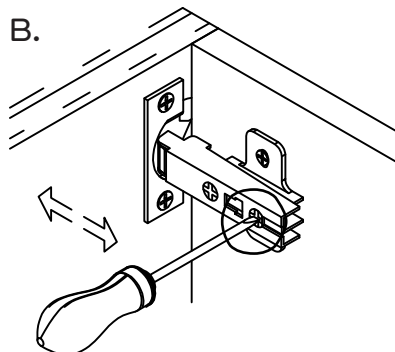

This will adjust the door left or right

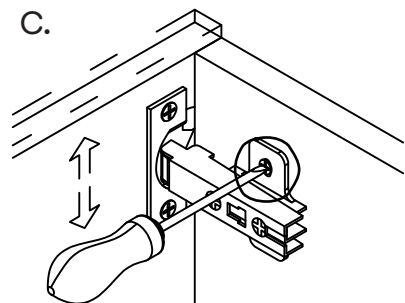 


This will adjust the door up or down

If after assembling the unit the doors are uneven, you can adjust the hinges with the Phillips Head Screwdriver.

Step 13



You will need	
1 x Wall Strap (H10)	1 x Wall Strap Screw (H11)
1 x Washer (H13)	Phillips head Screwdriver

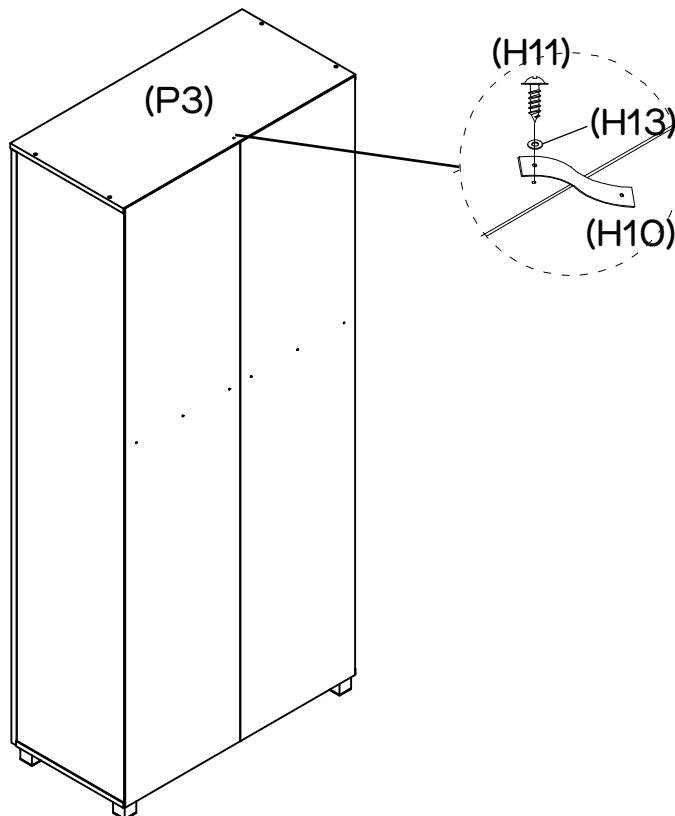 

Attach Wall Strap (H10) to Top Panel (P3) with 1 x Washer (H13) and 1 x Wall Strap Screw

Step 14

You will need	
1 x Washer (H13)	

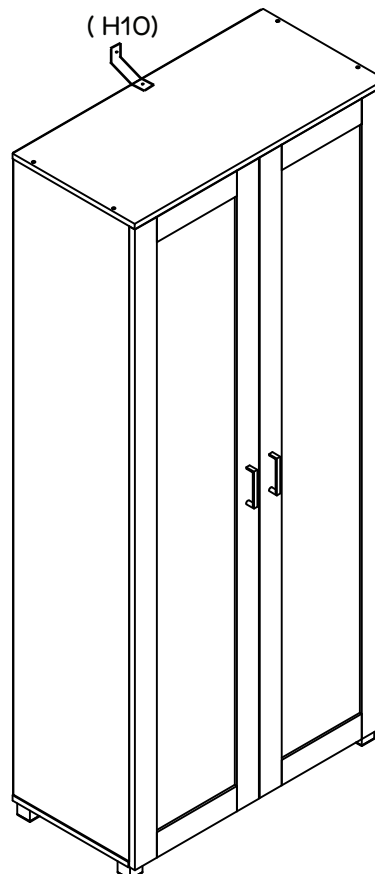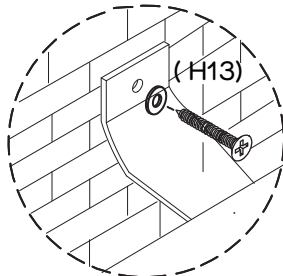  


Screws and wall plugs are not provided please use appropriate fixtures for your wall.

We strongly suggest using the wall strap to prevent this unit from toppling.

Seek advice from a qualified trades person on how to attach this to your specific wall.

 Move furniture to its final position, then connect the end of Wall Strap (H10) to the wall. Make sure it is firmly attached and a snug fit.

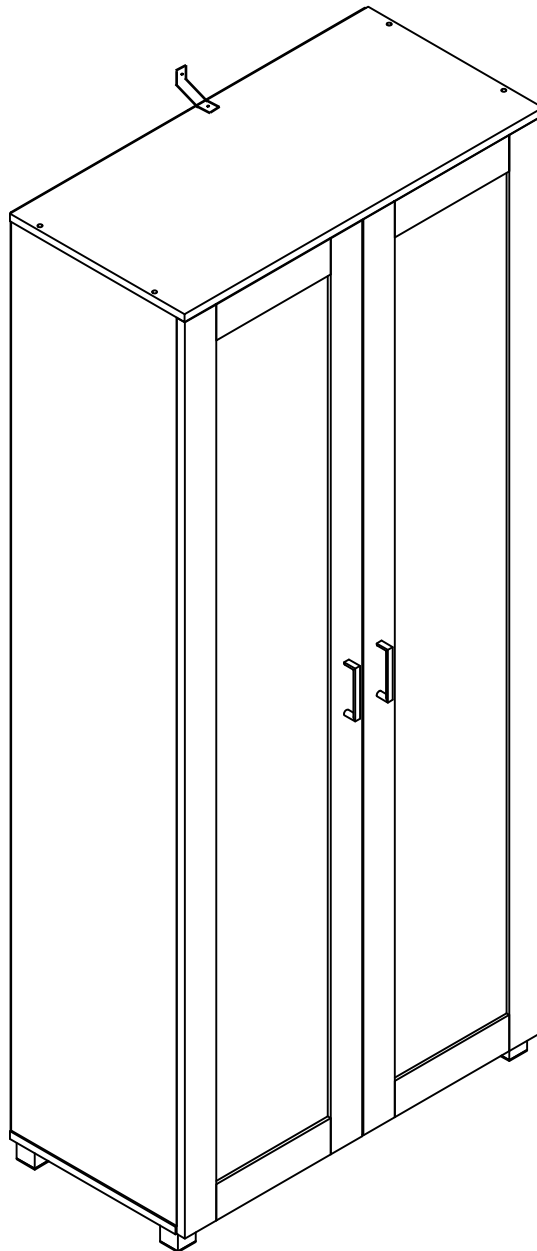

Job Complete!

In the interest of our environment please dispose
of all packaging thoughtfully.