

Version 1.0



## WINDSOR Chair 1 STR

fantasticfurniture.com.au

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



#### Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


#### Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

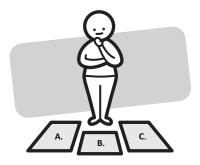

before you begin assembly.

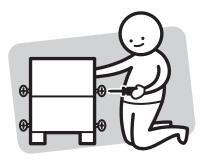

Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.

#### Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



# What you need to assemble the product



Parts list

- 1 x Chair (P1)
- 2 x Front Legs (P2)
- 2 x Back Legs (P3)



1 x Chair (P1)



2 x Front Legs (P2)

 


2 x Back Legs (P3)

#### Hardware pack



4 x Short Bolts (H1)



4 x Long Bolts (H2)




8 x Lock Washers (H3)



8 x Washers (H4)




Allen key (H5)

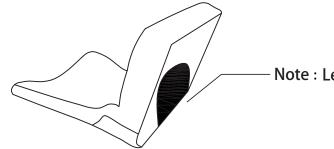


Note: Legs and hardware pack inside of seat

Please make sure you have all these parts before you start.



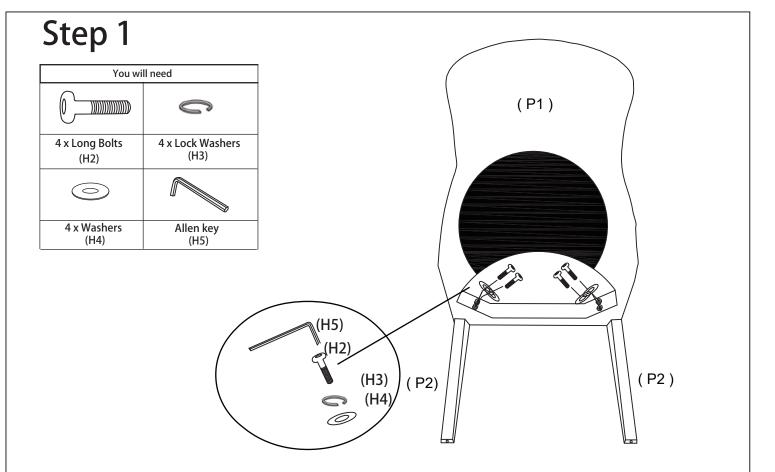

Attach the 2 x front legs (P2) to the underside of the chair (P1). Align the leg plates with the pre-drilled holes as shown and attach the legs with the long bolts (H2), lock washers (H3), washers (H4) and tighten with the allen key (H5).

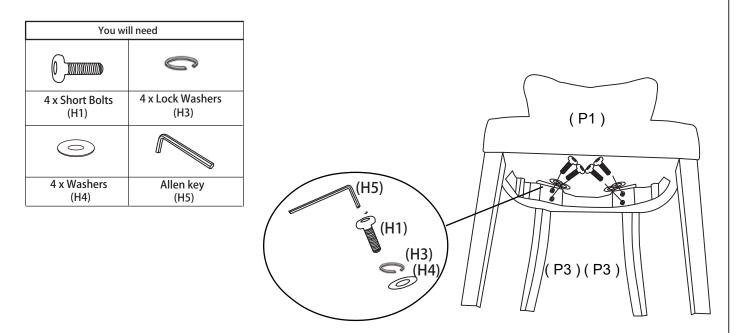

Attach the 2 x back legs (P3) to the underside of the chair (P1). Align the leg plates with the pre-drilled holes as shown and attach the legs with the short bolts (H1), lock washers (H3), washers (H4) and tighten with the allen key (H5).

Furniture Page 5

#### Step 2



### Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.

