


Version: 1.3

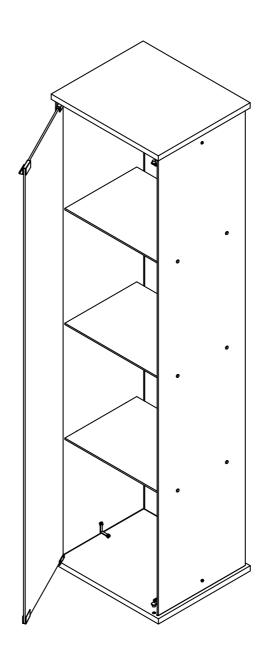





www.fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Weight capacity: 10kgs/shelf.

To reduce the risk of furniture tipover:

 


- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- · Avoid putting a TV on this product.

Wall attachment guide

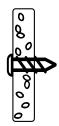

For plasterboard (without available wood stud)

 Securing method:Self drilling plasterboard anchor.

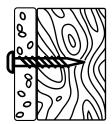

For plasterboard (with available wood stud)

Securing method:
Screw inserted directly into





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

THIS PRODUCT MUST BE ASSEMBLED ON A SOFT SURFACE SUCH AS CARPET OR A RUG TO PREVENT ACCIDENTAL SHATTERING DURING ASSEMBLY. IF YOU DO NOT HAVE THESE IN YOUR HOME THEN LAY THE CARDBOARD PACKAGING FLAT AND ASSEMBLE ON TOP OF THE EMPTY PACKAGING.

DO NOT ASSEMBLE ON A HARD SURFACE.

Tempered Glass

Glass should always be handled with care.

Scratches, chips, sudden changes in temperature and hairline fractures may cause glass to break. This glass is designed to break into small, relatively harmless pieces and not sharp fragments.

Avoid placing hot or cold items directly onto the table unless using a thick insulation material such as placemats or coasters.

Avoid dropping objects onto the glass. Do not allow hard or pointed objects to come into contact with the glass. Never use the top area as a chopping surface. Do not sit or stand on the glass surface.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture

Assembly Checklist



Read through the instructions carefully before you begin

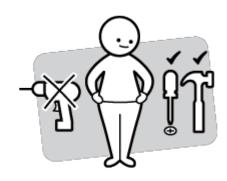

Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need


to assemble the product






Other tools you need Phillips Head Screwdriver

Parts List:
Base (P1);
Back panel (P2);
Joining brackets (P3) x2;
Side panels (P4) x2;
Top Panel (P5);
Door Panel (P6);
Shelves (P7) x3;

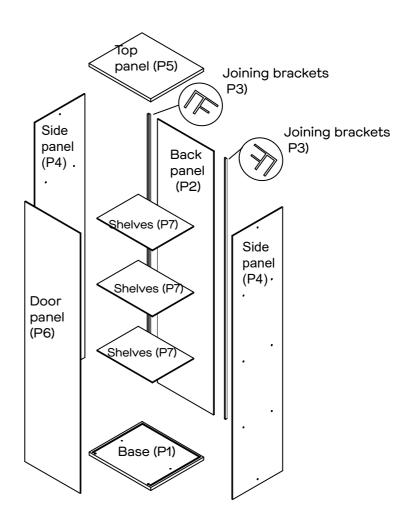

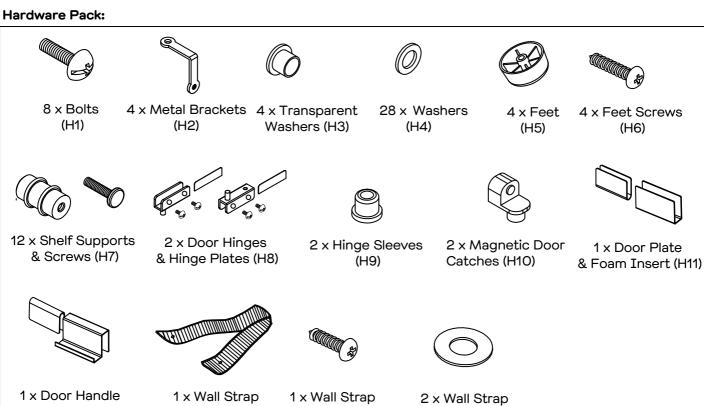


Screw (H14)


Washers (H15)

& Foam Insert (H12)

(H13)

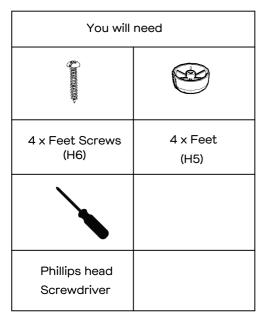


THIS PRODUCT <u>MUST</u> BE ASSEMBLED ON A SOFT SURFACE SUCH AS CARPET OR A RUG TO PREVENT ACCIDENTAL SHATTERING DURING ASSEMBLY. IF YOU DO NOT HAVE A SOFT SURFACE. LAY THE CARDBOARD PACKAGING FLAT AND USE AS A BASE FOR ASSEMBLY.

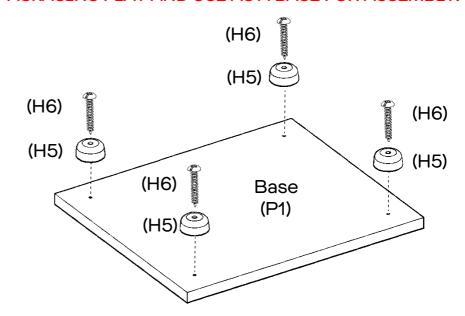

Attach $4 \times \text{Feet}$ (H5) to the underside of the Base (P1) with $4 \times \text{Feet}$ Screws (H6) by tightening with the Phillips Head Screwdriver.

Step 2

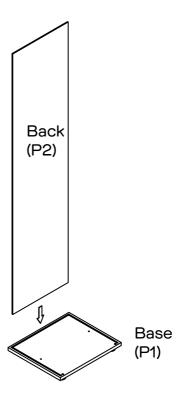

Turn Base (P1) over to rest on Feet (H5). Insert Back Panel (P5) into the groove of the Base (P1) as shown.



Slide the Joining Brackets (P3x2) onto each side of the Back Panel (P2) and into the Base (P1). Ensure that the shorter side of the Joining Brackets (P3x2) are attached to the Back Panel (P2) as shown. Push down on the Joining Brackets (P3x2) to ensure that they are firmly secured into the Base (P1).

9mm


11mm

6mm

(P2)

Step 4



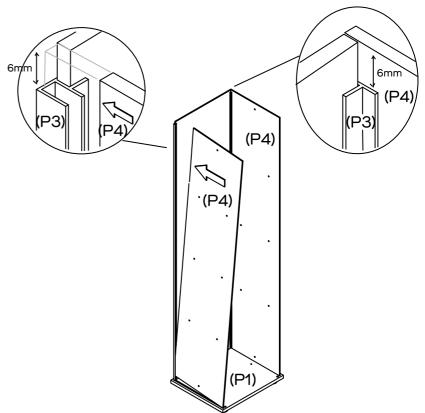

(P3)


(P2)

(P1)

(P3)


Insert Side Panel (P4) into Joining Bracket (P3) and groove of the Base (P1) as shown. Ensure that it is secured firmly. Repeat for the second Side Panel (P4). Push down on the Joining Brackets (P3x2) to ensure that they are firmly secured into the Base (P1).




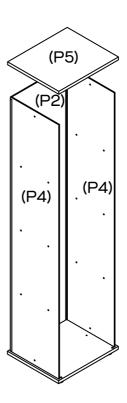

Align the grooves on the Top Panel (P5) with the top of Back & Side Panels (P2&P4x2) and then place securely.


Step 6

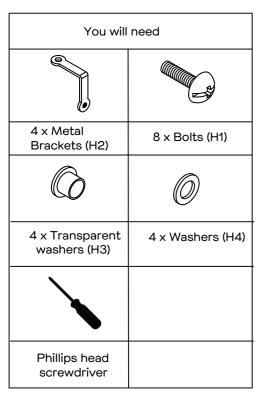

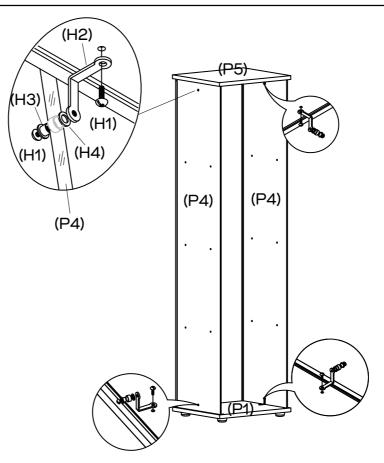

Secure Top and Base Panels (P5&P1) to Side Panels (P4x2) by attaching $4 \times Metal$ Brackets (H2) with $8 \times Bolts$ (H1), $4 \times Transparent$ Washers (H3) and $4 \times Mashers$ (H4) at each end of the Side Panels (P4x2) by tightening with the Phillips Head Screwdriver as shown.



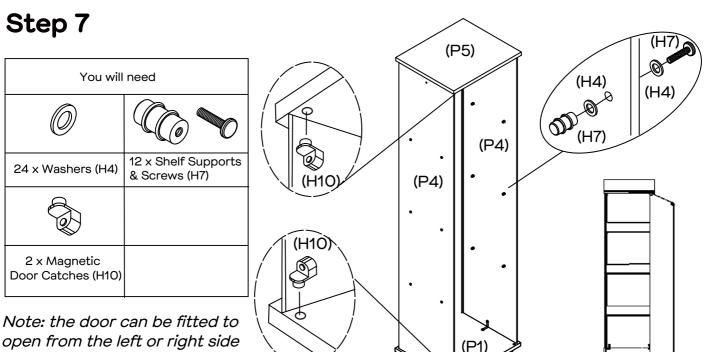


of the cabinet. These instructions show how to assemble the door to open from the


left side. If you prefer the door to open from the right side, place the Magnetic Door Catches on the opposite side of the Top & Bottom Panels.

Insert 2 x Magnetic Door Catches (H10) into the Top and Bottom Panels (P5&P1). Attach 12 x Shelf Supports & Screws (H7) to Side Panels (P4x2) with 24 x Washers (H4) as shown.

Step 8

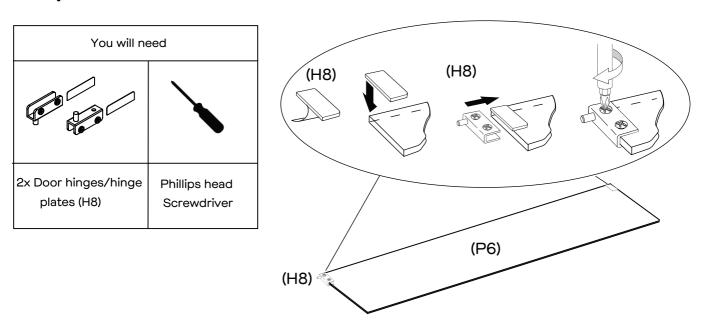


Peel the backing off 2x Hinge Plates (H8) to expose the adhesive side and place at adjacent ends of the Door Panel (P6) as shown. Slide 2 x Door Hinges (H8) over the top of the Hinge Plates (H8), ensuring the hinge nodule is positioned in the corners of the Door Panel (P6), then secure with the Hinge Bolts by tightening with a Phillips Head Screwdriver. Do not overtighten.

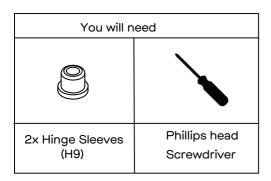



Note: This step shows the door being fitted to open from the left side of the cabinet. If you wish to open from the right side, please ensure the Magnetic Door Catches are placed on the right side of the Top & Bottom Panels and attach the Door Panel on the opposite side.

Insert 2 x Hinge Sleeves (H9) into Top & Bottom Panels (P5&P1) as shown. Insert the Door Hinge (H8) at the bottom of the Door Panel (P6) into the Hinge Sleeve (H9) in the Base (P1). Loosen the Door Hinge (H8) at the top of the Door Panel (P6) with the Phillips Head Screwdriver so that the Door Hinge can slide along the top of the Door Panel. Insert the Door Hinge (H8) at the top of the Door Panel (P6) into the Hinge Sleeve (H9) in the Top Panel (P5) then slide the top corner of the Door Panel into the Door Hinge. Ensure the Door Hinge is aligned with the Hinge Plate then secure by tightening the Hinge Bolts with Phillips Head Screwdriver.

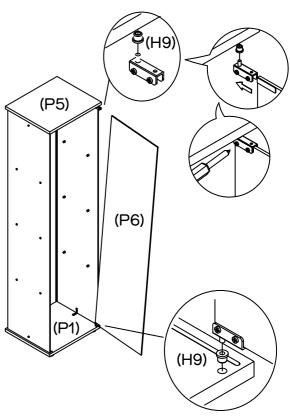

Step 10

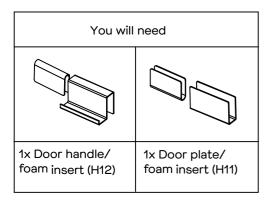


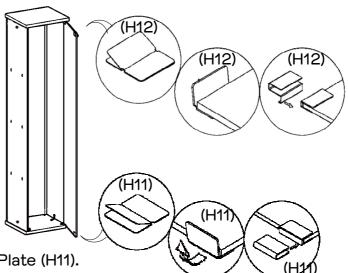

Remove foam insert from the Door Plate (H11). Peel the backing off the foam insert to expose


the adhesive side and place at the bottom corner of the Door Panel (P6) as shown. Slide the Door Plate (H11) over the foam insert at the bottom of Door Panel (P6). Repeat steps to attach the Door Handle (H12) at the top of Door Panel (P6).



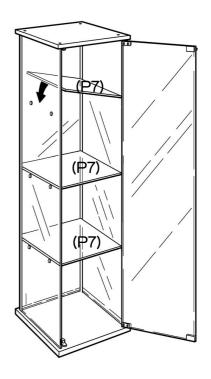

Carefully place each Shelf (P7x3) into the cabinet by resting gently on the Shelf Supports (H7) as shown. Ensure each Shelf is sitting securely on all four Shelf Supports.

Step 12

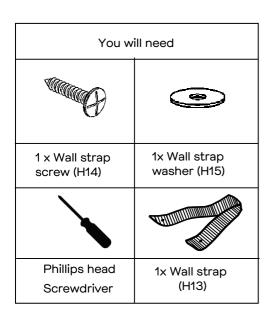

We strongly advise that you use the wall safety strap provided to prevent the unit from toppling.


(H13)

(H14)

(H15)


Fix Wall Strap (H13) to Top Panel (P5) with Wall Strap Washer (H15) and Wall Strap Screw (H14) as shown by tightening with the Phillips Head Screwdriver.



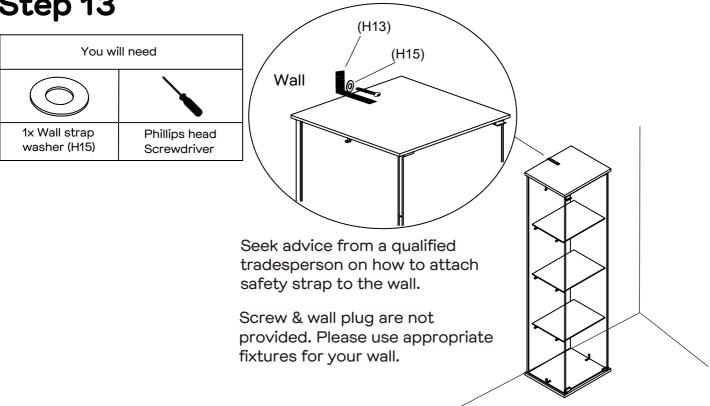

Move the cabinet to the final position and attach the Wall Strap (H13) to the wall securely.

Step 14

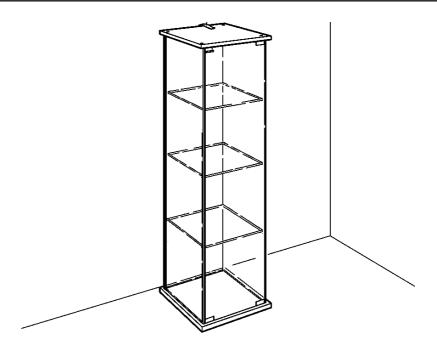

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.