

Product Care & Maintenance



Fabric Upholstered Furniture

We want you to enjoy your Fantastic Furniture for as long as possible, with simple care and maintenance you will extend the life of your furniture.

For general maintenance regularly vacuum on a low suction setting. When dust settles it can become abrasive and cause damage to the cover.

Do not remove covers for cleaning unless otherwise stated. Blot food and drink spills immediately with a white, clean and dry cloth. Avoid rubbing and allowing these spills to dry, keep furniture in the shade away from direct heat and sunlight. If further cleaning is required use a clean cloth and mild, warm, soapy water using non coloured soap flakes. Professional cleaning is also recommended.

All covers will fade over time; however protecting your furniture from direct sunlight will avoid rapid and excessive fading from our sun's harmful UV rays. Keep your product away from direct heat sources such as fireplaces and heaters. Avoid contact with chlorine, chlorine stains are permanent and will change the colour of the material. Be careful of wet swimmers and towels after a swim in the pool! Wet towels and clothing can also cause mould growth and dye transfer as well as leave watermarks.

Check all your furniture hardware (screws, nuts and bolts) fastenings to make sure they are not loose and tighten regularly to help keep product looking its best for years to come.

These care instructions are a general guide – for any specific instructions check your product care label.

Product Care & Maintenance



Foils, Veneers and Melamine Care Instructions

We want you to enjoy your Fantastic Furniture for as long as possible, with simple care and maintenance you will extend the life of your furniture.

Dust regularly to prevent dirt build up, for regular maintenance a damp cloth is all you need. If you have stubborn dirt, use mild soapy water and dry with a soft cloth. Ensure you wipe up spills immediately. Use specialised cleaning products for chrome and stainless steel.

Do not use abrasive cleaning products and make sure your furniture is not exposed to damp or wet environments, as this may cause erosion.

Check all your furniture hardware (screws, nuts and bolts) to make sure they are not loose and tighten regularly to help keep the product looking its best for years to come.

These care instructions are a general guide – for any specific instructions check your product care label.