Fantastic Furniture

Version 1.0

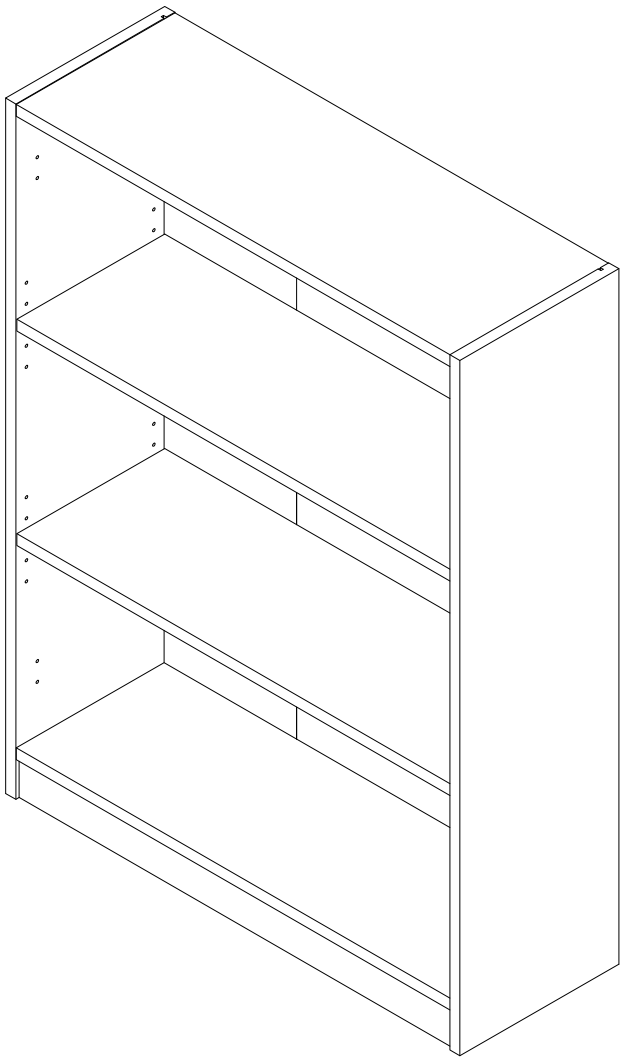

Two People

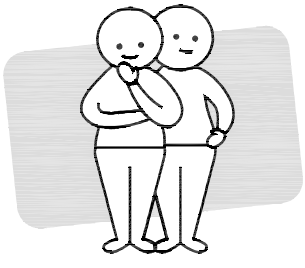

Required

Kobi

Bookcase Small Wide

www.fantasticfurniture.com.au

CA3332F0608J02-01

Secure it!

Preventing furniture tip-over accidents

WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY.

To avoid any serious or fatal injury, this product has been supplied with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Connecting attachments for your wall are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what wall connections to use.

Recommended weight capacity: 10kg/Drawer

⚠ WARNING

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

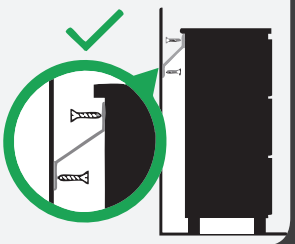

Wall anchoring guide



For plasterboard
(with available wood stud)

Securing method:
Self drilling plasterboard anchor.

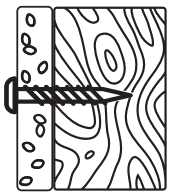

For plasterboard
(with available wood stud)

Securing method:
Screw inserted directly into stud.

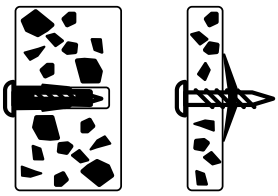

For masonry wall

Securing method:
Solid wall: Plug with screw
Hollow wall: Spring toggle

Please seek professional advise if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love

Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home for your chance to win a $250 Fantastic Furniture Gift Card!
@fantasticfurniture

Assembly Checklist

Read through the instructions carefully before you begin.

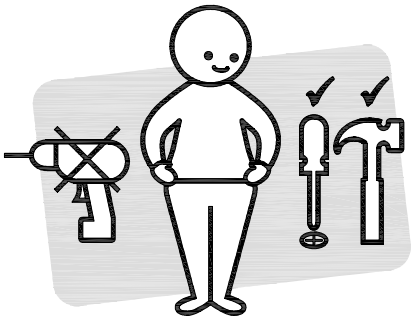

Make sure you have all the required tools. Never use power tools unless instructed.

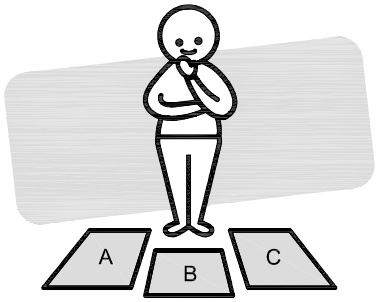

Identify and lay out all of the components before you begin assembly.

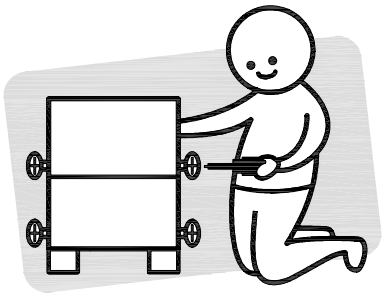

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.

! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

! Please see page 2 for any safety requirements or weight restrictions.

Fantastic Furniture

What You Need

to assemble the product

Other Tools You Need
Phillips head screwdriver; Hammer

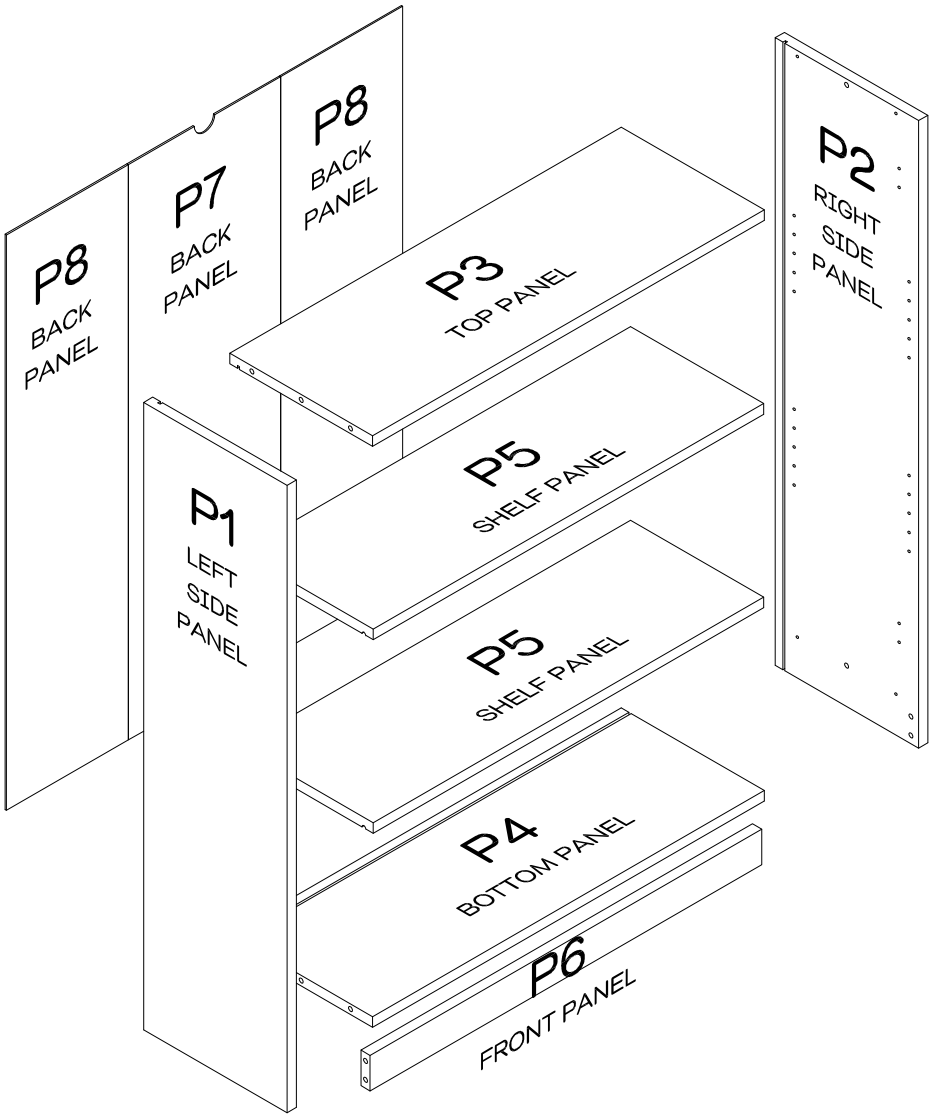

Parts List

Box 1: Left Side Panel (P1)
Right Side Panel (P2)
Top Panel (P3)
Bottom Panel (P4)
2 x Shelf Panel (P5)
Front Panel (P6)
Back Panel (P7)
2 x Back Panel (P8)

Hardware Pack:

8 × Wedge Screws (H1)

1 × Bracket Screw (H2)

2 × Washers (H3)


8 × Dowels (H4)


8 × Cam Bolts (H5)

8 × Cam Nuts (H6)


4 × Feet Glides (H7)

1 × Wall Bracket (H8)

8 × Shelf Studs (H9)

8 × Wedges (H10)

Fantastic Furniture

Step 1

You will need
8 × Dowels (H4)

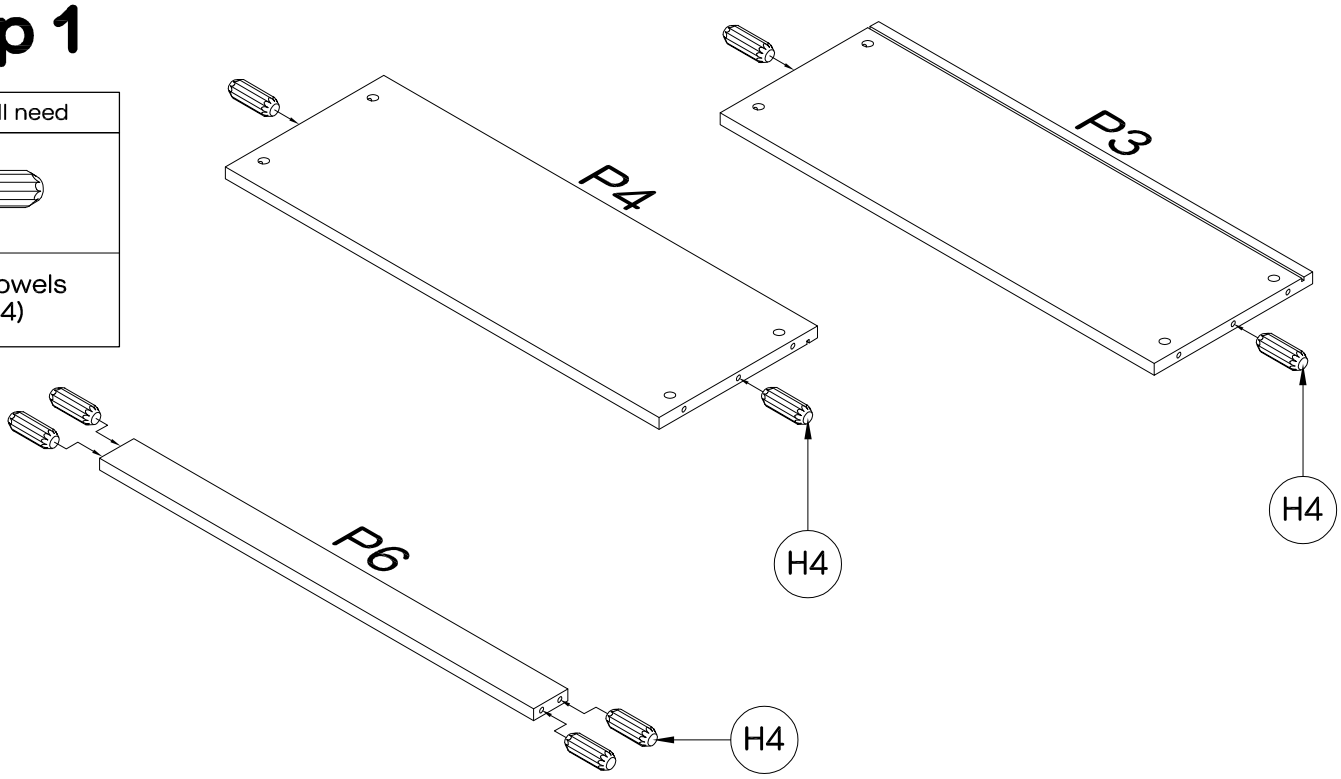

Insert 2 x Dowels (H4) into Top Panel (P3), 2 x Dowels (H4) into Bottom Panel (P4) and 4 x Dowels (H4) into Front Panel (P6).

Step 2

You will need

8 × Cam Bolts (H5)

Phillips Head Screwdriver

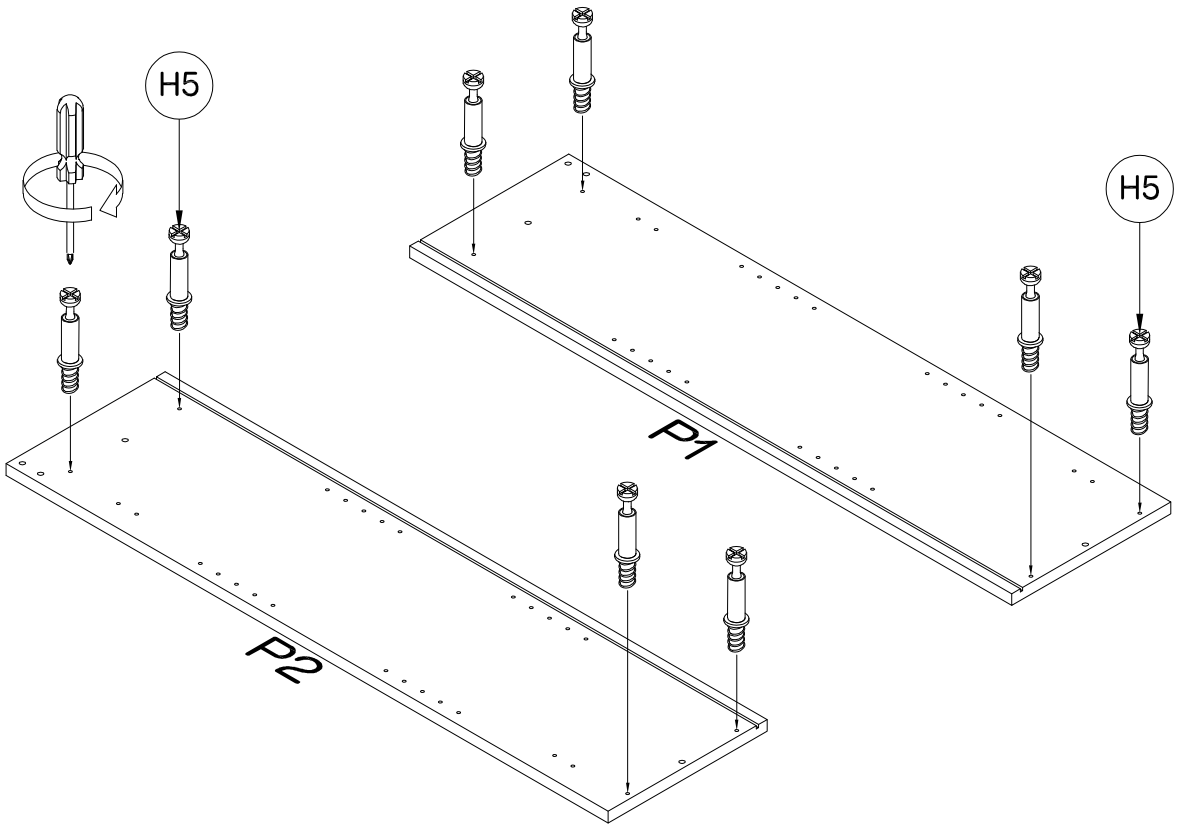

Secure 4 x Cam Bolts (H5) to Left Side Panel (P1) and 4 x Cam Bolts (H5) to Right Side Panel (P2) by tightening with the Phillips Head Screwdriver.

Step 3

You will need
4 × Cam Nuts (H6)

Phillips Head Screwdriver

This is how a cam nut works...

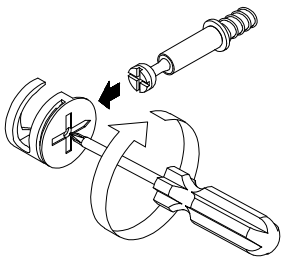

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

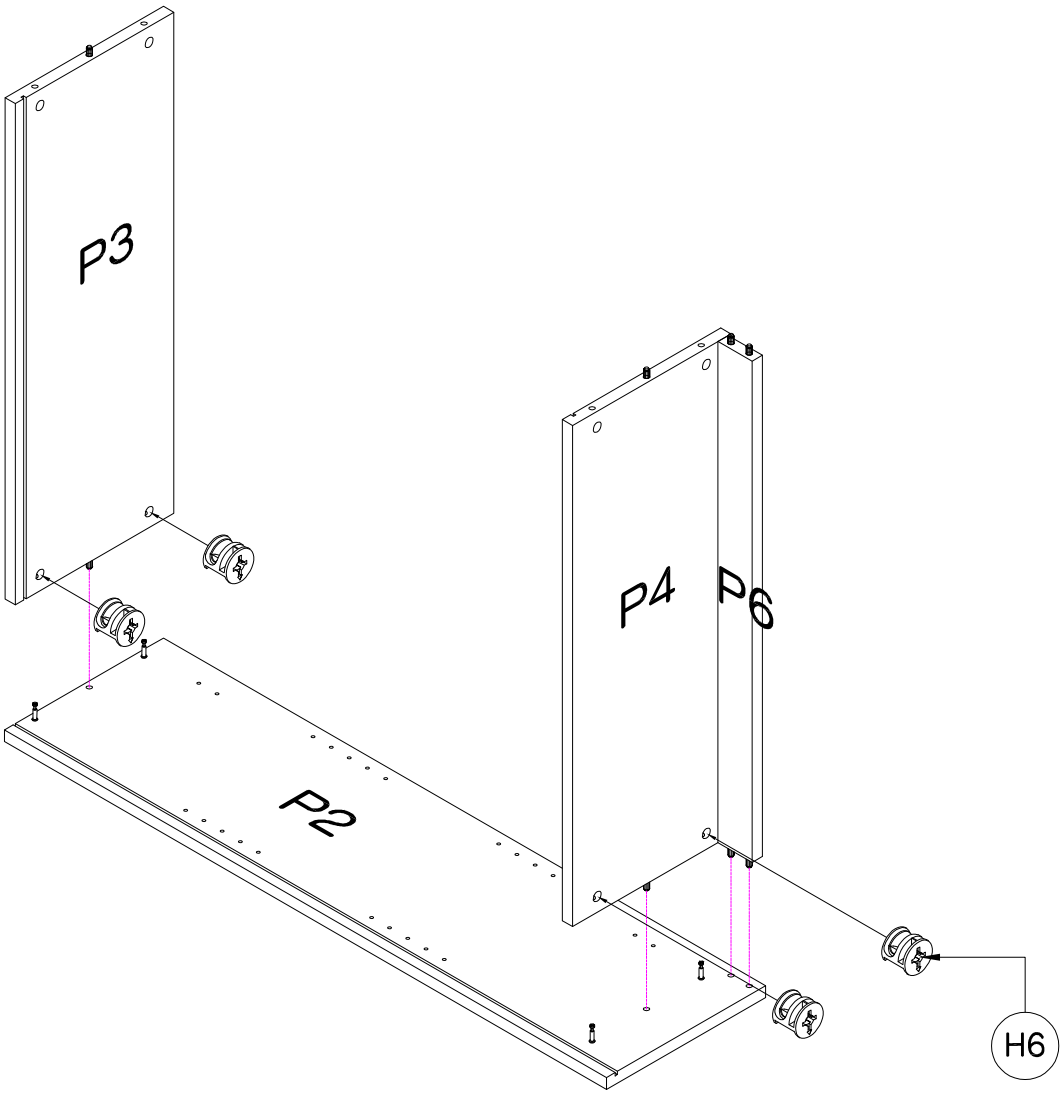

Insert 2 x Cam Nuts (H6) into Top Panel (P3) and 2 x Cam Nuts (H5) into Bottom Panel (P4) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Secure the Right Side Panel (P2) to Top & Bottom Panels (P3&P4) by tightening cam nuts with a Phillips Head Screwdriver. Insert Front Panel (P6) into Right Side Panel (P2) as shown.

Fantastic Furniture

Step 4

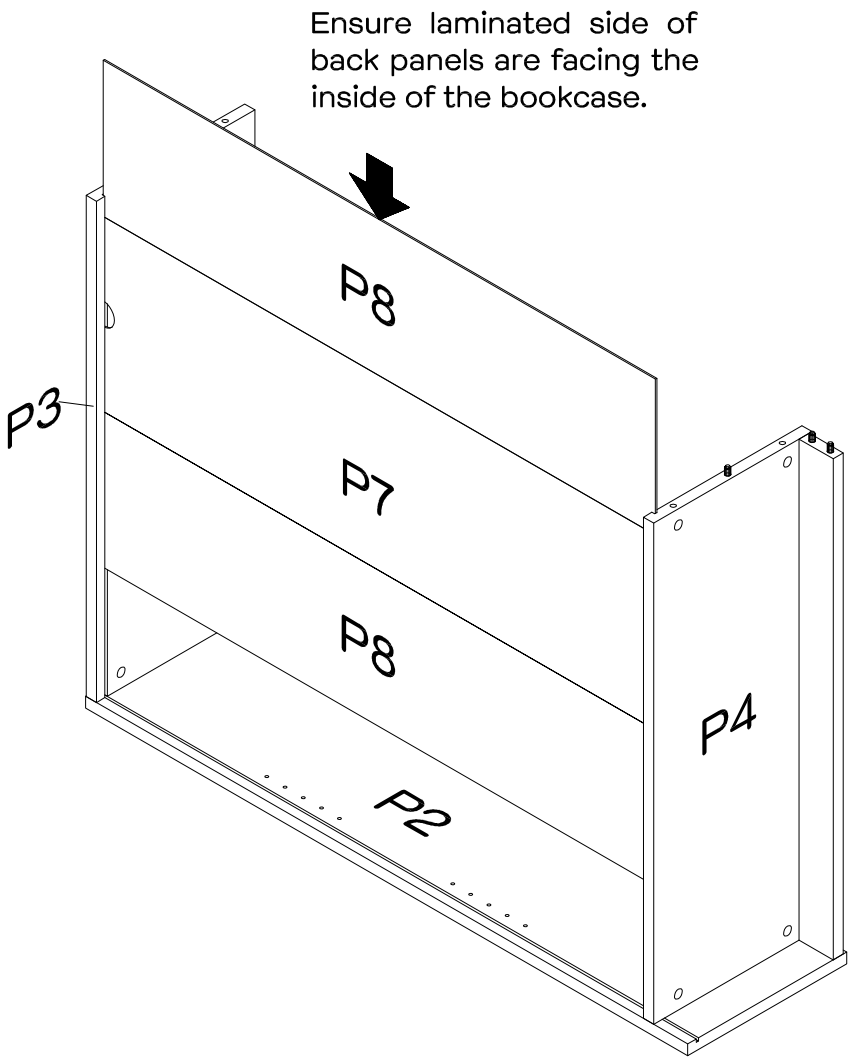

Slide Back Panels (P7&P8x2) into the grooves of Right Side Panel (P2) and Top & Bottom Panels (P3&P4) as shown.

Step 5

You will need
4 × Cam Nuts (H6)

Phillips Head Screwdriver

This is how a cam nut works...

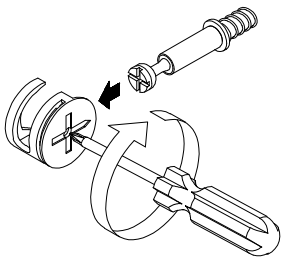

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

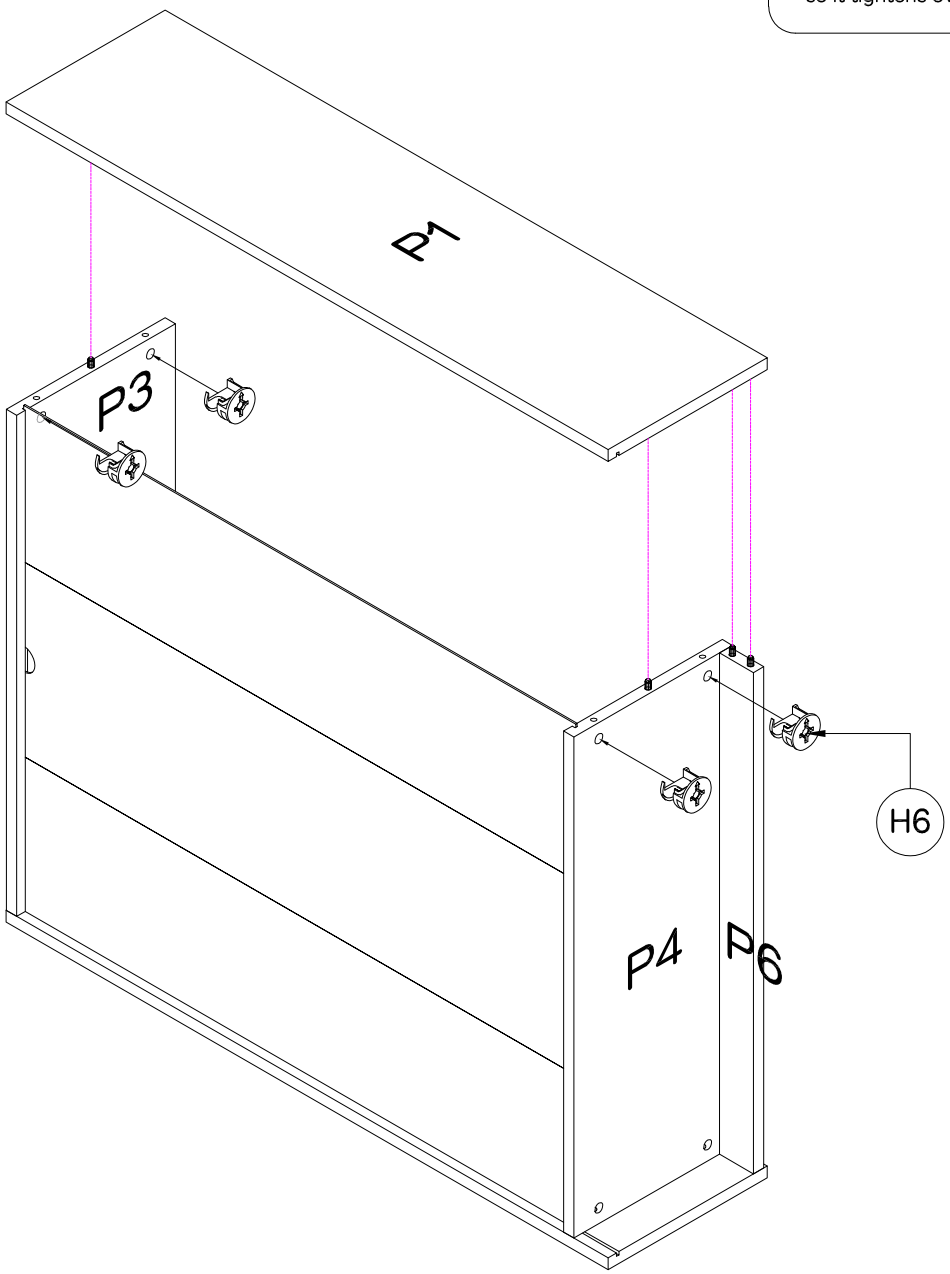

Insert 2 x Cam Nuts (H6) into Top Panel (P3) and 2 x Cam Nuts (H6) into Bottom Panel (P4) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Secure the Left Side Panel (P1) to Top & Bottom Panels (P3&P4) by tightening cam nuts with a Phillips Head Screwdriver.

Fantastic Furniture

Step 6

You will need

4 × Feet Glides (H7)
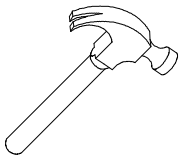
Hammer

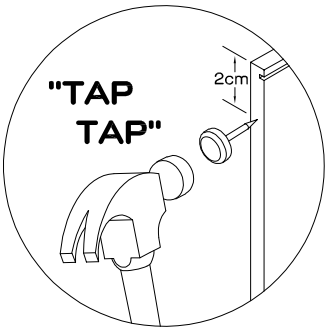

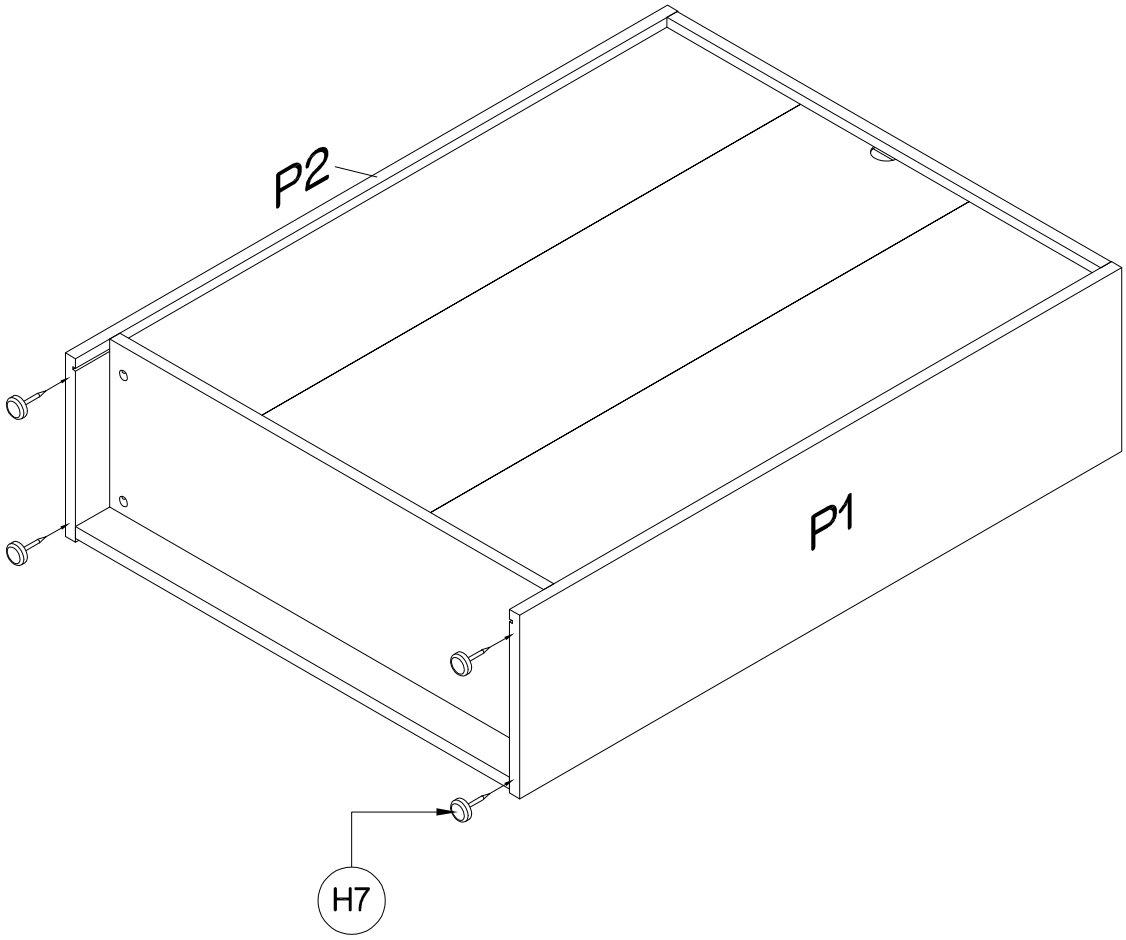

Secure 4 x Feet Glides (H7) to the bottom of Left & Right Side Panels (P1&P2) with the Hammer. Ensure the feet glides are evenly spaced, approximately 2cm from the end of each panel.

Step 7

You will need
8 × Wedge Screws (H1)
8 × Wedges (H10)

Phillips Head Screwdriver

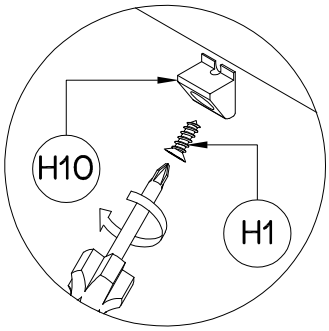

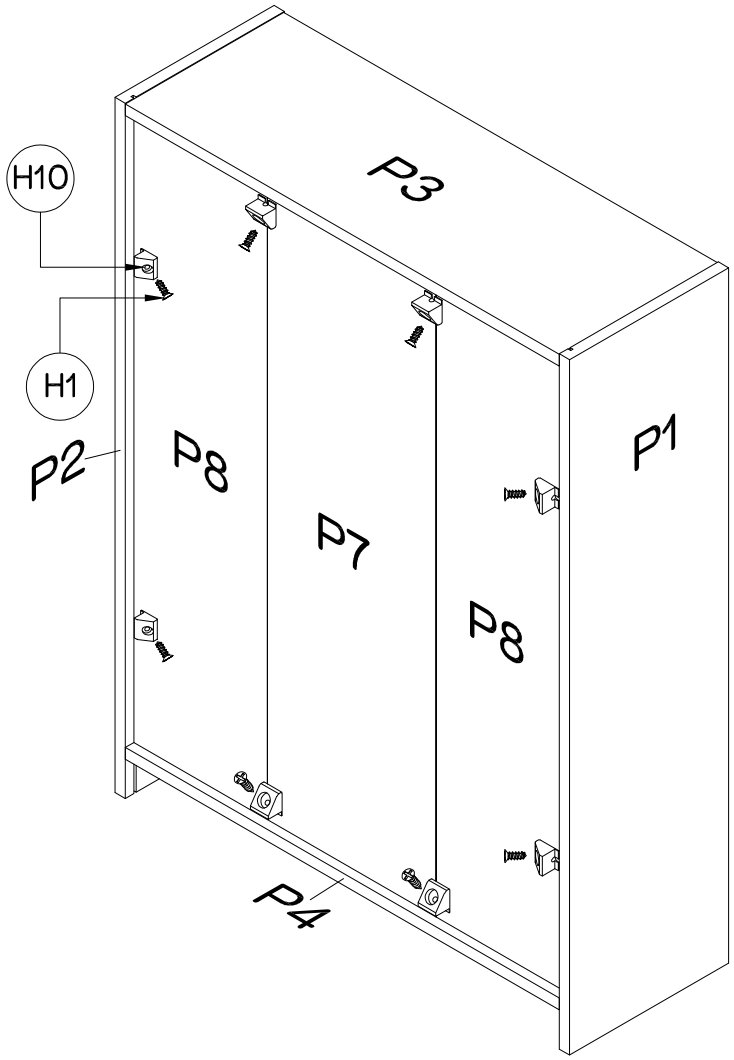

Insert 8 x Wedges (H10) into Top Panel (P3), Bottom Panel (P4) and Side Panels (P1&P2) as shown and use 8 x Wedge Screws (H1) to secure by tightening with the Phillips Head Screwdriver.

Fantastic Furniture

Step 8

You will need

8 × Shelf Studs (H9)

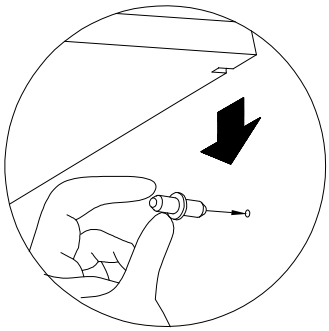

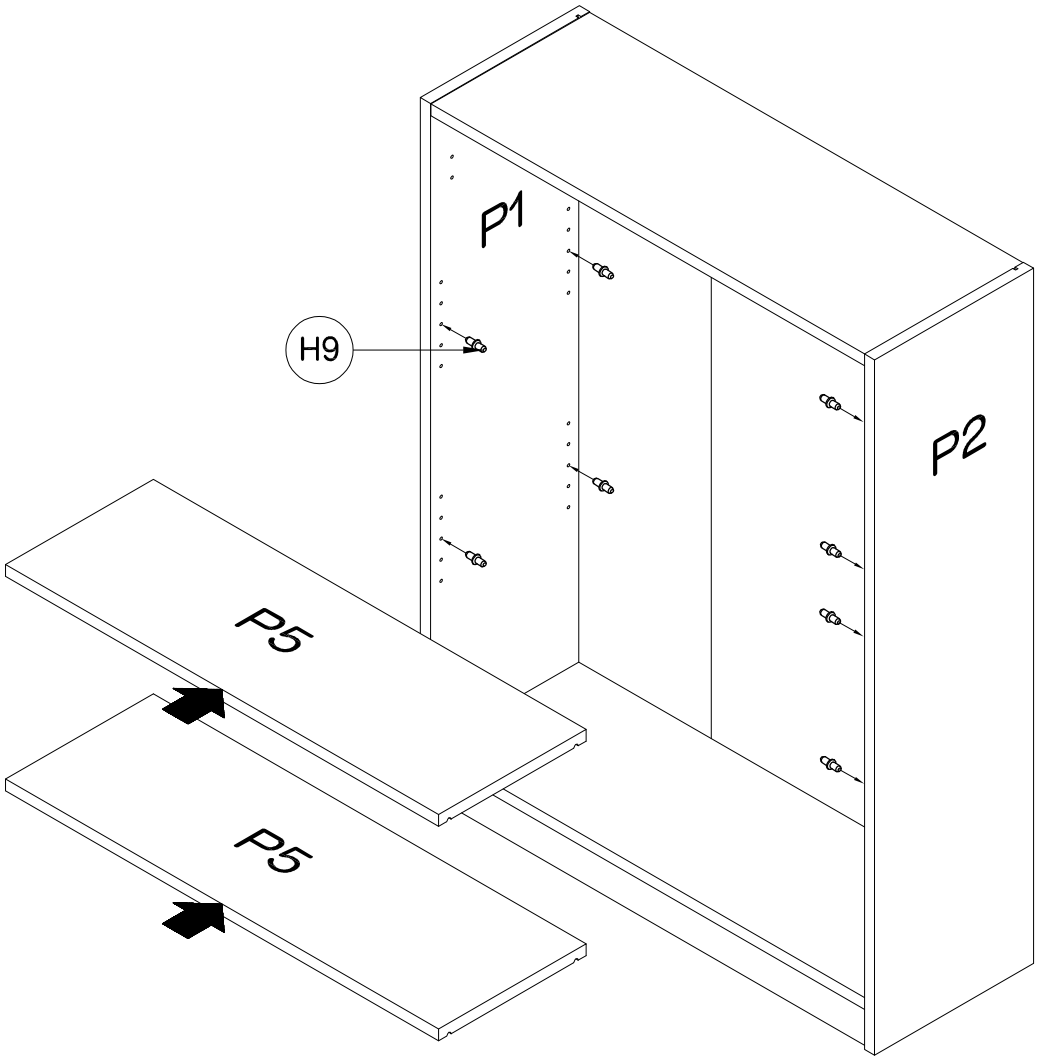

Insert 8 x Shelf Studs (H9) into the Left & Right Side Panels (P1&P2) at your preferred height. Place the Shelf Panels (P5x2) into the unit by resting each shelf on the shelf studs. Ensure each shelf is positioned securely.

Fantastic Furniture

Step 9

You will need	
1 × Bracket Screw (H2)	1 × Wall Bracket (H8)
	
1 × Washer (H3)	Phillips Head Screwdriver

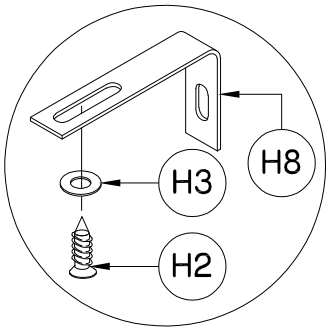

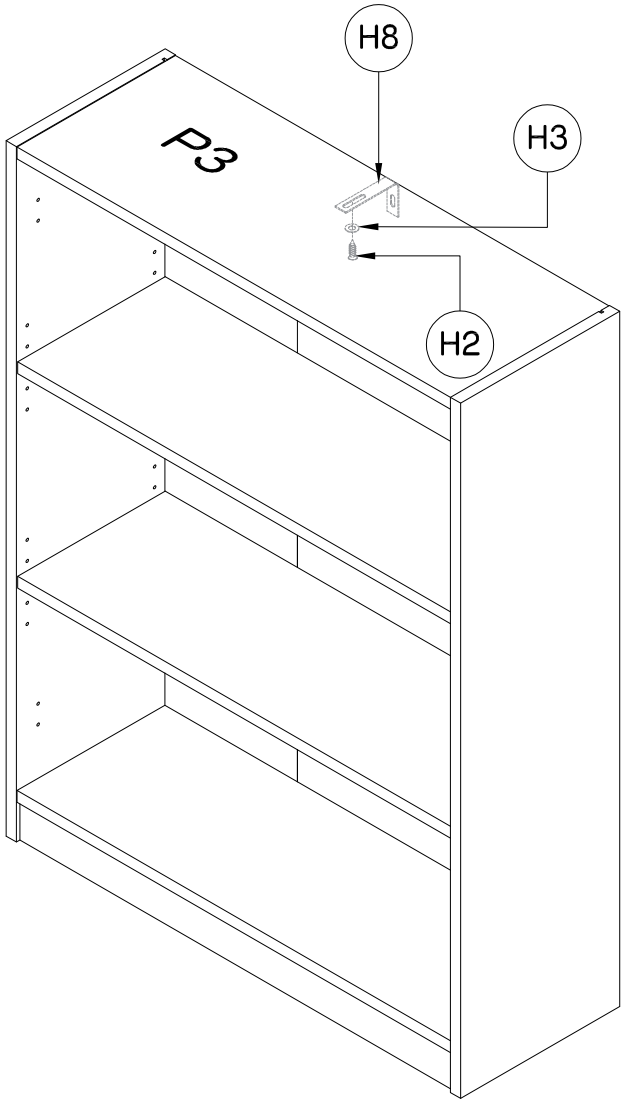

Use 1 x Bracket Screw (H2) and 1 x Washer (H3) to secure 1 x Wall Bracket (H8) to Top Panel (P3) as shown by tightening with the Phillips Head Screwdriver.

Fantastic Furniture

Step 10

You will need
1 × Washer (H3)

Phillips Head Screwdriver

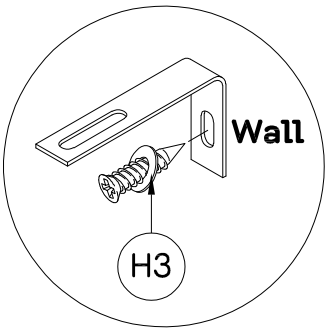

Screws and wall plugs are not provided, please use appropriate fixtures for your wall.

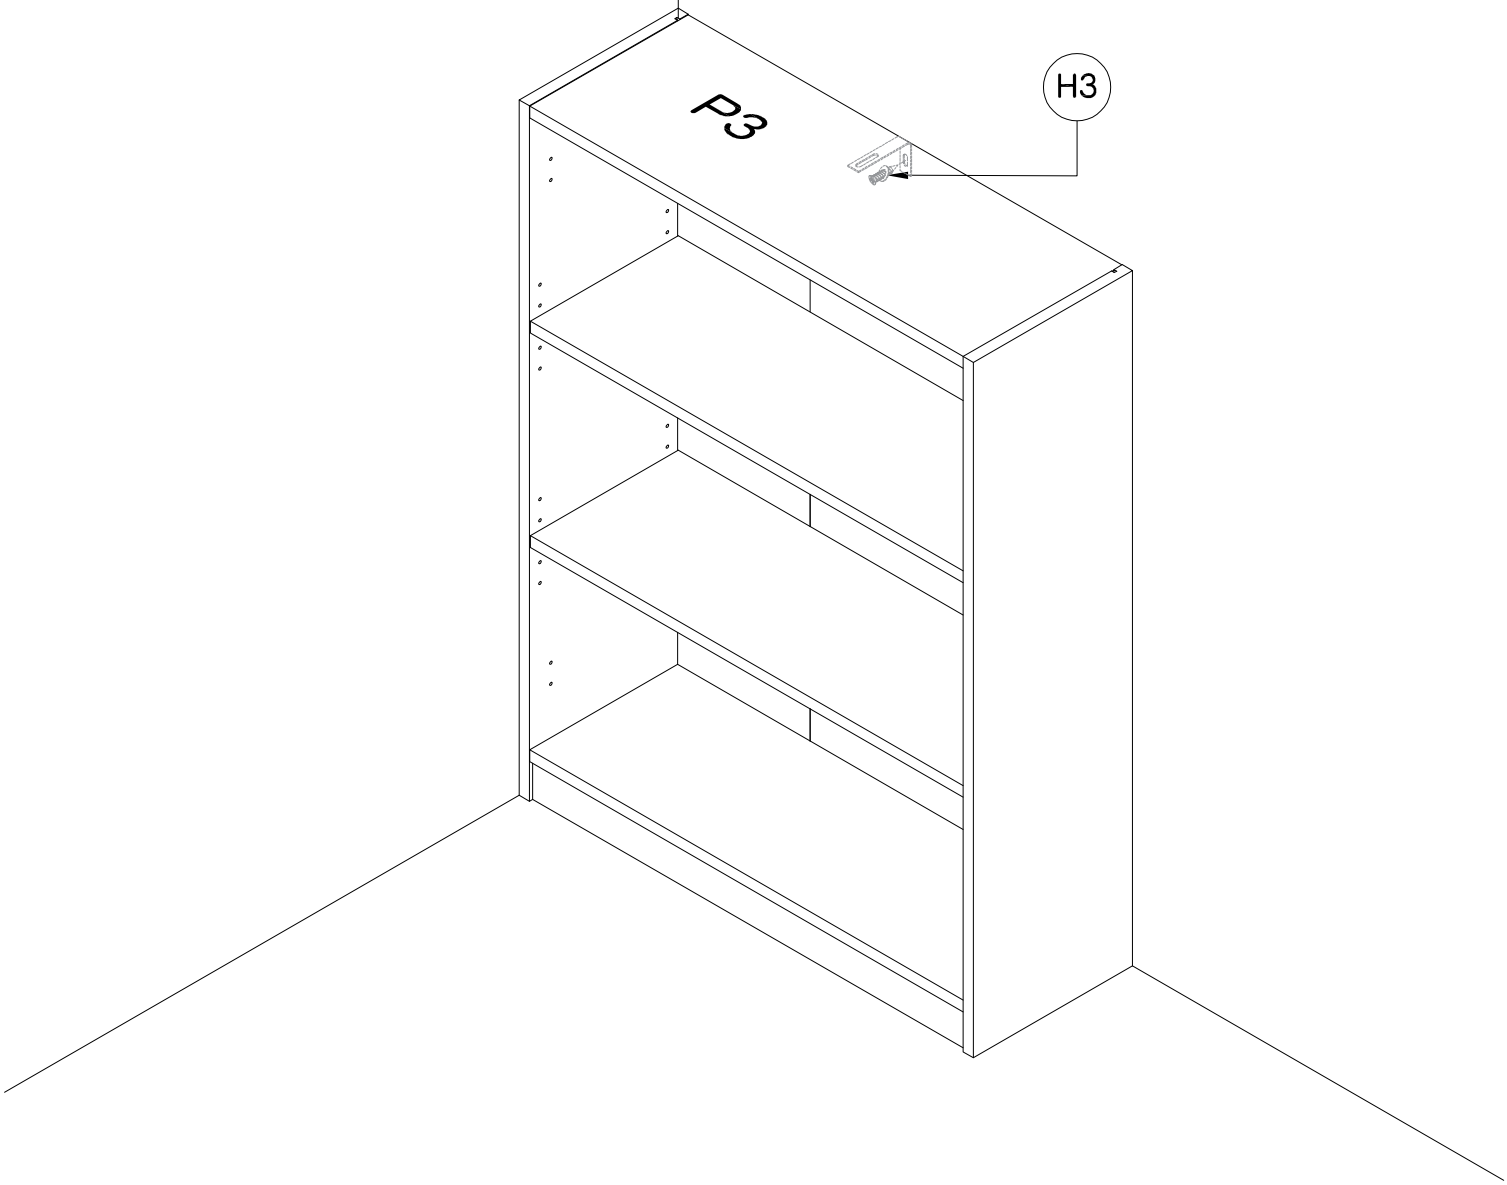

We strongly suggest using the wall bracket provided to prevent this unit from toppling. Seek advice from a qualified tradesperson on how to attach this to your specific wall. Move furniture to its final position, make sure it is firmly attached and a snug fit.

Fantastic Furniture

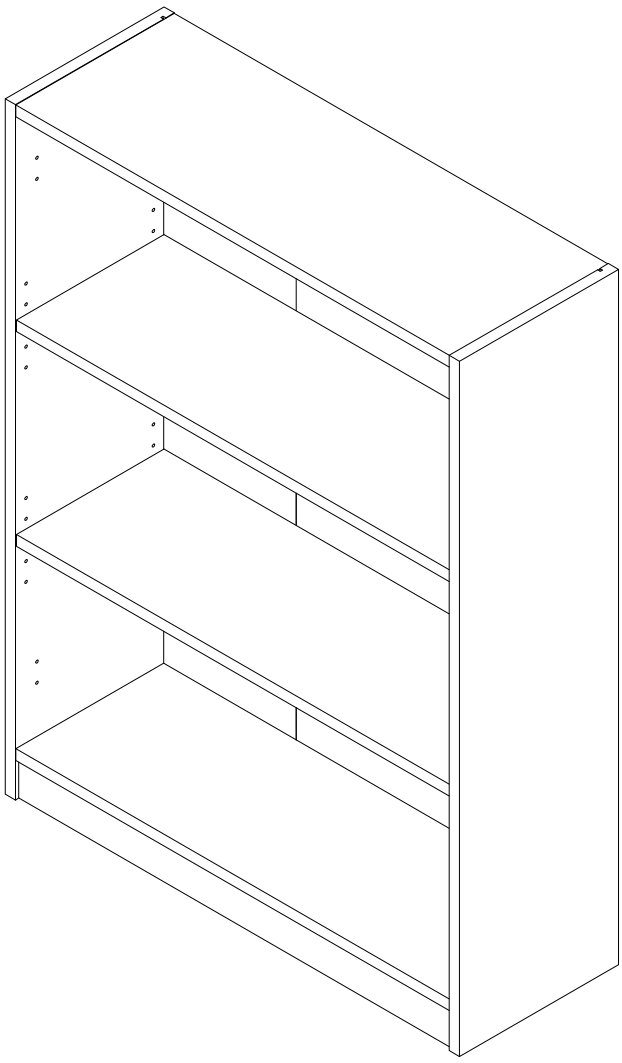

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

Fantastic Furniture