FURNI-Q-LED-TV160

ARTISS

⚠ WARNING

THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed, a lithium button battery can cause severe or fatal injuries within 2 hours.

Keep batteries out of reach of children.

If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

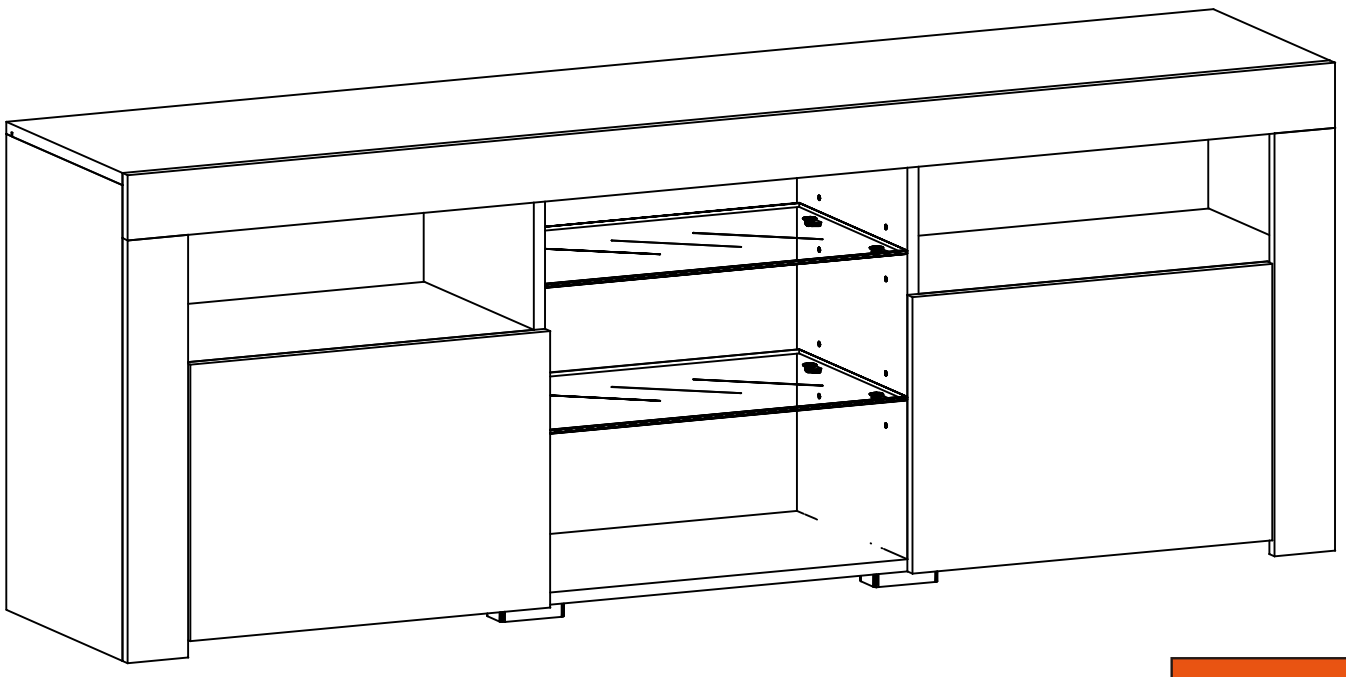

⚠ WARNING

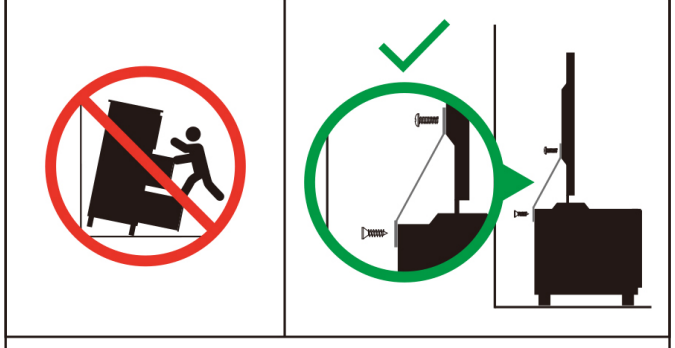

Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

This is a permanent label.
Do not remove!

Warning instructions:

1. Assembly should to be carried out by a competent adult only.
2. Regularly check all parts firmly fixed to ensure the furture for safe use.
3. Wipe clean only.
4. The warning sticker on the furniture is a mandatory requirement in Australia, and it can be removed by wet cloth.

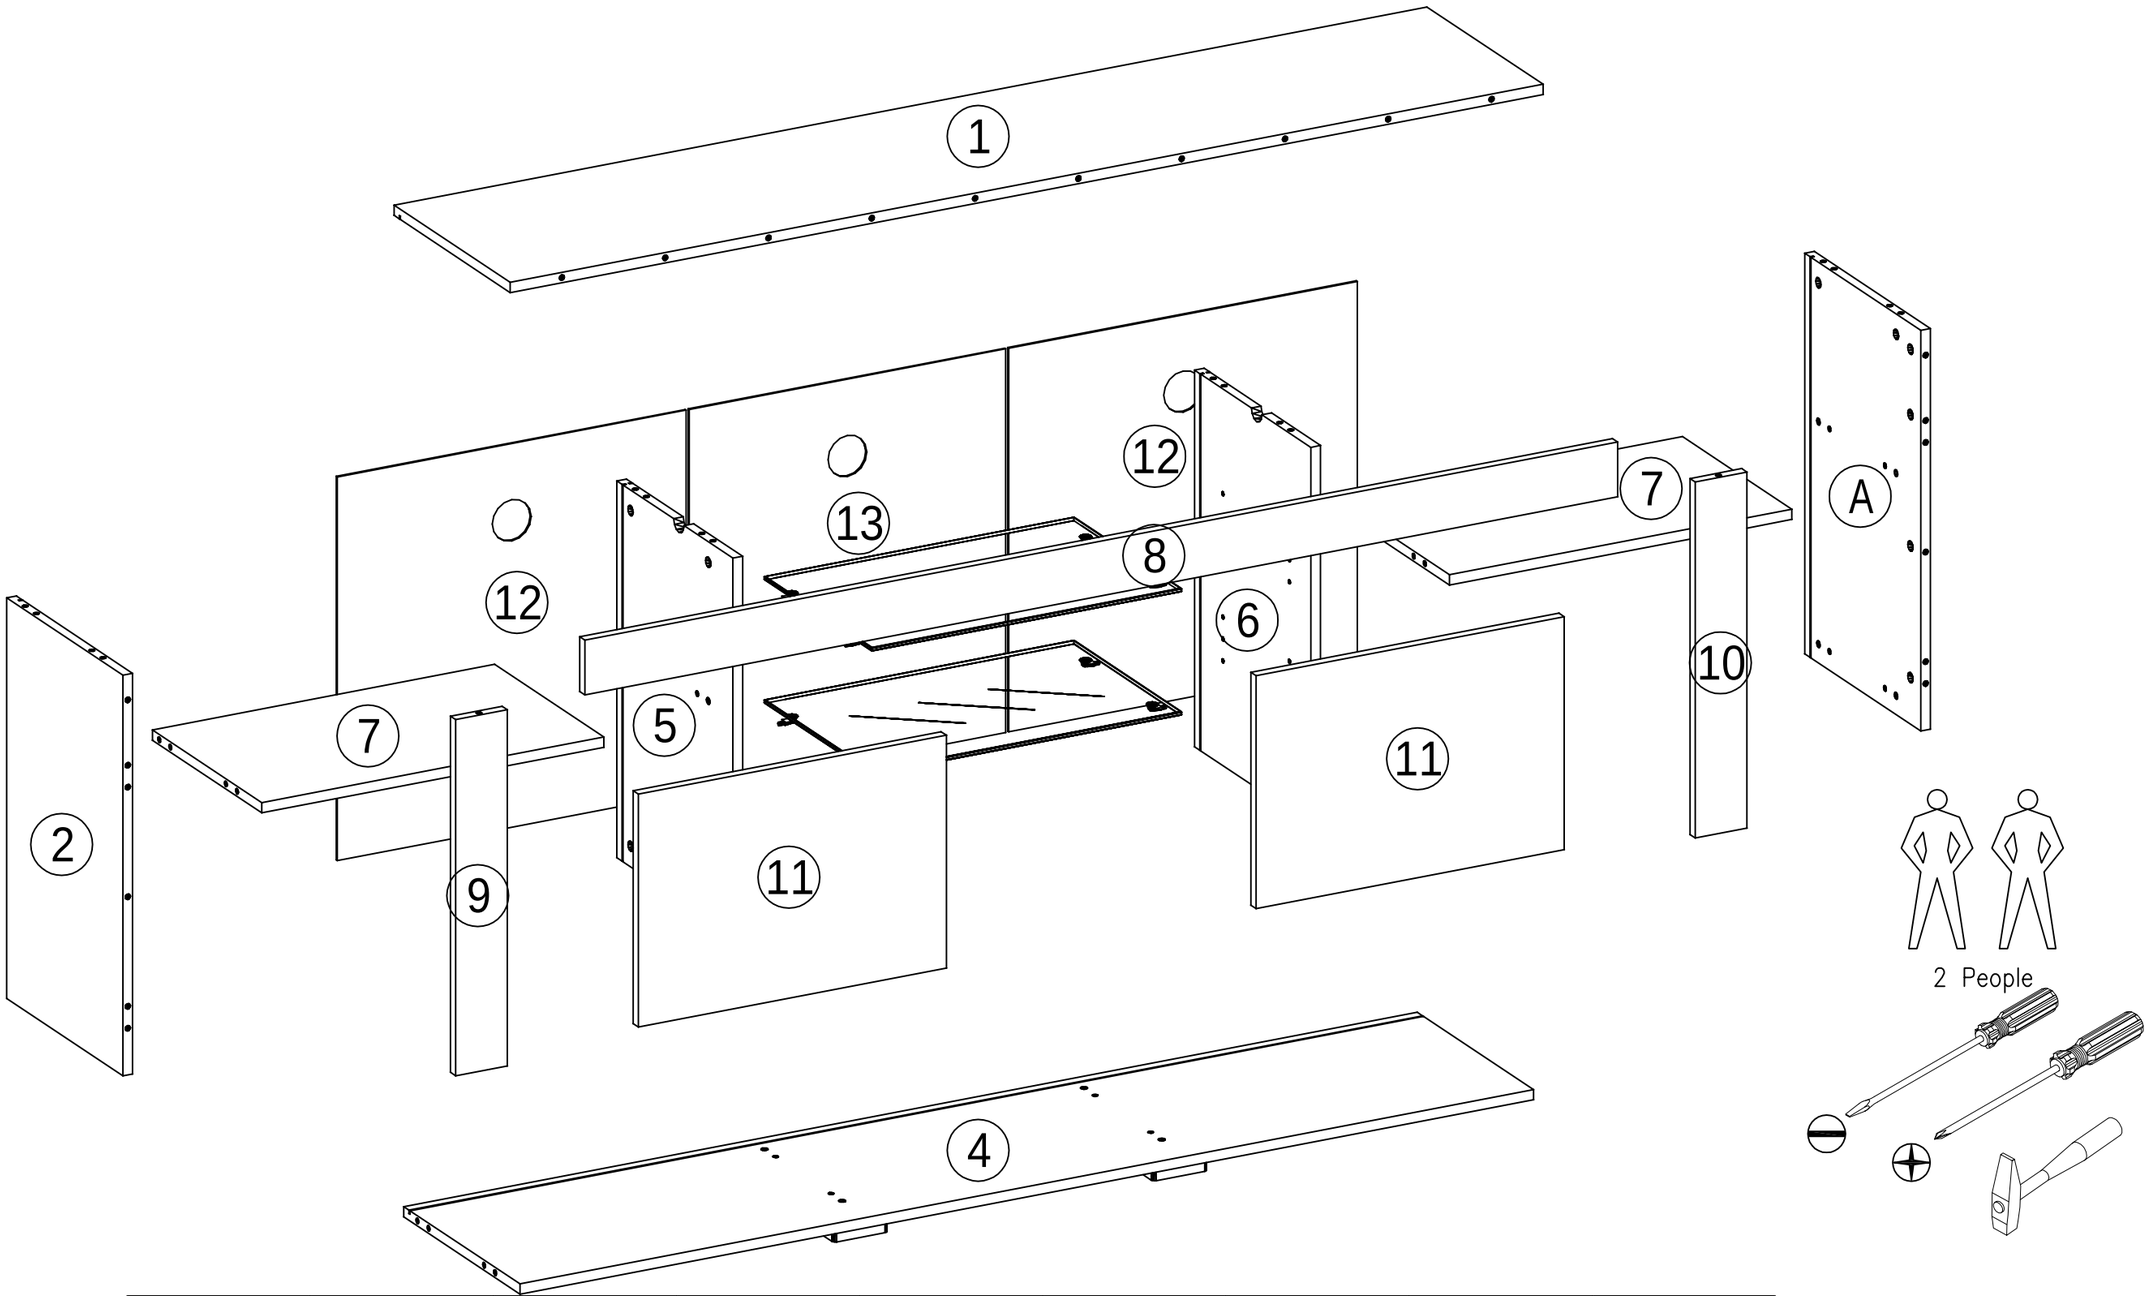

	⌀6*38mm		⌀15*11mm		⌀8*40mm		ST3.5*35mm		ST3.5*14mm		ST4*25mm												
B	38 PCS	C	38 PCS	D	34 PCS	E	2 PCS	F	42 PCS	G	8 PCS	H	4 PCS	J	4 PCS	K	2 PCS						
															ST3*12mm		LED TAPE						
L	2 PCS	M	8 PCS	N	4 PCS	P	6 PCS	Q	2 PCS	R	12 PCS	S	3 PCS	T	6 PCS	U	1 PCS	W	4 PCS				

Assembly checklist

Read through the instructions carefully before you begin.

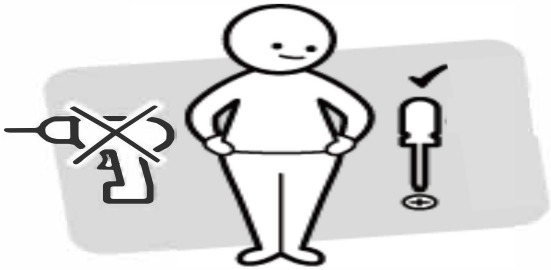

Make sure you have all the required tools. Do not use power tools.

Identify and lay out all of the components before you begin assembly.

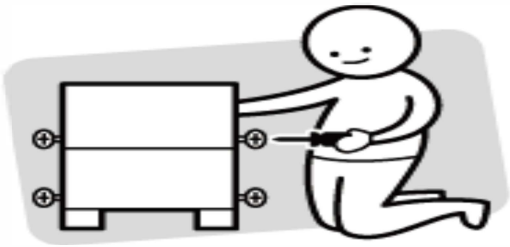

Do not fully tighten all screws until step/ process finished.

Useful Information

! Never use power tools, they can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

1

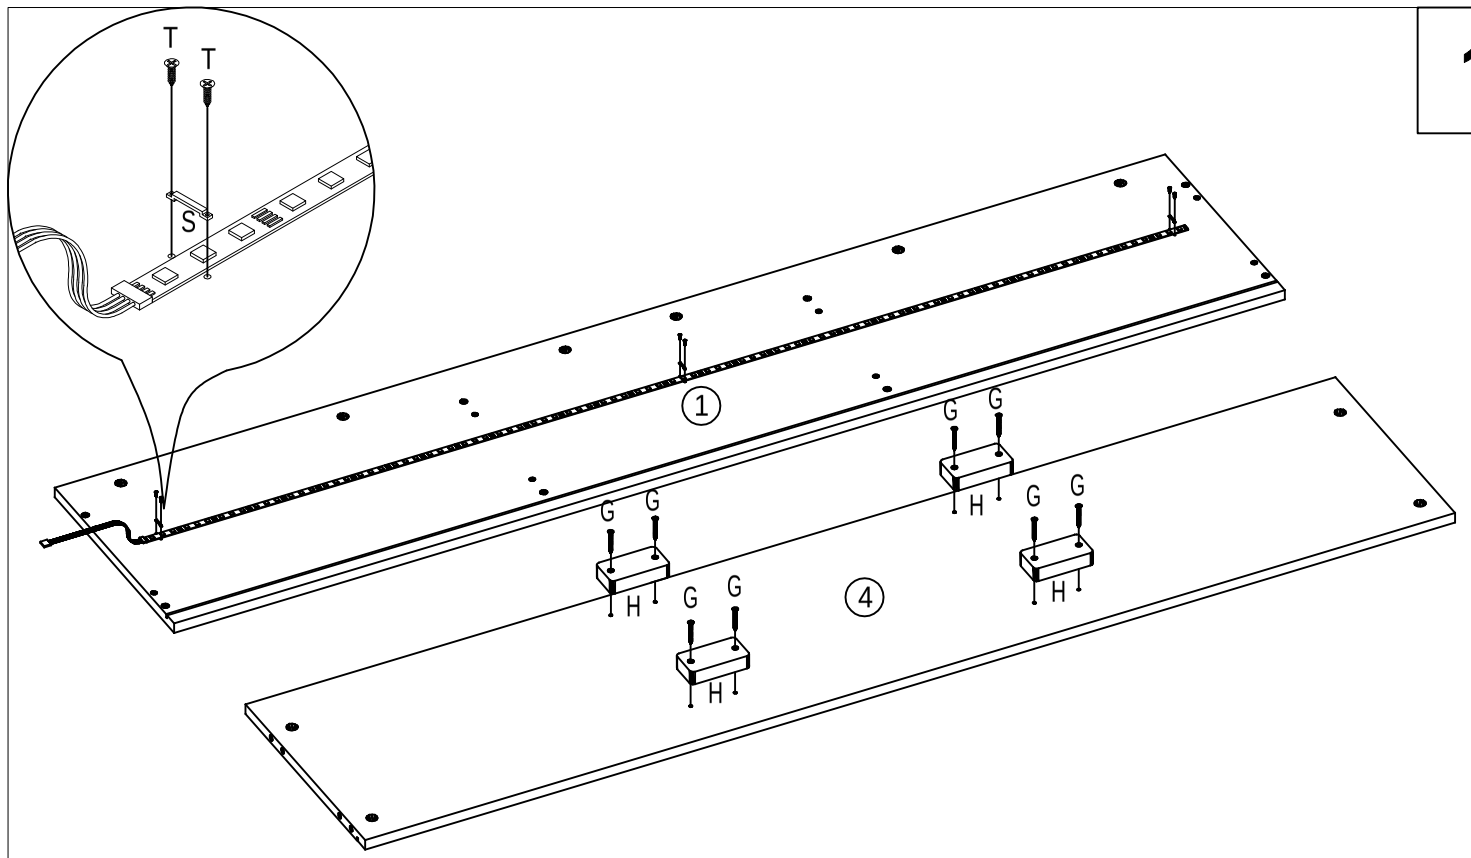

ST4*25mm				ST3*12mm		LED TAPE	
G	8 PCS	H	4 PCS	S	3 PCS	T	6 PCS	U	1 PCS

3

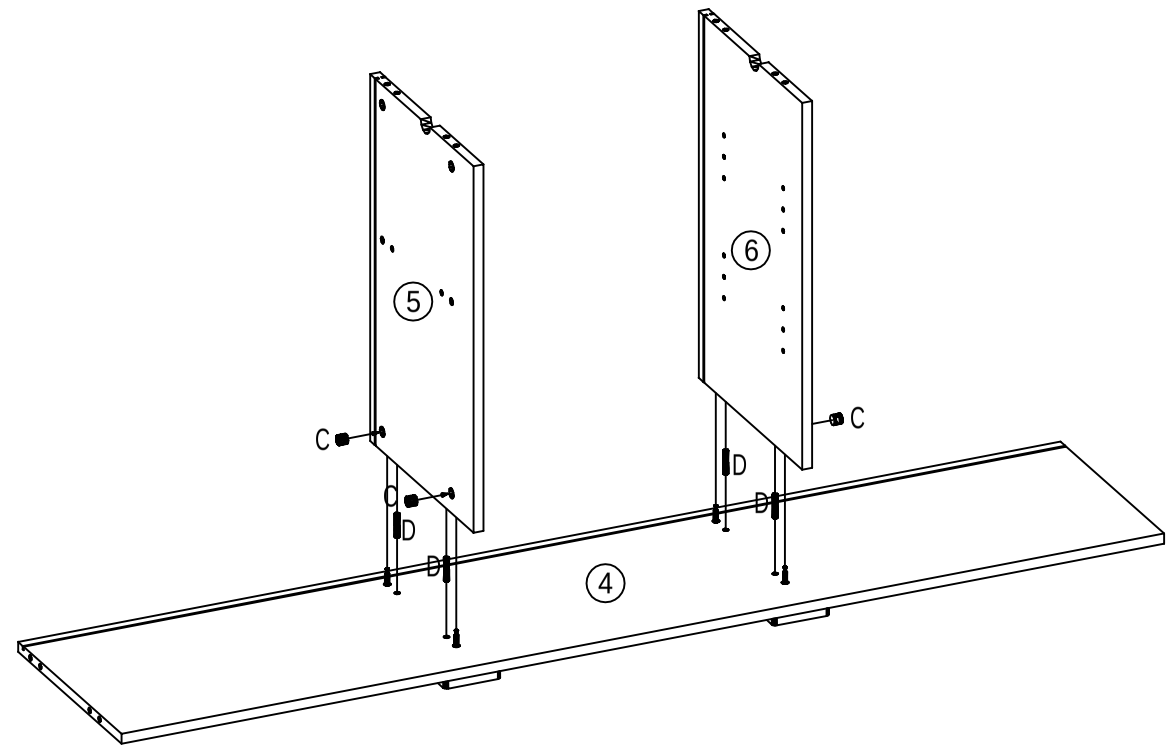

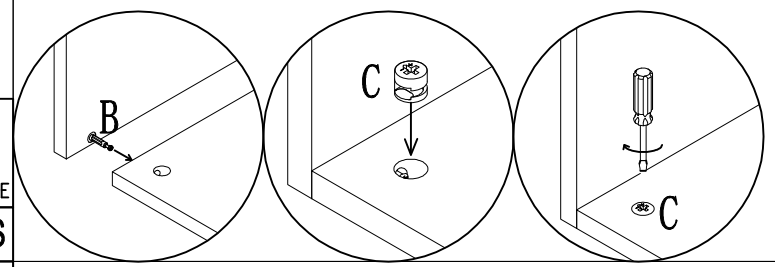

⌀15*11mm		⌀8*40mm	
C	4 PCS	D	4 PCS

2

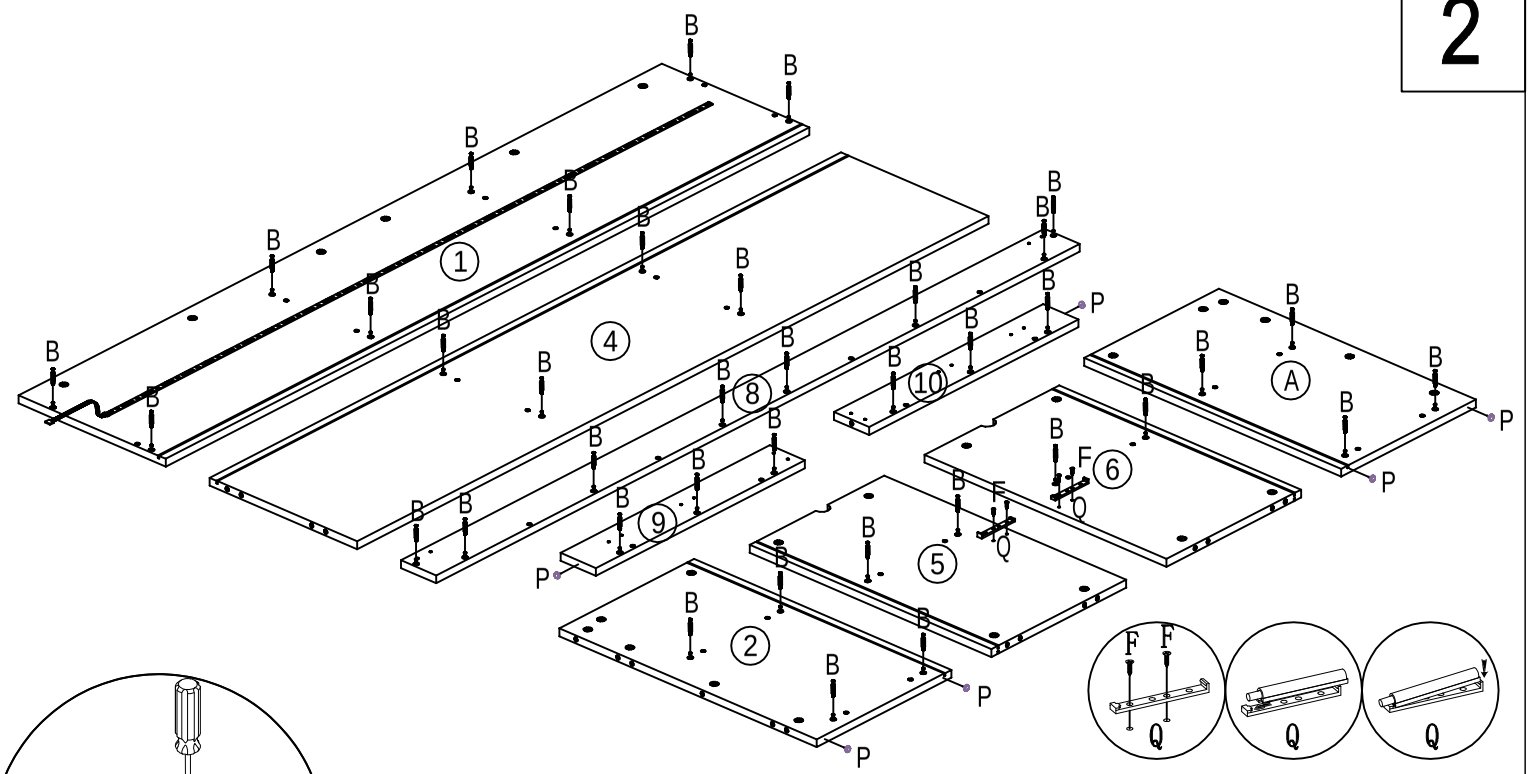

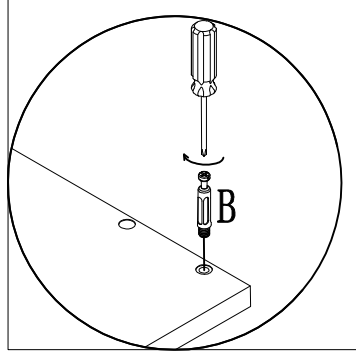

⌀6*38mm		ST3.5*14mm				
B	38 PCS	F	4 PCS	P	6 PCS	Q	2 PCS

4

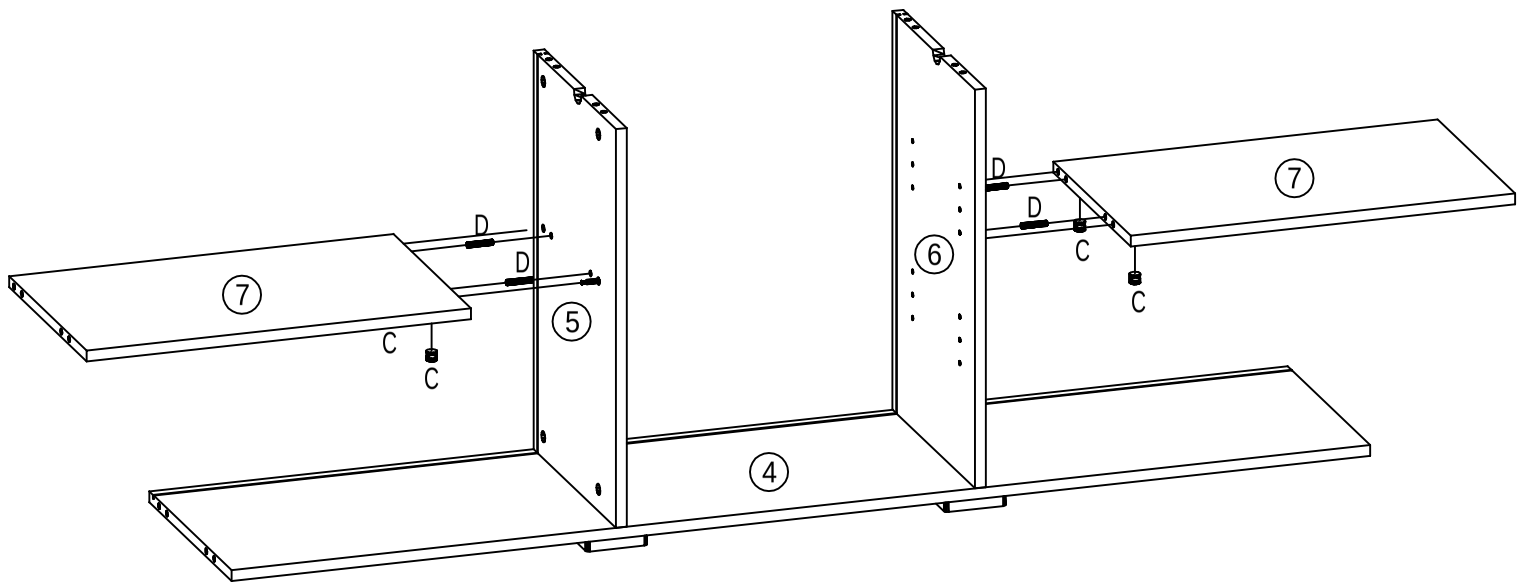

⌀15*11mm		⌀8*40mm	
C	4 PCS	D	4 PCS

5

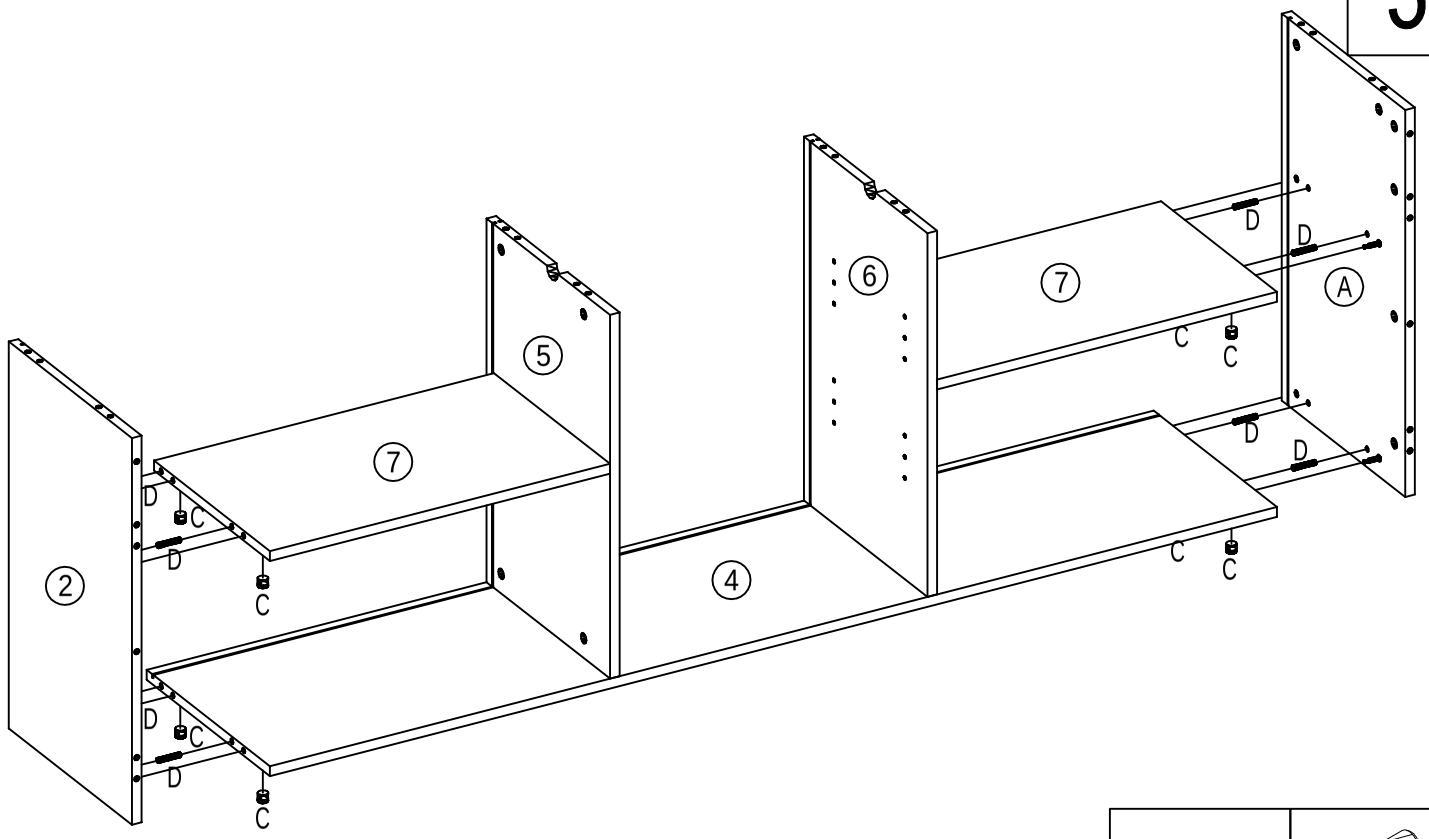

	⌀15*11mm		⌀8*40mm
C	8 PCS	D	8 PCS

7

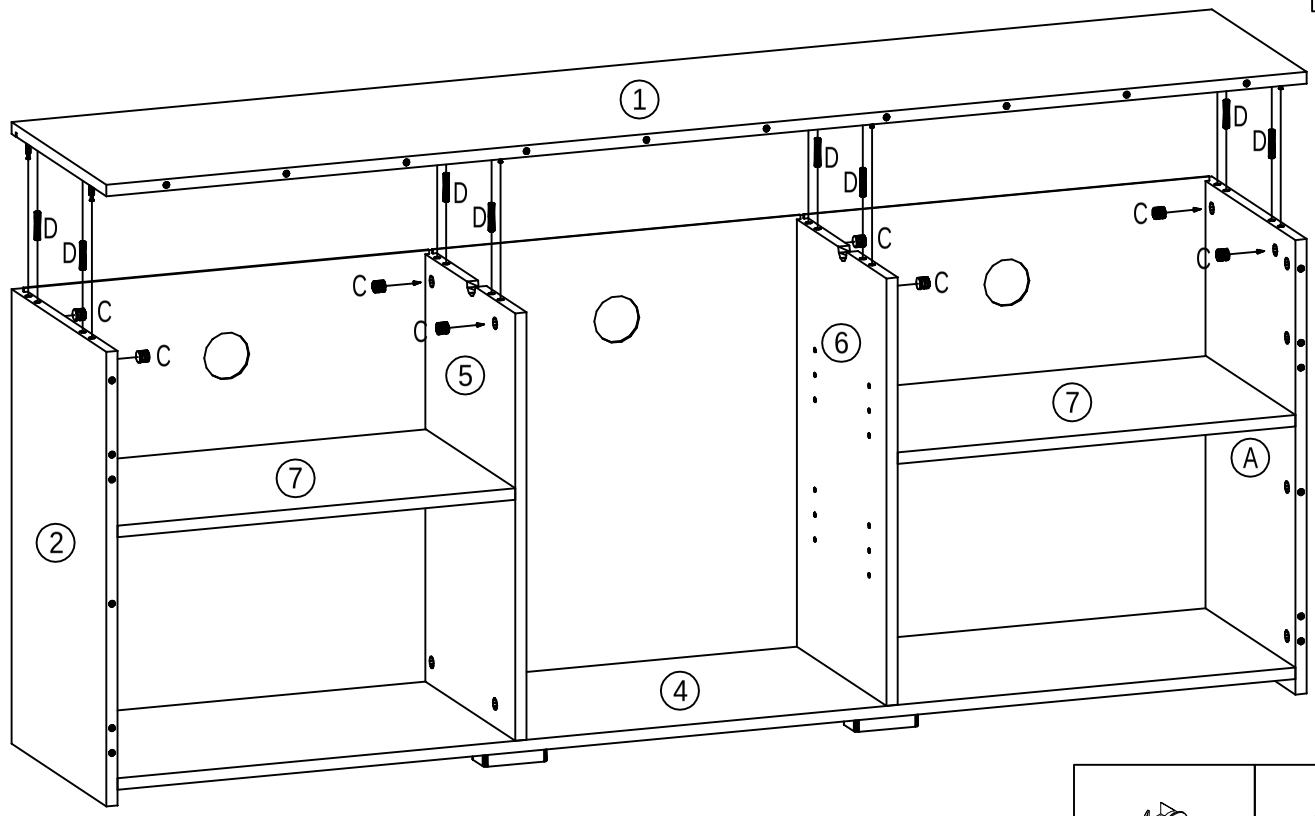

	⌀15*11mm		⌀8*40mm
C	8 PCS	D	8 PCS

6

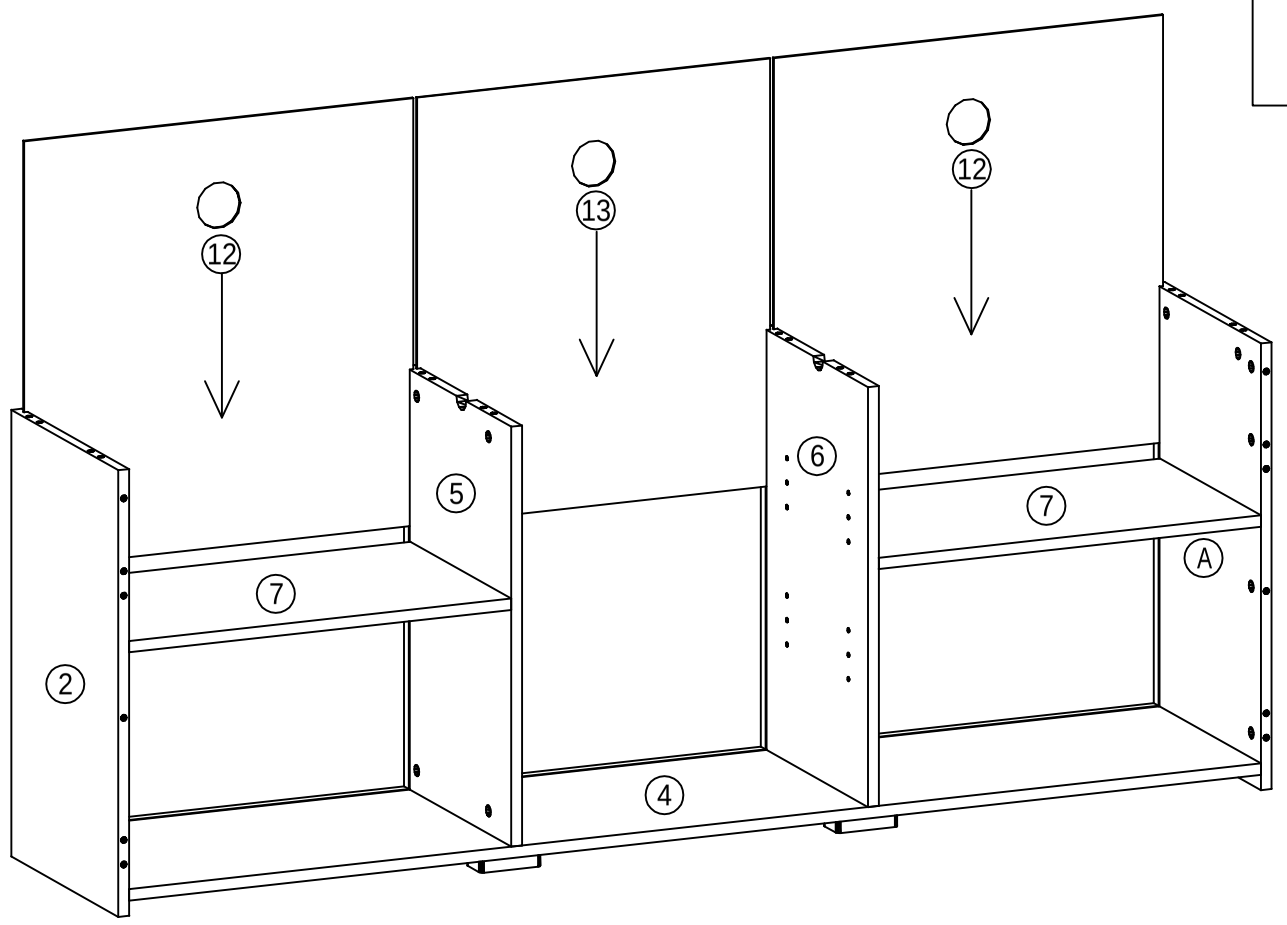

8

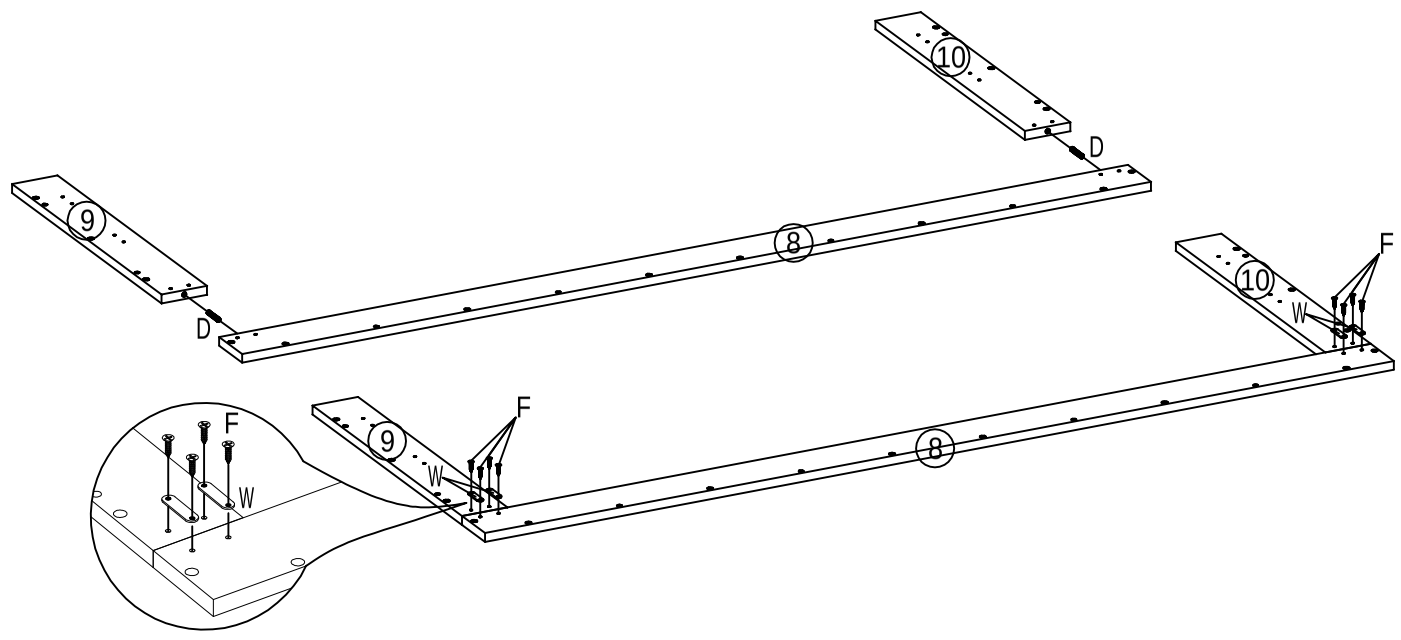

	⌀8*40mm		ST3.5*14mm		
D	2 PCS	F	8 PCS	W	4 PCS

9

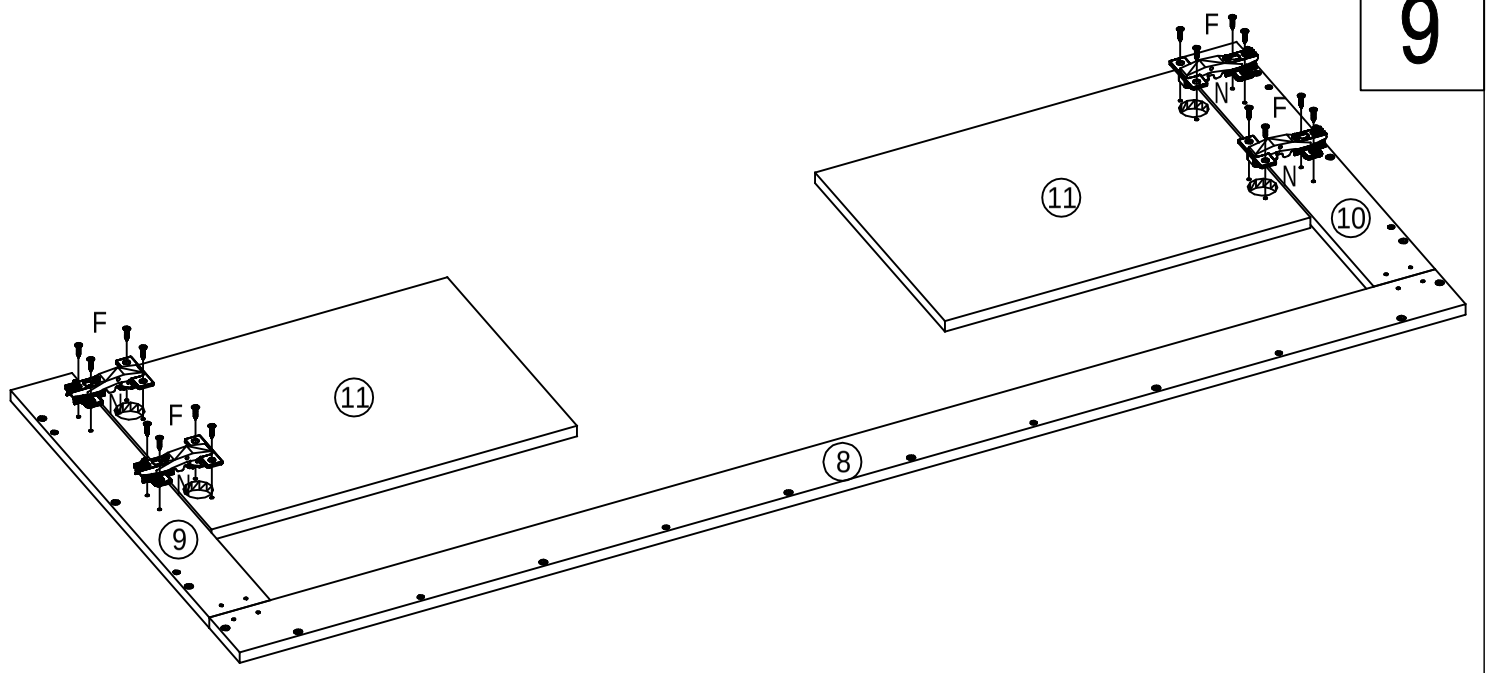

ST3.5*14mm			
F	16 PCS	N	4 PCS

11

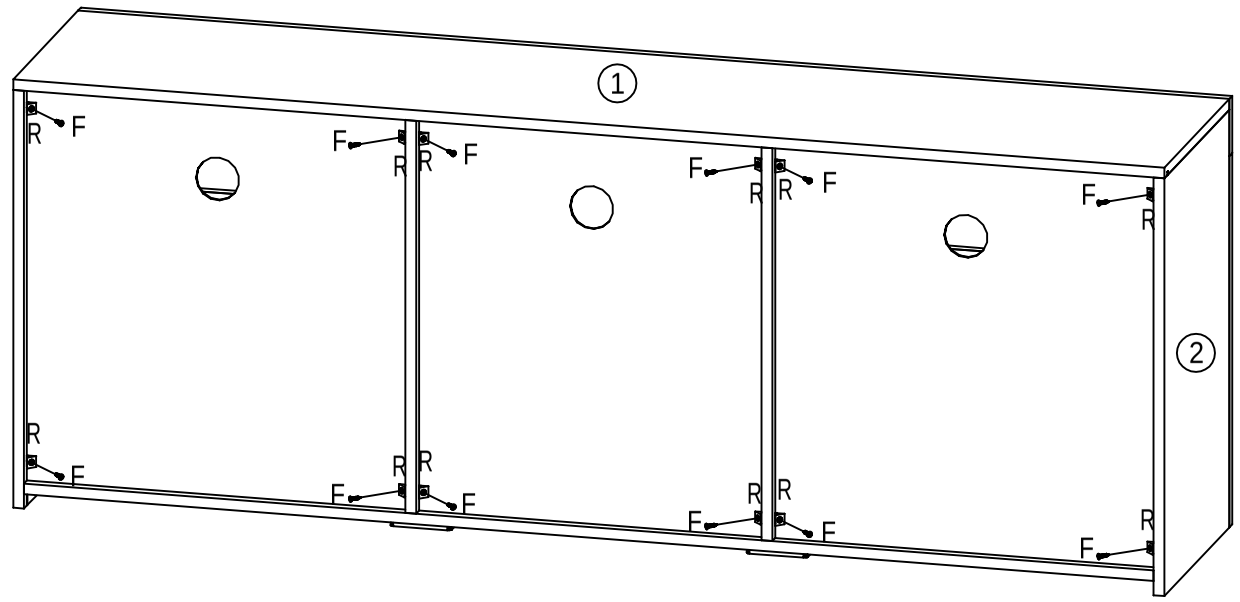

ST3.5*14mm			
F	12 PCS	R	12 PCS

10

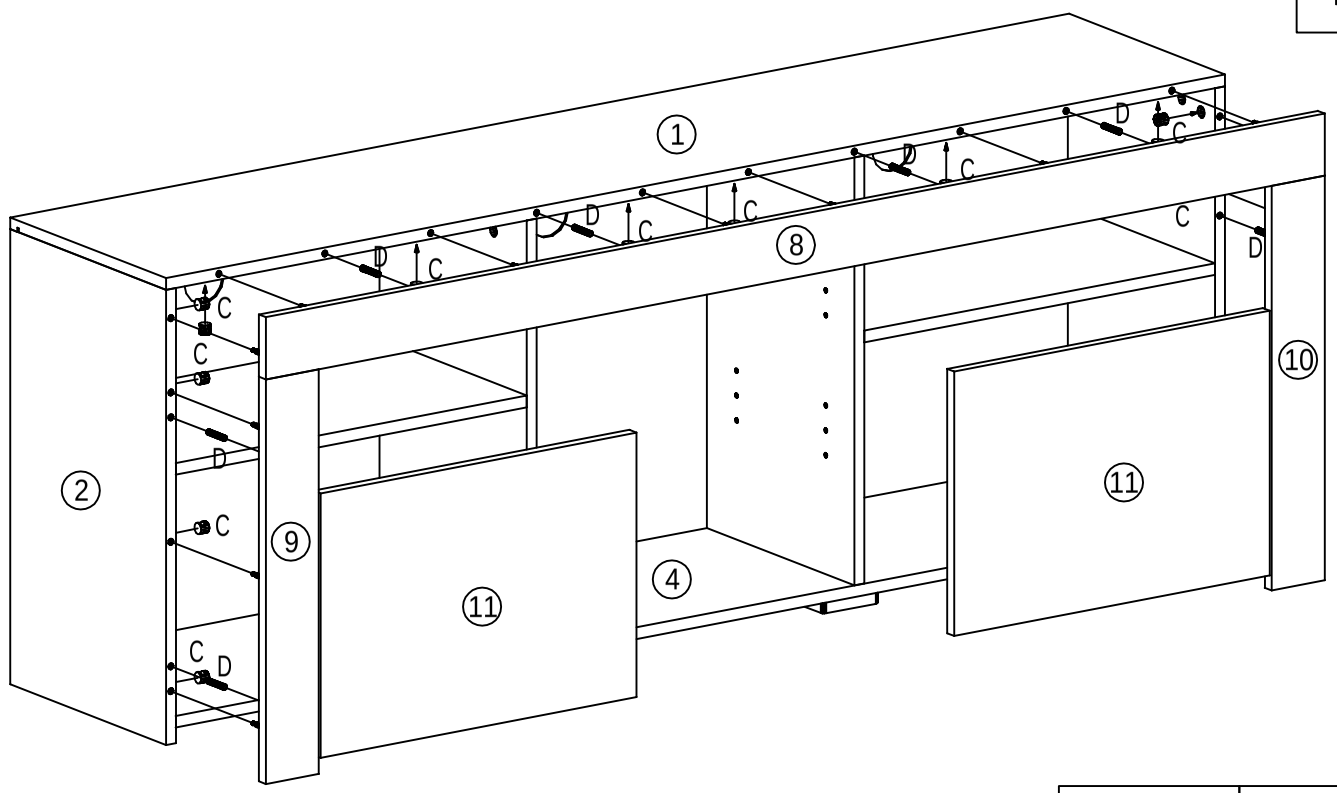

⌀15*11mm		⌀8*40mm	
C	14 PCS	D	8 PCS

12

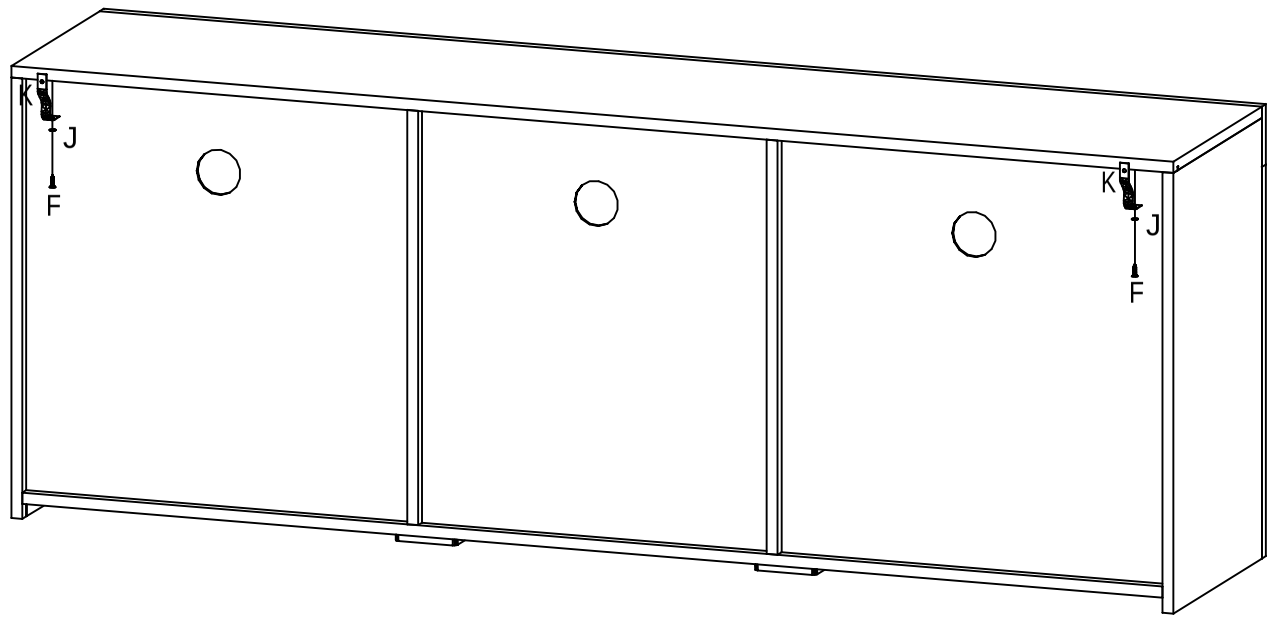

ST3.5*14mm				
F	2 PCS	J	2 PCS	K	2 PCS

13

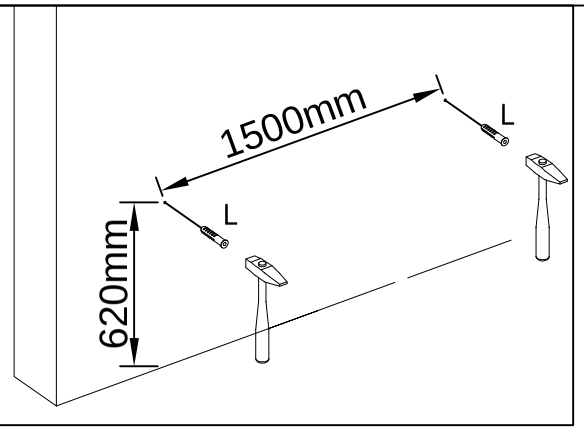

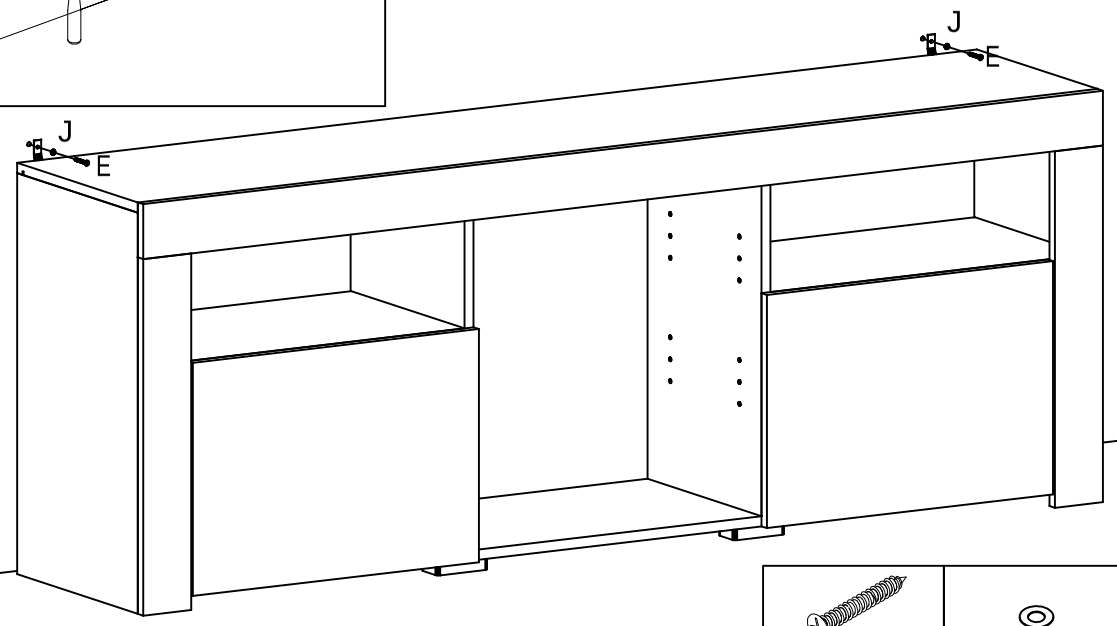

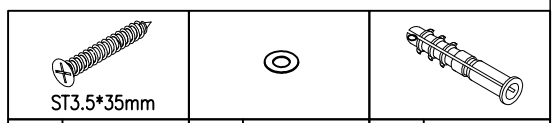

E	2 PCS	J	2 PCS	L	2 PCS

15

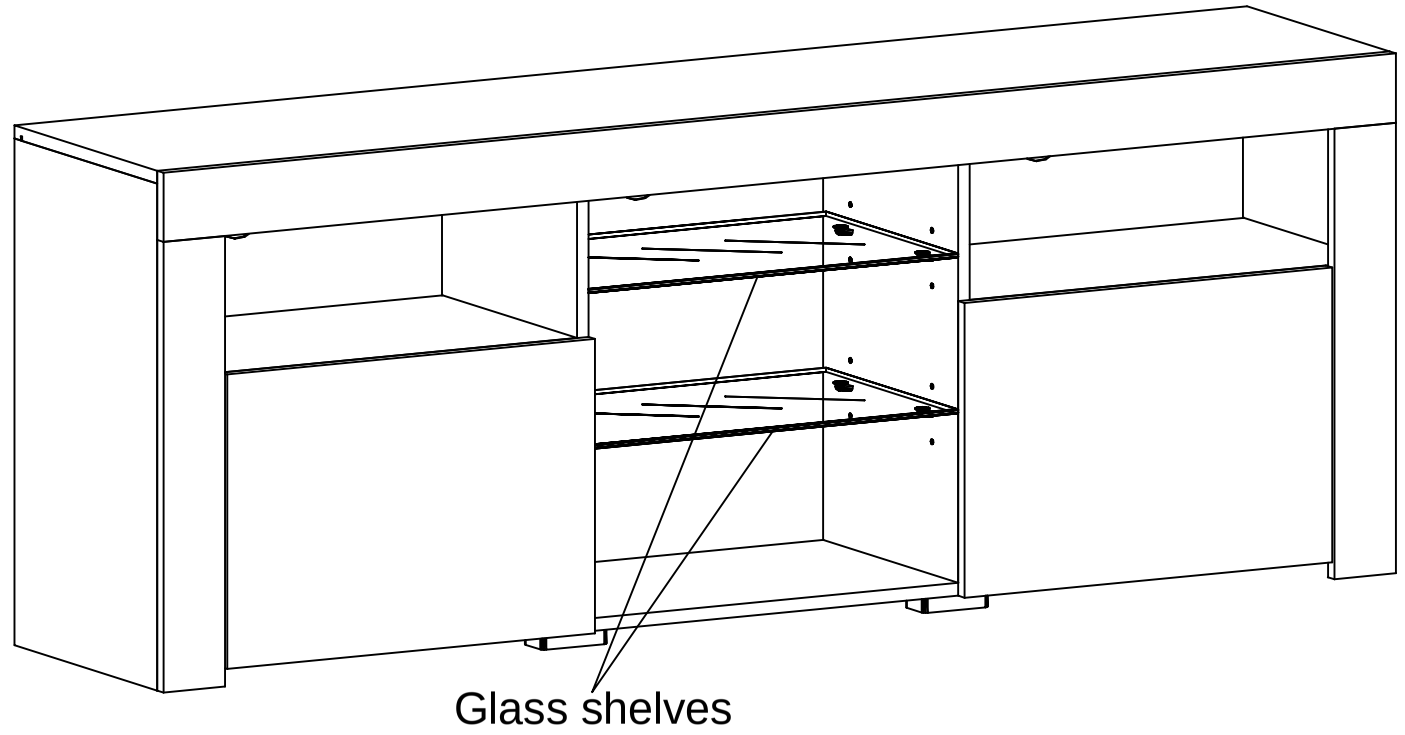

14

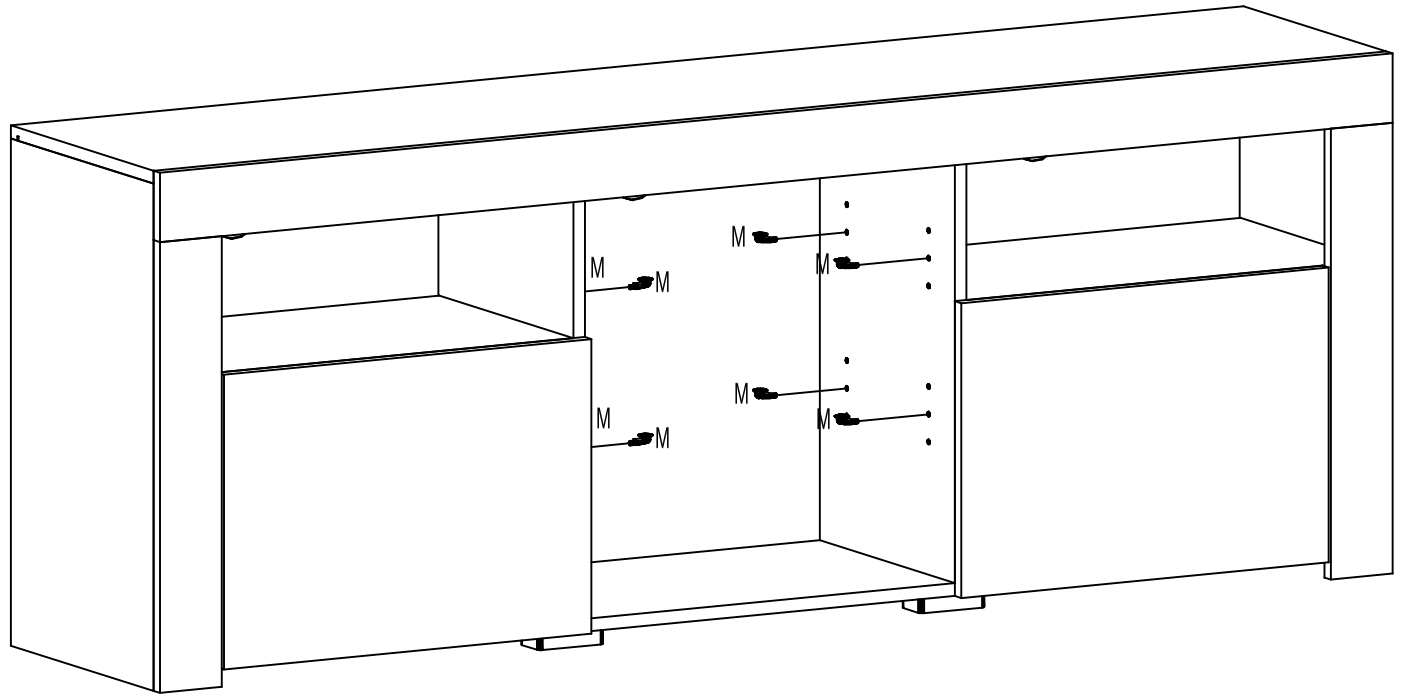



M	8 PCS

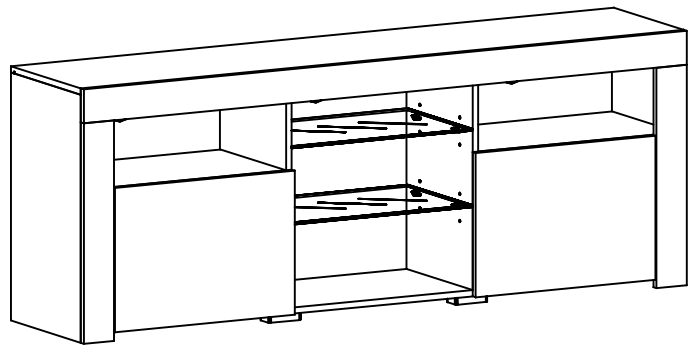

16

Hinge Adjustment

If the doors do not appear square or aligned, loosen or tughten the appropriate screws on each case hinge as illustrated.

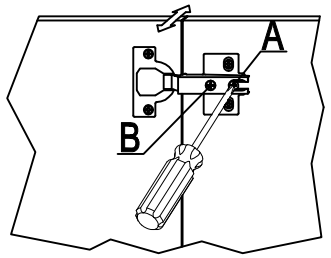

1)Side to side adjustment:
Loosen screw A, adjust gap with screw B and re-tighten screw A.

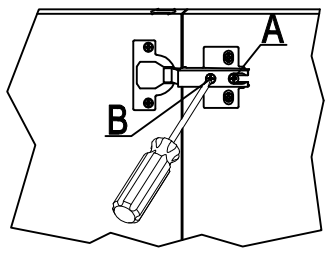

2)Depth adjustment:
Loosen screw A, push hinge arm forwards or backwards, re-tighten screw A and secrew B with a 1/4 turn clockwise.

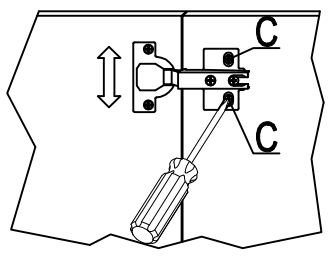

3) Height adjustment:
Lossen screw C, adjust door height and re-tighten screw C.

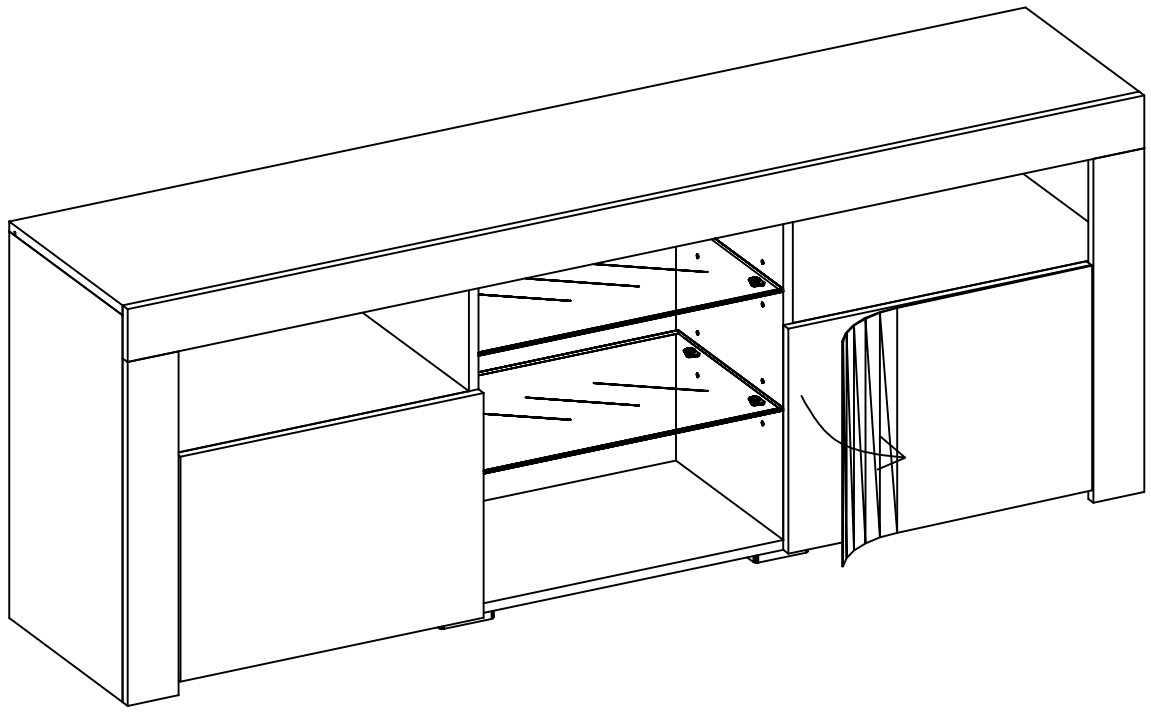

NOTE: Please peel off the protective film from glossy panels once assembly.

LED Light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.

2. Please check the remote control, it need you to rear down the plastic before use it.
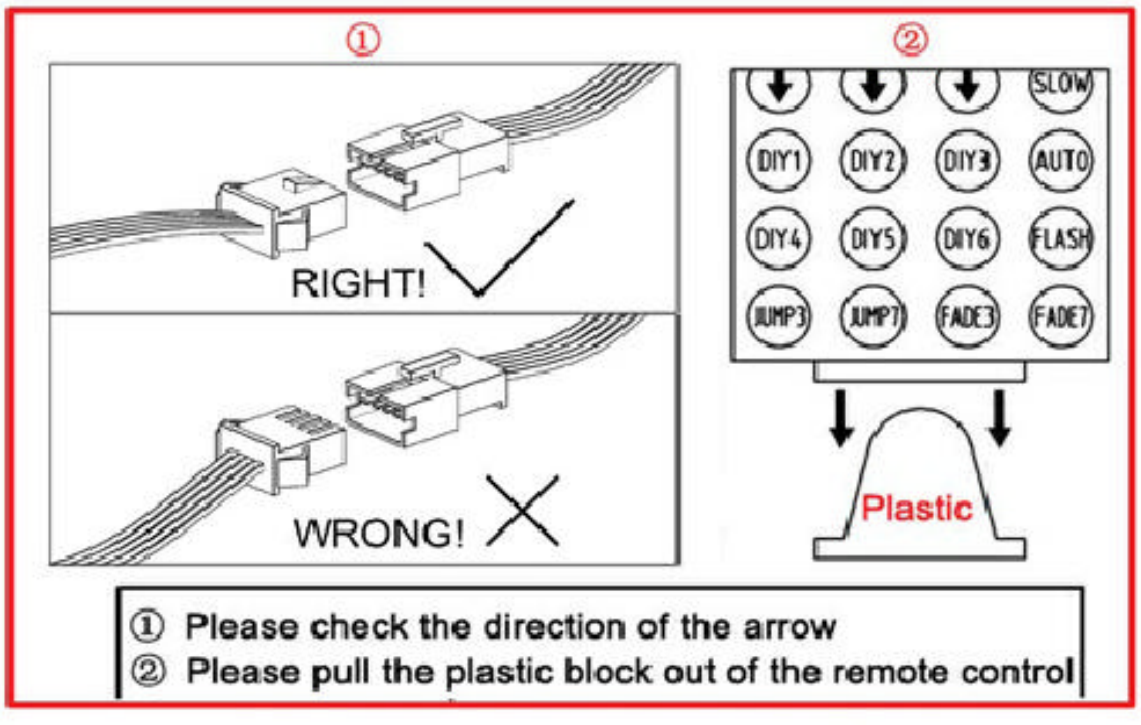
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.