Assembly Instructions

MONASH

Chair 1 STR






WARNING

FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY



Read Instructions carefully. Check no parts are missing.

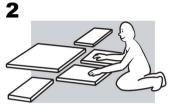


Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.




Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.



Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

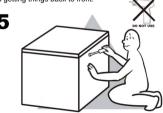

DO NOT fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

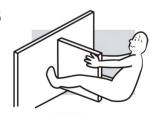


If glue is required DO NOT set until you are certain that the parts belong together.

Page 2

What you Need

To Assemble the Body




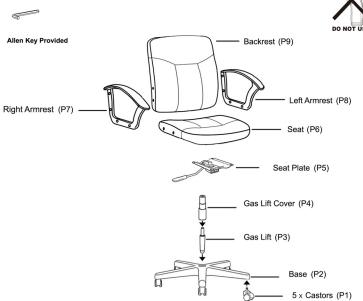




Please make sure you have all these parts before you start.

Step 1

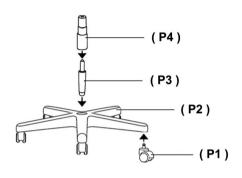

Attach 5 x Castors (P1) to the Base (P2).
Put Gas Lift (P3) into the Base (P2).
Place Gas Lift Cover (P4) on Gas Lift (P3).


Step 2

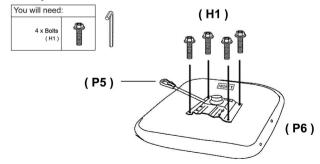


Fix Seat Plate (P5) onto Seat (P6) using 4 x Bolts (H1) with the Allen Key provided.

Page 4

Step 3

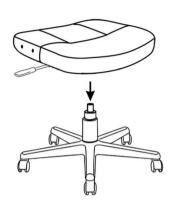

Push Seat down to attach Seat Plate to Gas Lift.

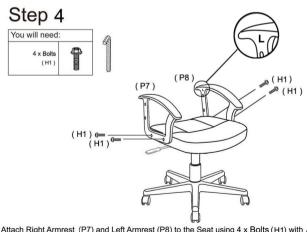


Attach Right Armrest (P7) and Left Armrest (P8) to the Seat using 4 x Bolts (H1) with Allen Key provided. Do not tighten.

Page 5

Do not tigriteri.

Step 5

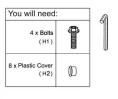



Attach Backrest (P9) to Armrests (P7&P8) together using 4 x Bolts (H1) with Allen Key provided. Tighten all bolts then insert 8 x Plastic Covers (H2).

Step 6



The job is now complete!

In the interest of our environment Please dispose of all packaging thoughtfully.

