


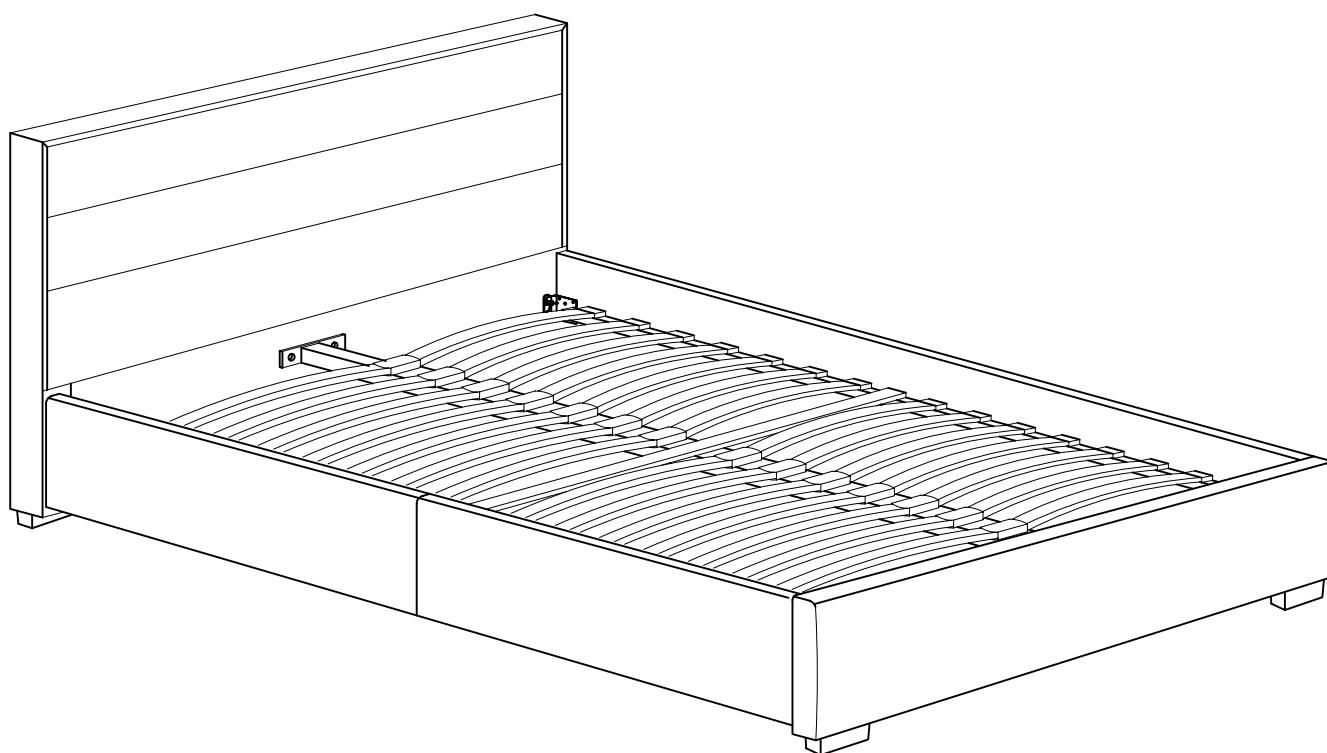

**Fantastic
Furniture**

Version 1.1



Two People



Required

Saville
Queen/King Bed

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.

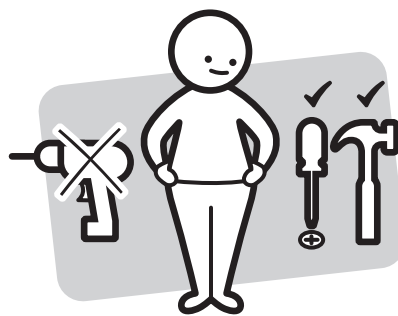

Make sure you have all the required tools. Never use power tools unless instructed.

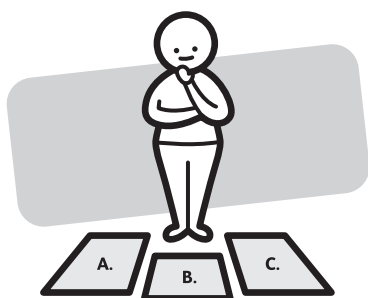

Identify and lay out all of the components before you begin assembly.

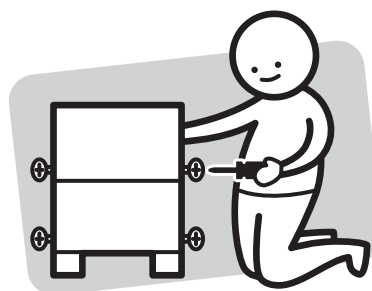

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need


to assemble the product



DO NOT USE

Other tools you need:

Phillips head screwdriver;



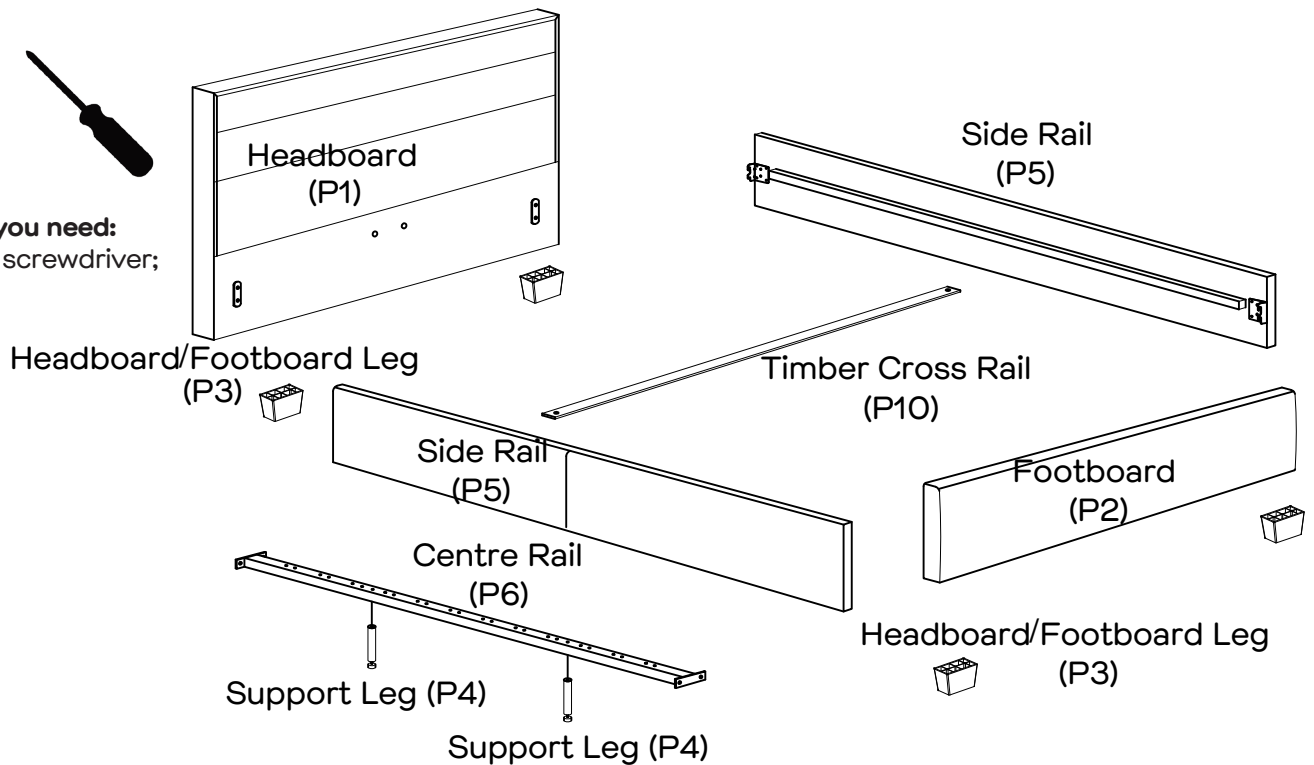


Parts list

Box 1 : Footboard (P2) ; Headboard and Footboard Leg (P3) ; 2 x Support Legs (P4) ;
2 x Side Rails (P5) ; Centre Rail (P6) ; End Connectors (P7) ; Centre Connectors (P8) ;
Timber Cross Rail (P10) ; Hardware Pack.

Box 2 : Headboard (P1) ; Slats (P9)

28 x End Connectors (P7) 14 x Centre Connectors (P8)

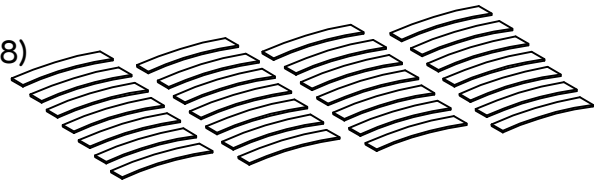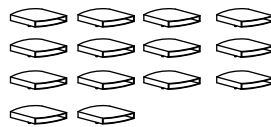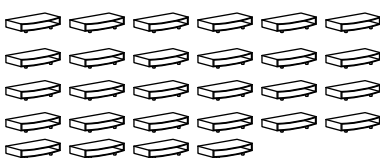


28 x Slats (P9)

Hardware pack



8 x Short Bolts
(H1)



1 x Allen Key
(H2)



8 x Large Screws
(H3)




6 x Long Bolts
(H4)



6 x Washers
(H5)




2 x Small Screws
(H6)






1 x Felt Pad
(H7)

Step 1

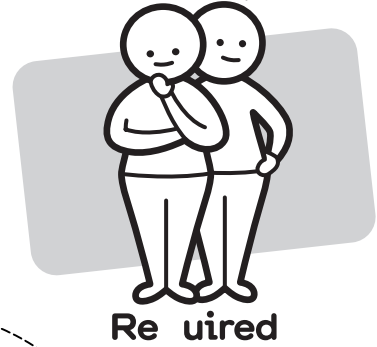Two People


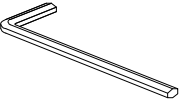



You will need	
	
8 x Large Screws (H3)	Phillips Head Screwdriver (not provided)

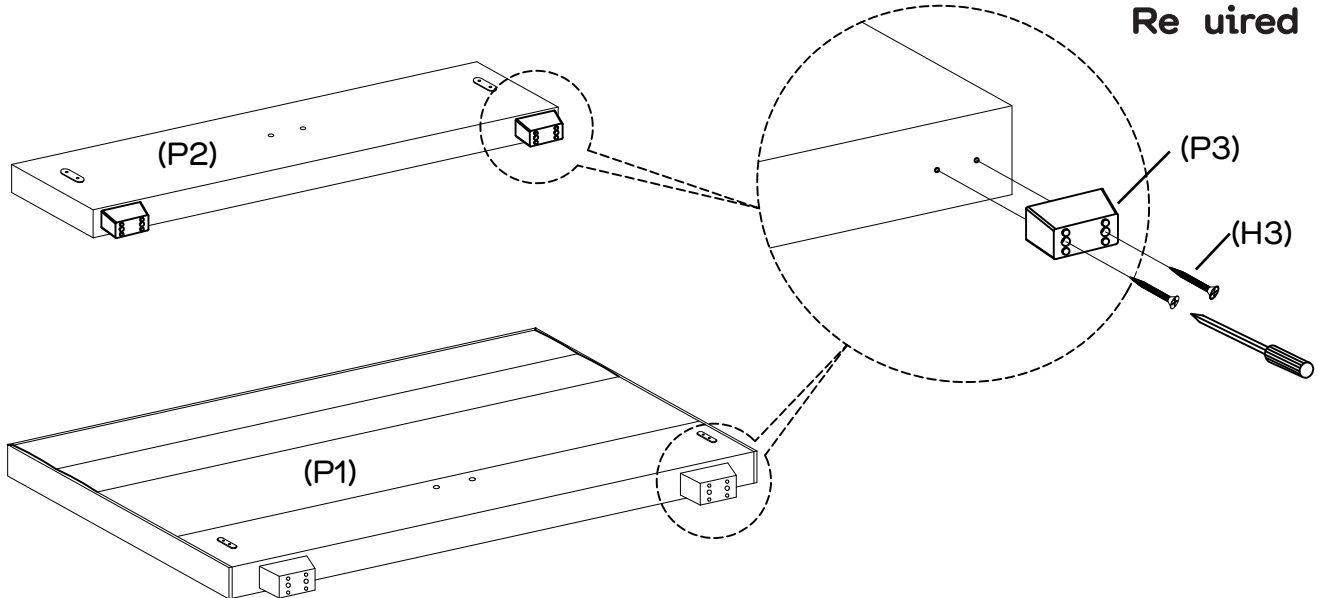

Attach plastic legs (P3) to the bottom of headboard (P1) and footboard (P2) with 8 x large screws (H3). Tighten all screws with a Phillips Head Screwdriver.




Step 2

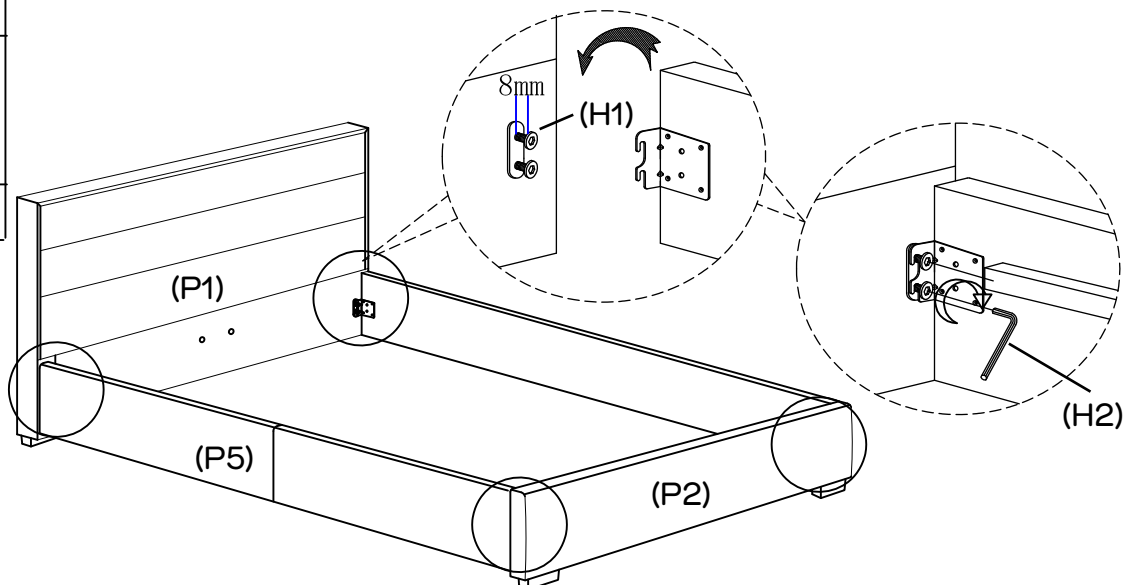
You will need	
	
8 x Short Bolts (H1)	Allen Key (H2)



Install the 8 x short bolts (H1) to the brackets of the headboard (P1) and (P2) by using the allen key (H2) as shown, do not tighten the bolts and keep them 8mm loose. Then attach side rails (P5) to headboard (P1) and footboard (P2) by slotting the bracket on the side rails (P5) over the bolt as shown. No need to tighten bolts until step 6.




Step 3

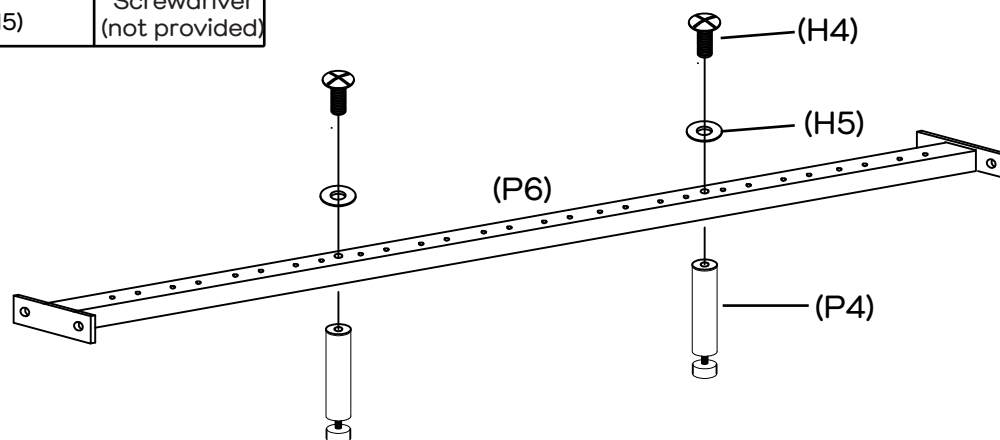
You will need		
		
2 x Long Bolts (H4)	2 x Washers (H5)	Phillips Head Screwdriver (not provided)



Attach the support legs (P4) to the centre rail (P6) using 2 x long bolts (H4), 2 x washers (H5) as shown. Tighten long bolts (H4) with a Phillips Head Screwdriver.

Step 4

You will need		
		
4 x Long Bolts (H4)	4 x Washers (H5)	Phillips Head Screwdriver (not provided)

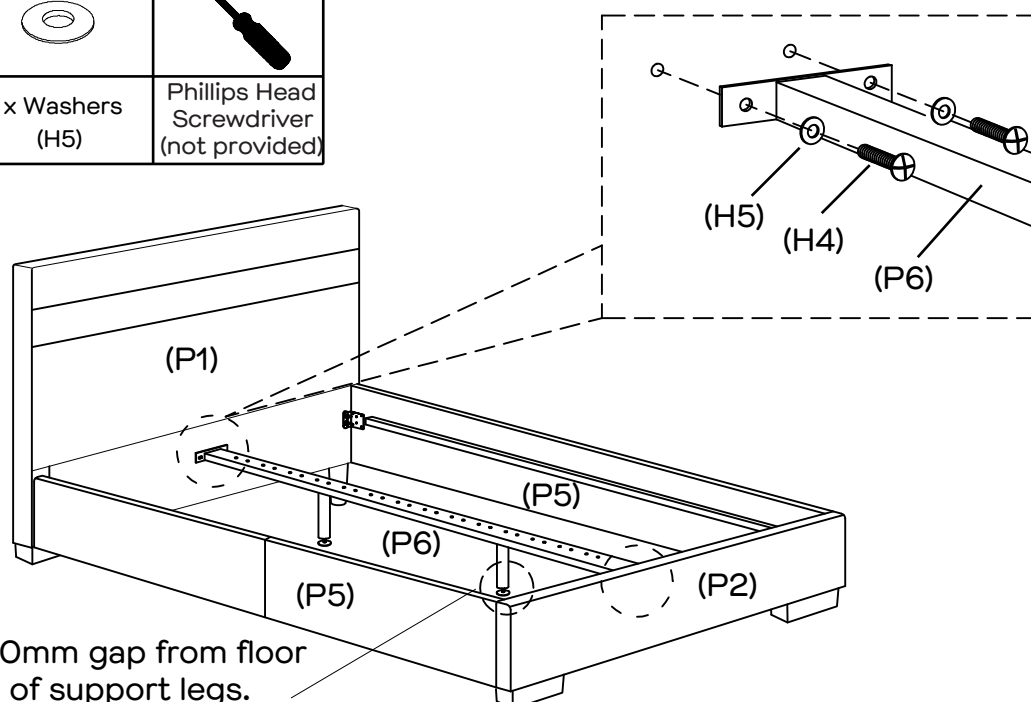




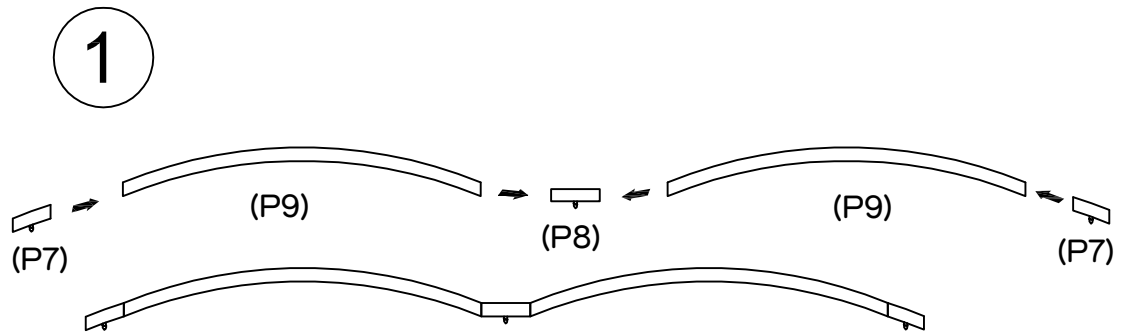
Adjust to be 10mm gap from floor to the bottom of support legs.

Slot the centre rail (P6) into the headboard (P1) and footboard (P2).

Insert and attach the long bolts (H4) using a phillips head screwdriver (not provided) to the headboard (P1) and footboard (P2). No need to tighten bolts until step 6.


Step 5

You will need	
	
28 x End Connectors (P7)	14 x Centre Connectors (P8)
	
28 x Slats (P9)	




Attach 2 x end connectors (P7), 1 x centre connector (P8) and 2 x slats together as shown, repeat this for the remaining slats.

2

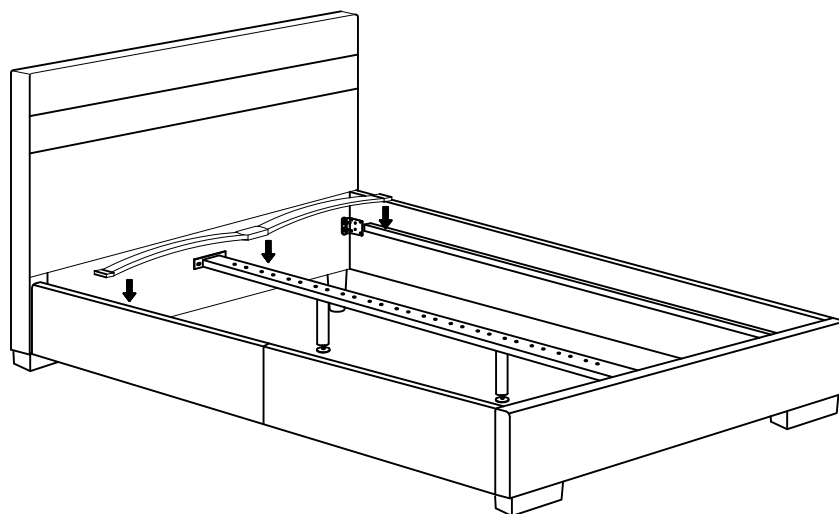


Lower the completed slat (P7) (P9) and (P8) into side rails (P5), Ensure the connectors are in place over the side rail holes and apply downward pressure on the slat (P9) with the end connectors (P7) until the end plastic cap is fully inserted into the rail.

3

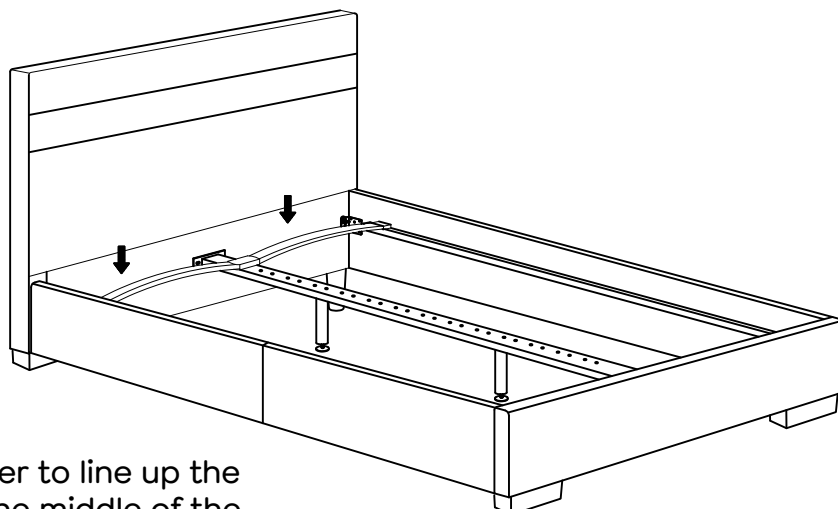


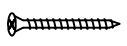
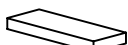

Sometimes it makes it easier to line up the hole if you press down in the middle of the slat to flatten it out.


4

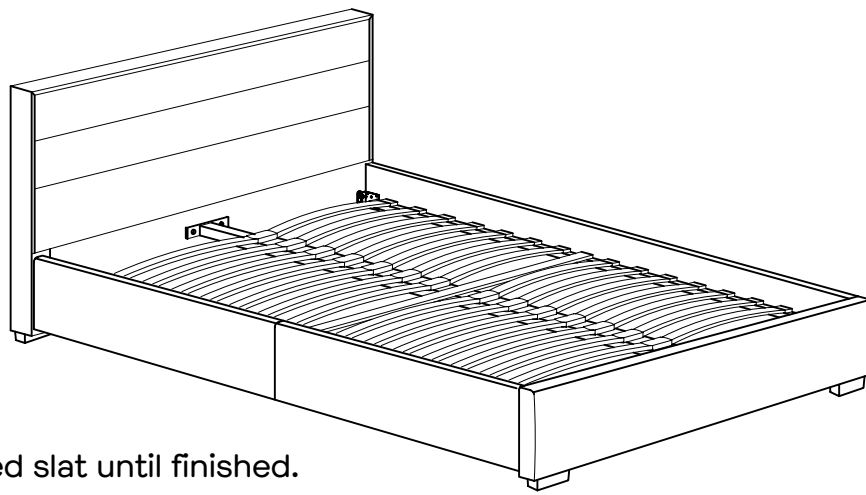

Repeat for every bed slat until finished.

Step 6


You will need	
	
Allen Key (H2)	2 x Small Screws (H6)
	
1 x Felt pad (H7)	Phillips Head Screwdriver (not provided)

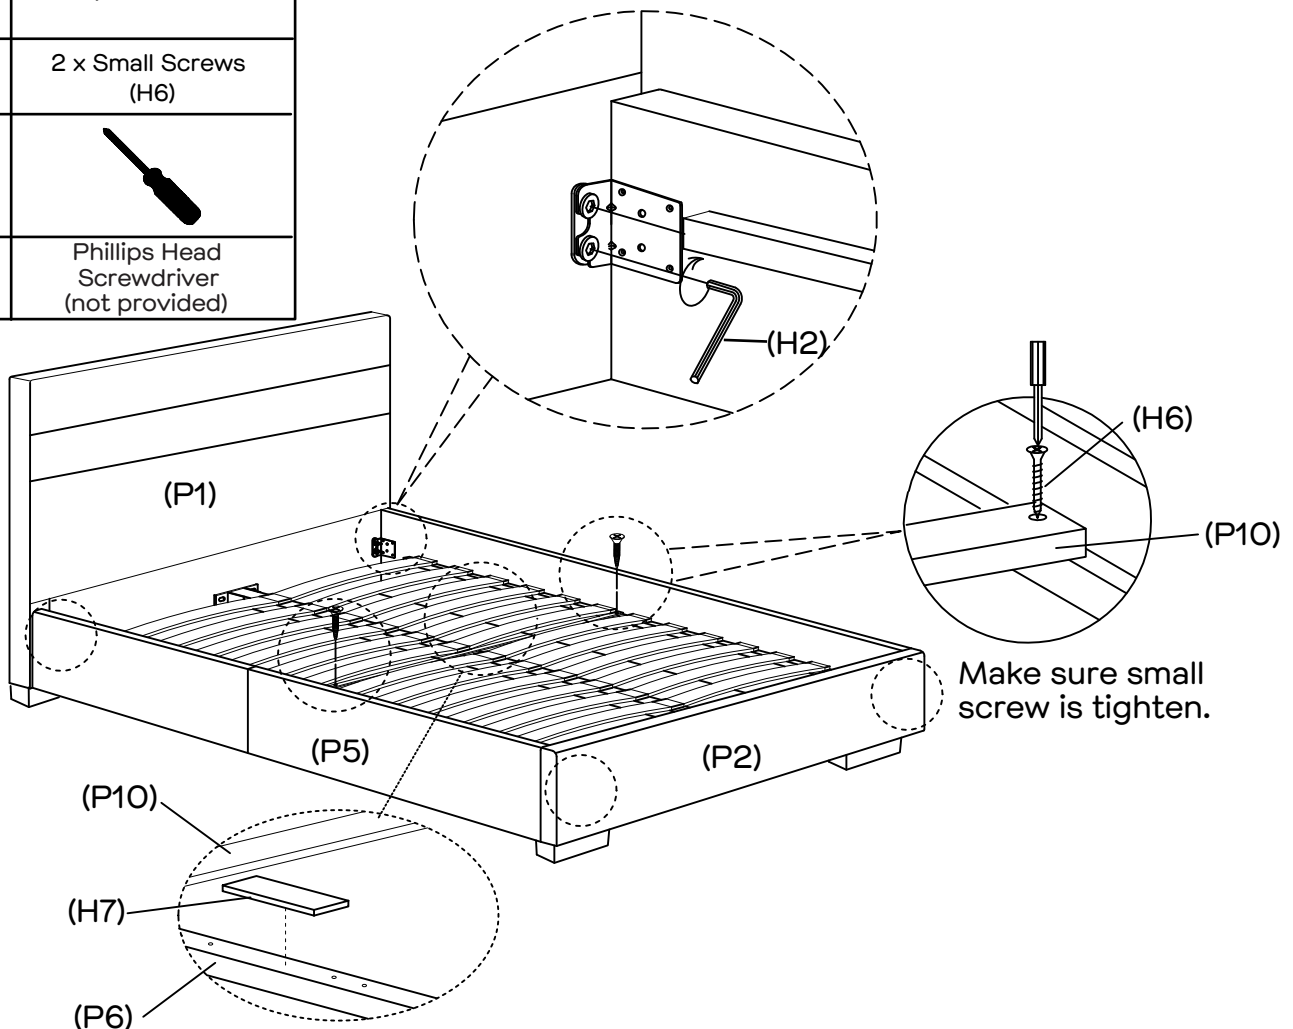

Make sure that the bed is square

Attach the timber cross rail (P10) to the centre of side rails (P5) by using 2 x small screws (H6). Then attach the felt pad (H7) to the centre of centre rail (P6) under the cross rail. Now tighten all the bolts on the centre rail (P6), headboard (P1) and footboard (P2).

Step 7

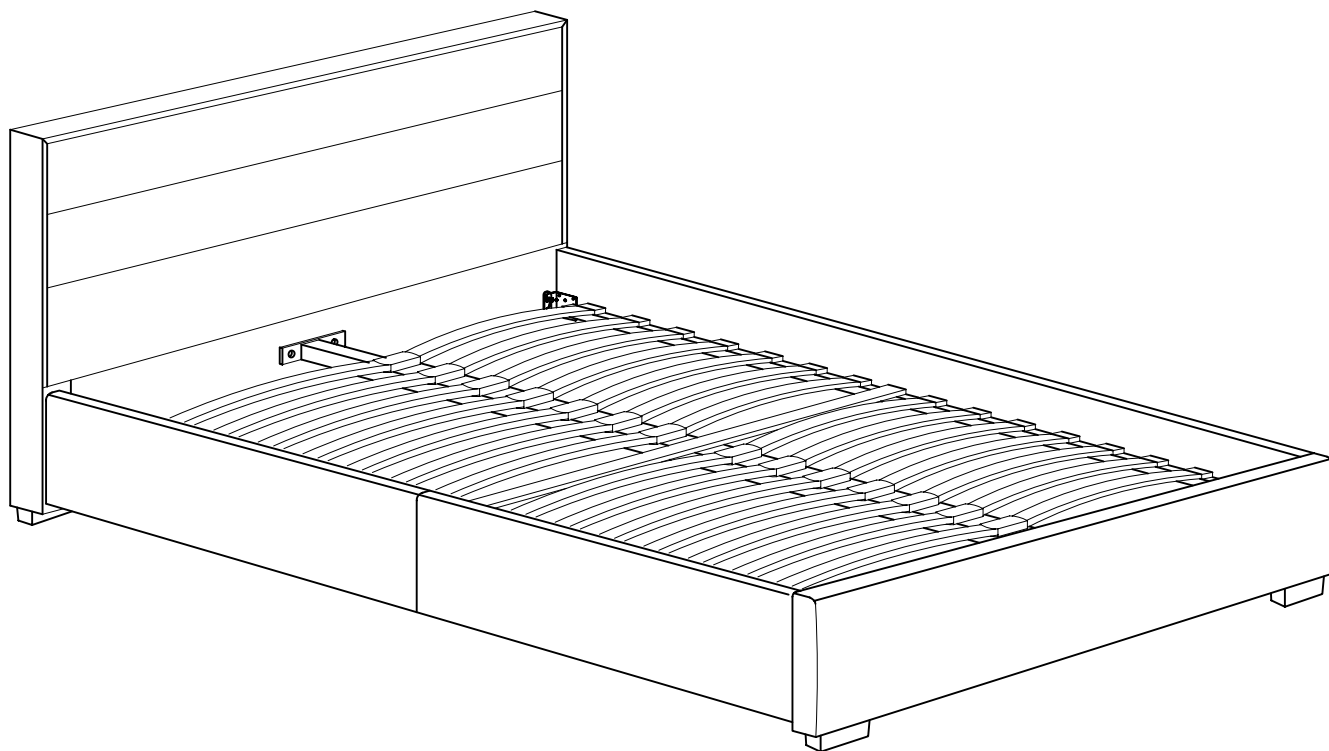

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.