



Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture




Assembly checklist



Read through the instructions carefully before you begin.

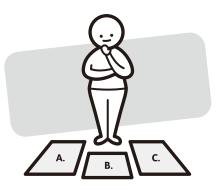

Make sure you have all the required tools. Never use power tools unless instructed.

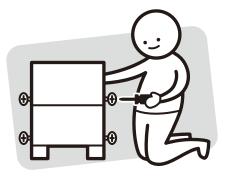

Unless instructed, do not fully tighten screws

until the item is fully assembled.

Identify and lay out all of the components before you begin assembly.

before you begin assembly.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighen all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.




What you need



Flat head screwdriver, Phillips head screwdriver, Mallet (soft headed);

Parts list

Box 1: 1 x Headboard (P1); 1 x Footboard (P3); 2 x Short Support Panel (P2); 4 x Long Support Panel (P5);

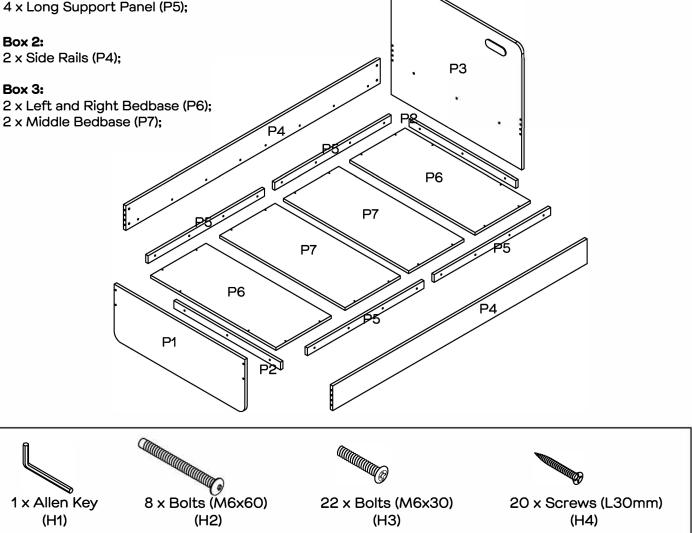


Fantastic Furniture Page 4

8 x Nuts

(H6)


8 x Dowels (L30mm)


(H5)

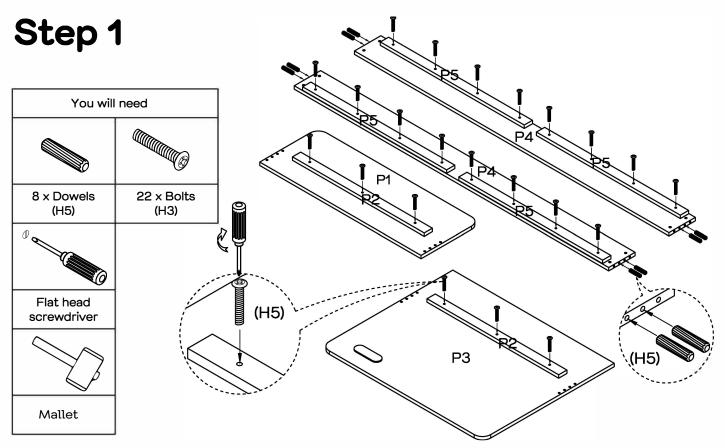


Attach 2 x Short Support Rails (P2) to Bedhead (P3) and Foot Board (P1), attach 4 x Long Support Rails (P5) to 2 x Side Rails (P4) with 22 x Bolts (H3) by using a Flat head screwdriver. Insert 8 x Dowels (H5) to $2 \times$ Side Rails (P4) by using a Mallet as shown.

> Insert 4 x Nuts (H6) to the Side Rails (P4) then attach Head Board (P3) and Foot Board (P1) to Side Rail (P4) with 4 x Bolts (H2) by using a Allen Key (H1).

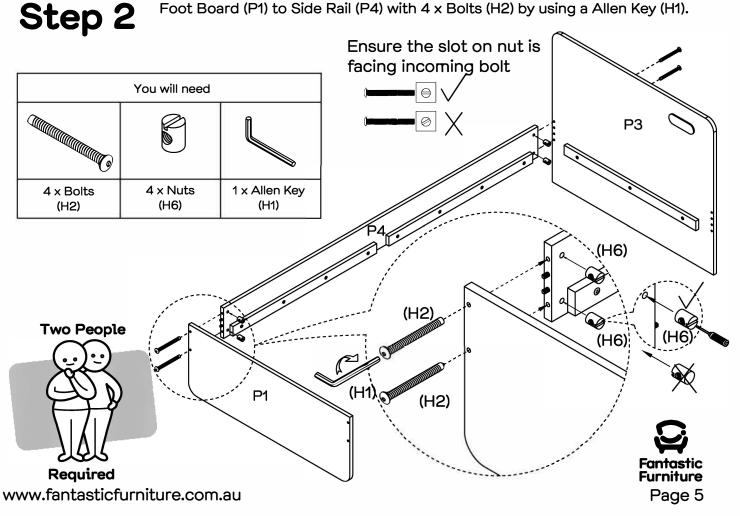

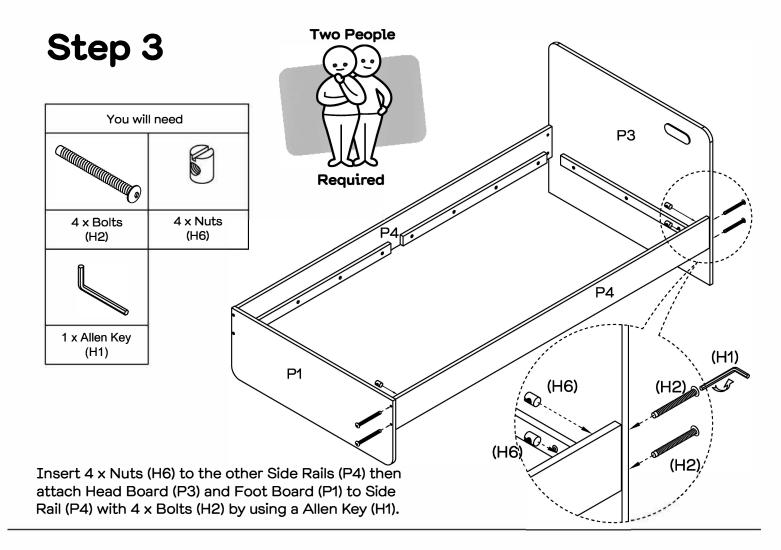


Step 4

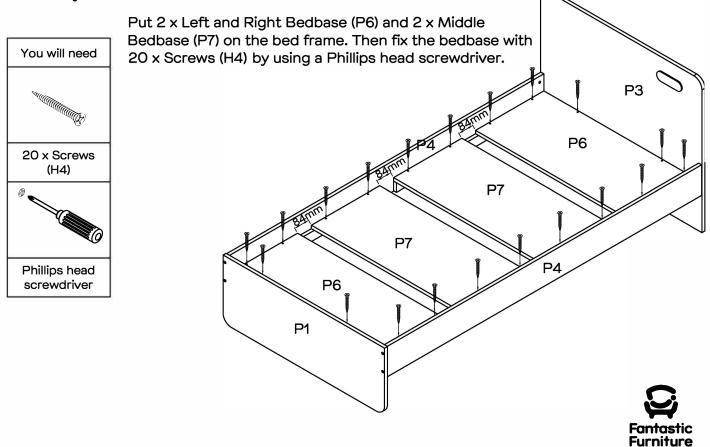

Page 6

Step 5

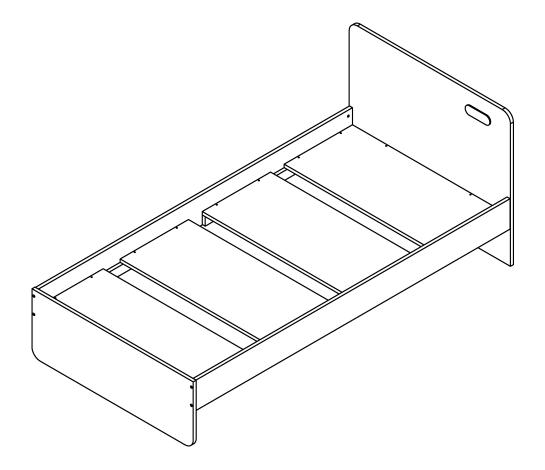

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully

