


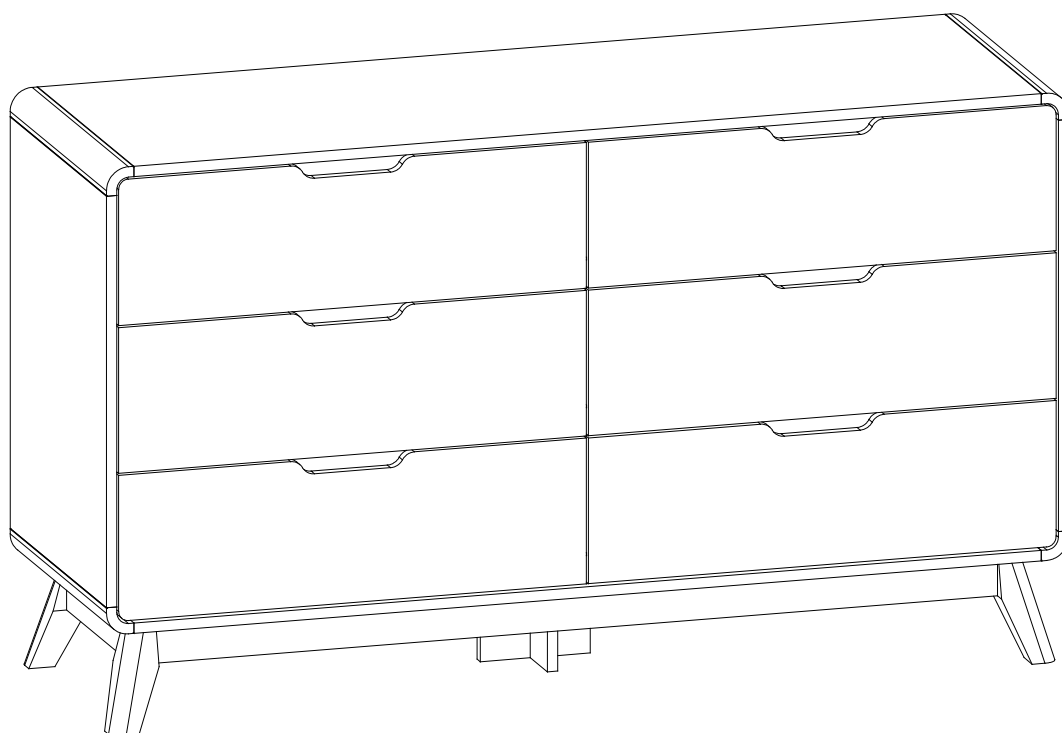

**Fantastic  
Furniture**

Version 1.0



**Two People**



**Required**

**NIVA**  
Dresser

[fantasticfurniture.com.au](http://fantasticfurniture.com.au)

# Secure it!

Reduce the risk of furniture tip-over accidents



## WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

To reduce the risk of furniture tipover:




- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

## Wall attachment guide




**For plasterboard**  
(without available wood stud)

**Securing method:**  
Self drilling plasterboard anchor.

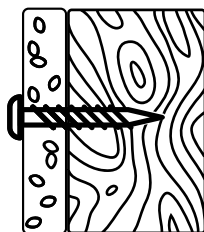

**For plasterboard**  
(with available wood stud)

**Securing method:**  
Screw inserted directly into stud.

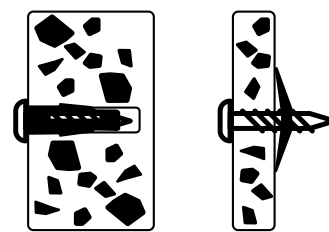

**For masonry wall**

**Securing method:**  
Solid wall: Plug with screw  
Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture  
to help create a home you'll love!



## Fantastic Furniture

### Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for  
for your chance to win a \$250 Fantastic Furniture Gift Card!

**@fantasticfurniture**


# Assembly Checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

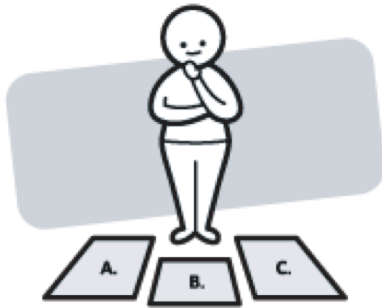

Identify and lay out all of the components before you begin assembly.

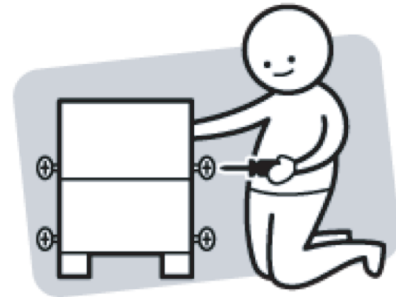

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

# What you need

## to assemble the product




DO NOT USE



### Othe tools you need

Flat head screwdriver; Phillips head screwdriver; Hammer; Mallet

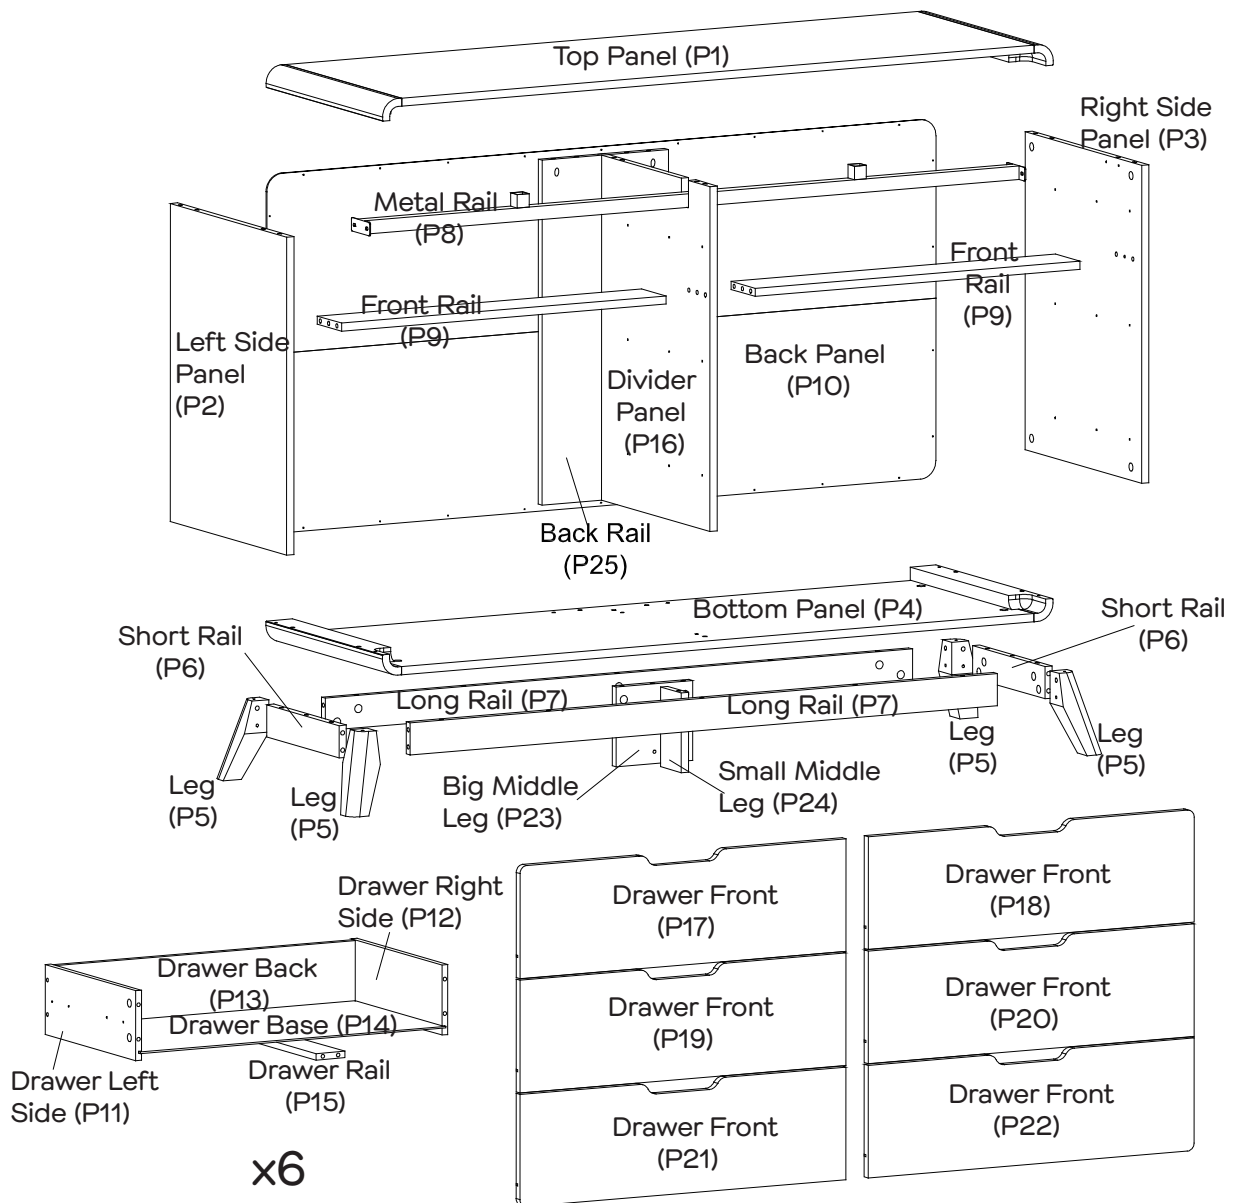


### Parts list

**Box 1:** Top Panel (P1); Left Side Panel (P2); Right Side Panel (P3); Bottom Panel (P4); 4 x Leg (P5); 2 x Short Rail (P6); 2 x Long Rail (P7); Metal Rail (P8); 2 x Front Rail (P9); Back Panel (P10); Big Middle Leg (P23); Small Middle Leg (P24); Back Rail (P25); Hardware Pack.

**Box 2:** 6 x Drawer Left Side (P11); 6 x Drawer Right Side (P12); 6 x Drawer Back (P13); 6 x Drawer Base (P14); 6 x Drawer Rail (P15); Divider Panel (P16); Drawer Front (P17); Drawer Front (P18); Drawer Front (P19); Drawer Front (P20); Drawer Front (P21); Drawer Front (P22).

## Hardware Pack



71 x Cam Bolts  
(H1)




37 x Big Cam  
Nuts (H2)




38 x Dowels  
(H3)



36 x Small Cam  
Nuts (H4)



4 x Screws  
(H5)




34 x Nails  
(H6)



4 x Felt Feet  
(H7)




63 x Screws  
(H8)



6 x Left Runner  
Tracks (H9)




6 x Left Runners  
(H10)




6 x Right Runner  
Tracks (H11)




6 x Right Runners  
(H12)



2 x Screws  
(H13)




2 x Wall Straps  
(H14)



4 x Flat Washers  
(H15)



1 x Adjustable  
Foot (H16)




43 x Screws  
(H17)



4 x Screws  
(H18)



2 x Long  
Dowels (H19)






1 x Long Cam  
Bolt (H20)



9 x Screws  
(H21)



# Step 1

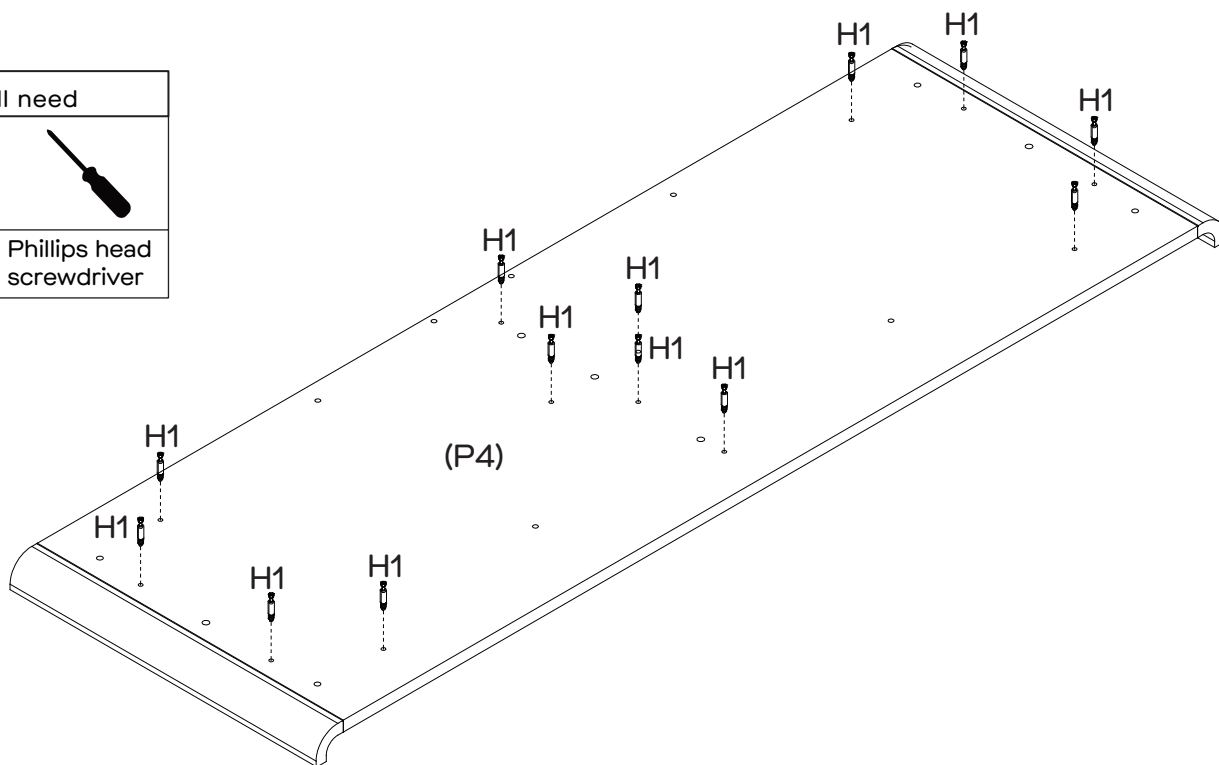
You will need	
	
13 x Cam bolts (H1)	Phillips head screwdriver



Using a Phillips head screwdriver, screw 13 x cam bolts (H1) into bottom panel (P4) as shown.




# Step 2

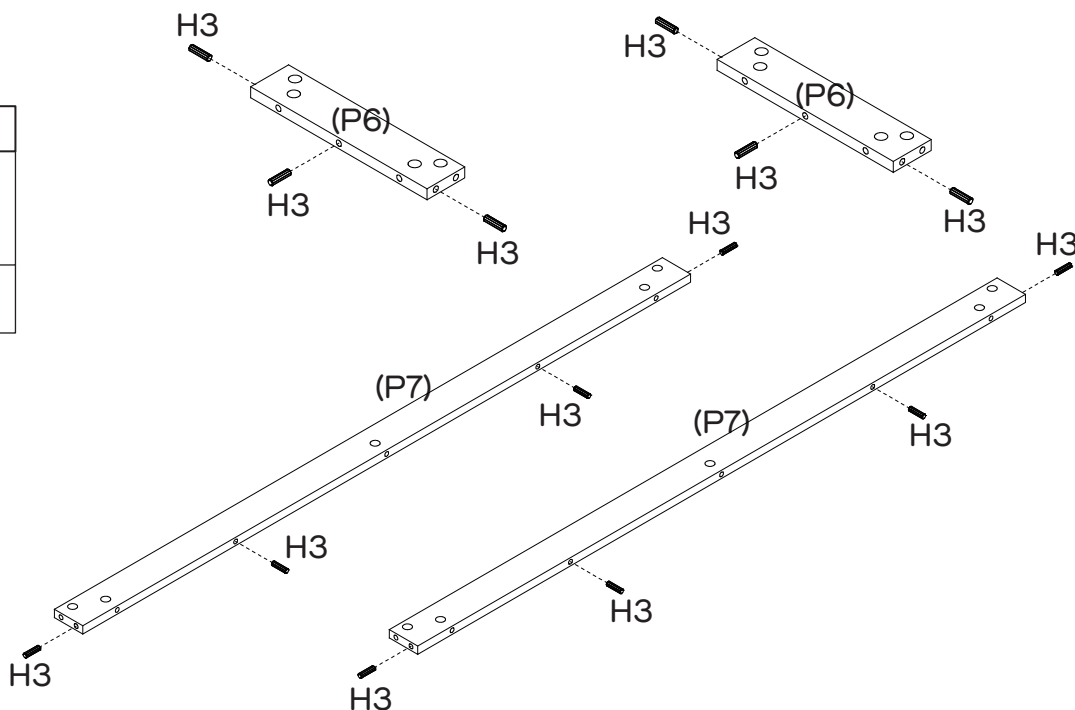
You will need	
	
14 x Dowels (H3)	Mallet



Insert 3 x dowels (H3) into each short rail (P6) as shown.  
 Insert 4 x dowels (H3) into each long rail (P7) as shown.  
 Use a mallet to gently tap the dowels into place if needed.



## Step 3

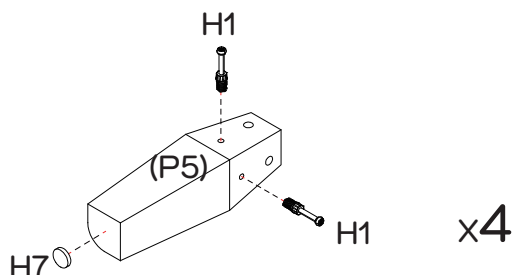You will need	
	
8 x Cam bolts (H1)	Phillips head screwdriver
	
4 x Felt feet (H7)	




Screw 2 x cam bolts (H1) into each leg (P5) using a Phillips head screwdriver.  
Attach 1 x felt feet (H7) onto each leg (P5) as shown.


## Step 4

You will need	
	
4 x Big cam nuts (H2)	Flat head screwdriver

This is how a cam nut works.....

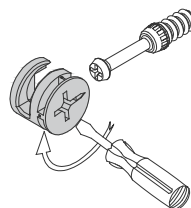

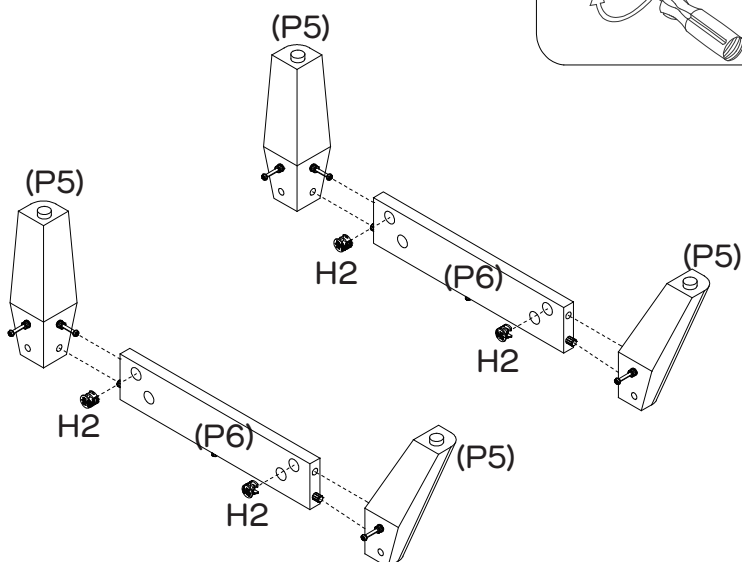

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.




Fit each short rail (P6) between 2 x legs (P5).  
Insert 2 x big cam nuts (H2) each into short rail (P6).  
Using a Flat head screwdriver, turn the big cam nuts (H2) clockwise to lock.





## Step 5


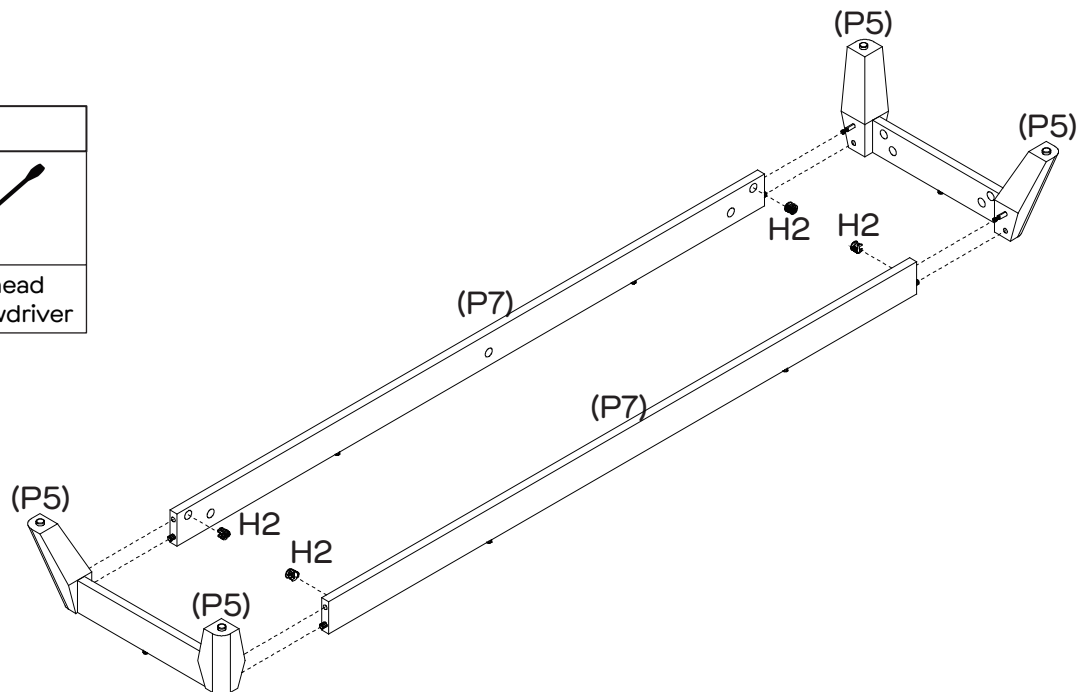
You will need	
	
4 x Big cam nuts (H2)	Flat head screwdriver



Position 2 x long rail (P7) between the assembled unit as shown.  
Insert 4 x big cam nuts (H2) into long rails (P7), and turn clockwise to lock.



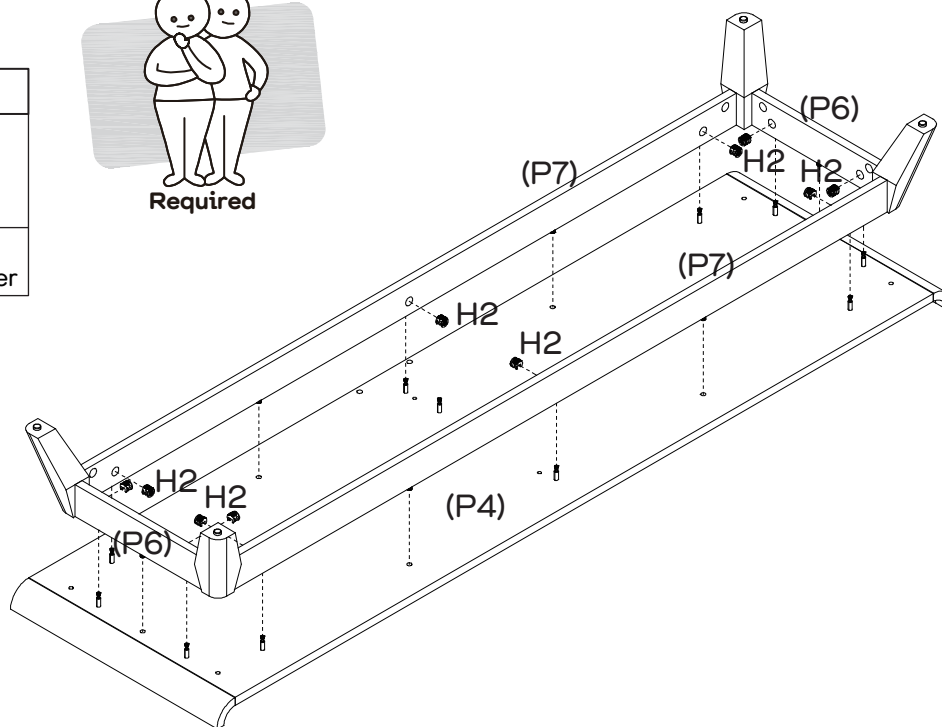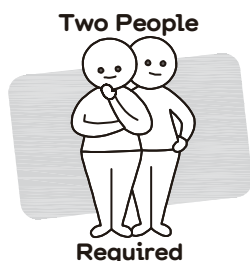

## Step 6


You will need	
	
10 x Big cam nuts (H2)	Flat head screwdriver



Position the leg assembly onto bottom panel (P4), making sure the cam bolts on the bottom panel (P4) are inserted into the holes on the leg assembly.  
Insert 10 x big cam nuts (H2) into short rails (P6) and long rails (P7), and turn clockwise to lock using a Flat head screwdriver.  
Carefully turn the unit over.




# Step 7


You will need	
	
2 x Dowels (H3)	1 x Screws (H17)
	
Phillips head screwdriver	Mallet

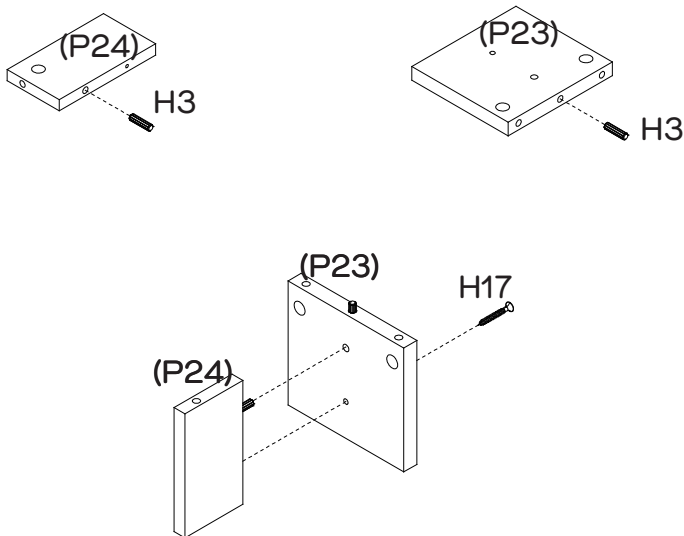

Insert 2 x dowels (H3) into small middle leg (P24) and big middle leg (P23). Attach small middle leg (P24) to big middle leg (P23) with 1 x screw (H17), tighten with a Phillips head screwdriver.



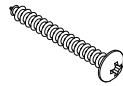
# Step 8


You will need	
	
3 x Big cam nuts (H2)	1 x Adjustable foot (H16)
	
Flat head screwdriver	

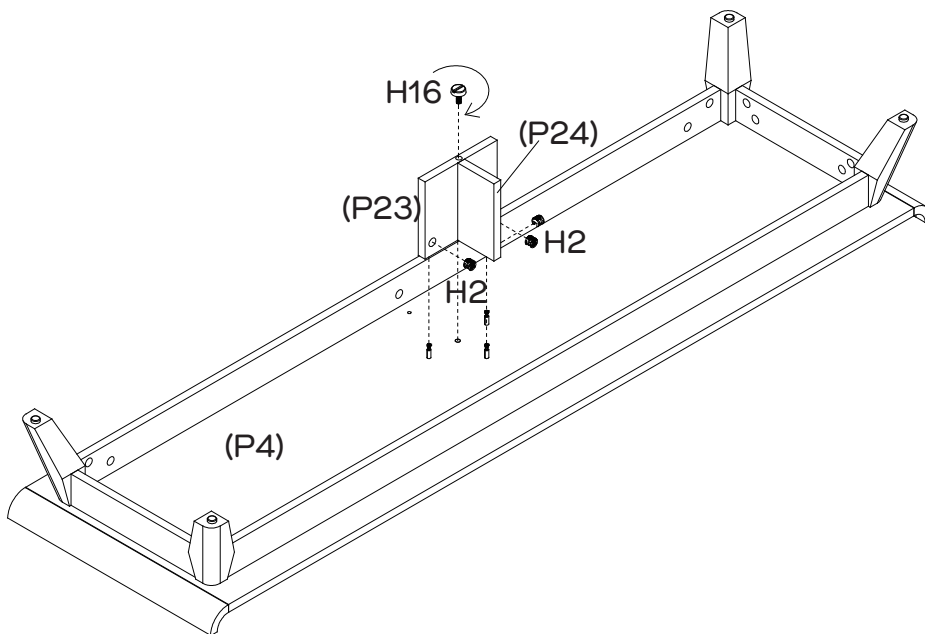

Attach middle legs (P23) & (P24) to bottom panel (P4). Insert 3 x big cam nuts (H2) into middle legs (P23) & (P24), and turn clockwise to lock. Screw 1 x adjustable foot (H16) to big middle leg (P23).

## Step 9


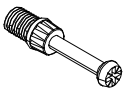


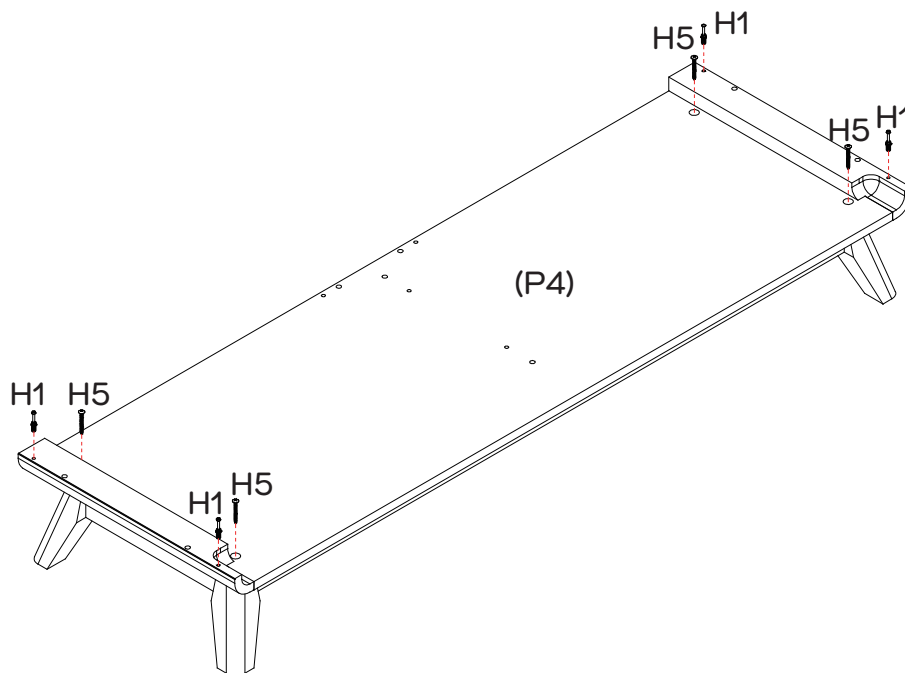You will need	
	
4 x Cam bolts (H1)	Phillips head screwdriver
	
4 x Screws (H5)	




Screw 4 x cam bolts (H1) into bottom panel (P4) as shown, tighten with a Phillips head screwdriver.

Screw 4 x screws (H5) into bottom panel (P4), tighten with a Phillips head screwdriver.
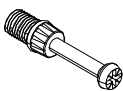
## Step 10




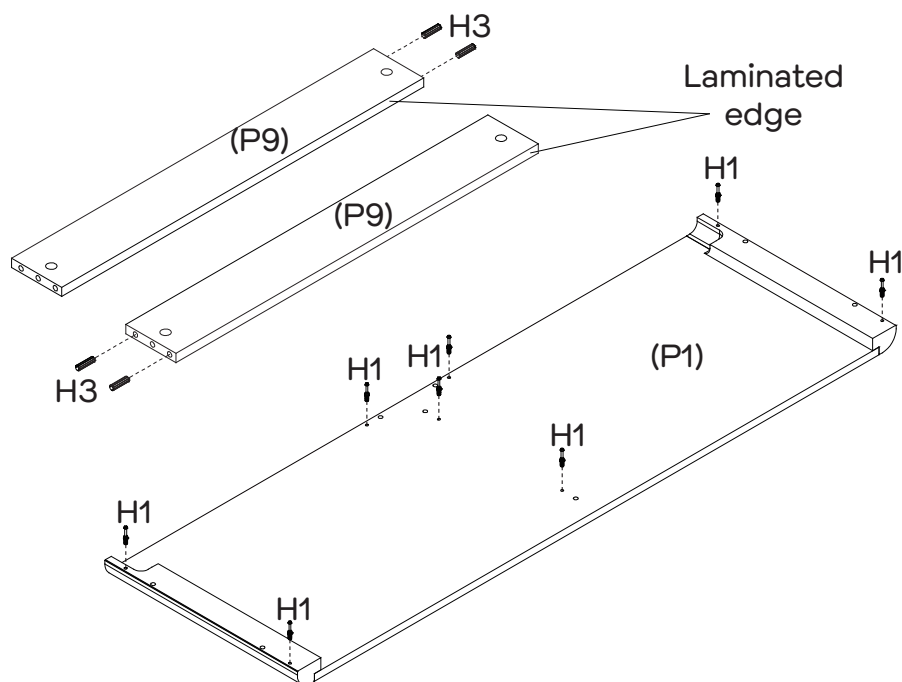


You will need	
	
8 x Cam bolts (H1)	4 x Dowels (H3)
	
Phillips head screwdriver	Mallet





Insert 2 x dowels (H3) into each front rail (P9) as shown.

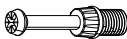Screw 8 x cam bolts (H1) into top panel (P1), tighten with a Phillips head screwdriver.

## Step 11

You will need	
	
1 x Cam bolt (H1)	9 x Screws (H8)
	
3 x Left runner tracks (H9)	4 x Dowels (H3)
	
Phillips head screwdriver	Mallet

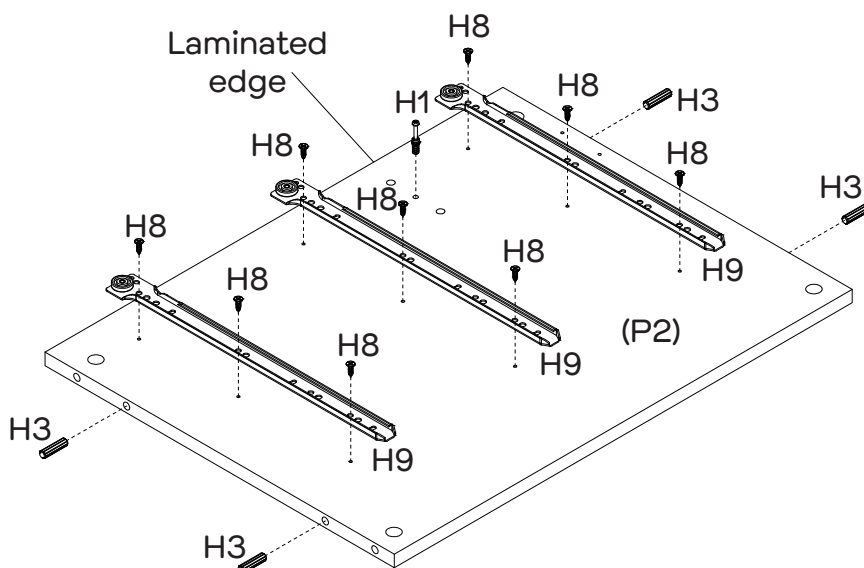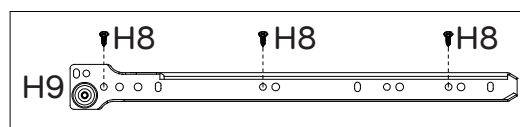









Insert 4 x dowels (H3) into left side panel (P2).

Attach 3 x left runner tracks (H9) to left side panel (P2) with 9 x screws (H8) using a Phillips head screwdriver.

Insert 1 x cam bolt (H1) into left side panel (P2) using a Phillips head screwdriver.

## Step 12

You will need	
	
1 x Cam bolt (H1)	9 x Screws (H8)
	
3 x Right runner tracks (H11)	4 x Dowels (H3)
	
Phillips head screwdriver	Mallet

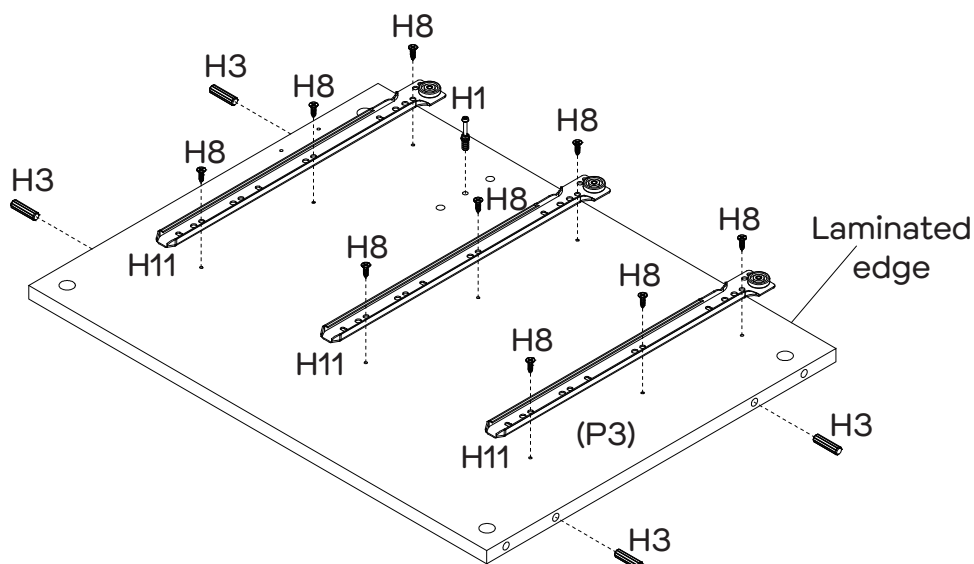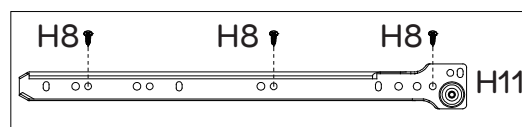








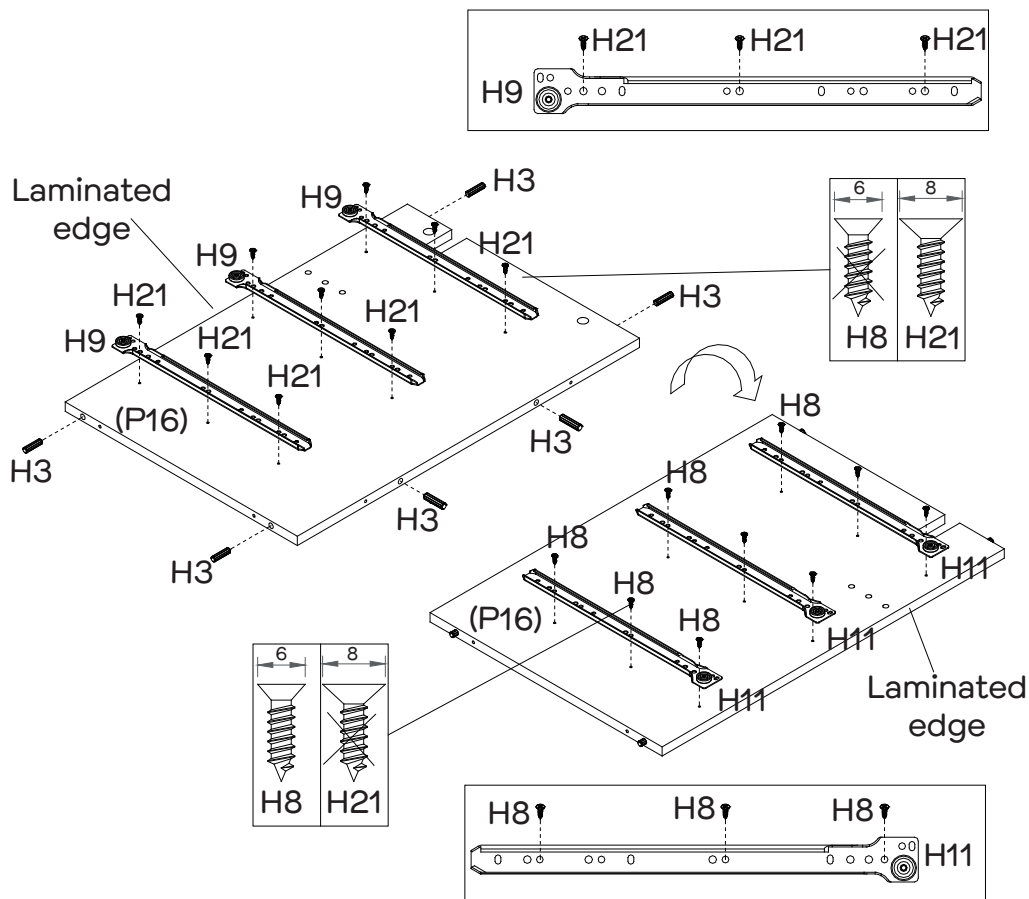
Insert 4 x dowels (H3) into right side panel (P3).

Attach 3 x right runner tracks (H11) to right side panel (P3) with 9 x screws (H8) using a Phillips head screwdriver.

Insert 1 x cam bolt (H1) into right side panel (P3) using a Phillips head screwdriver.

## Step 13

You will need	
	
6 x Dowels (H3)	9 x Screws (H8)
	
3 x Left runner tracks (H9)	3 x Right runner tracks (H11)
	
9 x Screws (H21)	Mallet
	
Phillips head screwdriver	



Insert 6 x dowels (H3) into divider panel (P16).


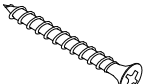


Attach 3 x left runner tracks (H9) to divider panel (P16) with 9 x screws (H21).


Turn over the divider panel.

Attach 3 x right runner tracks (H11) to divider panel (P16) with 9 x screws (H8).

Attach all screws using a Phillips head screwdriver.

## Step 14

You will need	
	
4 x Dowels (H3)	2 x Screws (H17)
	
Phillips head screwdriver	Mallet

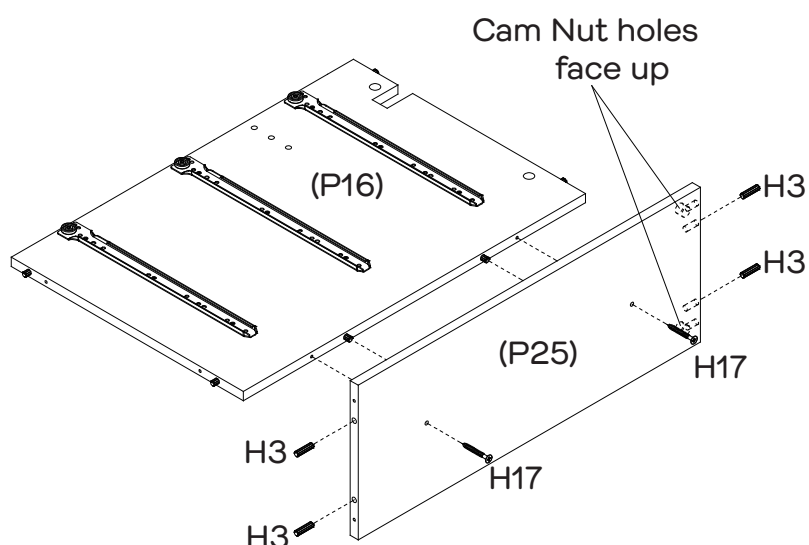


Insert 4 x dowels (H3) into back rail (P25).

Attach back rail (P25) to divider panel (P16) with 2 x screws (H17),


tighten with a Phillips head screwdriver.

## Step 15

Two People

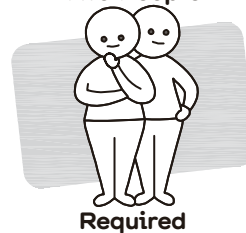


You will need	
2 x Long dowels (H19)	1 x Long cam bolt (H20)
2 x Big cam nuts (H2)	Flat head screwdriver

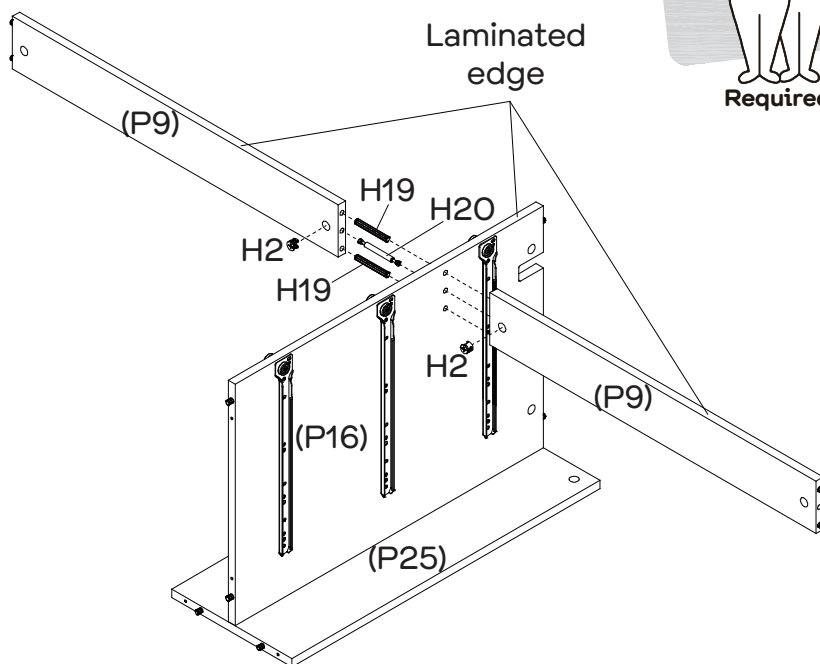

Attach front rails (P9) to divider panel (P16) with 2 x long dowels (H19) and 1 x long cam bolt (H20) as shown, tighten with a Flat head screwdriver. Insert 2 x big cam nuts (H2) into rails (P9) and turn clockwise to lock.


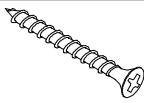


## Step 16


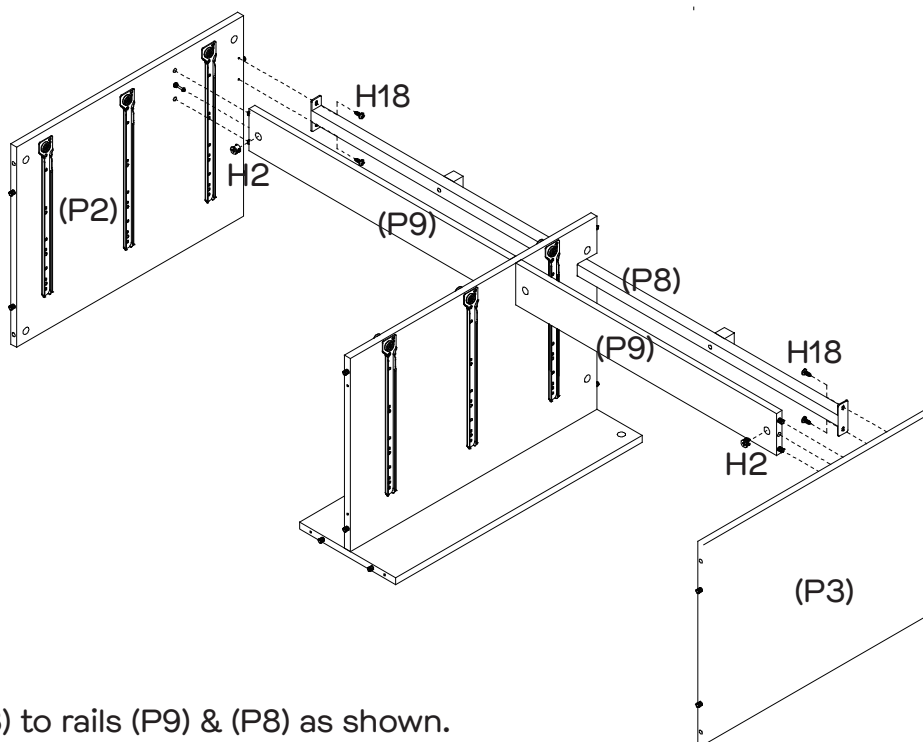
You will need	
2 x Big cam nuts (H2)	4 x Screws (H18)
Phillips head screwdriver	Flat head screwdriver



Attach side panels (P2) & (P3) to rails (P9) & (P8) as shown. Use 4 x screws (H18) to connect metal rail (P8) and side panels (P2) & (P3), tighten with a Phillips head screwdriver. Insert 2 x big cam nuts (H2) into rails (P9) and turn clockwise to lock.



# Step 17

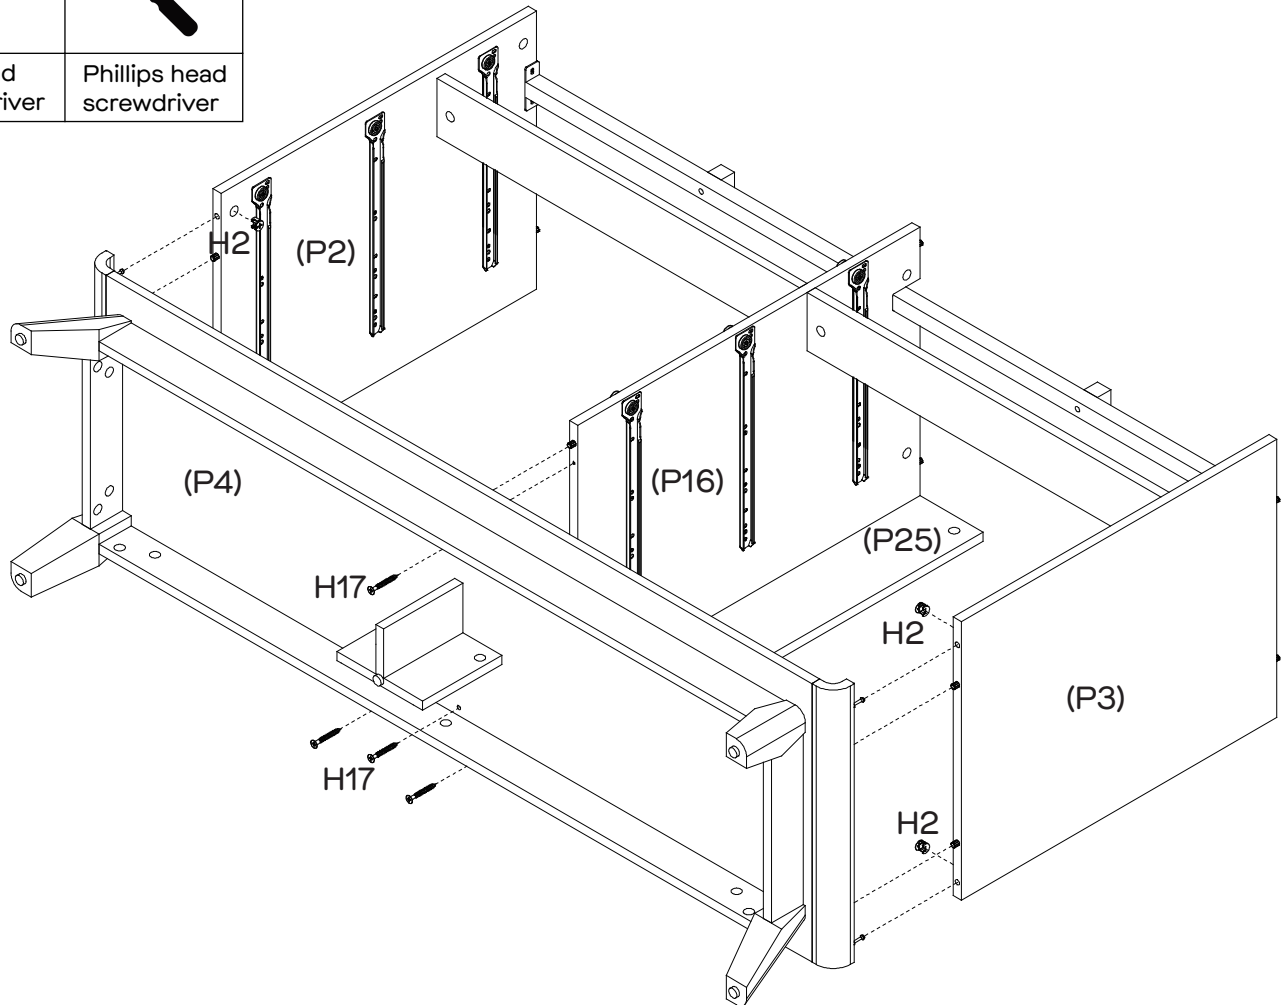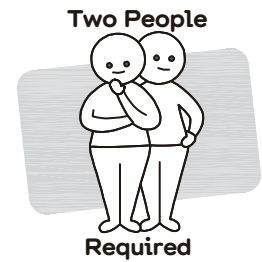
You will need	
	
4 x Big cam nuts (H2)	4 x Screws (H17)
	
Flat head screwdriver	Phillips head screwdriver



Attach panels (P2) (P3) (P16) and back rail (P25) to bottom panel (P4).  
 Insert 4 x big cam nuts (H2) into side panels (P2) & (P3) and turn clockwise to lock.  
 Using a Phillips head screwdriver, screw 4 x screws (H17) into bottom panel (P4).

# Step 18


You will need	
	
8 x Big cam nuts (H2)	Flat head screwdriver

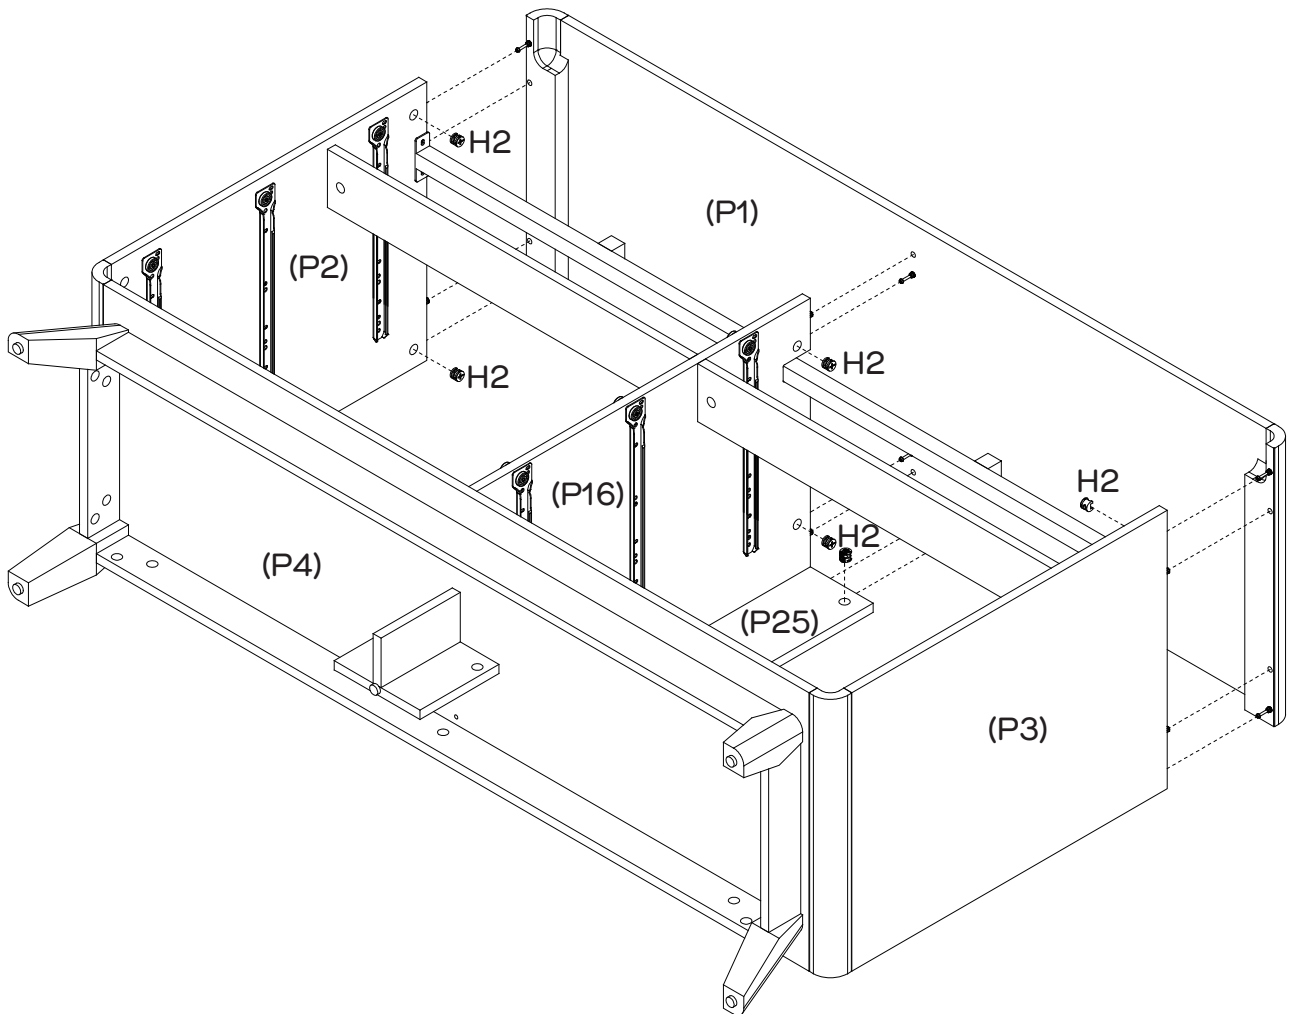


Position top panel (P1) onto panels (P2) (P3) (P16) and back rail (P25).  
Insert 8 x cam nuts (H2) into panels (P2) (P3) (P16) and back rail (P25),  
using a Flat head screwdriver turn clockwise to lock.





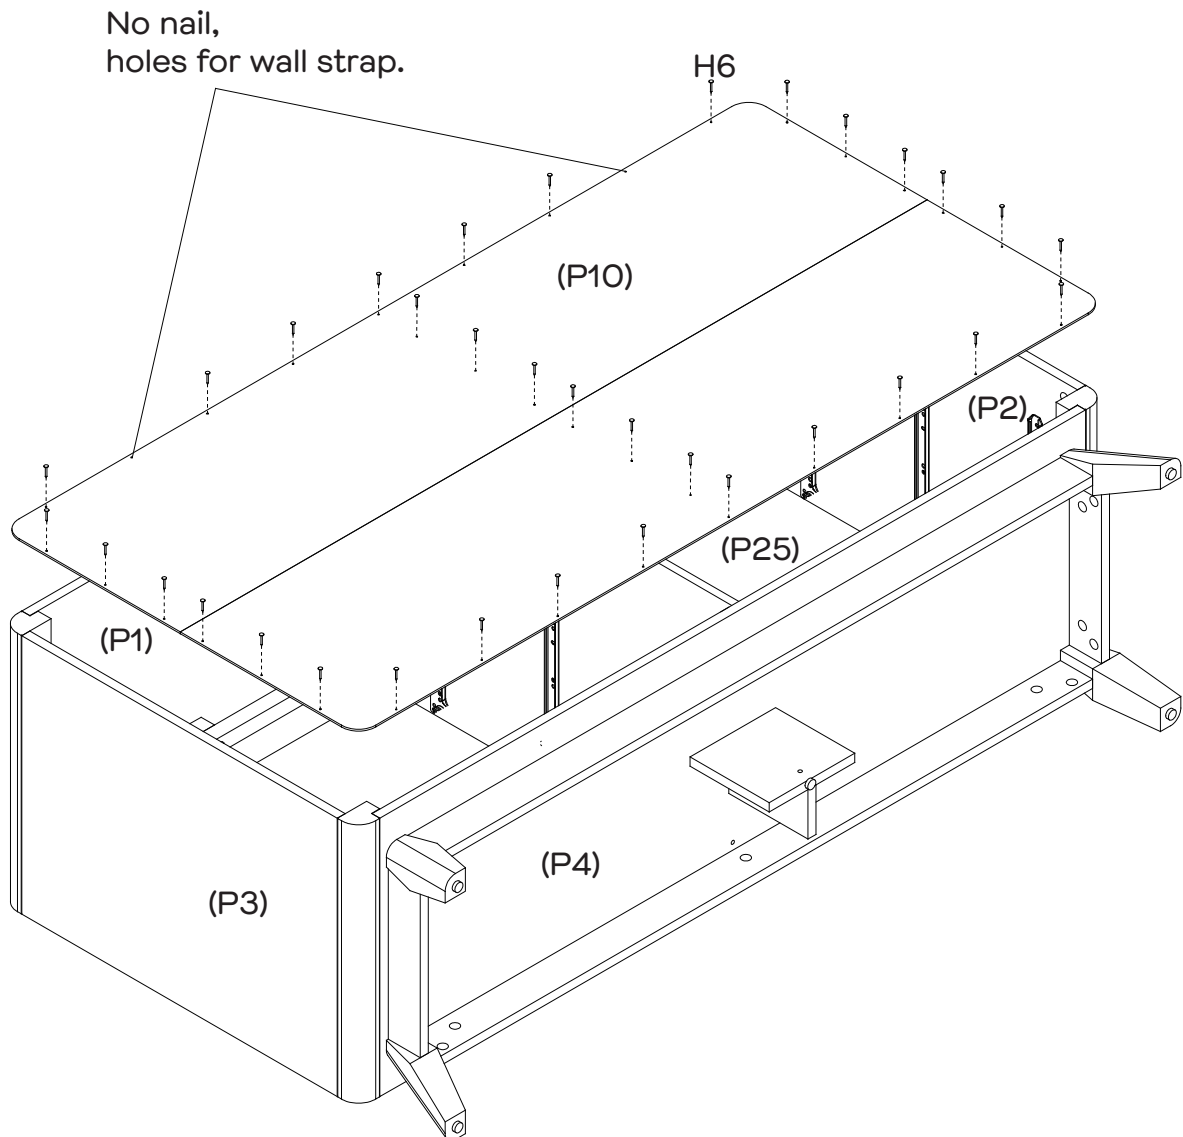

# Step 19


You will need	
	
34 x Nails (H6)	Hammer



Using a hammer, attach back panel (P10) to panels (P1) (P2) (P3) (P4) and (P25) with 36 x nails (H6).


## Step 20

You will need	
	
6 x Left runner (H10)	6 x Right runner tracks (H12)
	
36 x Screws (H8)	Phillips head screwdriver

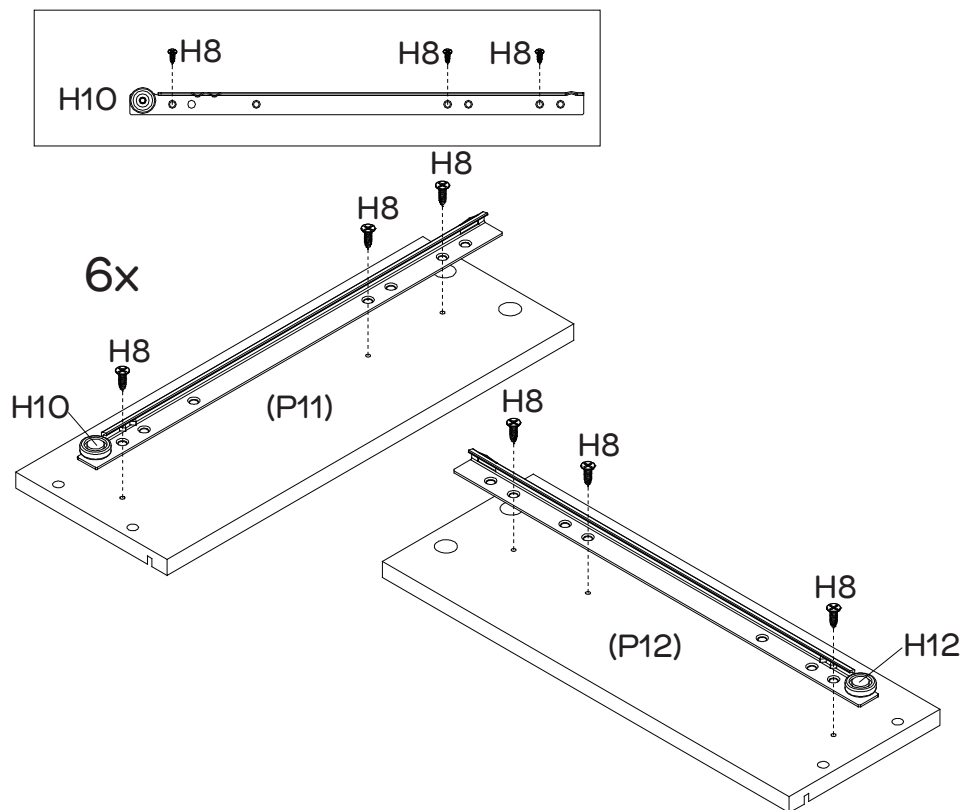



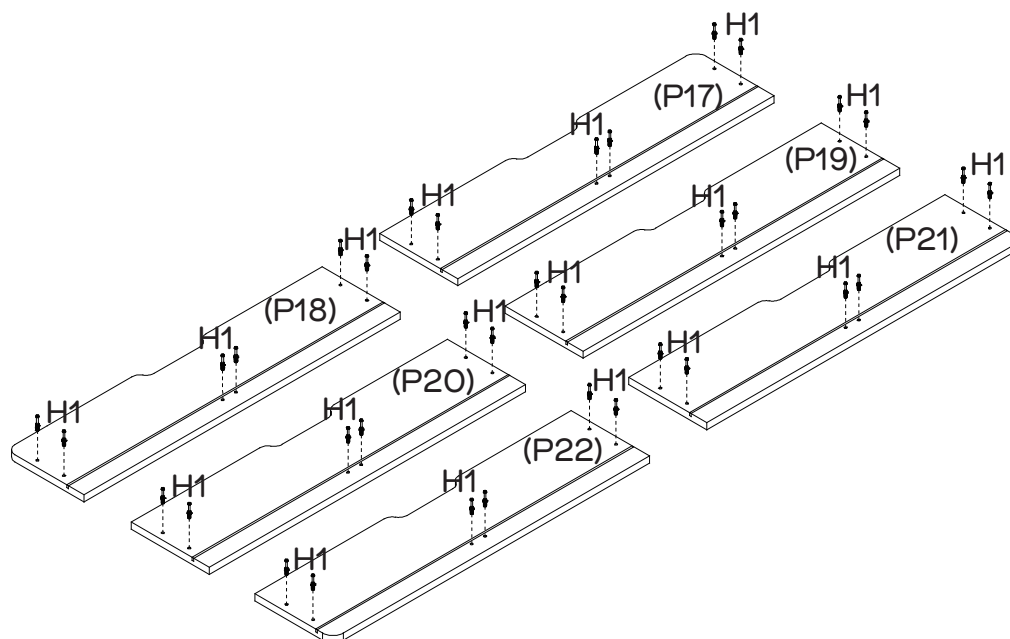
Attach each one left runner (H10) to left drawer sides (P11) with 3 x screws (H8), tighten with a Phillips head screwdriver. Repeat five times for all left drawer sides (P11).

Attach each one right runner (H12) to right drawer sides (P12) with 3 x screws (H8), tighten with a Phillips head screwdriver. Repeat five times for all right drawer sides (P12).

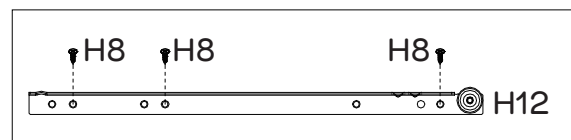



## Step 21


You will need	
	
36 x Cam bolts (H1)	Phillips head screwdriver



Using a Phillips head screwdriver, screw each 6 x cam bolts (H1) into drawer fronts (P17) (P18) (P19) (P20) (P21) and (P22).

## Step 22


You will need	
	
36 x Small cam nuts (H4)	Flat head screwdriver

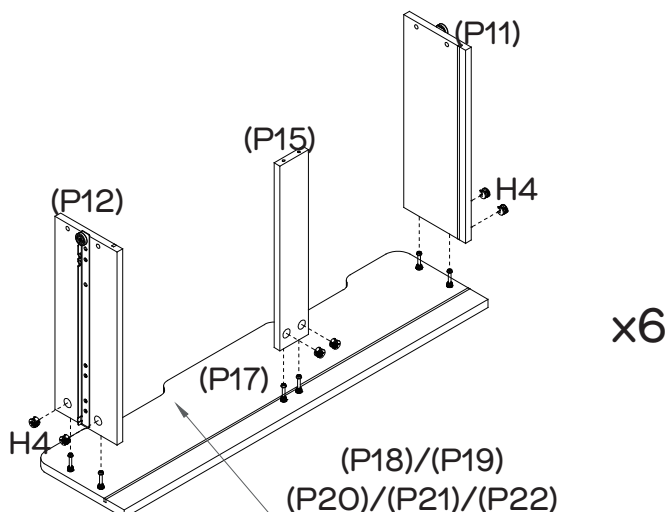



Attach drawer sides (P11) & (P12) and drawer rail (P15) to drawer front (P17). Insert 6 x small cam nuts (H4) into drawer sides (P11) & (P12) and drawer rail (P15), turn clockwise to lock. Repeat five times for others drawer fronts (18) (19) (20) (21) (22).


## Step 23

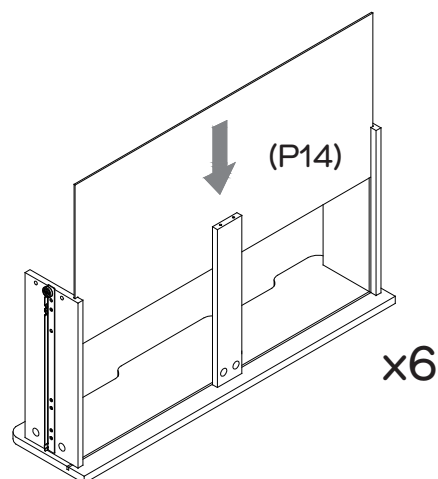Slide each drawer base (P14) into the groove in the drawer panels (P11), (P12) and drawer fronts. Repeat with all drawer bases (P14).



## Step 24

You will need	
	
36 x Screws (H17)	Phillips head screwdriver

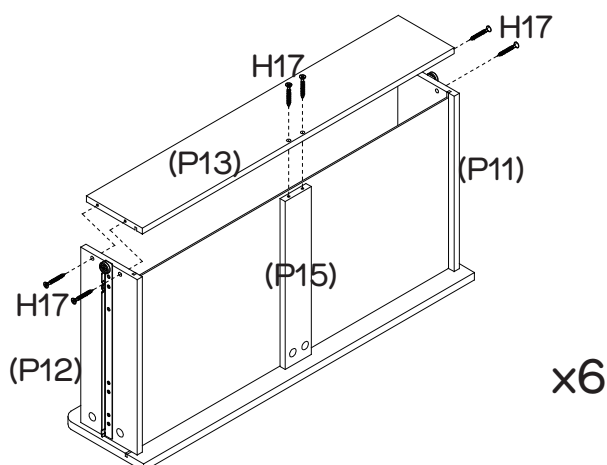


Attach each drawer back (P13) to drawer sides (P11) & (P12) and drawer rail (P15) with 6 x screws (H17), tighten with a Phillips head screwdriver. Repeat for all drawer backs (P13).

## Step 25





Insert drawers into cabinet carefully as shown.  
Slide drawer runners into position gently to avoid  
damaging runners.


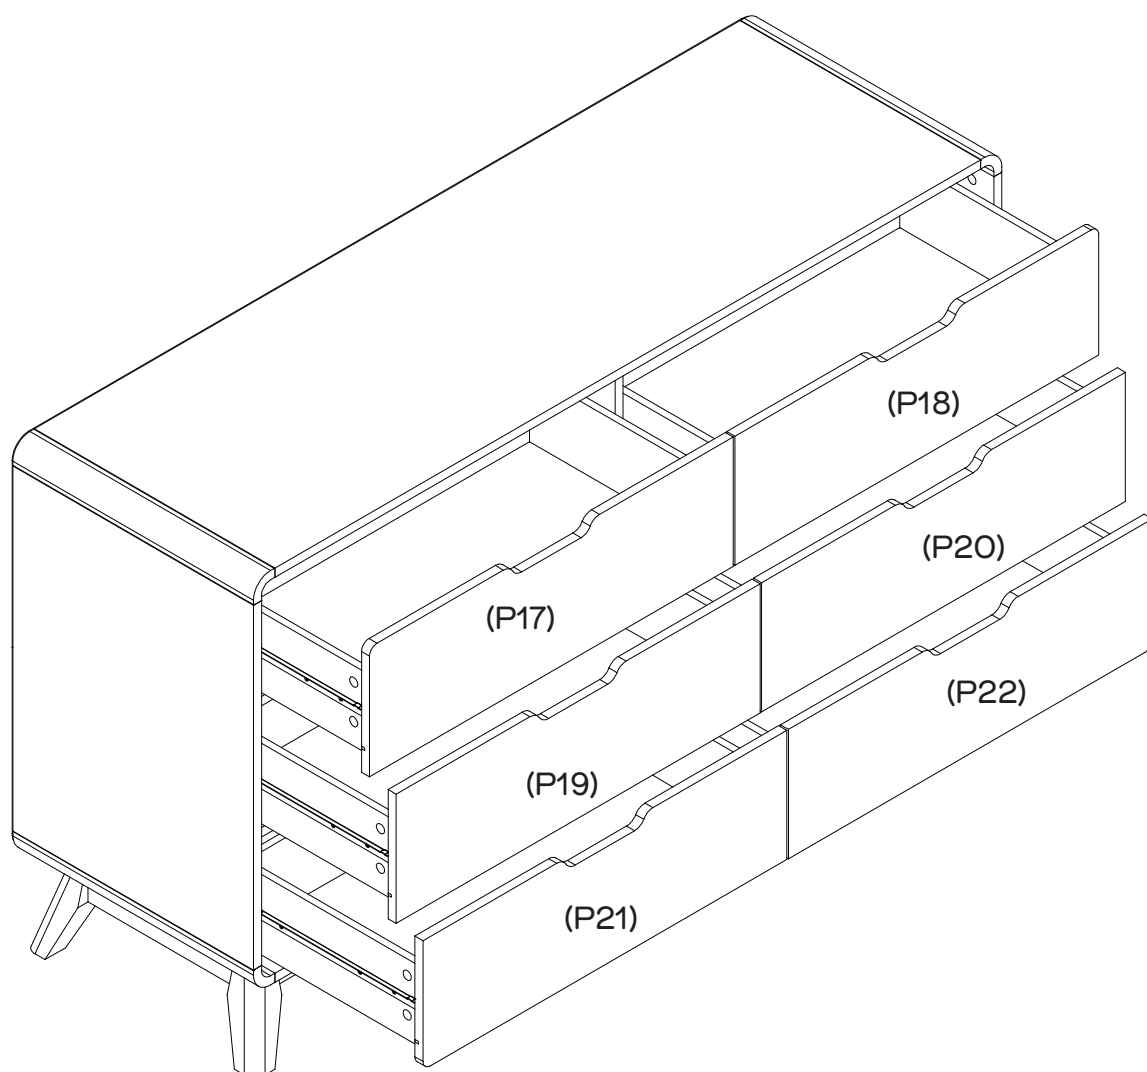
Note: Follow the correct order of these  
six drawers as shown.



## Step 26

We strongly advise that you use the wall strap provided to prevent the unit toppling.

You will need	
	
2 x Flat washers (H15)	2 x Wall straps (H14)
	
2 x Screws (H13)	Phillips head screwdriver

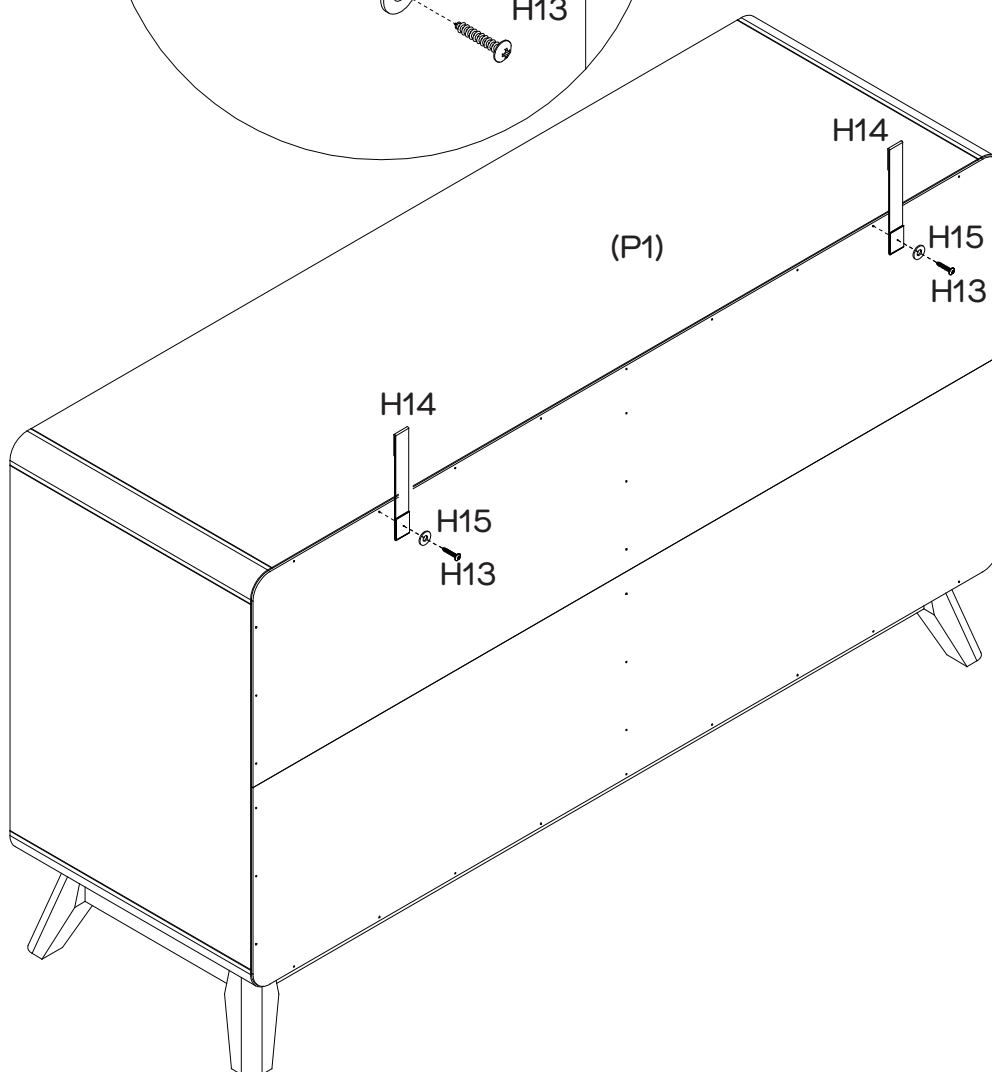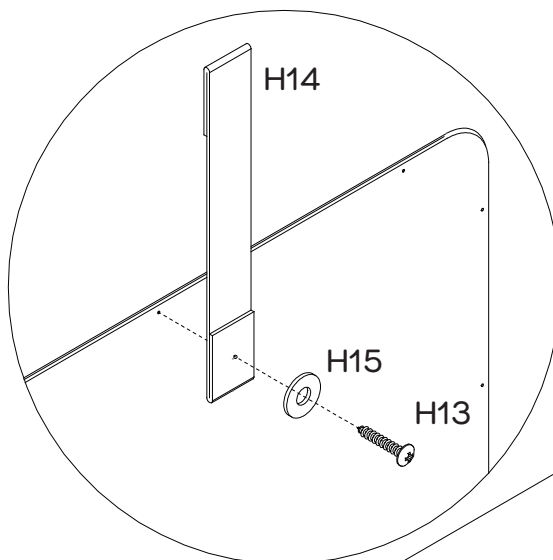



Use a Phillips head screwdriver, screw (H13) to fix wall strap (H14) on top panel (P1) as shown.

## Step 27

Two People





Seek advice from a qualified trades person on how to attach this wall strap to your specific wall.

You will need	
	
2 x Flat washers (H15)	Phillips head screwdriver


Screw and wall plug are not included.

Please use appropriate fixtures for your wall.

Move the dresser to the final position. Attach the wall straps to the wall. Make sure they are firmly attached and fit snugly.

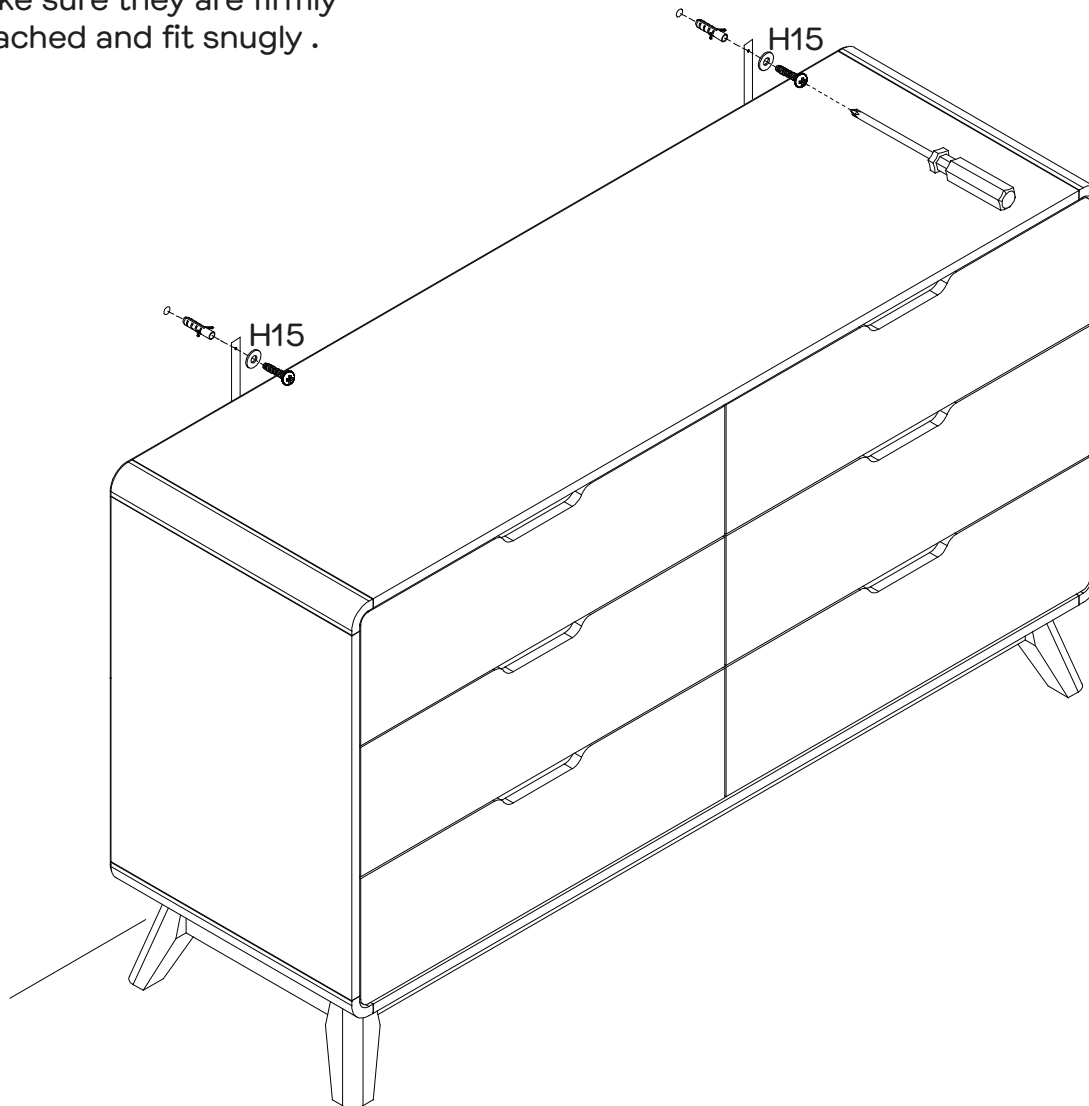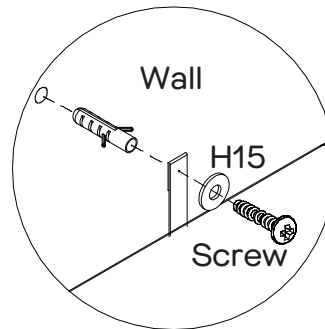

## Step 28

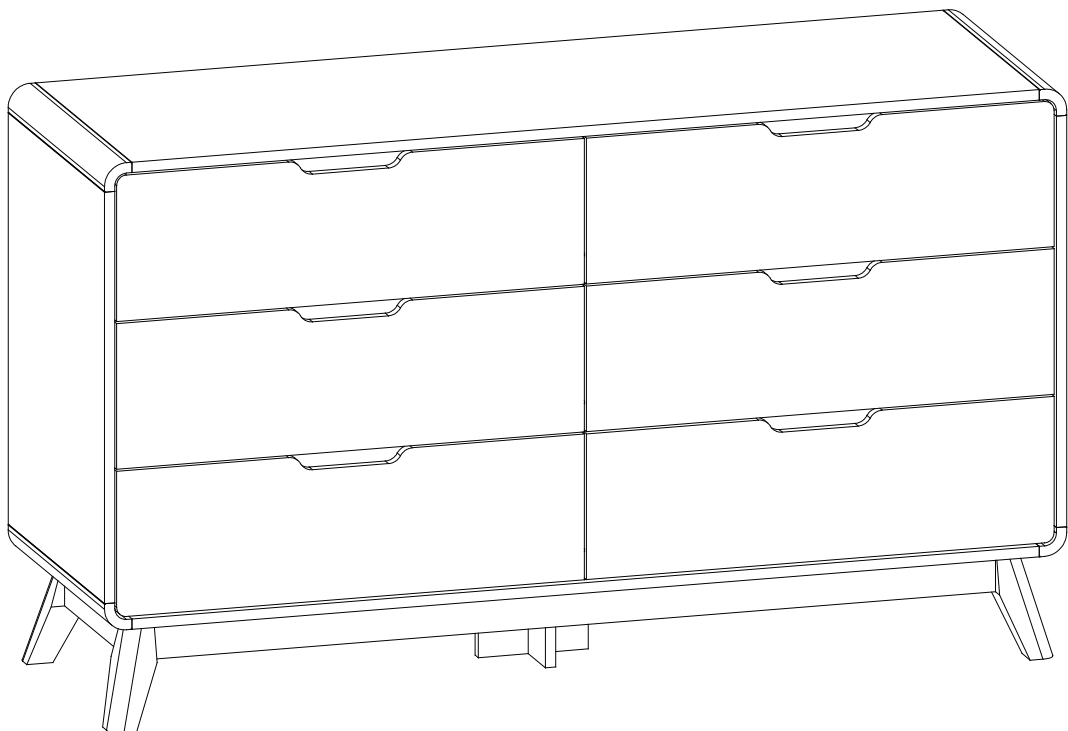

## Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.