


Version 1.0

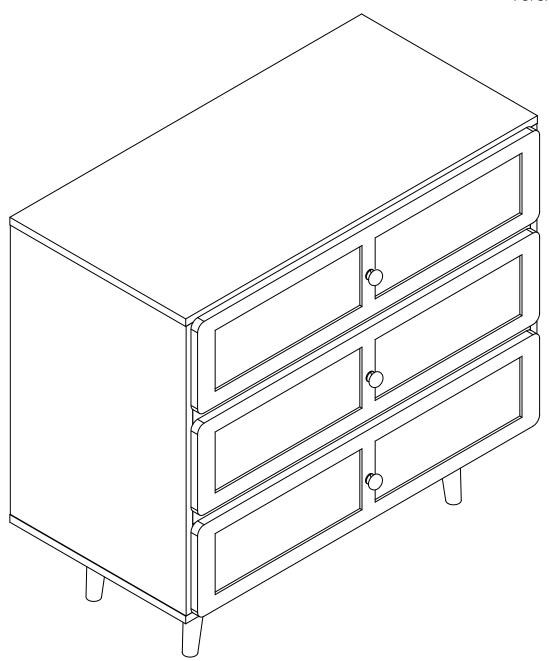







fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Recommended Weight Capacity: 10kg/drawer

To reduce the risk of furniture tipover:




- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.
- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.




- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended.
 Check anchors regularly.
- · Avoid putting a TV on this product.

Wall attachment guide




For plasterboard (without available wood stud)

Securing method:Self drilling plasterboard anchor.



For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.



For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!


@fantasticfurniture




Assembly Checklist




Read through the instructions carefully before you begin.

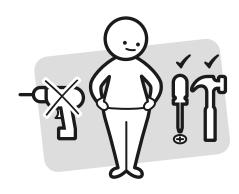

Make sure you have all the required tools. Never use power tools unless instructed.

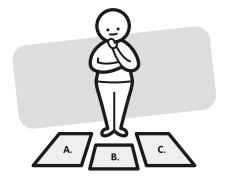


Identify and lay out all of the components before you begin assembly.

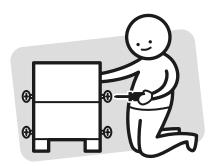



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

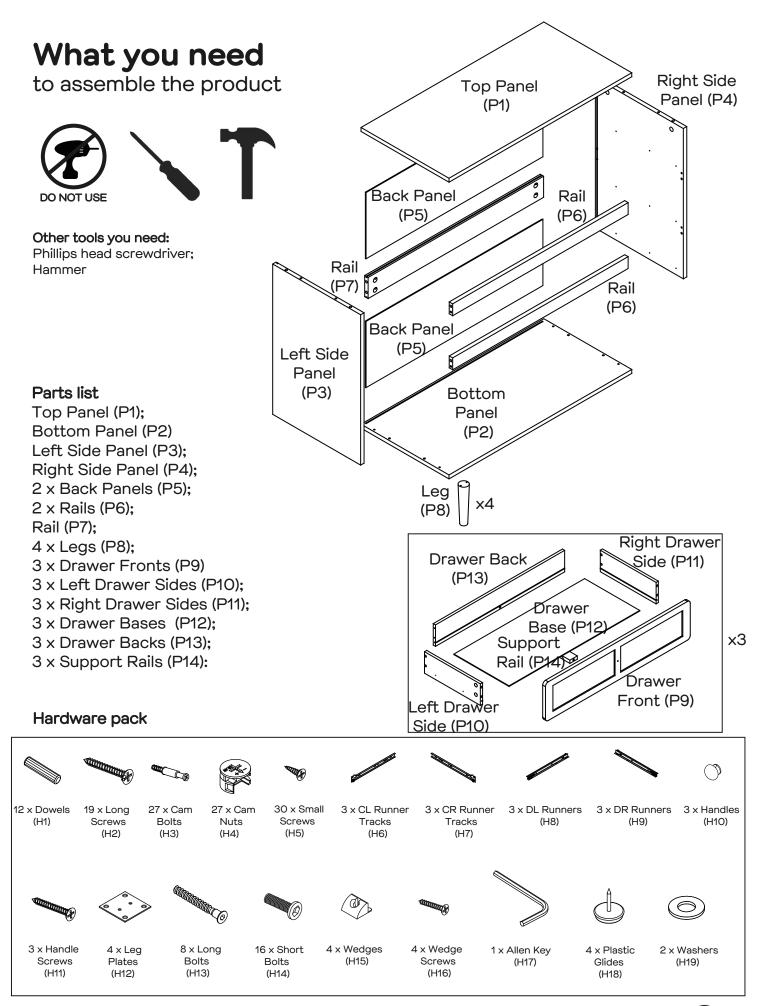

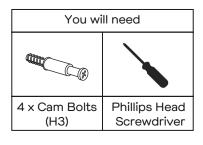

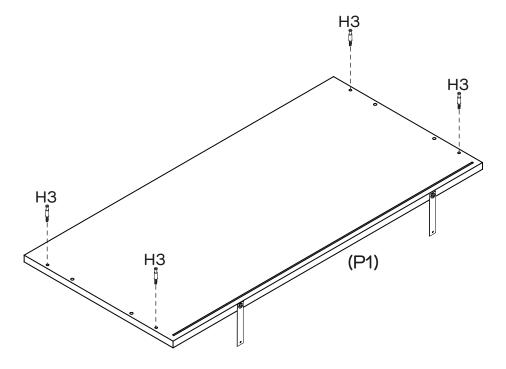


Attach 4 x Cam Bolts (H3) to Top Panel (P1) by tightening with the Phillips Head Screwdriver.

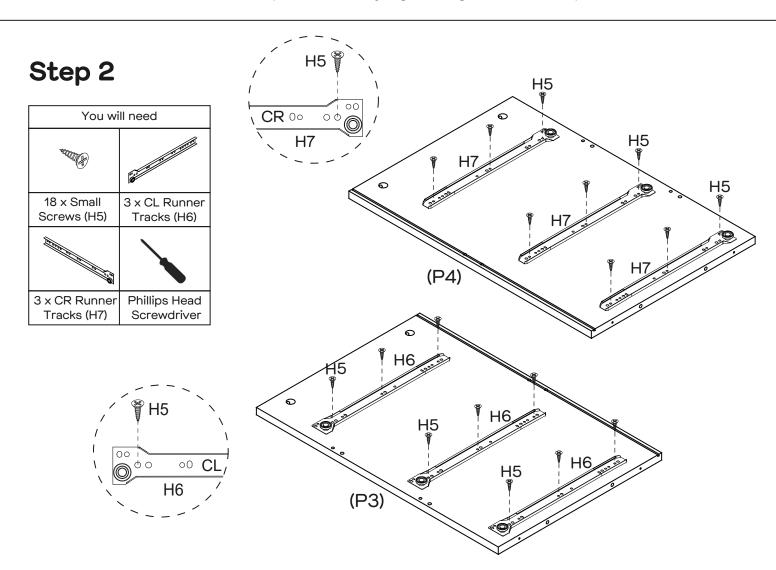


Attach 3 \times CL Runner Tracks (H6) and 3 \times CR Runner Tracks (H7) to Left & Right Side Panels (P3 & P4) with 18 \times Small Screws (H5) by tightening with the Phillips Head Screwdriver.




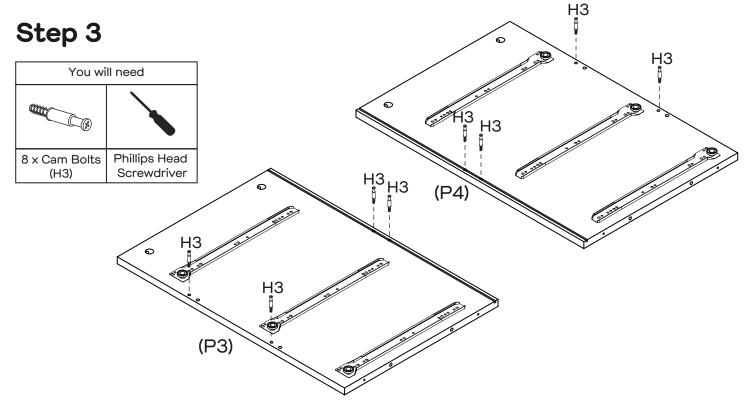


Attach 8 x Cam Bolts (H3) to Left & Right Side Panel (P3 & P4) by tightening with the Phillips Head Screwdriver.

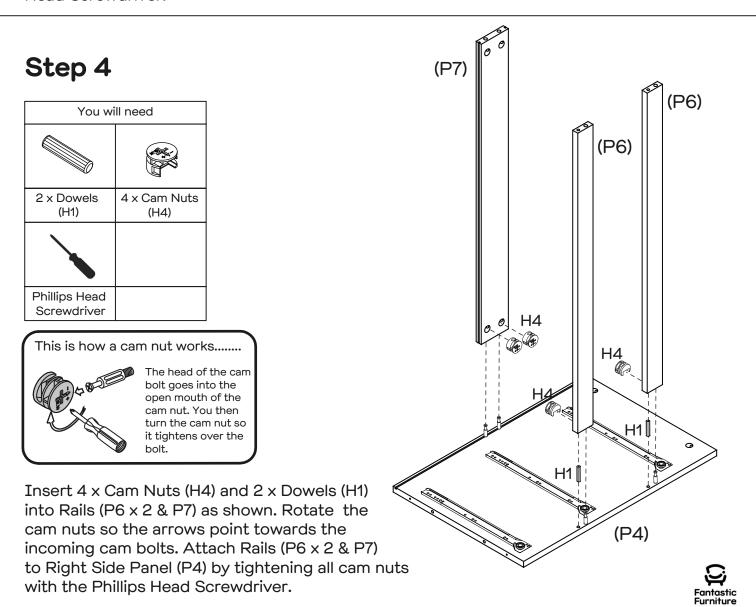


Page 7

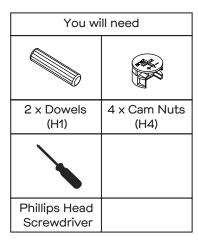

Insert 4 x Cam Nuts (H4) and 2 x Dowels (H1) into Rails (P6 x 2 & P7) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Left Side Panel (P3) to Rails (P6 x 2 & P7) by tightening all cam nuts with the Phillips Head Screwdriver.

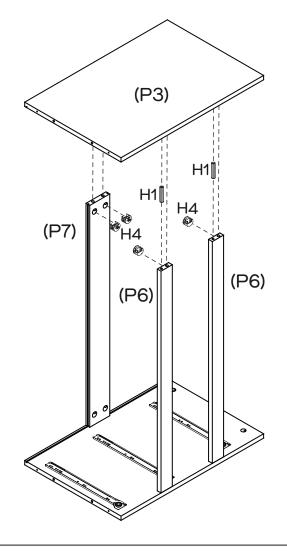


Step 6

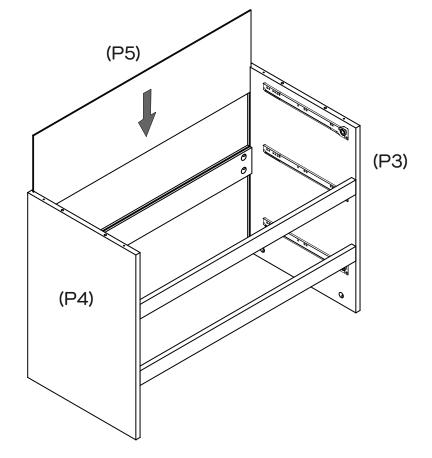


Slide 1 x Back Panel (P5) into the grooves of Left & Right Side Panel (P3 & P4).




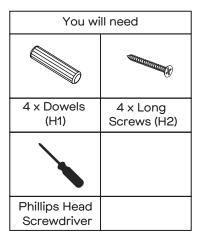


Insert 4 x Dowels (H1) into
Left & Right Side Panel (P3 & P4).
Attach Bottom Panel (P2) to
Left & Right Side Panel (P3 & P4)
with 4 x Long Screws (H2) by tightening
with the Phillips Head Screwdriver.

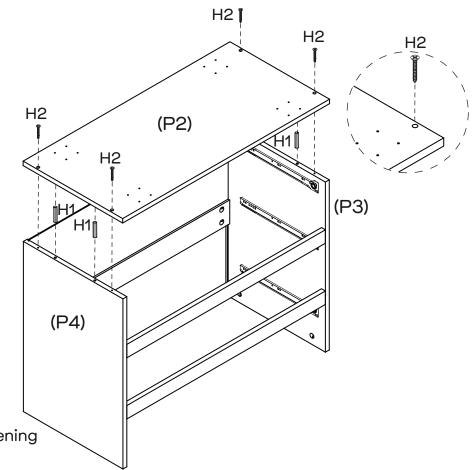

Step 8

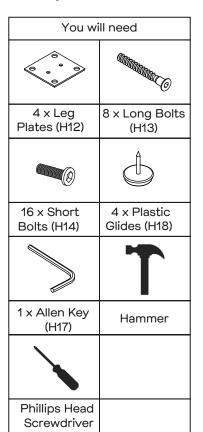

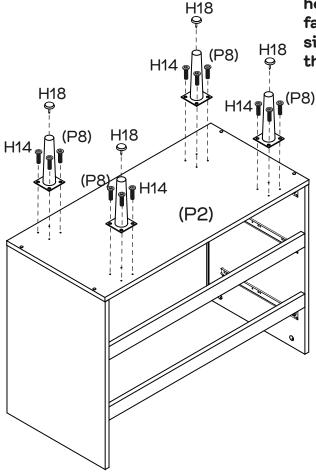

holes on the Leg Plate are facing up, so that the Screws sit flush with the top of the Leg Plate once attached.


8)

H17

H12


(P8)

Ensure the countersunk

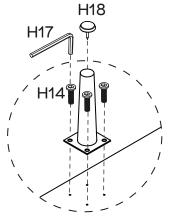

Secure 4 x Leg Plates (H12) to $4 \times \text{Legs}$ (P8) with $8 \times \text{Long Bolts}$ (H13) by tightening with an Allen Key (H17). Attach $4 \times \text{Legs}$ (P8) to Bottom Panel (P2) with $16 \times \text{Short Bolts}$ (H14) by tightening with an Allen Key (H17). Hammer $4 \times \text{Plastic Glides}$ (H18) onto the bottom of Legs (P8).



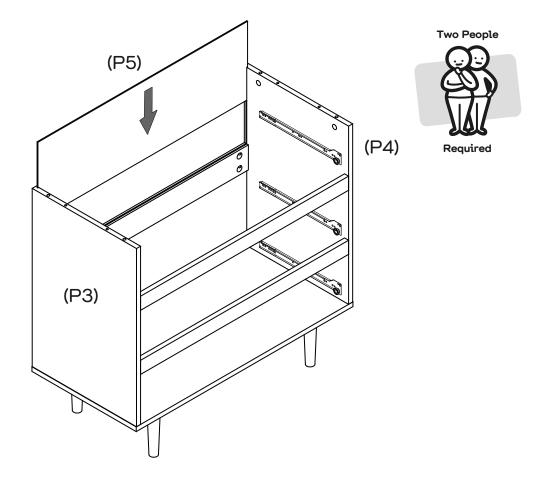

Gently stand the unit upright. Slide 1 x Back Panel (P5) into the grooves of Left & Right Side Panel (P3 & P4).


Step 10




Insert 4 x Dowels (H1) into
Left & Right Side Panel (P3 & P4).
Insert 4 x Cam Nuts (H4) into
Left & Right Side Panel (P3 & P4).
Rotate the nuts so the arrows point

(P1)
H1
H2
(P3)
(P3)

towards the incoming bolts. Attach Top Panel (P1) to Left & Right Side Panel (P3 & P4) by tightening all nuts with the Phillips Head Screwdriver.

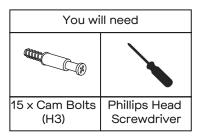


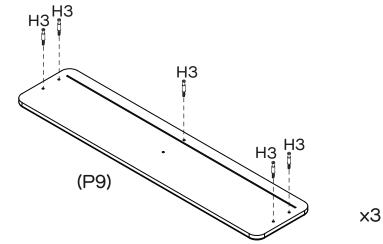

Attach 15 x Cam Bolts (H3) to Drawer Front Panels (P9 x 3) by tightening with the Phillips Head Screwdriver.






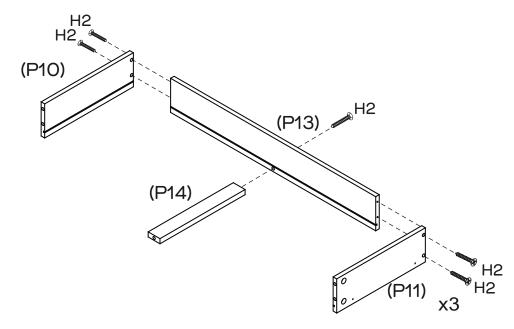

Attach Left & Right Drawer Side (P10 \times 3 & P11 \times 3) and Support Rail (P14 \times 3) to Drawer Back (P13 \times 3) with 15 \times Long Screws (H2) by tightening with the Phillips Head Screwdriver.


Step 13

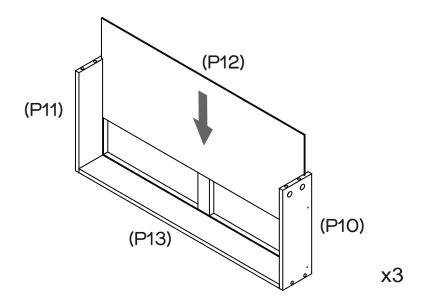

Slide the Drawer Bases (P12 \times 3) into the grooves of Left & Right Drawer Sides (P10 \times 3 & P11 \times 3) as shown.





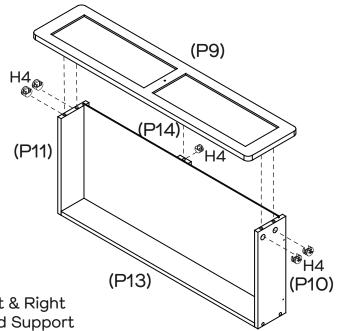


Insert 15 x Cam Nuts (H4) into Left & Right Drawer Side (P10 x 3 & P11 x 3) and Support Rail (P14 x 3) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Drawer Front (P9 x 3) to Left & Right Drawer Side (P10 x 3 & P11 x 3) and Support Rail (P14 x 3) by tightening all cam nuts with the Phillips Head Screwdriver.

x3


Step 15




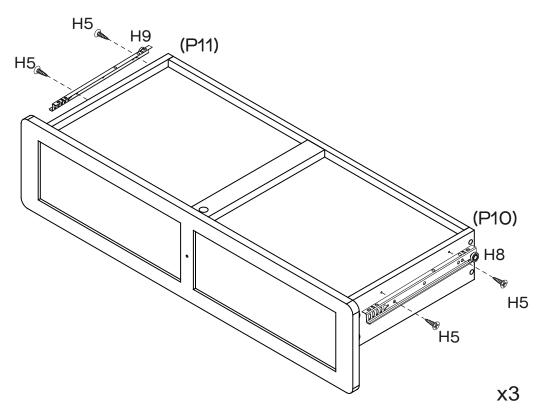

Attach 3 x DL Runners (H8) to the bottom of Left Drawer Side (P10 x 3) and 3 x DR Runner (H9) to the bottom of Right Drawer Side (P11 x 3) with 12 x Small Screws (H5) by tightening with the Phillips Head Screwdriver.


Fantastic Furniture

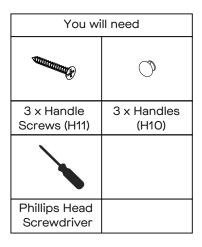

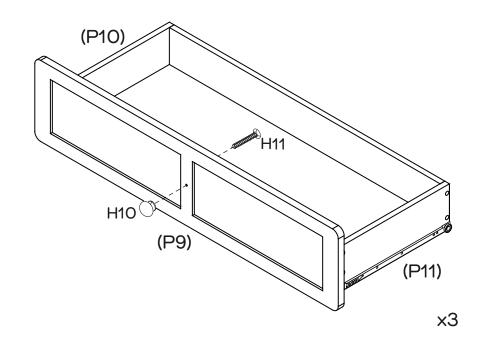



Attach 3 x Handles (H10) to Drawer Front (P9 x 3) with 3 x Handle Screws (H11) by tightening with the Phillips Head Screwdriver.

Step 17

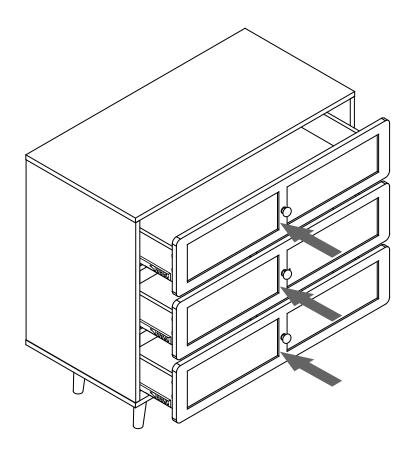

Insert the assembled drawers into the corresponding compartments as shown. Ensure the drawers slide easily along the rails.

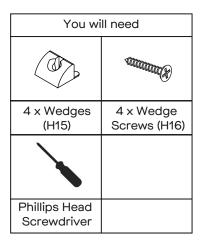

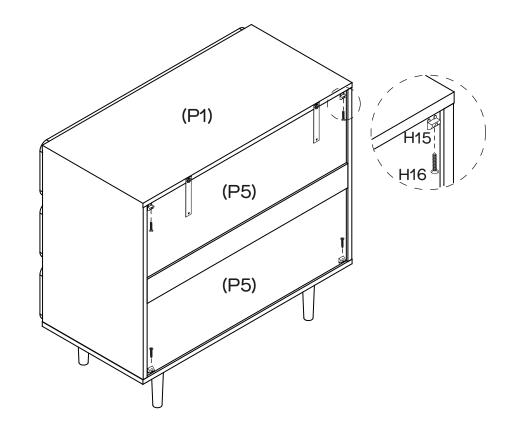


Secure Back Panels (P5 \times 2) in place with 4 \times Wedges (H15) using 4 \times Wedge Screws (H16) by tightening with the Phillips Head Screwdriver.

Step 19



Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

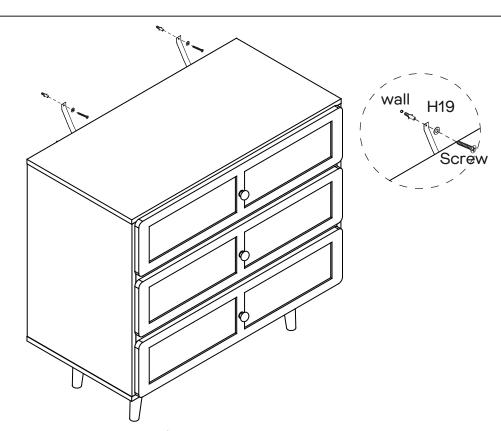

Move the unit to the final position, and attach the safety strap to the wall securely. Make sure it is firmly attached and snug fit.

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

