ASSEMBLY INSTRUCTIONS

OFFICE CHAIR OCH-PADCROSS

Notice:1.Do not fully tighten the screws until all of them are aligned properly with the holes.
2.Please follow the instructions in step 2 to assemble the product.

A:	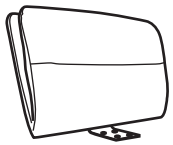	1
B:		1
C:	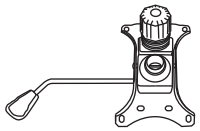	1
D:		1

E:	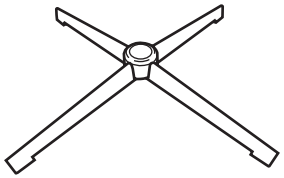	1
F:	M6*18	4
G:	M6*30	4
L:		1

①

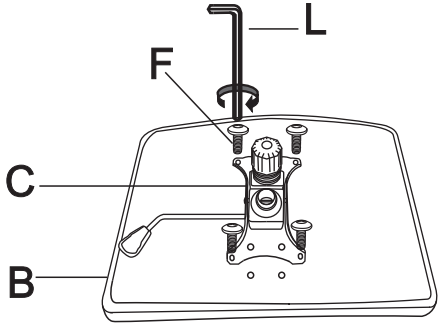

②

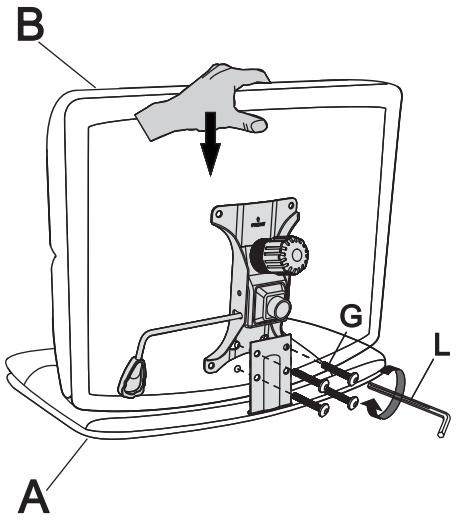

③

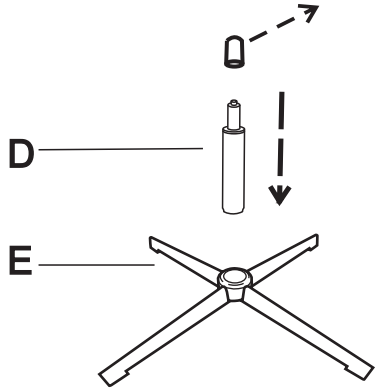

④

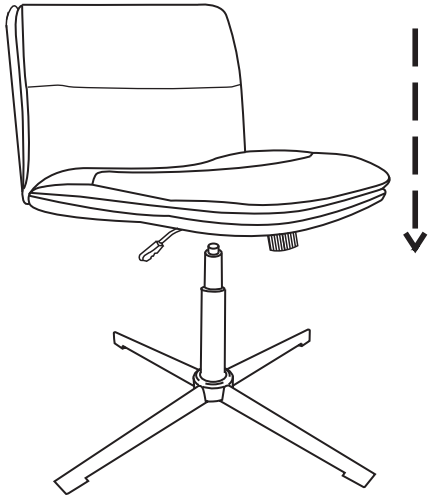

⑤