


Version 1.1



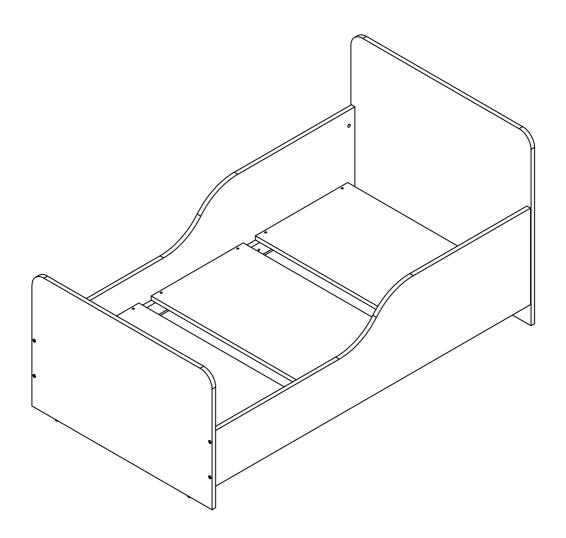

Cabin
Toddler Bed
fantasticfurniture.com.au

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



## Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!


@fantasticfurniture




### Assembly checklist




Read through the instructions carefully before you begin.

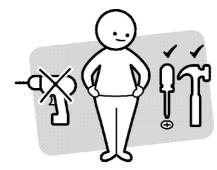

Make sure you have all the required tools. Never use power tools unless instructed.

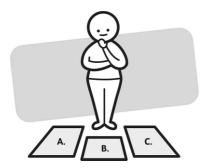

Identify and lay out all of the components before you begin assembly.

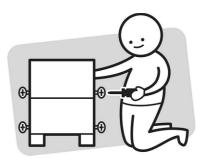

Unless instructed, do not fully tighten screws until the item is fully assembled.

#### **Useful Information**

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most commom mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasterners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



## What you need

to assemble the product









#### Other tools you need

Phillips head screwdriver, soft headed mallet.


#### Parts list

Box 1: Head Board (P1); Foot Board (P2); 3 x Base Panel (P6); Hardware. Box 2: Centre Support (P3); Side Panel L (P4); Side Panel R (P5).

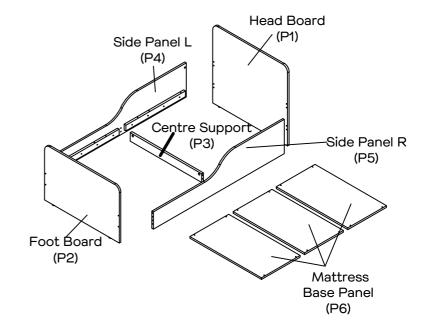

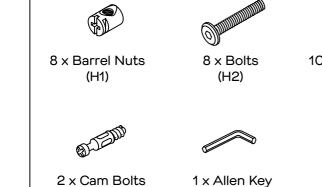



(H7)

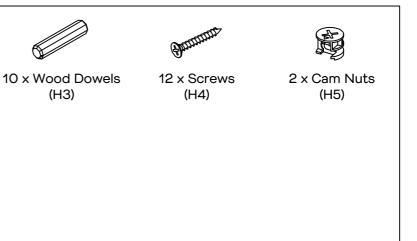

(H6)



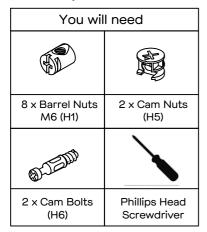


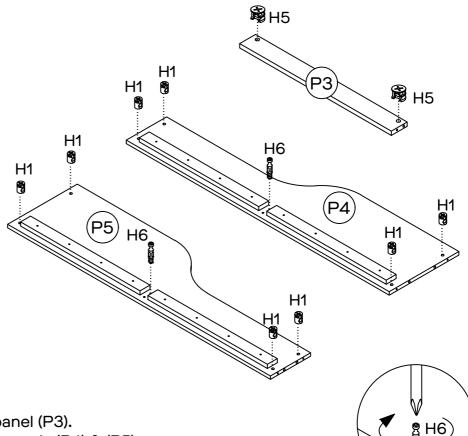


Insert 2 x cam nuts (H5) into panel (P3).

Insert 8 x barrel nuts (H1) into panels (P4) & (P5).


Screw 2 x cam bolts (H6) into panels (P4) & (P5) by using a philips head screwdriver.

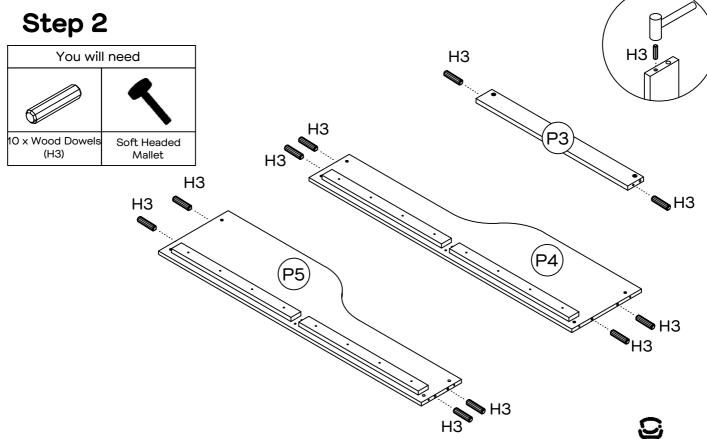

Insert 10 x dowels (H3) into panels (P3), (P4) & (P5) by hand or gently using a soft headed mallet.

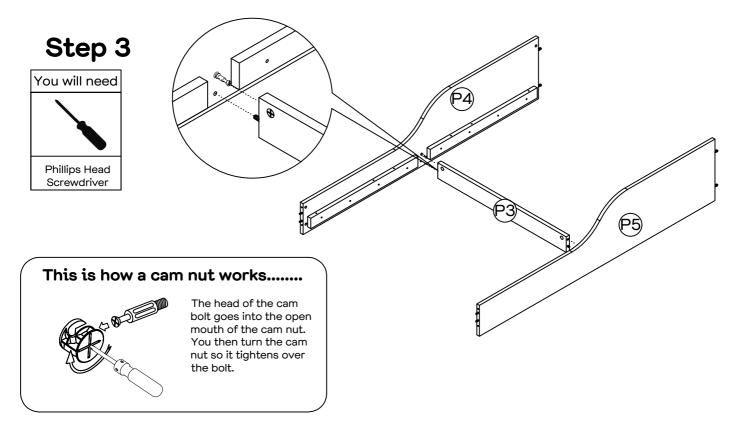


Attach panels (P4) & (P5) to panel (P3). Turn the cam nuts on panel (P3) clockwise with a phillips head screwdriver to lock in position.

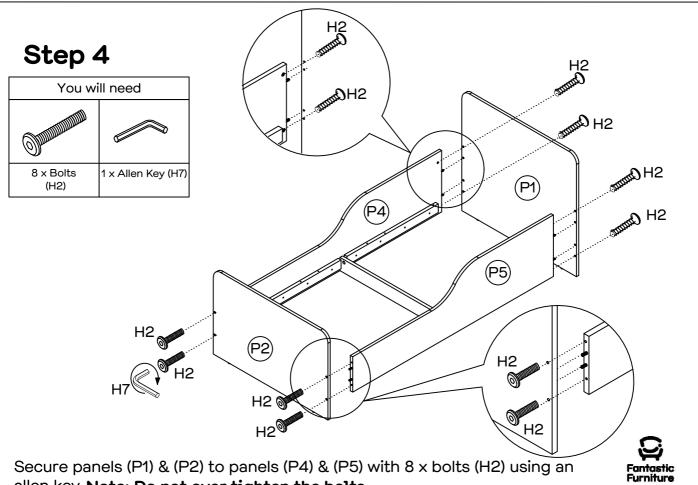


allen key. Note: Do not over tighten the bolts.

fantasticfurniture.com.au

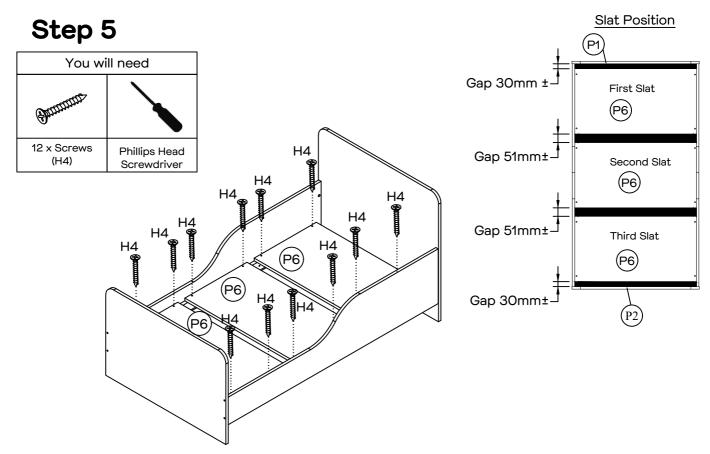

Secure panels (P6) with 12 x screws by using a philips head screwdriver. Please note the gap dimensions in the above diagram.

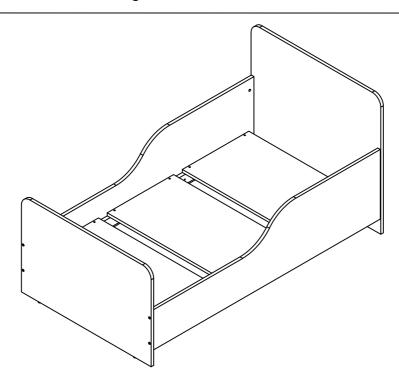

# **Job Complete!**

In the interest of our environment please dispose of all packaging thoughtfully.

Fantastic Furniture