


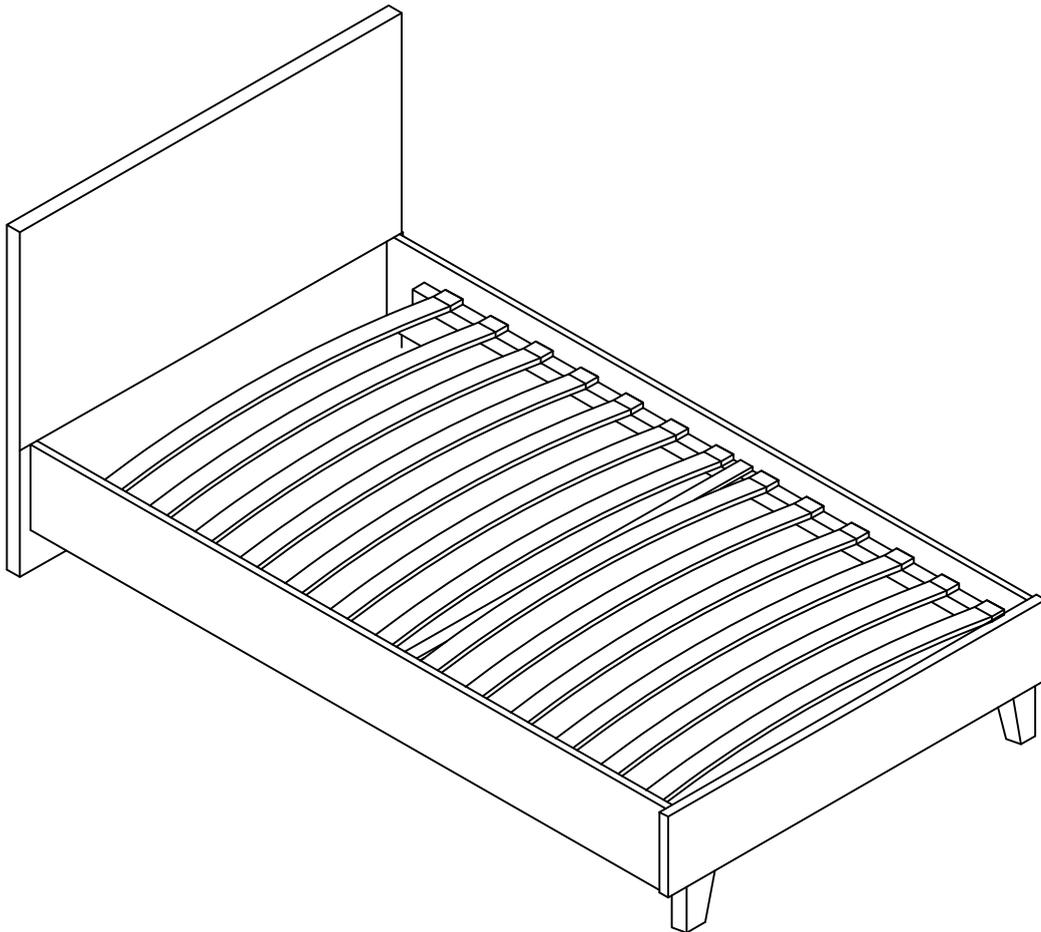


**Fantastic  
Furniture**

Version 1.0



**Two People**

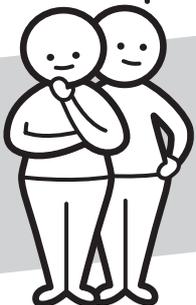

**Required**

**Jervis**  
Single Bed

[fantasticfurniture.com.au](http://fantasticfurniture.com.au)

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture  
to help create a home you'll love!



## Fantastic Furniture

### Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for  
your chance to win a \$250 Fantastic Furniture Gift Card!

**@fantasticfurniture**


# Assembly checklist




Read through the instructions carefully before you begin.

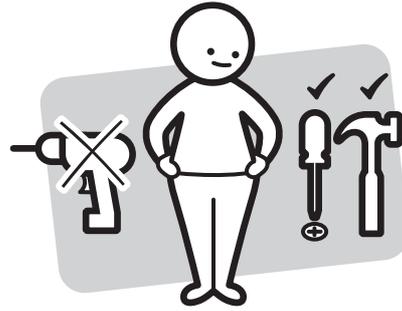

Make sure you have all the required tools. Never use power tools unless instructed.

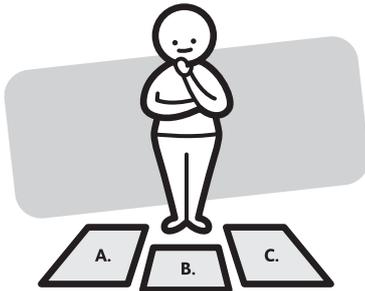

Identify and lay out all of the components before you begin assembly.

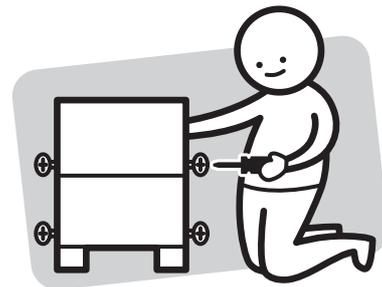

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

# What you need


to assemble the product



DO NOT USE



Other tools you need:  
Phillips head screwdriver;

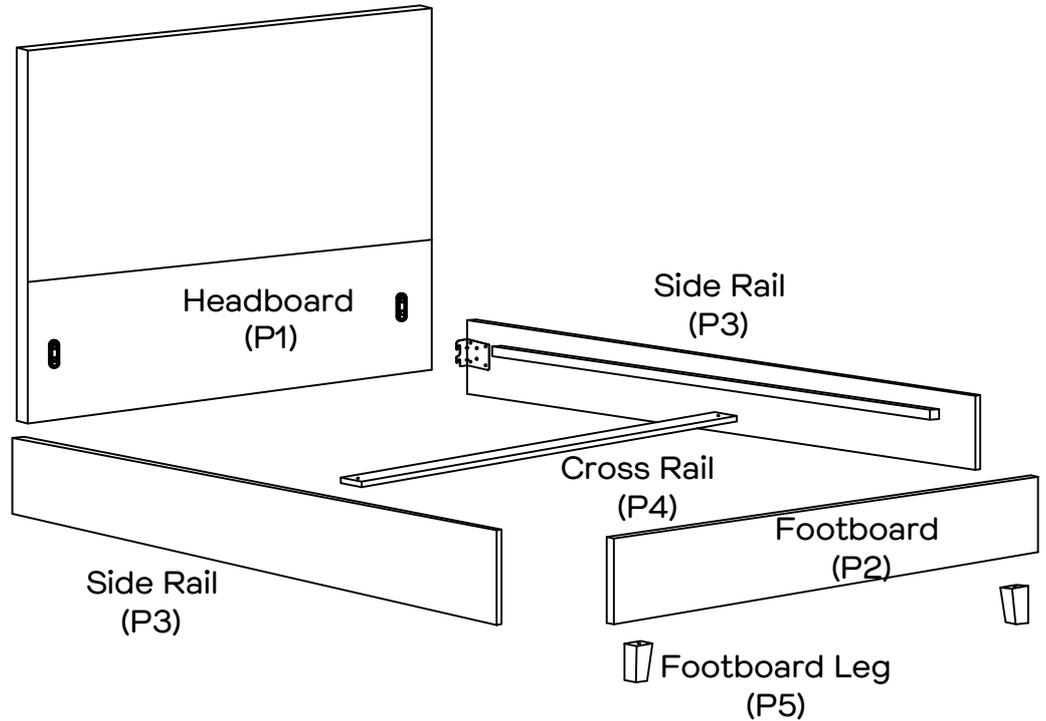


## Parts list

**Box 1 :** Footboard (P2) ; 2 x Side Rail (P3) ; Cross Rail (P4) ; 2 x Footboard Leg (P5) ;  
End Connectors (P6) ; Hardware Box

**Box 2 :** Headboard (P1) ; Slats (P7)

26 x End Connectors (P6)

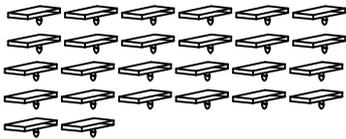


13 x Slats (P7)

## Hardware pack



4 x 18mm Bolt (H1)



1 x Allen Key (H2)



2 x 90mm Bolt (H3)



12 x Washer (H4)



8 x 20mm Bolt (H5)



2 x Nut (H6)



2 x 32mm Screw (H7)



2 x Brackets (H8)





1 x Spanner (H9)



Fantastic  
Furniture


# Step 1


You will need			
			
4 x Washers (H4)	4 x Bolts 20mm (H5)	2 x Brackets (H8)	Phillips head Screwdriver

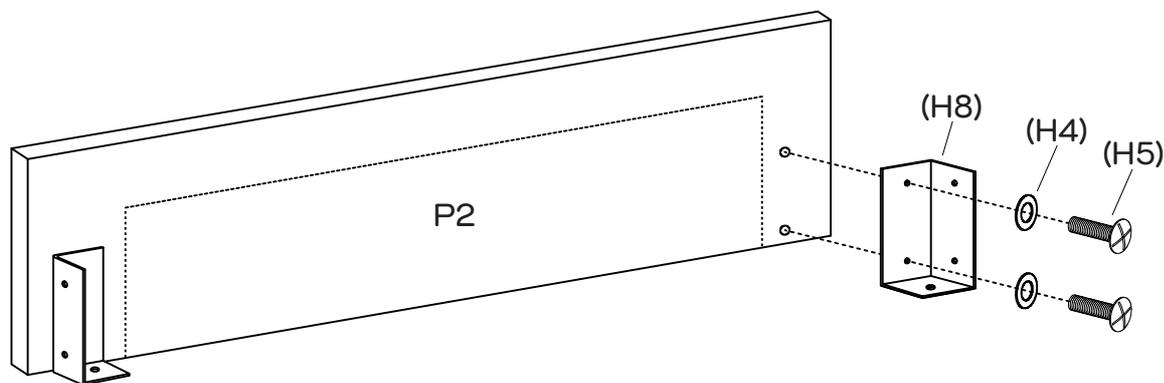

Attach 2 x brackets (H8) to the footboard (P2) with 4 x washers (H4) and 4 x bolts 20mm (H5). Do not fully tighten the bolts until step 6.

# Step 2

You will need	
	
2 x Bolts 90mm (H3)	4 x Washers (H4)
	
1 x Spanner (H9)	Phillips head screwdriver
	
2 x Nuts (H6)	

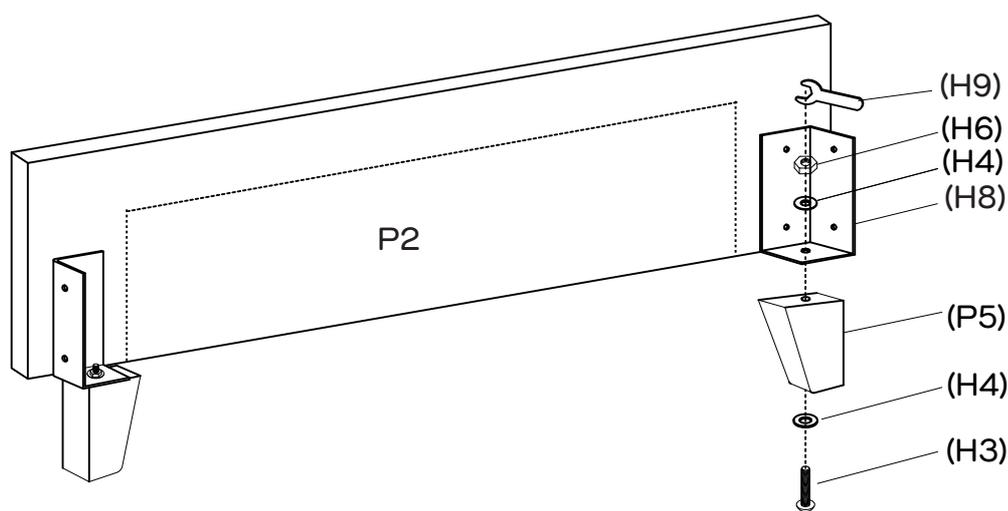



Attach the footboard leg (P5) to the bracket (H8) by using 1 x bolt (H3), 2 x washers (H4) and 1 x nut (H6), tighten with the spanner (H9) and screwdriver. Repeat for the other leg.

# Step 3

Two People




You will need	
	
4 x Bolts 18mm (H1)	1 x Allen Key (H2)

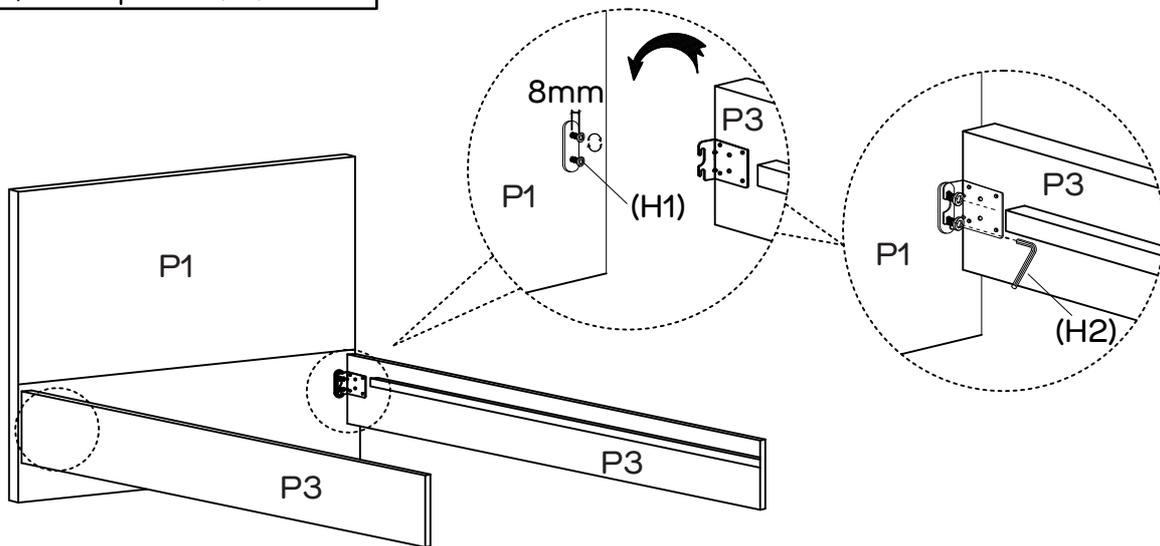

Loosen the bolts by 8mm using the allen key (H2) as shown. Then attach the side rails (P3) to the headboard (P1) over the bolt as shown. Do not fully tighten until step 6.

# Step 4


You will need		
		
4 x Washers (H4)	4 x Bolts 20mm (H5)	Phillips head Screwdriver

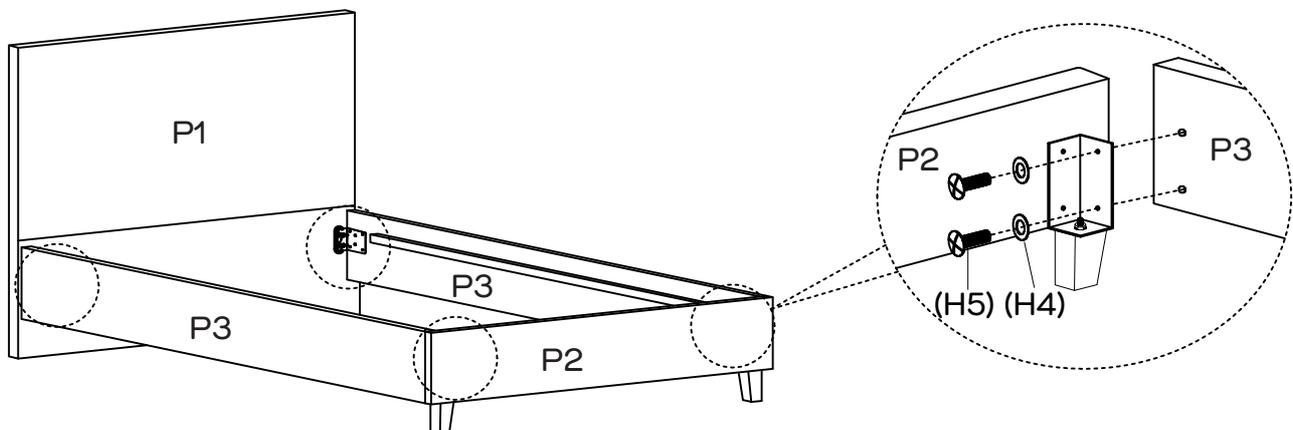

Attach the brackets (H8) to the side rails (P3) as shown with 4 x washers (H4) and 4 x 20mm bolts (H5). Do not fully tighten the bolts until step 6.

## Step 5 (a)


You will need	
	
26 x End Connectors (P6)	13 x Slats (P7)

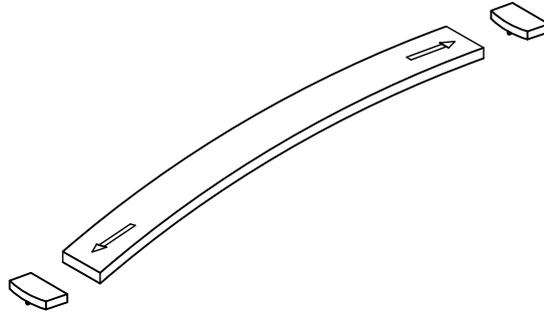

Insert the slat (P7) into the end connectors (P6).

---


## Step 5 (b)

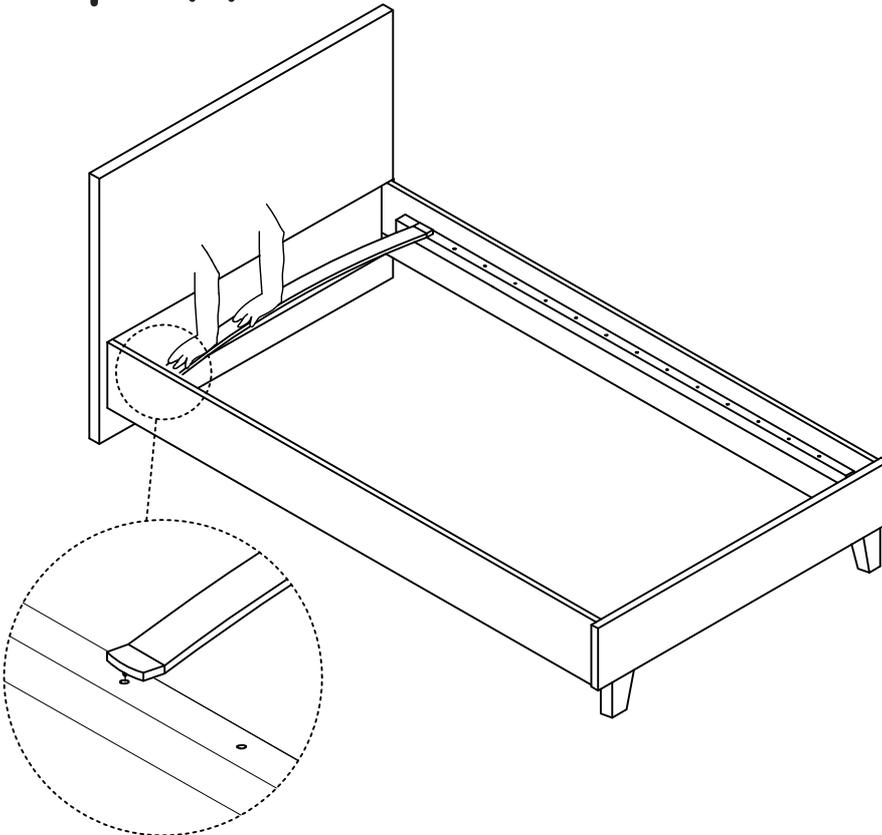


Lower the slat (P7) with the end connectors (P6) to the side rails (P3). Ensure the connectors are in place over the side rail holes and apply downward pressure on the slat (P7) with the end connectors (P6) until the end plastic cap is fully inserted into the rail.



Repeat step 5a to 5b for the remainder of the slats.

## Step 5 (c)

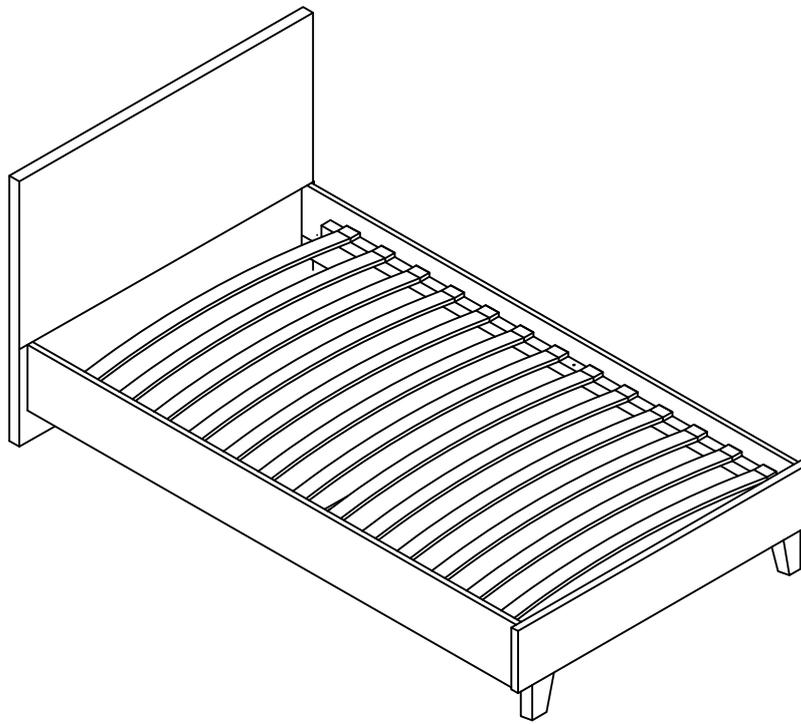

## Step 6


You will need	
	
2 x Screws (H7)	Phillips head Screwdriver

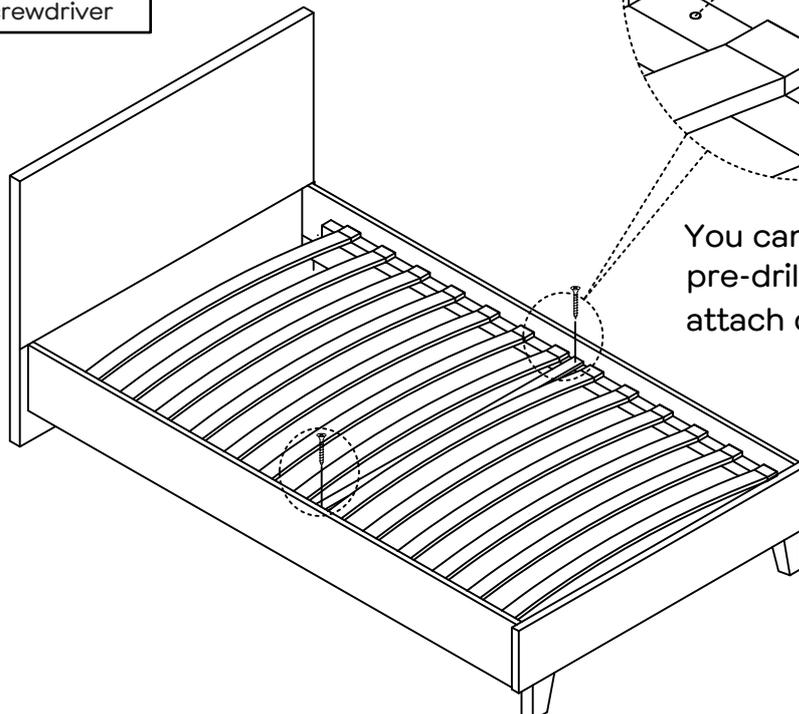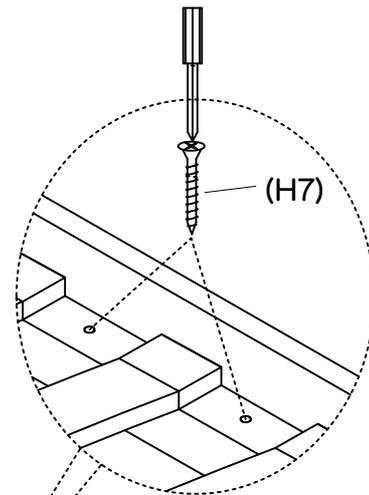

You can use either pre-drilled hole to attach cross rail (P4)

Fully tighten all the bolts on the brackets. Attach the cross rail (P4) to the side rails (P3) with the 2 x screws (H7) and tighten with a phillips head screwdriver.

## Step 7

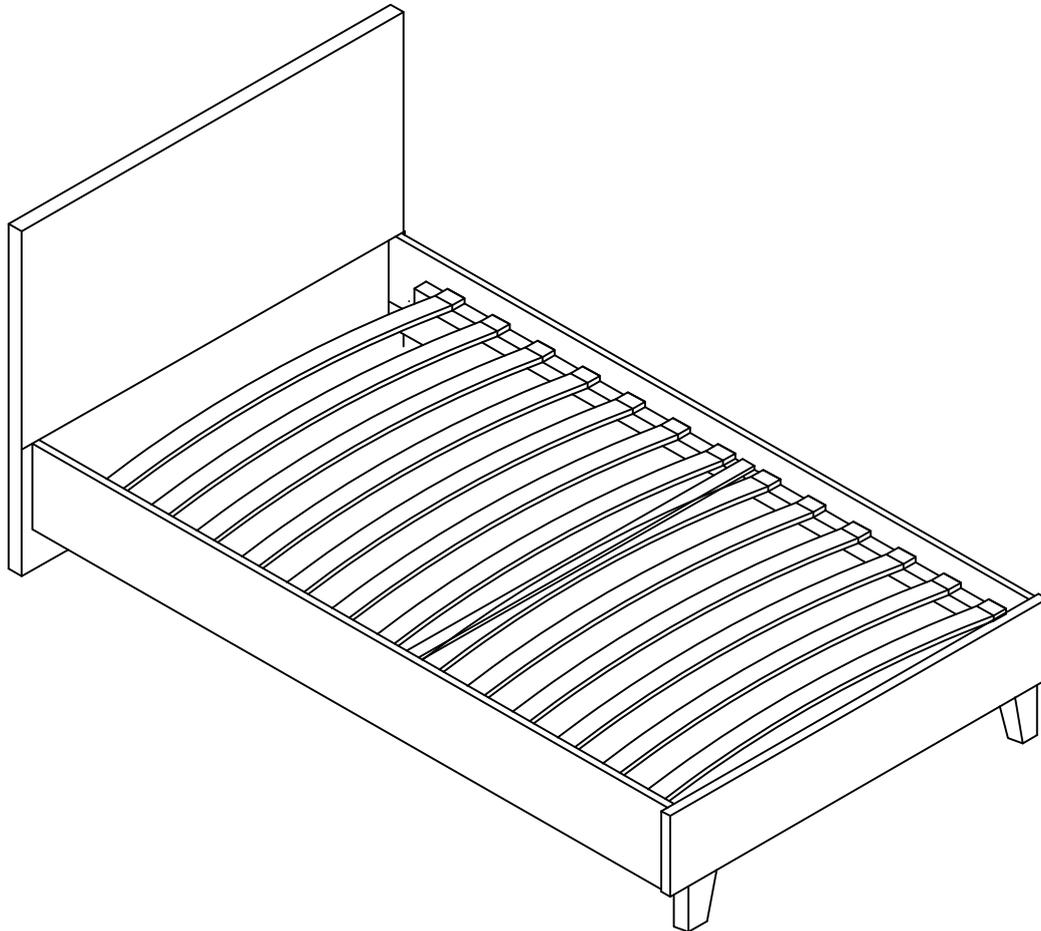

## Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.