


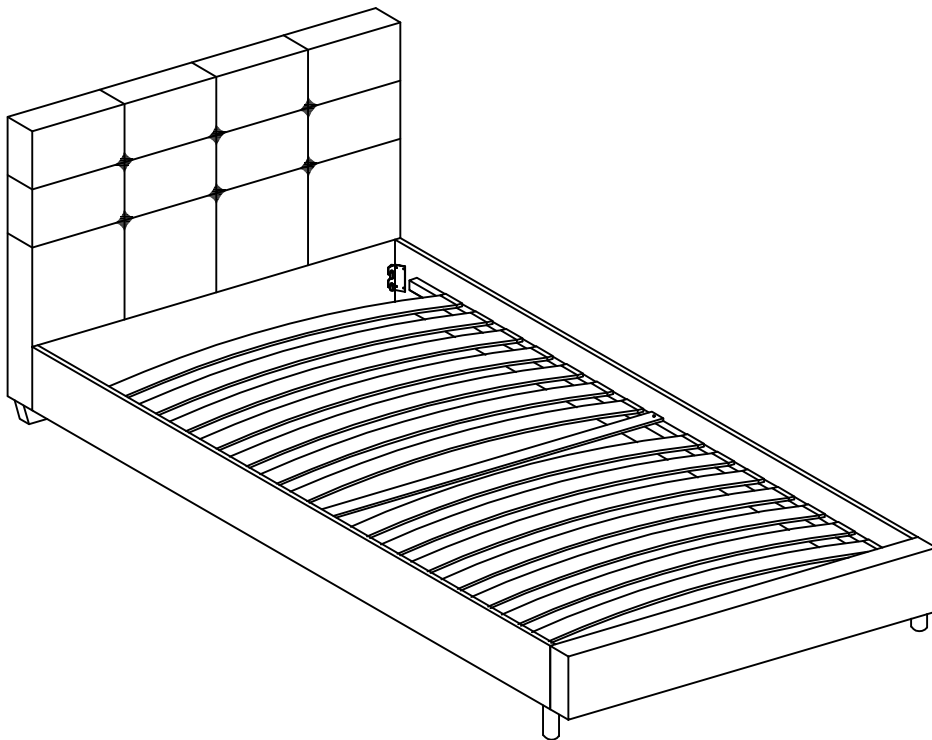


**Fantastic
Furniture**

Version 1.2



TWO PEOPLE

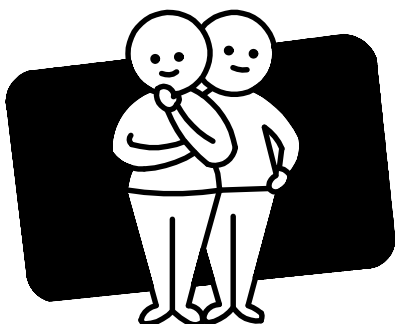

REQUIRED

Modena

King Single Bed

fantasticfurniture.com.au

Looks like you've found your fantastic!

We're thrilled you've chosen Fantastic furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.

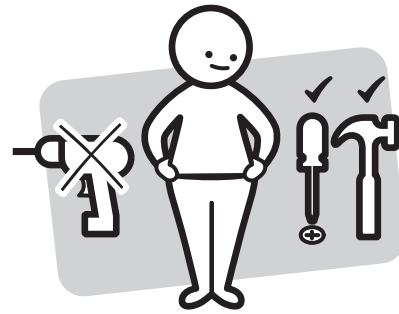

Make sure you have all the required tools. Never use power tools unless instructed.

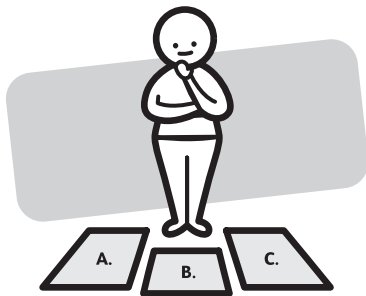

Identify and lay out all of the components before you begin assembly.

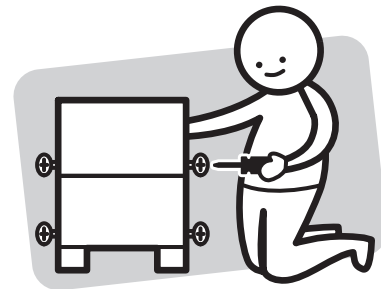

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.


What you need to assemble the product



DO NOT USE




Other tools you need
Phillips head screwdriver

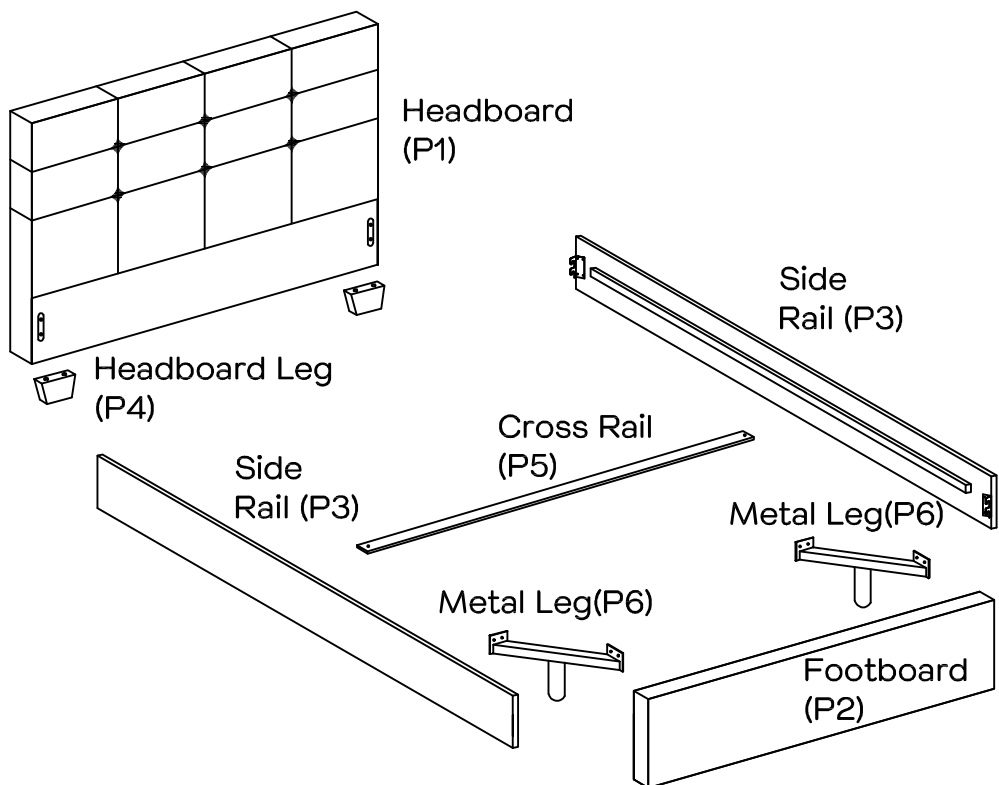

Parts list



Box 1: Footboard (P2) ; Side Rail (P3) ; Cross Rail (P5) ; Hardware Pack

Box 2: Headboard (P1) ; Headboard Leg (P4) ; Metal Leg (P6) ;

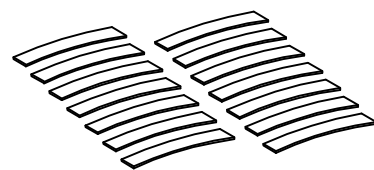

14 x Fantastic
Furniture Comfort
Slat™ King Single


28 x End Connectors

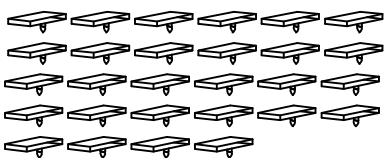


1 x Allen Key
M5 x 70mm
(H1)




1 x Allen Key
M4 x 65mm
(H2)




4 x Small Screws 20 mm
(H3)



2 x Medium Screws 32 mm
(H4)



4 x Large Screws 50 mm
(H5)



8 x Bolts 20 mm
(H6)



8 x Spring Washers
(H7)




8 x Flat Washers
(H8)





Fantastic
Furniture


Step 1

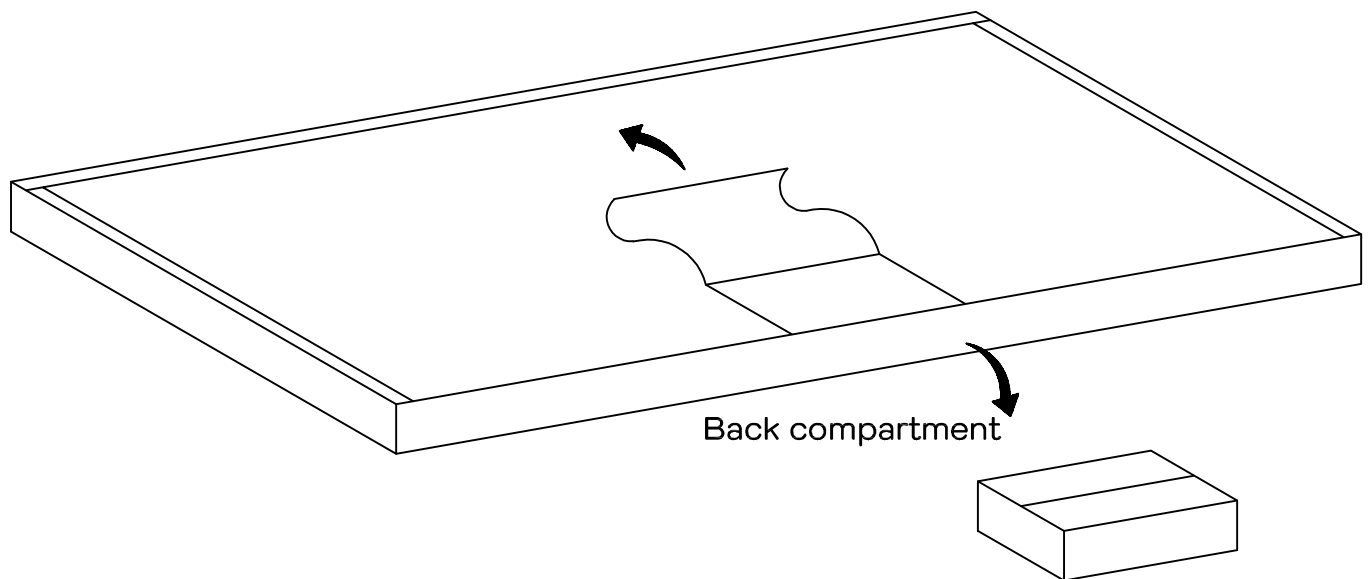

Please take out the leg carton from back of headboard
(inside the back compartment)

Step 2


You will need	
	
4 x Large Screws 50mm (H5)	Phillips head screwdriver

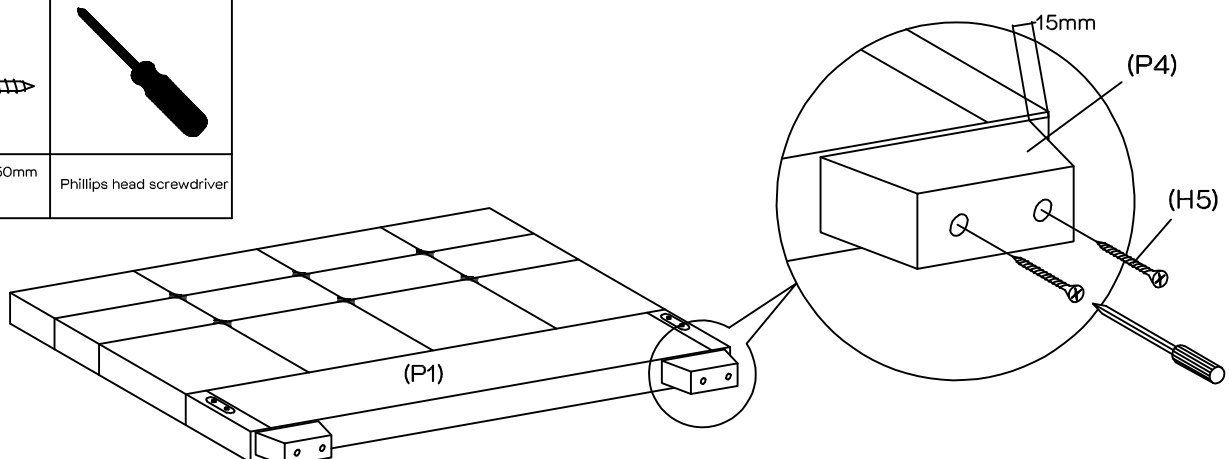


Attach 2 x legs to the bottom of the headboard (P1) with 4 x large screws (H5). The self-tapping screws provided do not require a hole to attach. Apply some pressure to the screw at the beginning, it will start to work itself into the timber frame. Keep applying the pressure as you screw until the leg is firmly attached. Repeat for the 3 other screws.

Step 3

You will need



1 x Allen Key
M4 x 70mm
(H1)

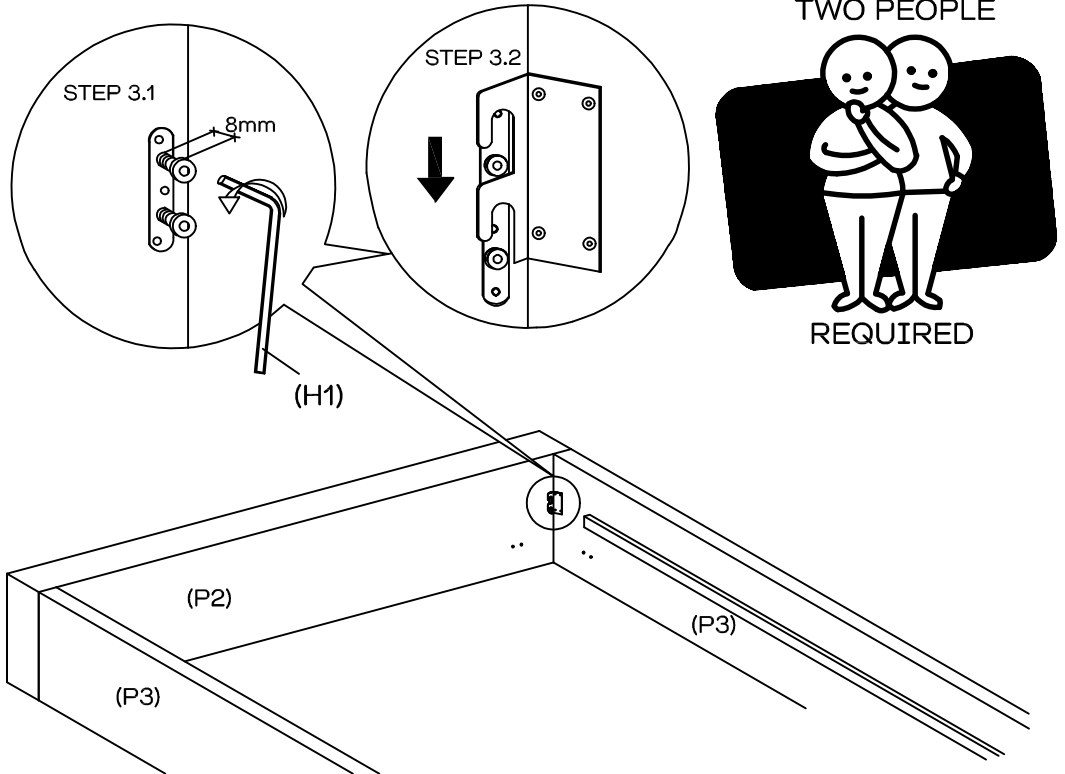

Loosen the 4 x bolts on the footboard (P2) about 8mm as shown with the allen key (H1).


Attach the 2 x side rails (P3) to the footboard (P2) by slotting on the brackets to the bolts as shown.

Step 4

You will need





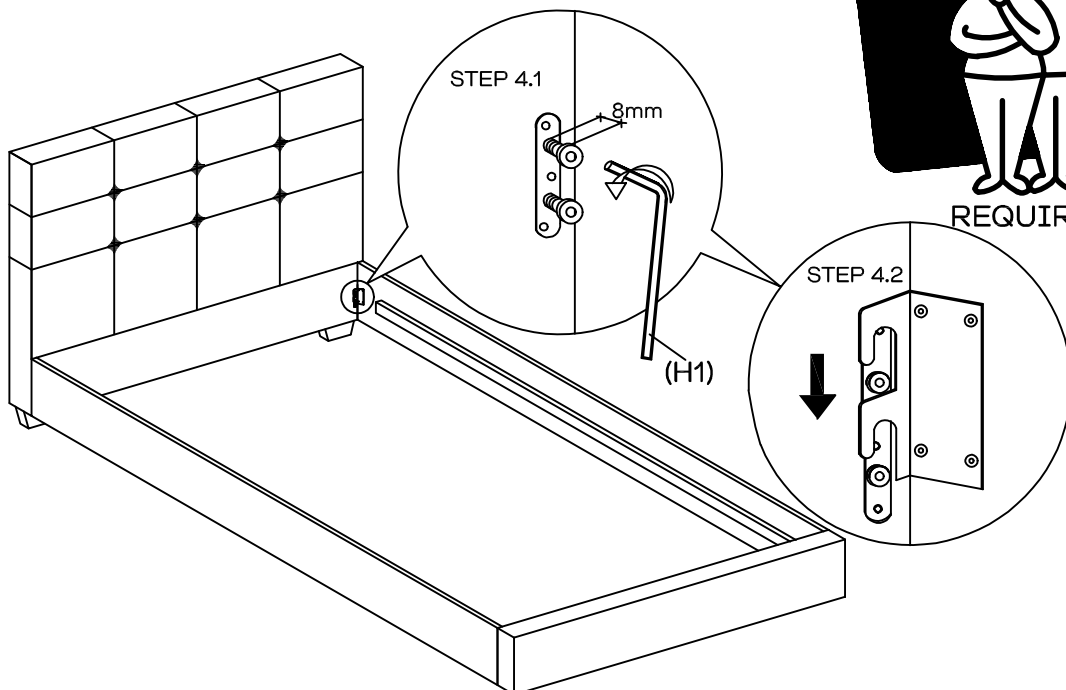



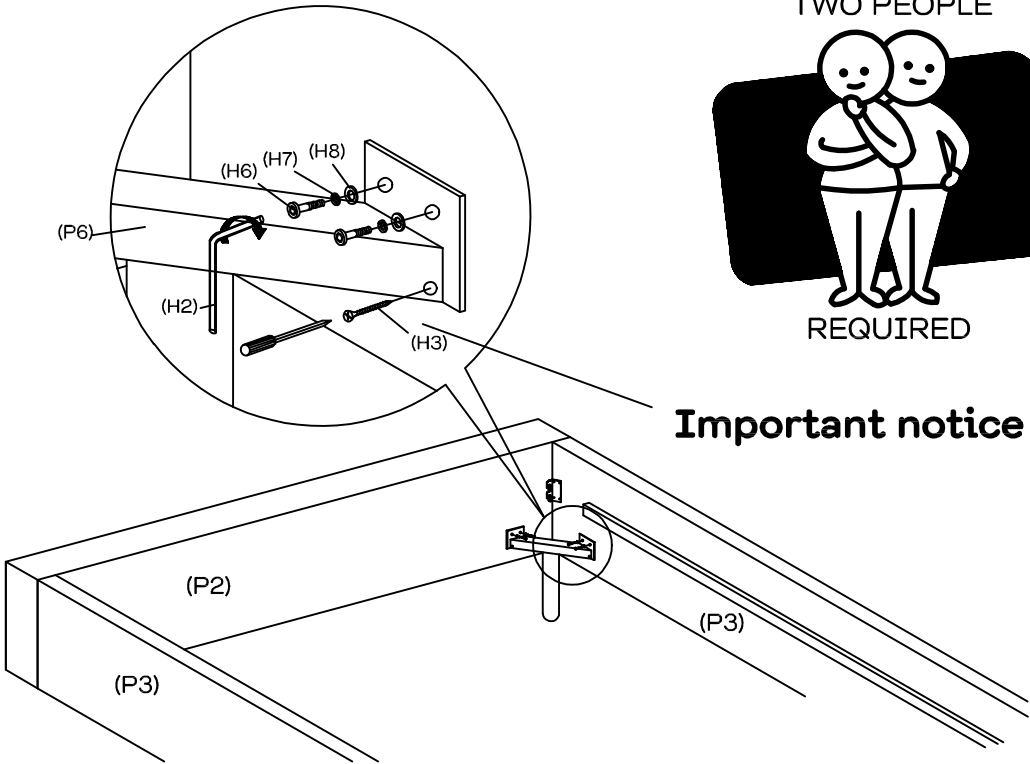
1 x Allen Key
M4 x 70mm
(H1)



Loosen the 4 x bolts on the headboard (P1) about 8mm as shown with the allen key (H1). Attach the 2 x side rails (P3) to the headboard (P1) by slotting on the brackets to the bolts as shown.

Step 5



You will need	
	
1 x Allen Key M4 x 65mm (H2)	8 x Bolts 20 mm (H6)
	
8 x Spring Washers (H7)	8 x Flat Washers (H8)
	
4 x Small Screws 20mm (H3)	Phillips head screwdriver




Important notice

Attach the 2 x metal legs (P6) to the side rail (P3) and footboard (P2) on both corners.
Attach the metal legs with bolts, spring swashers, flat washers and small screws using the allen key and screwdriver as shown. 2 people are required. 1 person needs to support the other corner of the bed whilst the first metal leg is being attached.
Important Notice: Please ensure the small screws (H3) are attached to the side rails (P3) This is important.


Step 6

You will need	
	
28 x End Connectors	14 x Fantastic Furniture Comfort Slat™ King Single

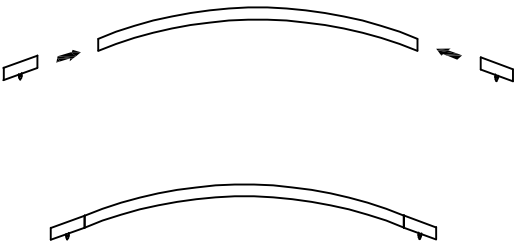


Push 1 x end connector, 1 x Fantastic Furniture ComfortSlat King Single and 1 x end connector together as shown.

Step 7

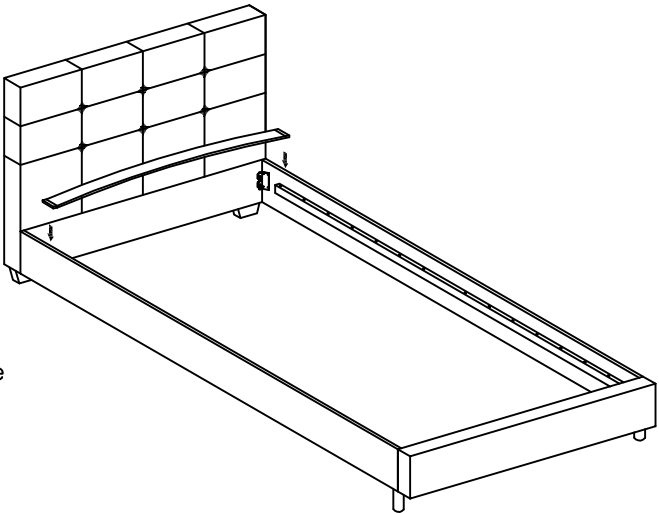




Insert the fully assembled slat into the side rails (P3) one side at a time.


Step 8

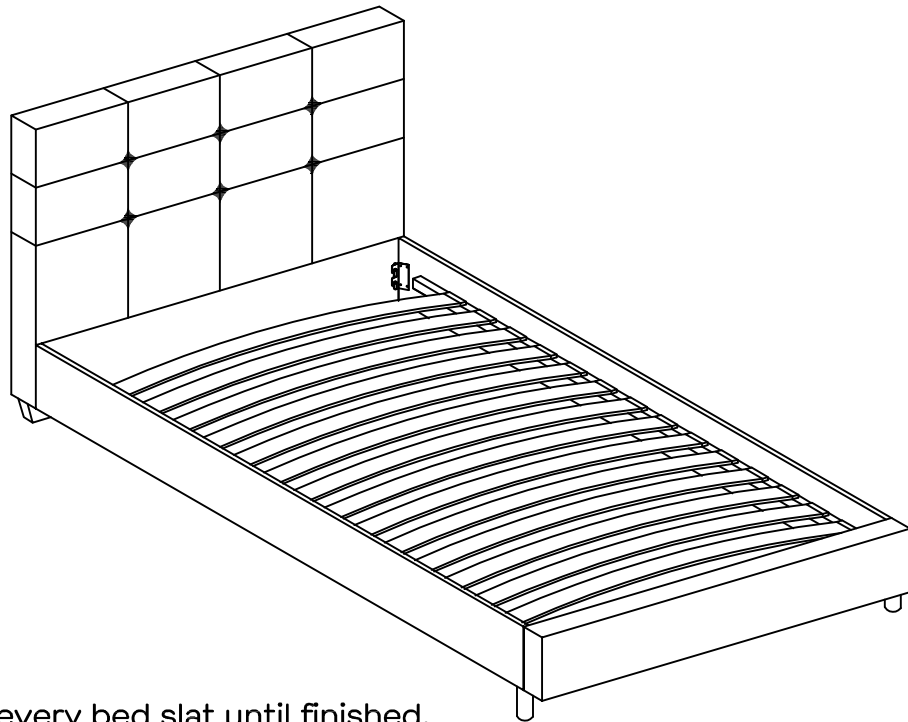

Repeat for every bed slat until finished.


Step 9

You will need	
	
2 x Medium Screw 32mm (H4)	1 x Allen Key M4 x 70mm (H1)
	
Phillips head screwdriver	

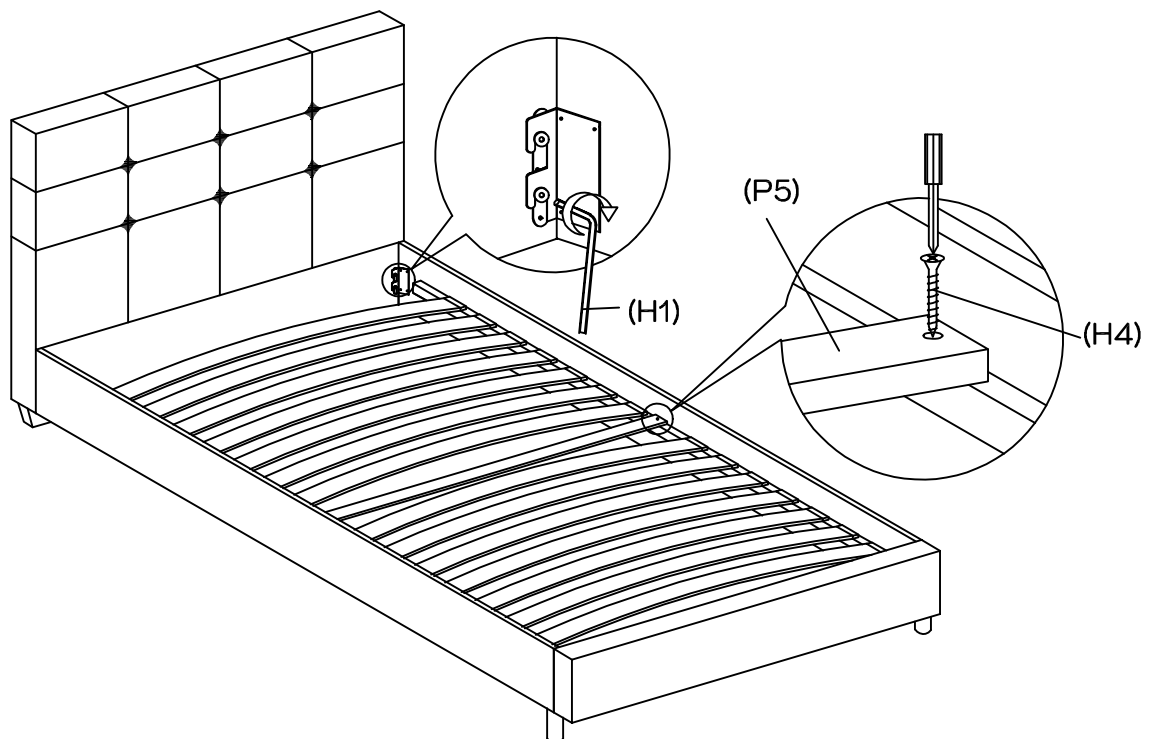

Make sure the bed frame is square, then attach the cross rail (P5) to the centre of side rails (P3) using 2x medium screws (H4). Now tighten all the bolts on the corner bracket headboard (P1) and footboard (P2).

Step 10

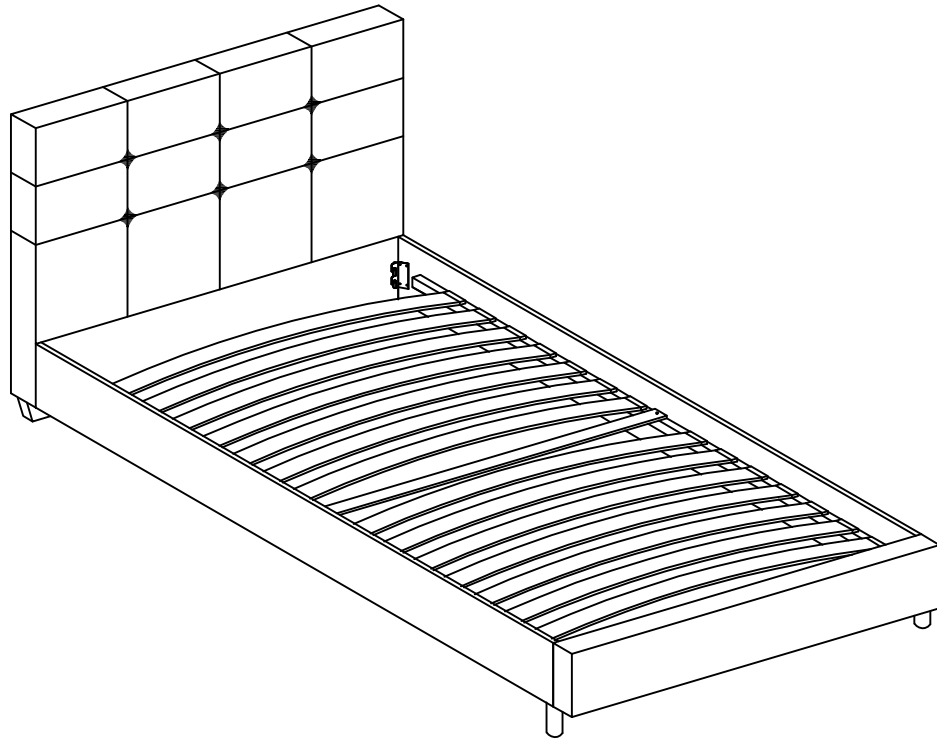

Job Complete

In the interest of our environment please dispose of all packaging thoughtfully.