



**Fantastic
Furniture**

Version 1.0



Two People



Required

Willow MK2

Bed Single

fantasticfurniture.com.au

Look like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



**Fantastic
Furniture**

Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

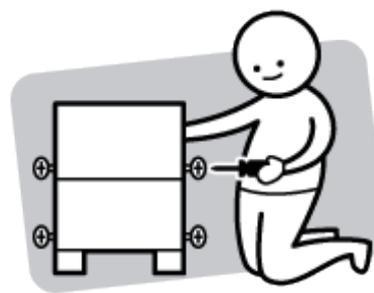

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

!The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.

!If you are having any difficulties assembling your product,missing any hardware or components please visit our website Help Centre for further assistance.


! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product



DO NOT USE

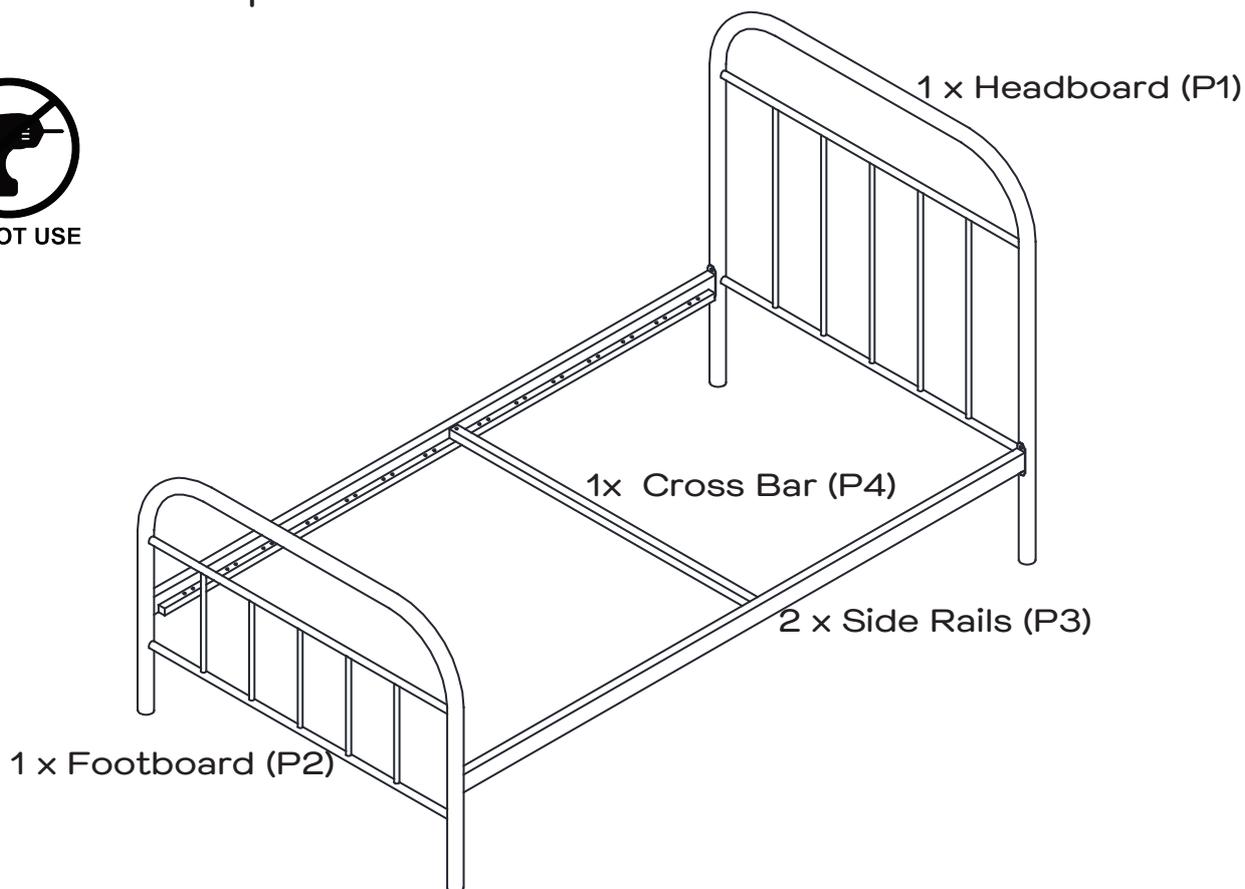

Part List:

Box 1:

Headboard (P1);

Footboard (P2);


28 x Plastic Slat Caps (P5);

Box 2:


2 x Side Rails (P3)

Cross Bar (P4);

14 x Slats (P6).

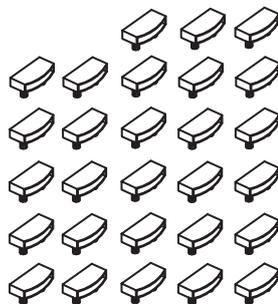

28 x Plastic Slat Caps
(P5)

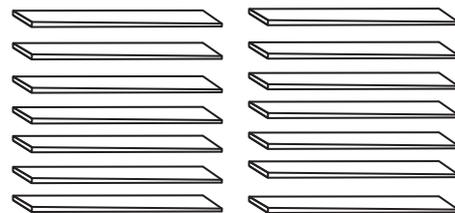


14 x Slats
(P6)

Hardware pack



8 x Short Bolts
(H1)



2 x Long Bolts
(H2)



1 x Allen Key
(H3)



2 x Hex Nuts
(H4)



1 x Spanner
(H5)


Please make sure you have all these parts before you start.



Fantastic
Furniture

Step 1


You will need	
4 x Short Bolts (H1)	
1 x Allen Key (H3)	

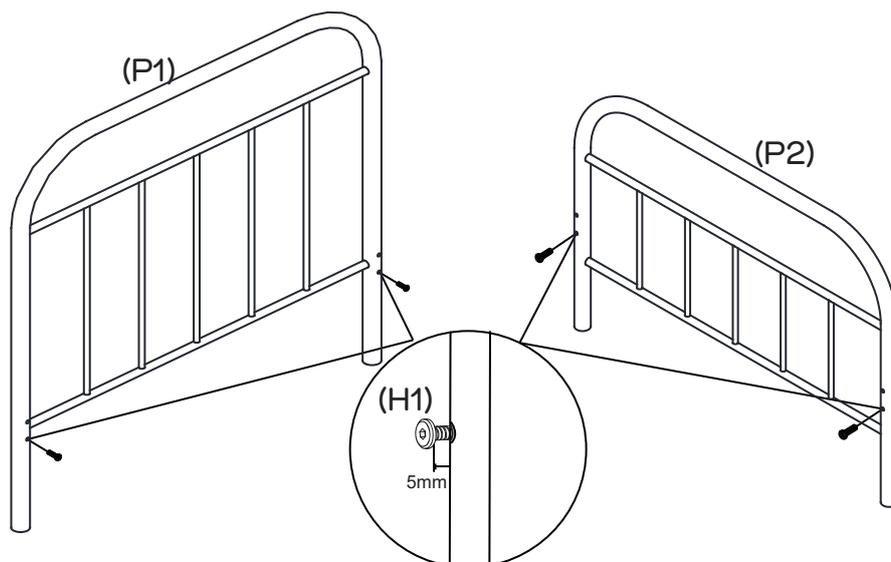

Insert 4 x short bolts (H1) into the bottom holes of the headboard (P1) and footboard (P2) using the allen key (H3). Do not fully tighten the bolts and leave a gap of 5mm as shown.

Step 2

You will need	
4 x Short Bolts (H1)	
1 x Allen Key (H3)	
2 x Long Bolts (H2)	
2 x Hex Nuts (H4)	
1 x Spanner (H5)	

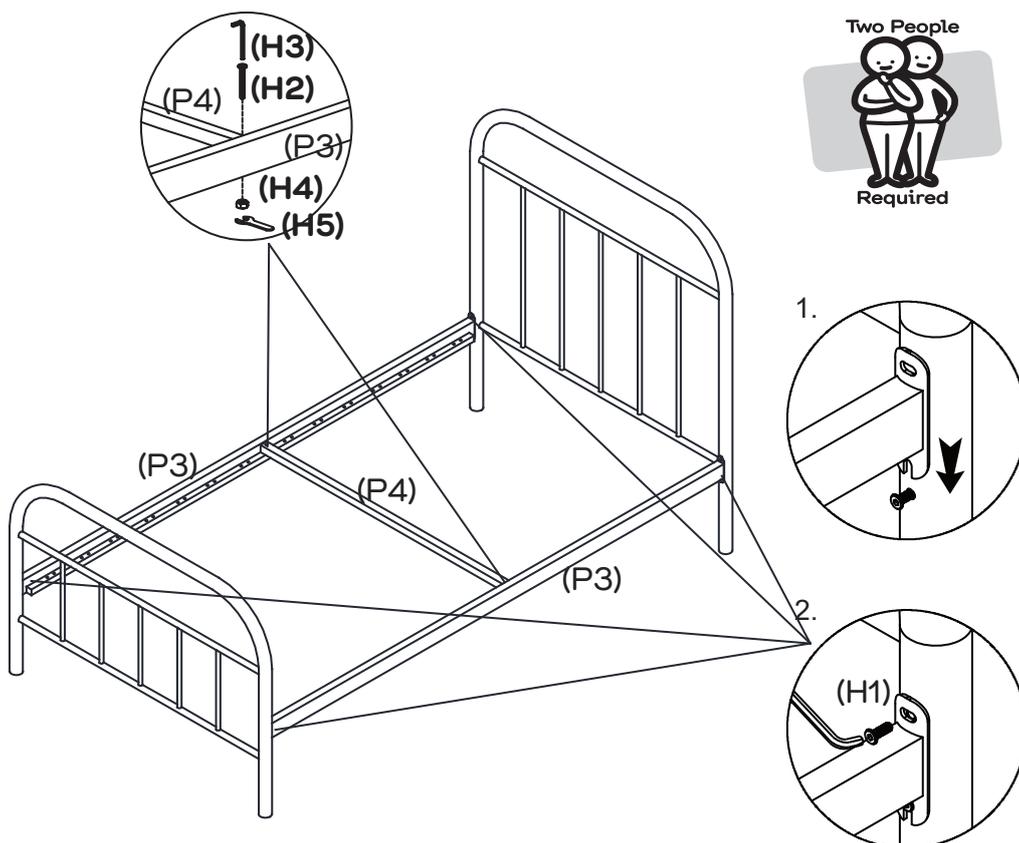


Attach the 2 x side rails (P3) to the headboard (P1) and footboard (P2). Slot the side rails onto the bolts as shown and insert 4 x short bolts (H1) into the top holes with the allen key (H3). Attach the cross bar (P4) onto the 2 x side rails (P3) using 2 x long bolts (H2) and 2 x hex nuts (H4). Tighten with the allen key (H3) and spanner (H5) as shown. Now fully tighten all bolts.



Step 3

You will need:	
28 x Plastic Slat Caps (P5)	
14 x Slats (P6)	

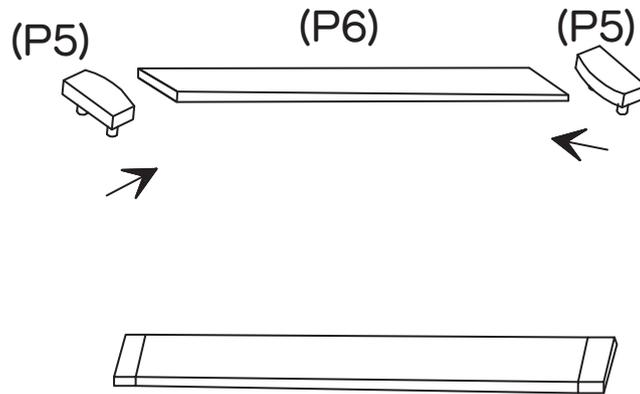

Push 28 x plastic slat caps (P5) firmly onto 14 x slats (P6).

Step 4



Lower the slat (P6) with the end connectors (P5) to the side rails (P3). Ensure the plastic slat caps are in place over the side rail holes and apply downward pressure until the plastic slat caps are fully inserted into the rails. Repeat for every bed slat until finished.

Step 5



IMPORTANT: Fully tighten all bolts on bed. Periodically check to ensure all bolts remain tight.

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.