


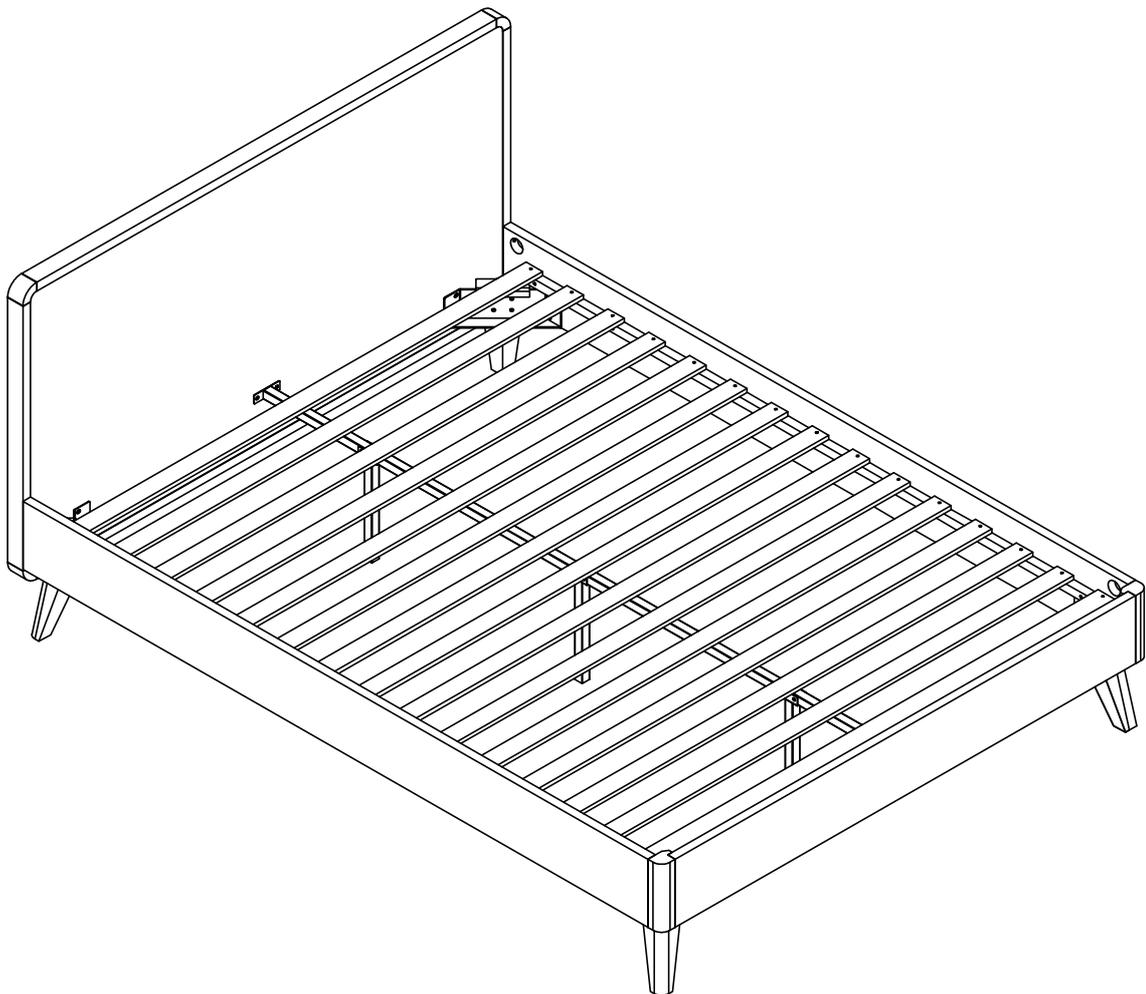

Version 1.0



TWO PEOPLE



REQUIRED

RETRO
Bed Queen

www.fantasticfurniture.com.au

Enjoy
Your purchase from
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

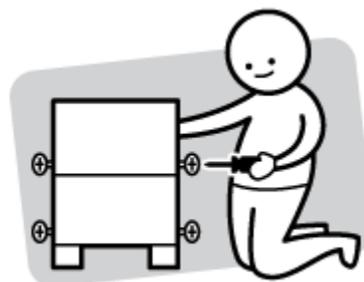

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.


What you need

to assemble the product



Other tools you need

Phillips head screwdriver; Mallet

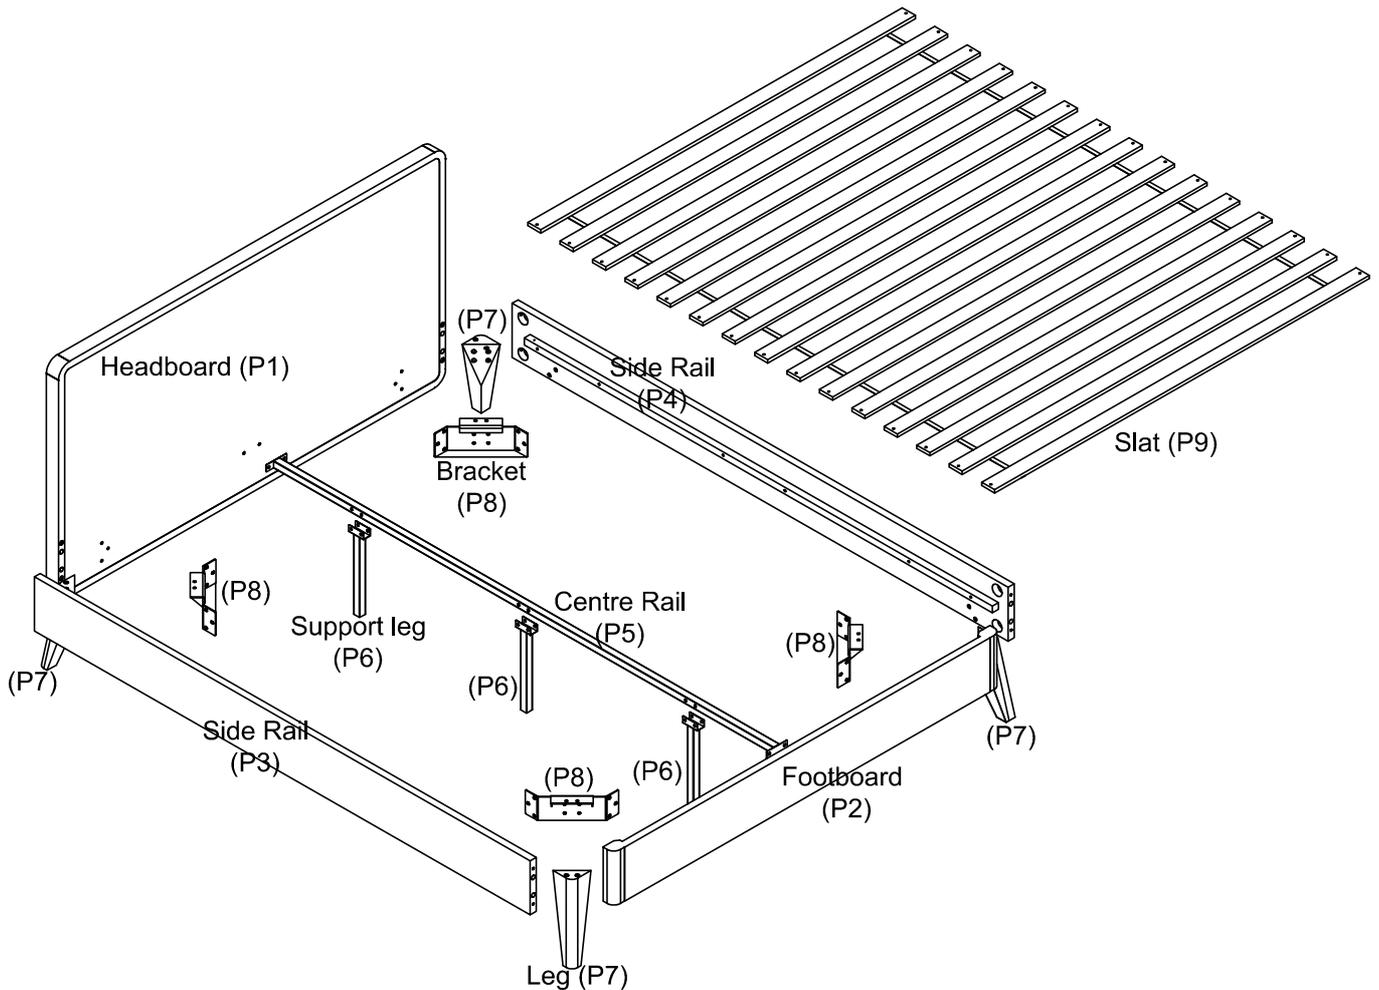

Part list

Box 1: Footboard (P2); Side Rail (P3); Side Rail (P4); Centre Rail (P5); 3 x Support Leg (P6); 4 x Leg (P7); 4 x Bracket (P8); Hardware Pack.

Box 2: Headboard (P1); Slat (P9).

Hardware pack



6 x Bolts
(H1)




52 x Small Bolts
(H2)




8 x Dowels
(H3)



4 x Felt Feet
(H4)



8 x Big Bolts
(H5)

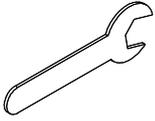

1 x Wrench
(H6)



8 x Half Moon
Washers (H7)




8 x Spring Washers
(H8)




8 x Nuts
(H9)



1 x Allen Key
(H10)



30 x Screws
(H11)



6 x Flat Washers
(H12)



1 x Small Wrench
(H13)





6 x Small Spring
Washers (H14)



6 x Small Nuts
(H15)


Step 1


You will need	
	
6 x Bolts (H1)	1 x Allen Key (H10)
	
6 x Flat Washers (H12)	1 x Small Wrench (H13)
	
6 x Small Spring Washers (H14)	6 x Small Nuts (H15)

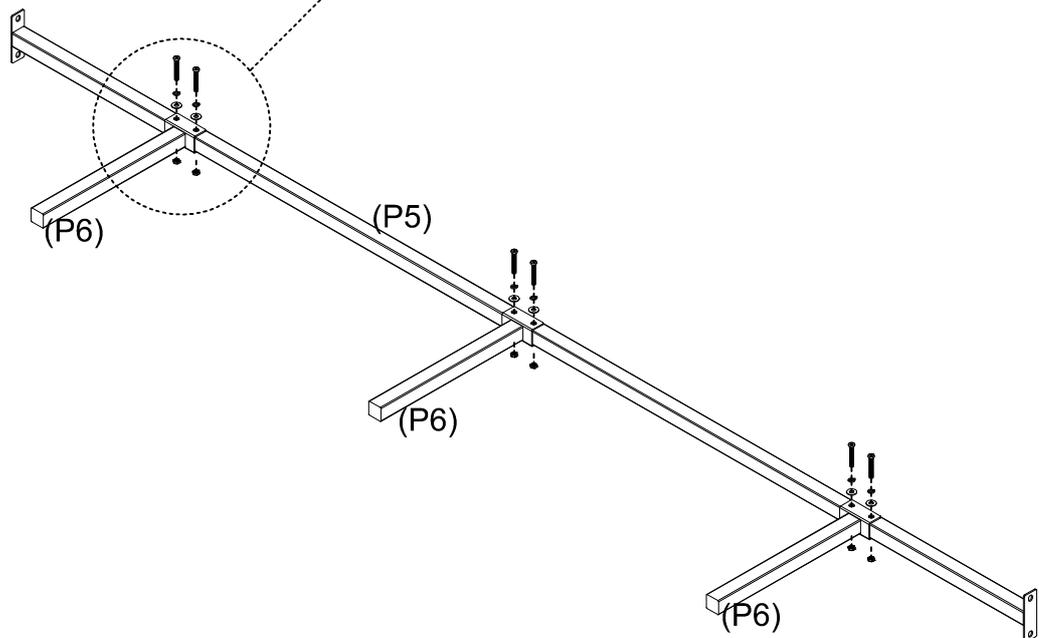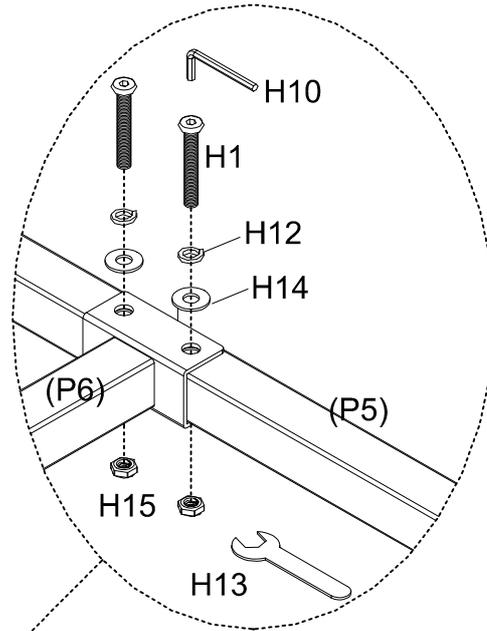

Attach each support leg (P6) onto centre rail (P5) with 2 x bolts (H1), 2 x small spring washers (H14), 2 x flat washers (H12) and 2 x small nuts (H15) as shown, then tighten with Allen Key (H10) and Small Wrench (H13).

Step 2


You will need	
	
8 x Dowels (H3)	Mallet

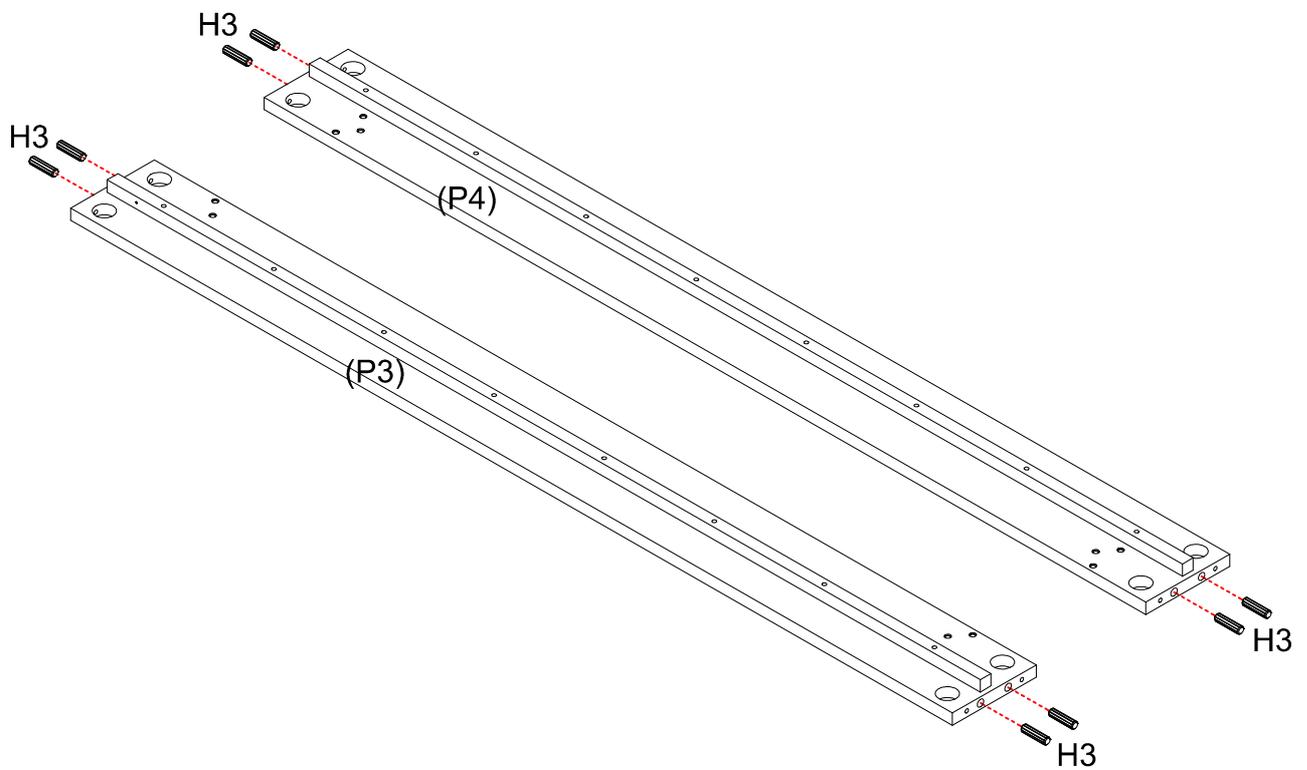

Insert each 4 x dowels (H3) into side rails (P3) & (P4).
Use a mallet to gently tap the dowels into place if needed.

Step 3


You will need	
	
8 x Big Bolts (H5)	

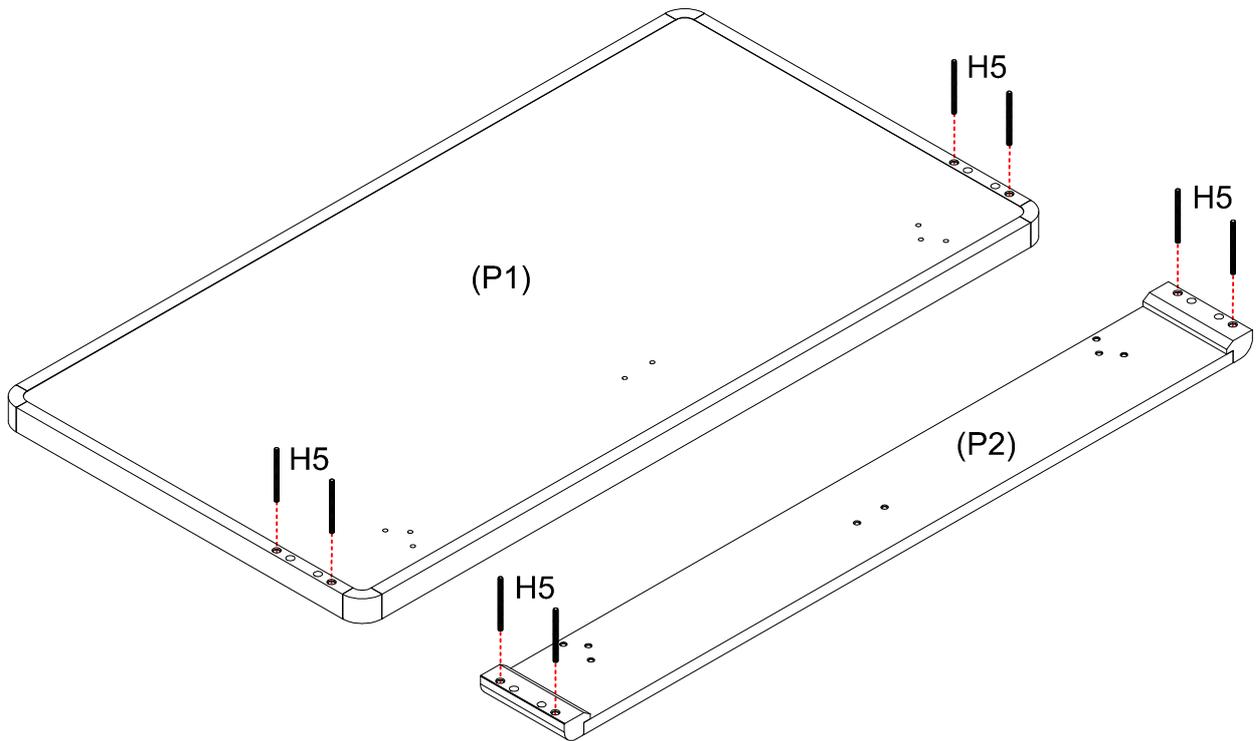


Screw 4 x big bolts (H5) into headboard (P1) as shown.
Screw 4 x big bolts (H5) into footboard (P2) as shown.

Step 4

TWO PEOPLE

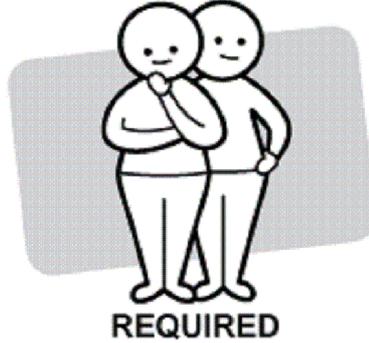


You will need	
	
4 x Half Moon Washers (H7)	4 x Spring Washers (H8)
	
4 x Nuts (H9)	1 x Wrench (H6)

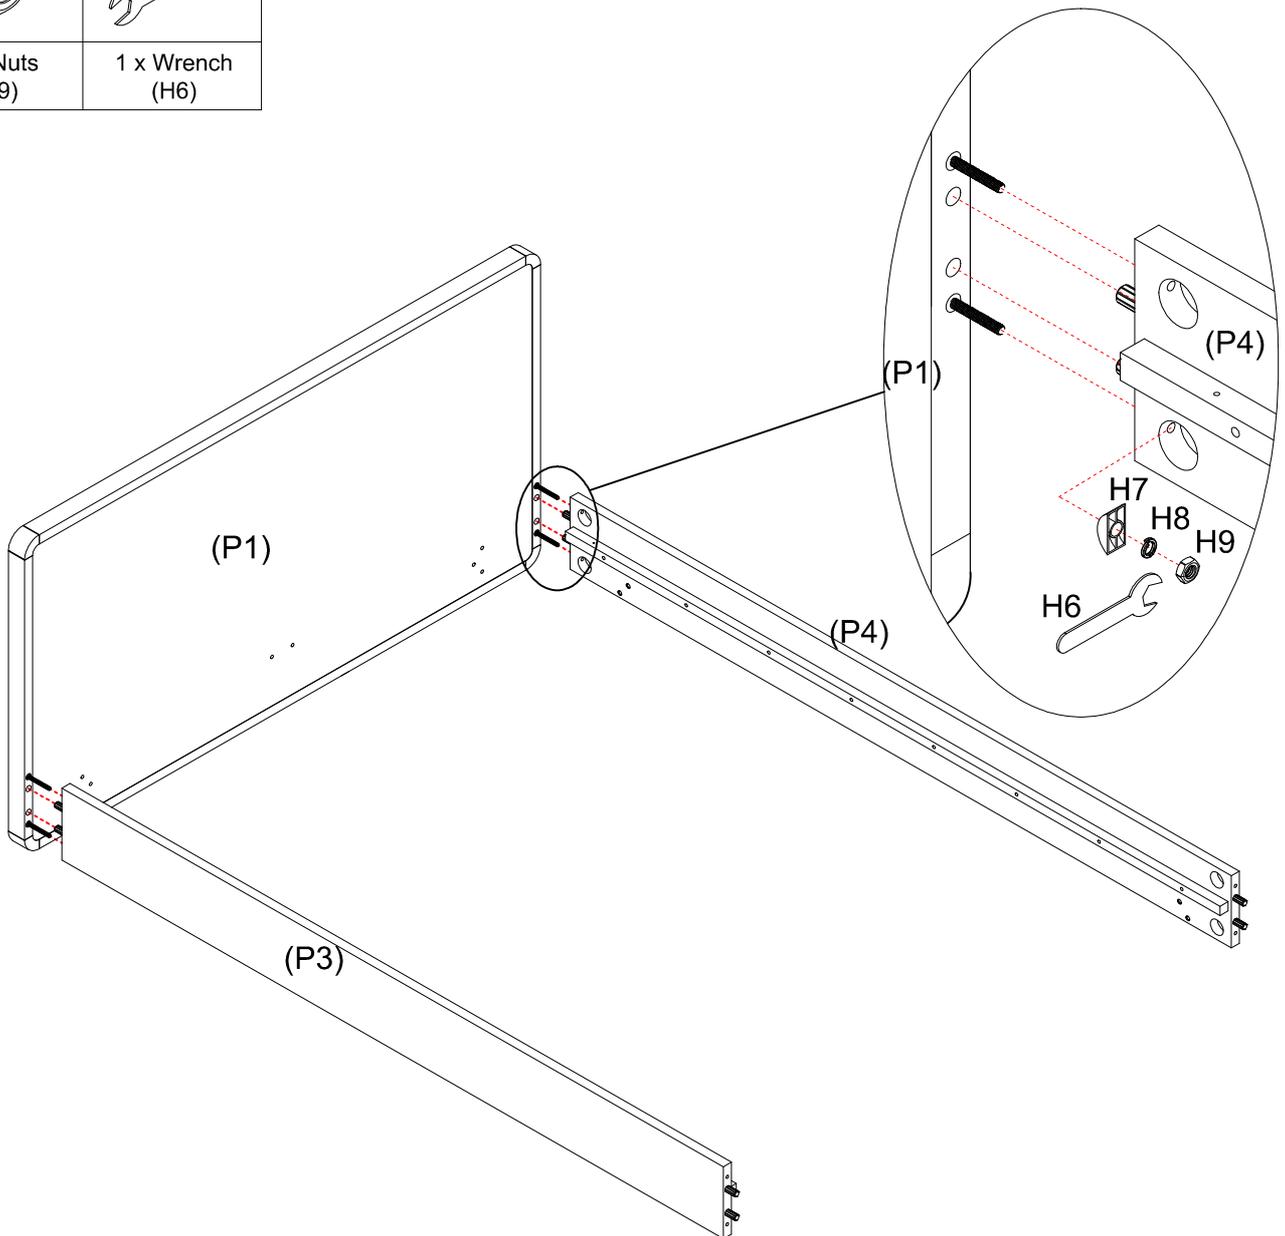


Attach side rails (P3) & (P4) onto headboard (P1) each with 2 x half moon washers (H7), 2 x spring washers (H8) and 2 x nuts (H9) as shown.

Step 5

TWO PEOPLE

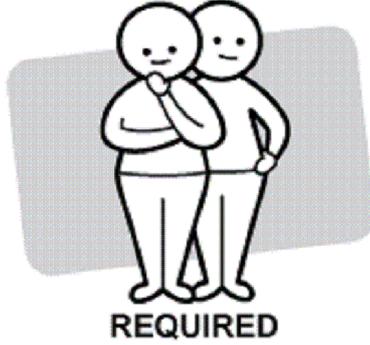


You will need	
4 x Half Moon Washers (H7)	4 x Spring Washers (H8)
4 x Nuts (H9)	1 x Wrench (H6)

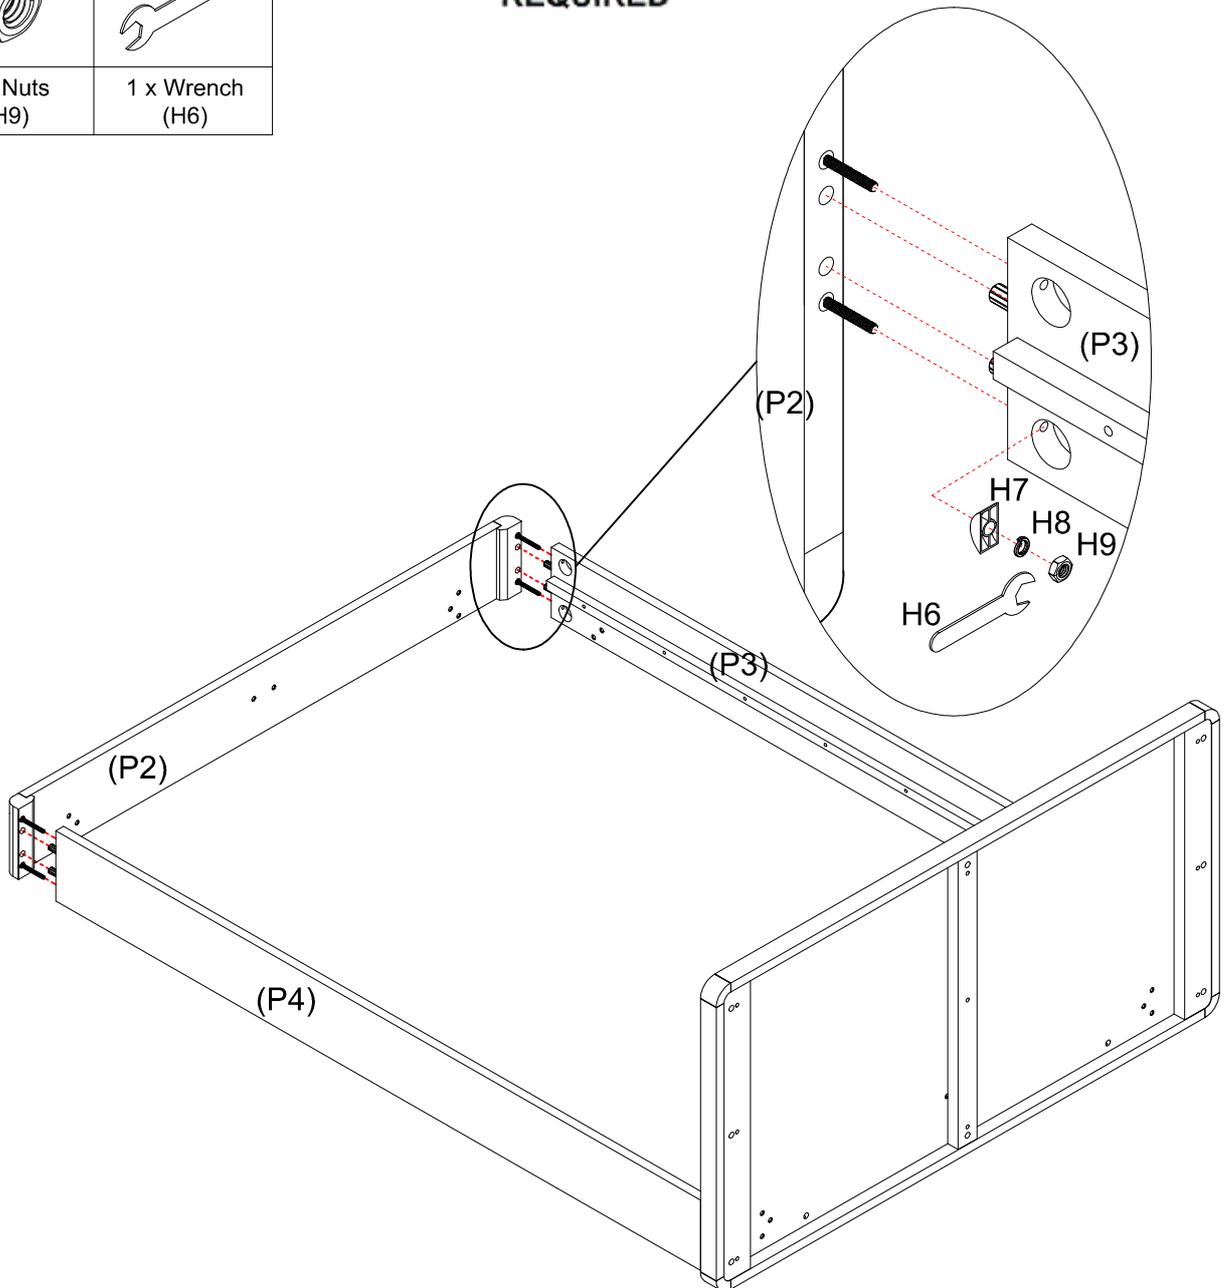

Attach side rails (P3) & (P4) onto footboard (P2) each with 2 x half moon washers (H7), 2 x spring washers (H8) and 2 x nuts (H9) as shown.

Step 6



You will need	
	
24 x Small Bolts (H2)	1 x Allen Key (H10)
	
4 x Felt Feet (H4)	

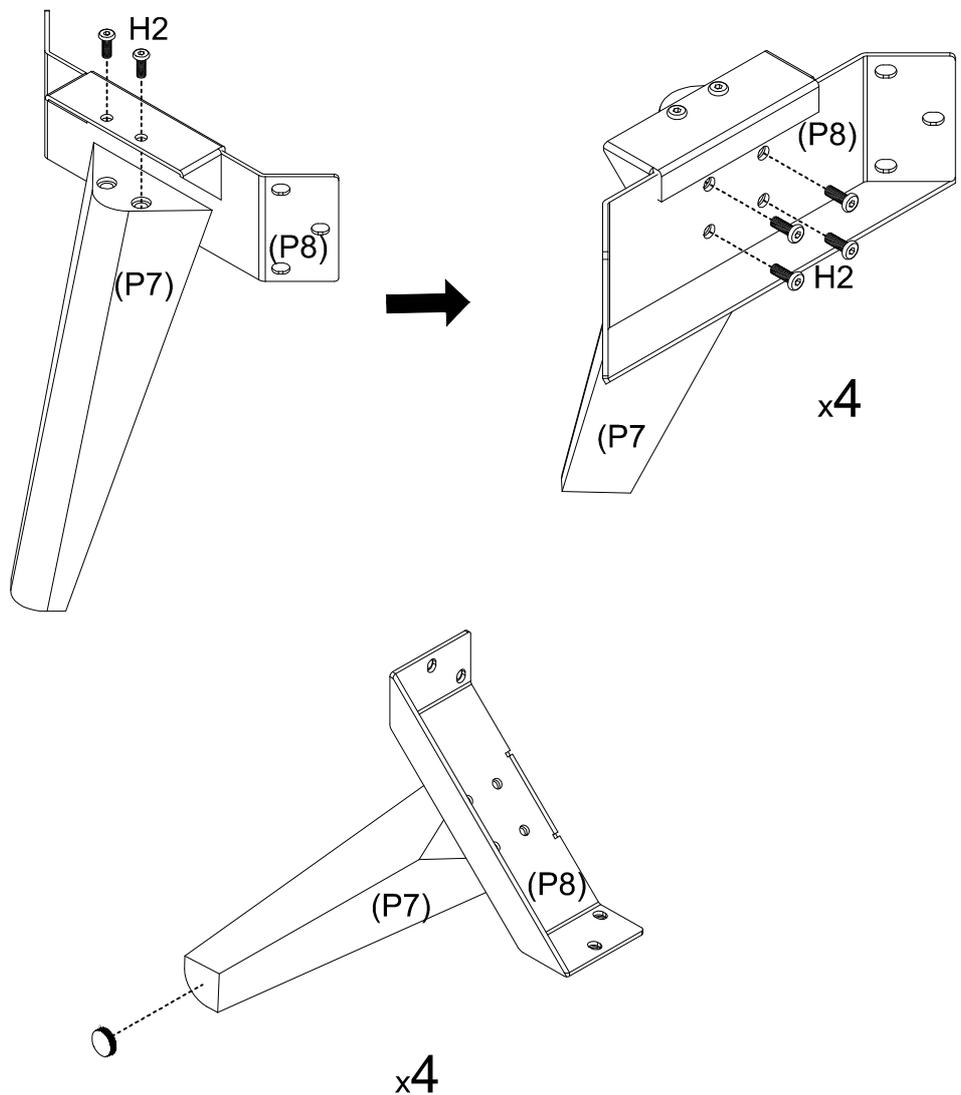

Attach bracket (P8) onto each leg (P7) with 6 x small bolts (H2) as shown, then tighten with Allen Key (H10).
Attach each felt foot (H4) onto leg (P7) as shown.

Step 7

You will need	
	
4 x Small Bolts (H2)	1 x Allen Key (H10)

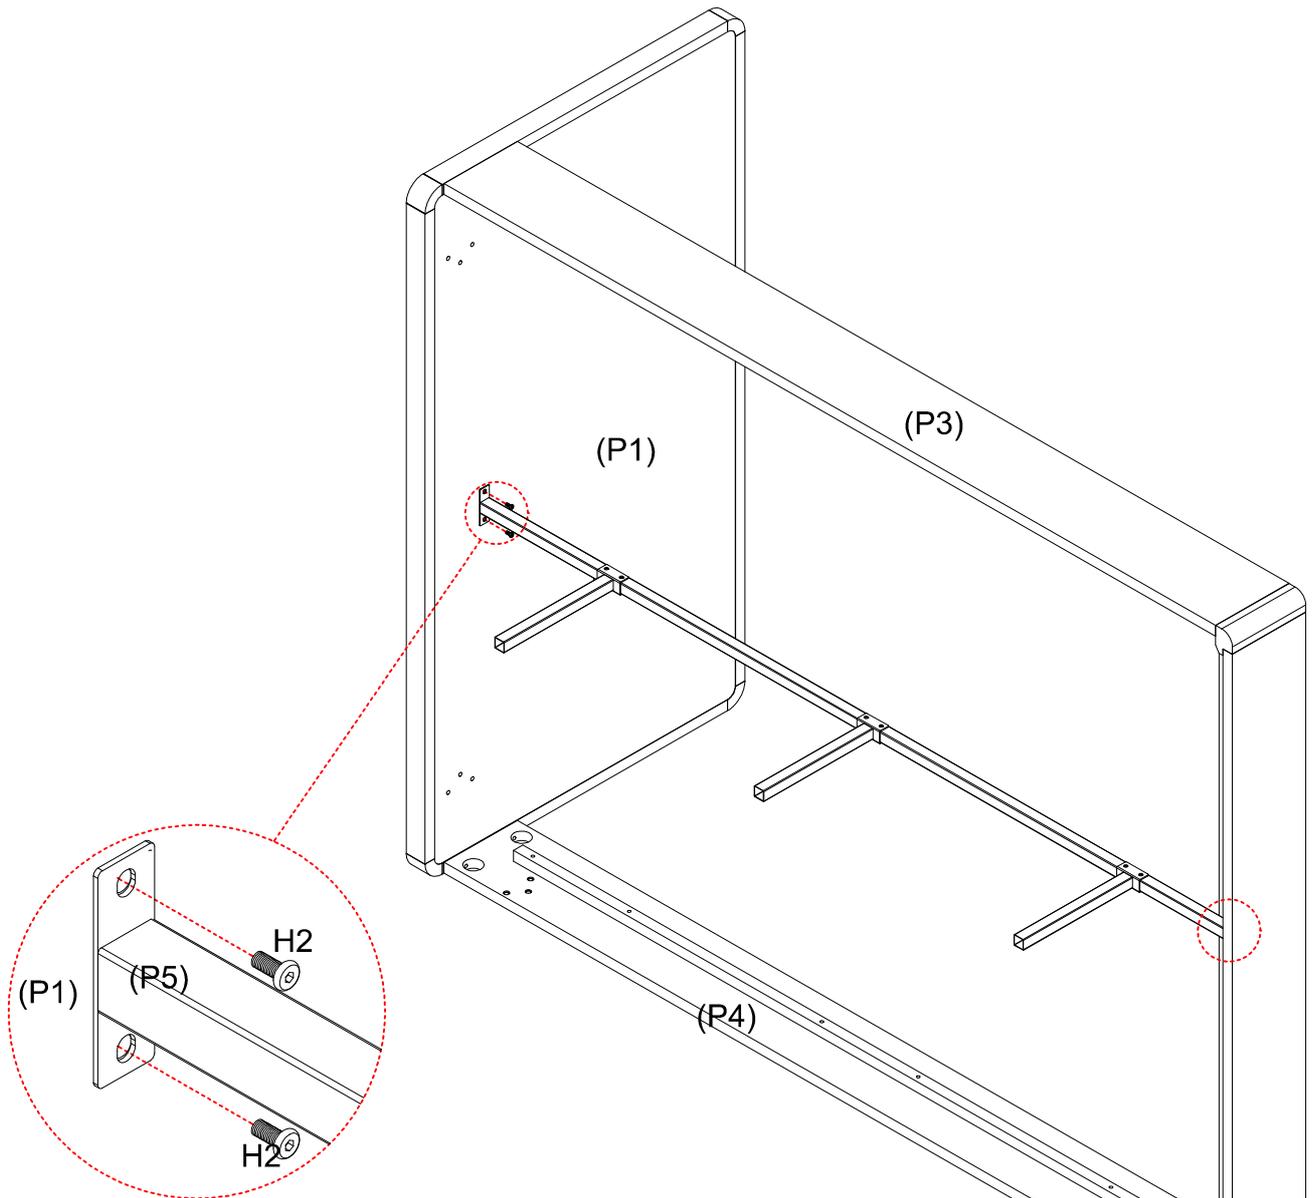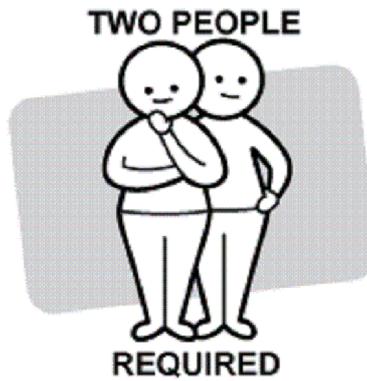


Carefully turn over the bed frame.

Attach centre rail (P5) onto headboard (P1) and footboard (P2), with 4 x small bolts (H2) as shown.


Step 8

You will need	
	
24 x Small Bolts (H2)	1 x Allen Key (H10)

TWO PEOPLE

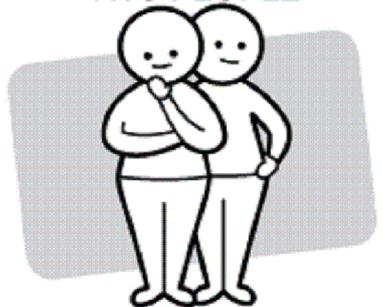


REQUIRED

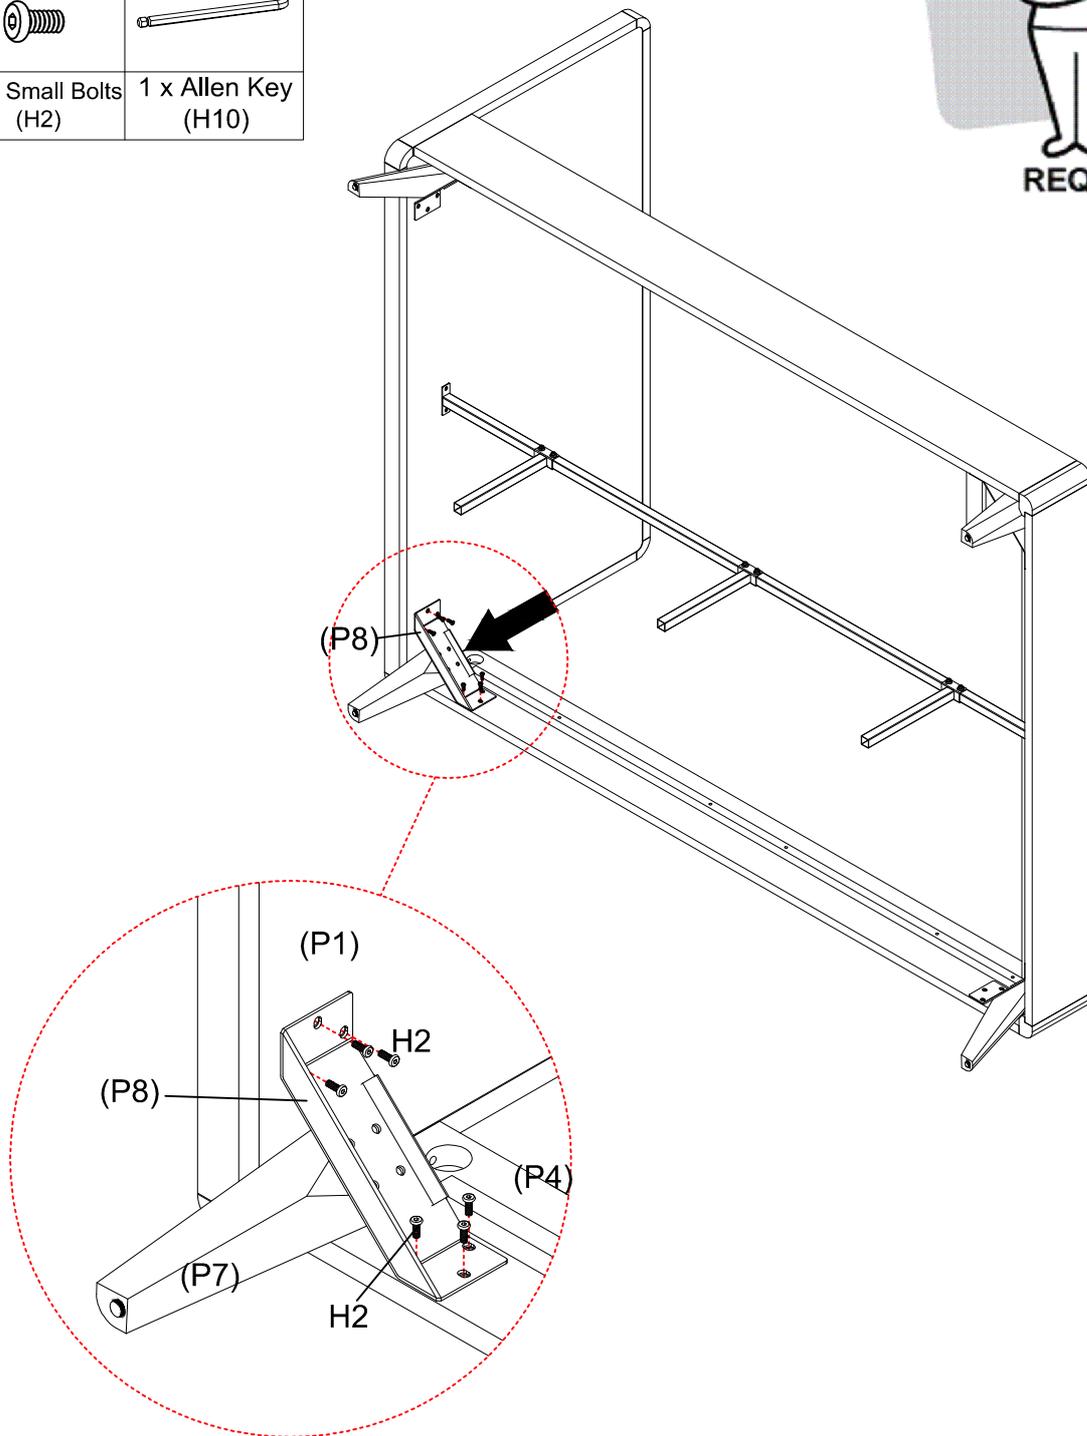

Attach each bracket (P8) onto bed frame with 6 x small bolts (H2) as shown, then tighten with allen key (H10).


Step 9

You will need	
	
30 x Screws (H11)	Phillips head screwdriver

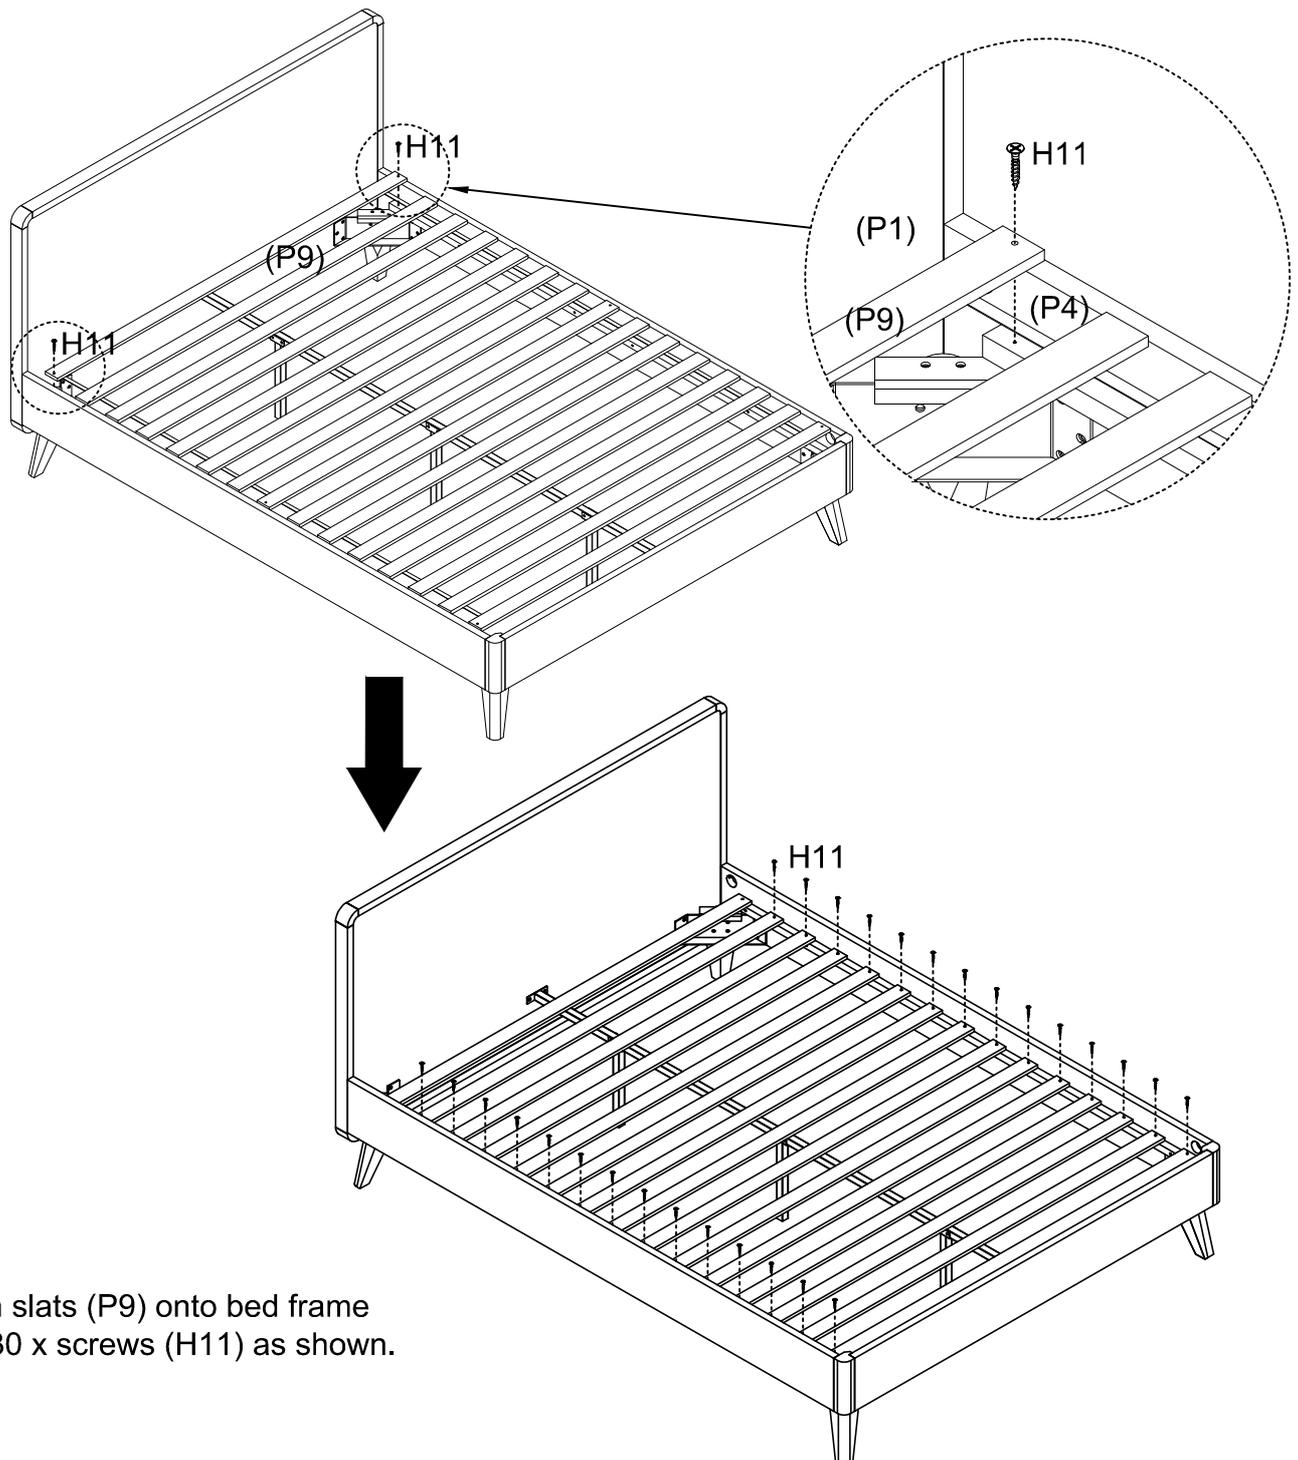

Attach slats (P9) onto bed frame with 30 x screws (H11) as shown.

Step 10

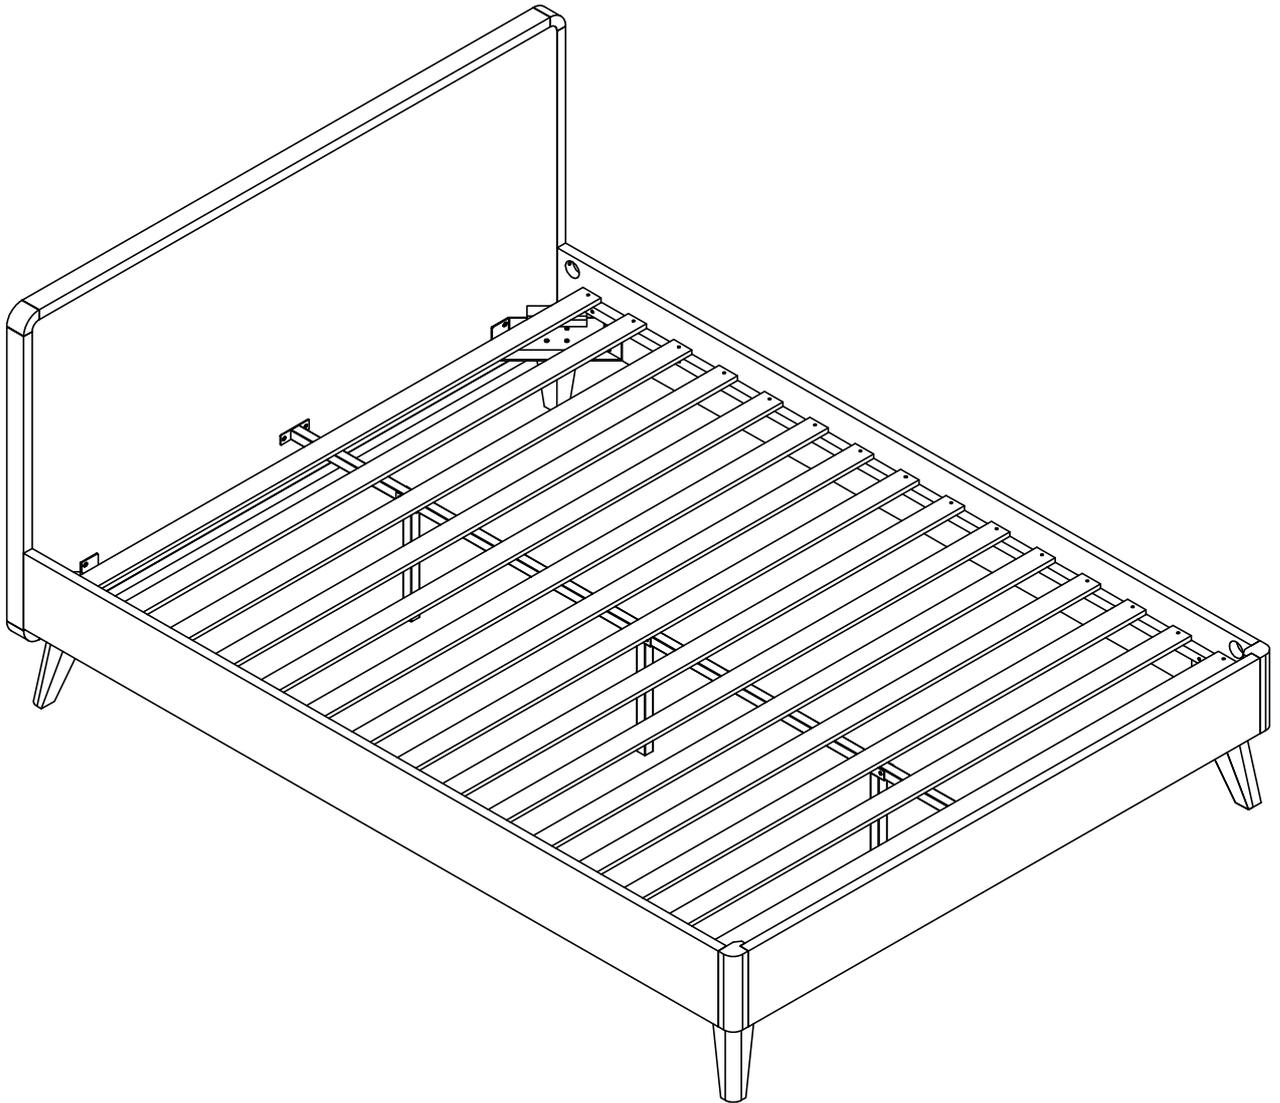

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.