


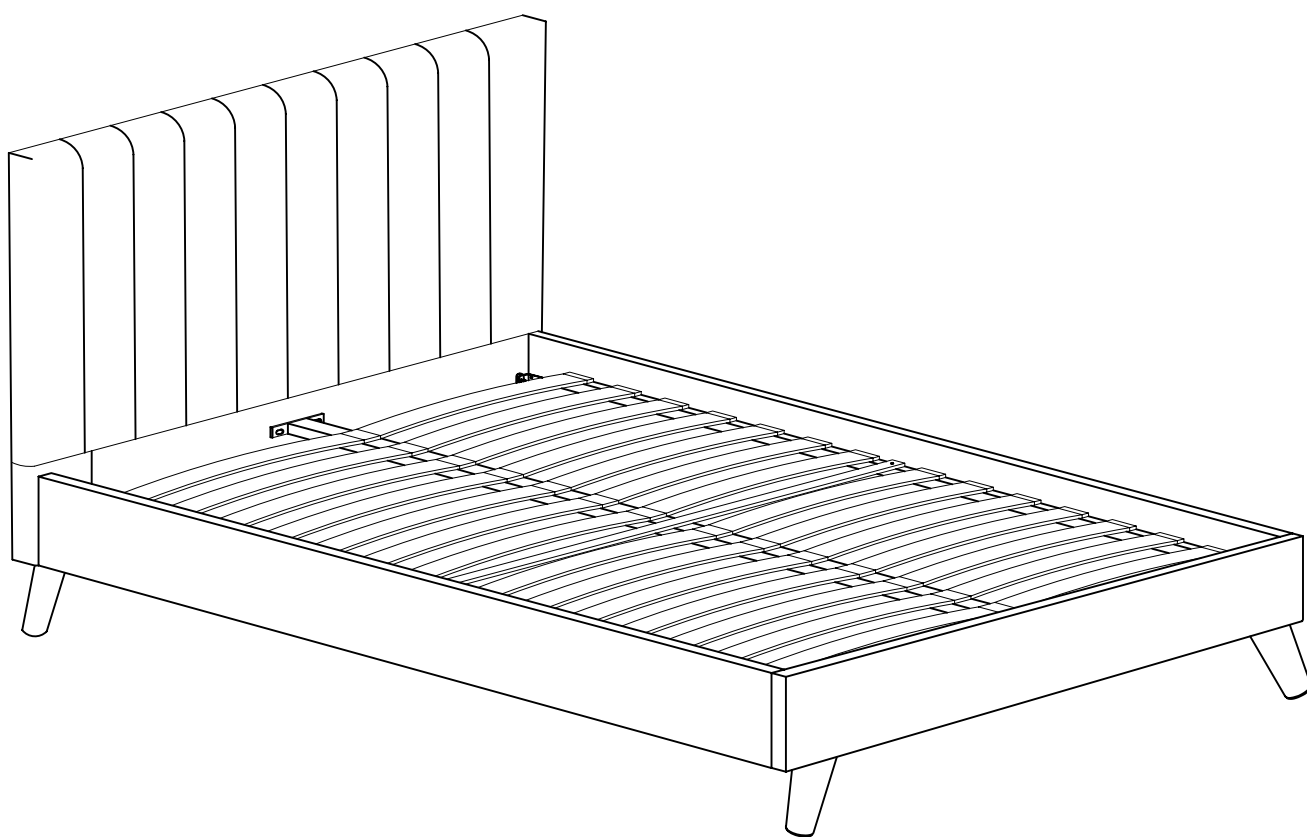

**Fantastic
Furniture**

Version 1.3



Two People



Required

Montana

Bed Queen /Bed King

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

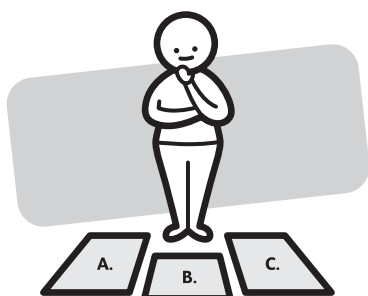

Identify and lay out all of the components before you begin assembly.

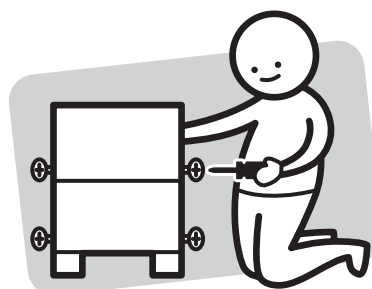

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product




DO NOT USE



Other tools you need:

Phillips head screwdriver;



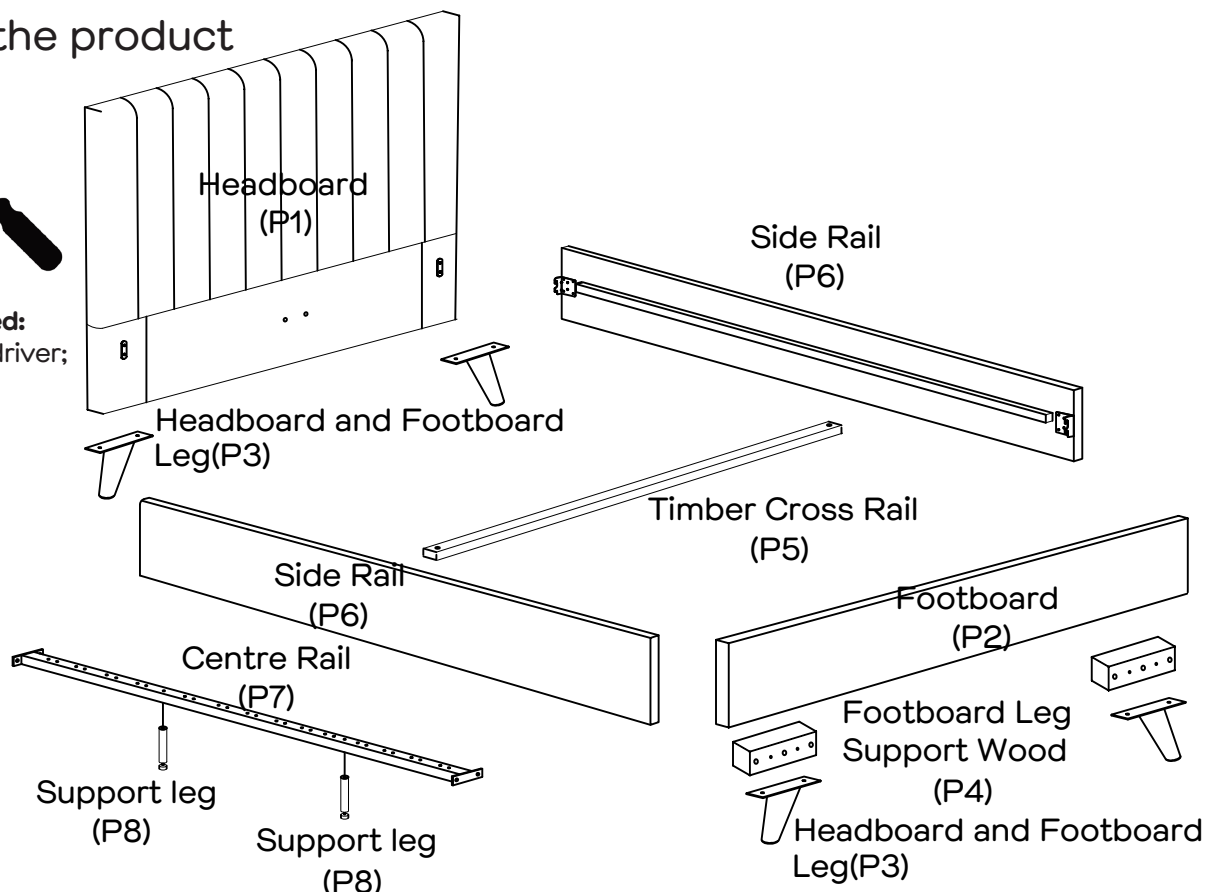


Parts list

Box 1 : Footboard (P2) ; 4 x Headboard and Footboard Legs (P3) ; 2 x Footboard Leg Support Woods (P4) ; Timber Cross Rail (P5) ; 2 x Side Rails (P6) ; Center Rail (P7) ; 2 x Support Legs (P8) ; End Connectors (P9) ; Centre Connectors (P10) ; Hardware Pack.

Box 2 : Headboard (P1) ; Slats (P11)

28 x End Connectors (P9) 14 x Centre Connectors (P10)

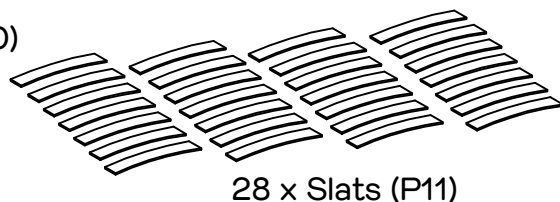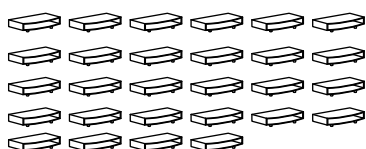

28 x Slats (P11)

Hardware pack



8 x Small Bolts
(H1)



1 x Allen Key
(H2)



14 x Medium Bolts
(H3)




20 x Washers
(H4)



6 x Screws
(H5)



1 x Felt Pad
(H6)



6 x Large Bolts
(H7)







10 x Spring Washer
(H8)



Fantastic
Furniture


Step 1a

You will need			
			
Allen Key (H2)	6 x Washers M8 (H4)	6 x Large Bolts (H7)	6 x Spring Washer (H8)

Two People



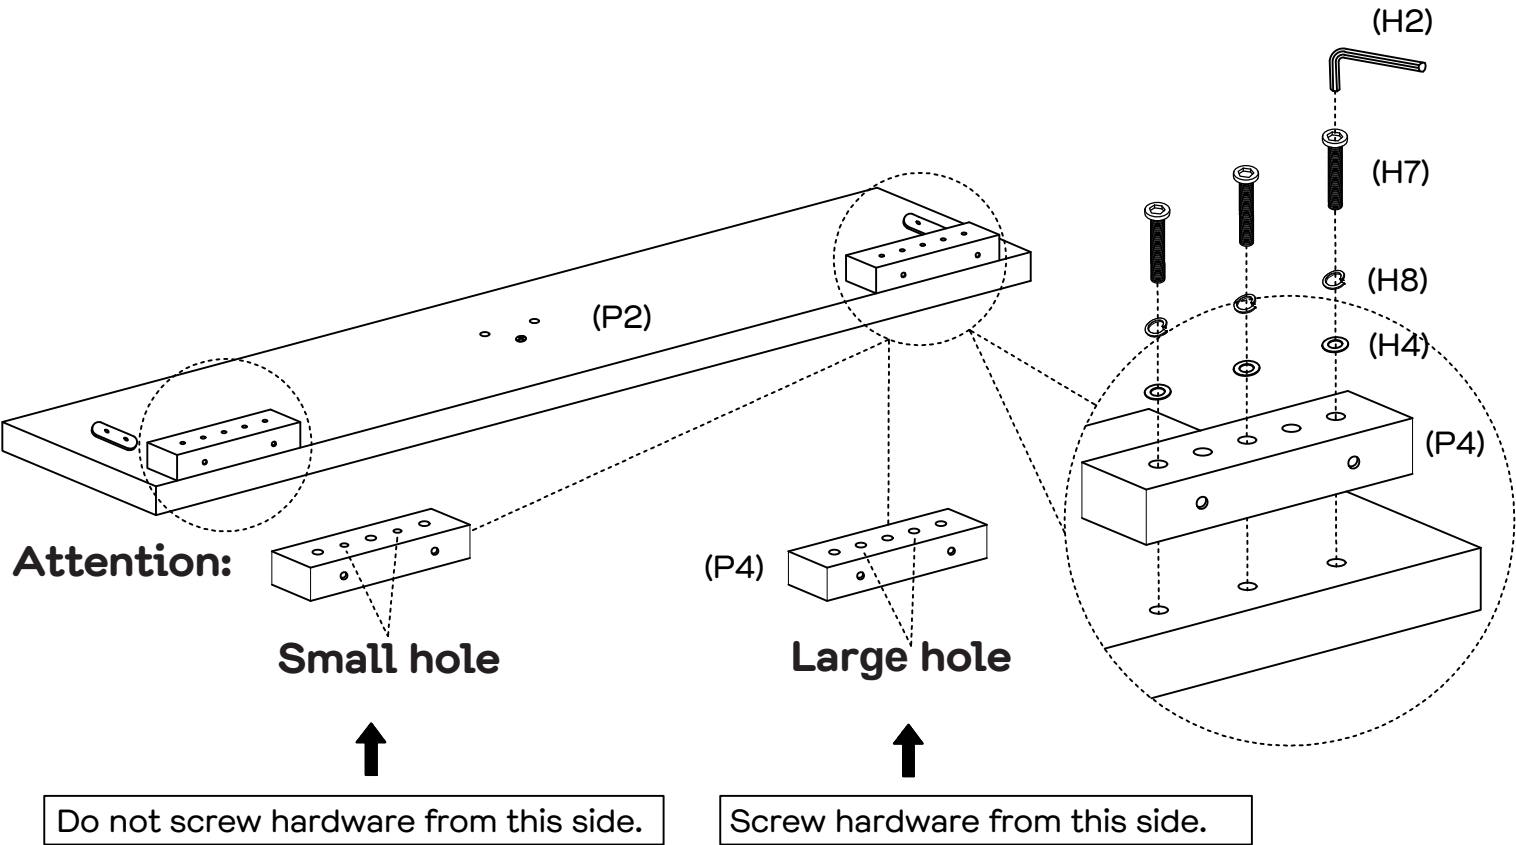


Required



Attach 2 x footboard leg support woods (P4) to the footboard (P2) with 6 x Large Bolts (H7), 6 x washers (H4) and 6 x spring washers (H8) by using allen key (H2).




Step 1b

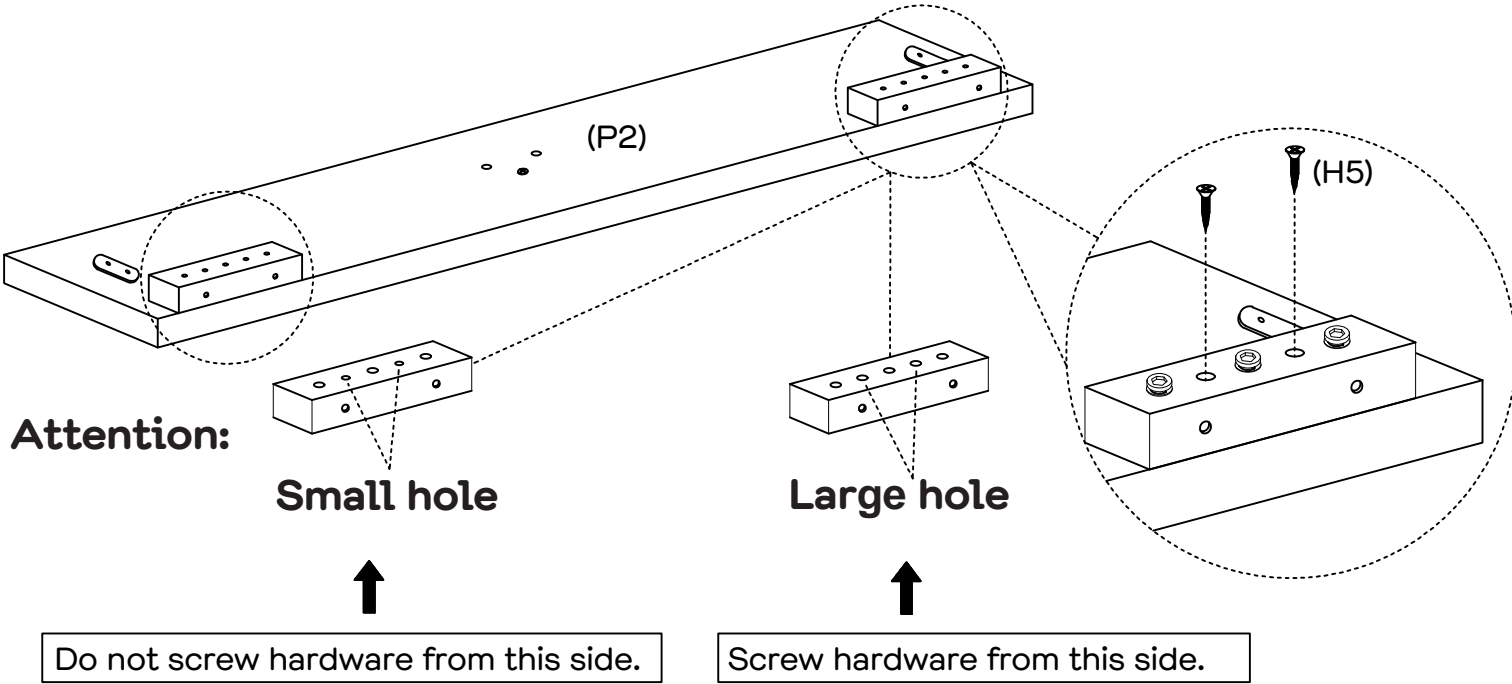
You will need	
	
4 x Screws (H5)	Phillips head Screwdriver (not provided)



Screw the 4 x Screws (H5) by using a phillips head screwdriver (not provided).



Step 2

You will need		
		
Allen Key (H2)	8 x Medium Bolts (H3)	8 x Washers M8 (H4)

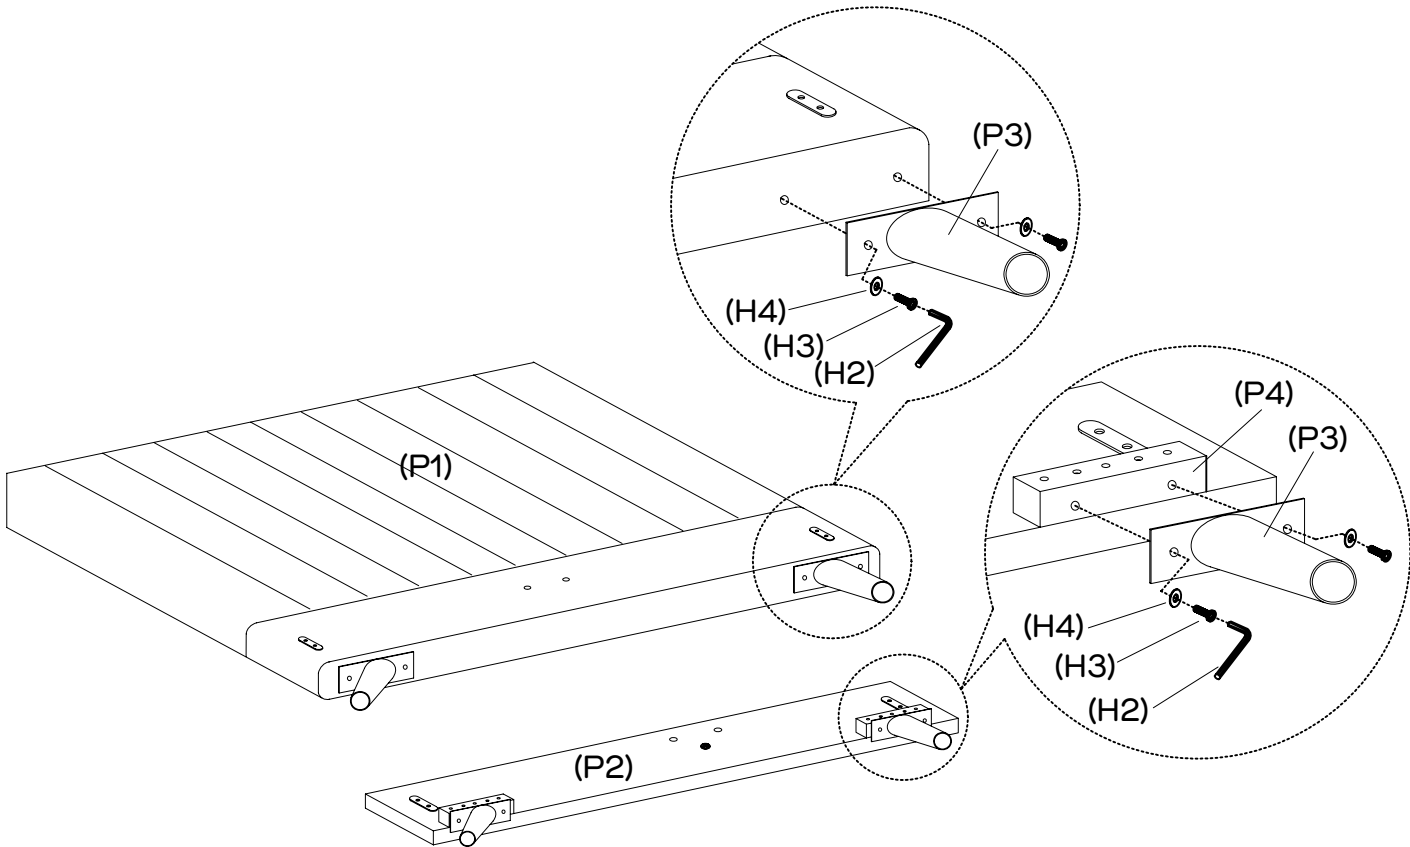

Attach 4 x legs (P3) to the bottom of headboard (P1) and footboard leg support wood (P4) with 8 x Medium Bolts (H3) and 8 x washers (H4) by using allen key (H2).


Step 3

You will need	
	
8 x Small Bolts (H1)	Allen Key (H2)

Two People



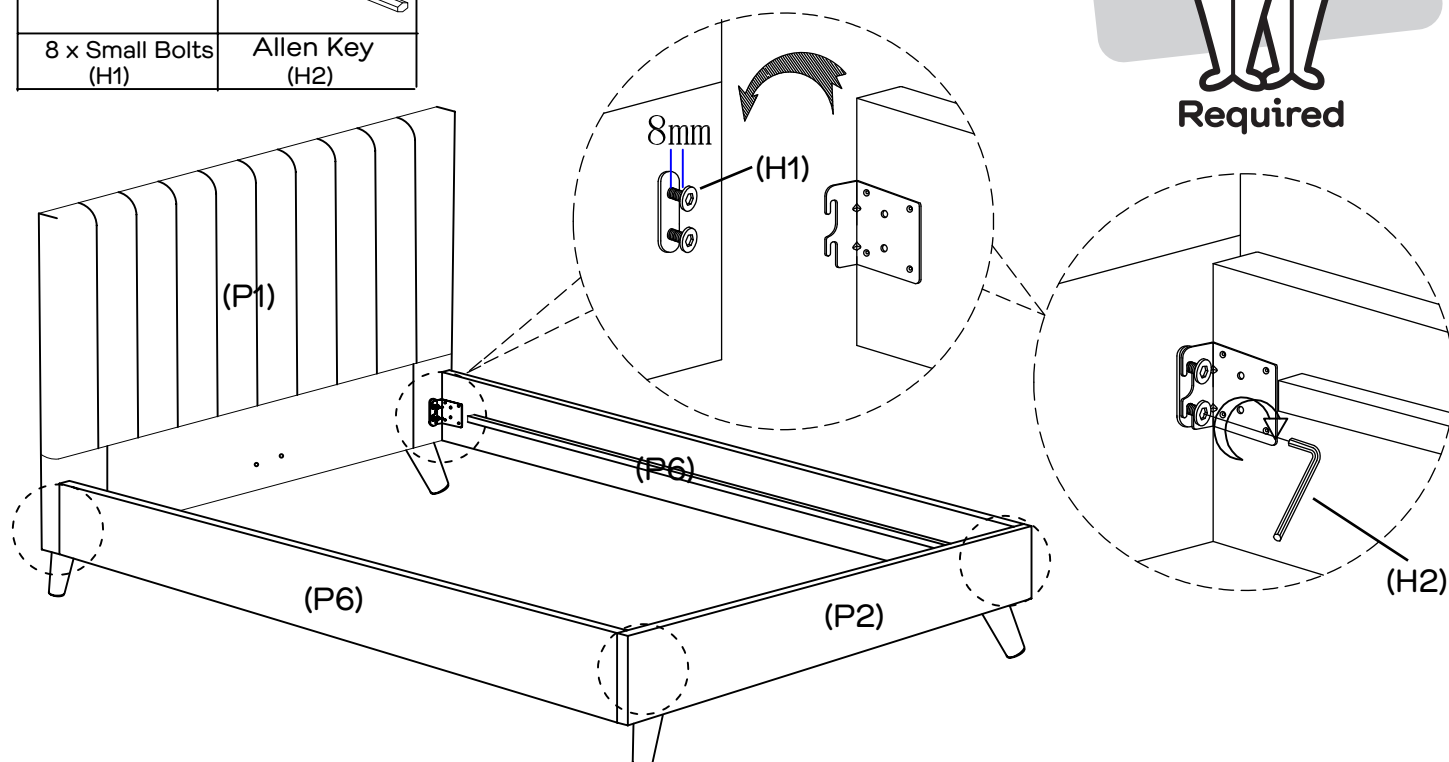


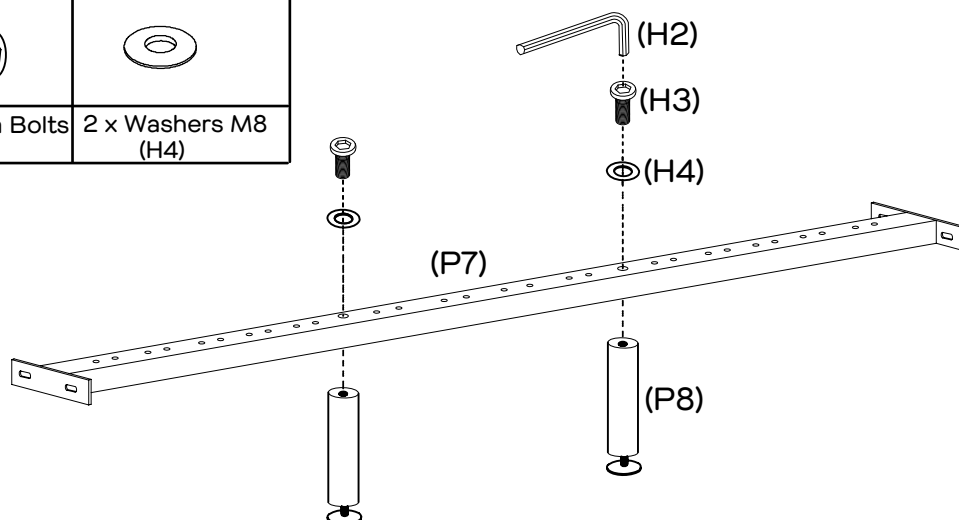
Required



Install 8 x bolts (H1) to the brackets of the headboard (P1) and footboard (P2) by using allen key (H2) as shown, do not tighten the bolts and keep them 8mm loose. Then attach side rails (P6) to headboard (P1) and footboard (P2) by slotting the bracket on the side rails (P6) over the bolt as shown. No need to tighten bolts until step 7.





Step 4

You will need		
		
Allen Key (H2)	2 x Medium Bolts (H3)	2 x Washers M8 (H4)




Attach 2 x support legs (P8) to the centre rail (P7) with 2 x bolts (H3) and 2 x washers (H4) by using allen key (H2).

Step 5

You will need			
			
Allen Key (H2)	4 x Medium Bolts (H3)	4 x Washers M8 (H4)	4 x Spring Washer (H8)

You must use.

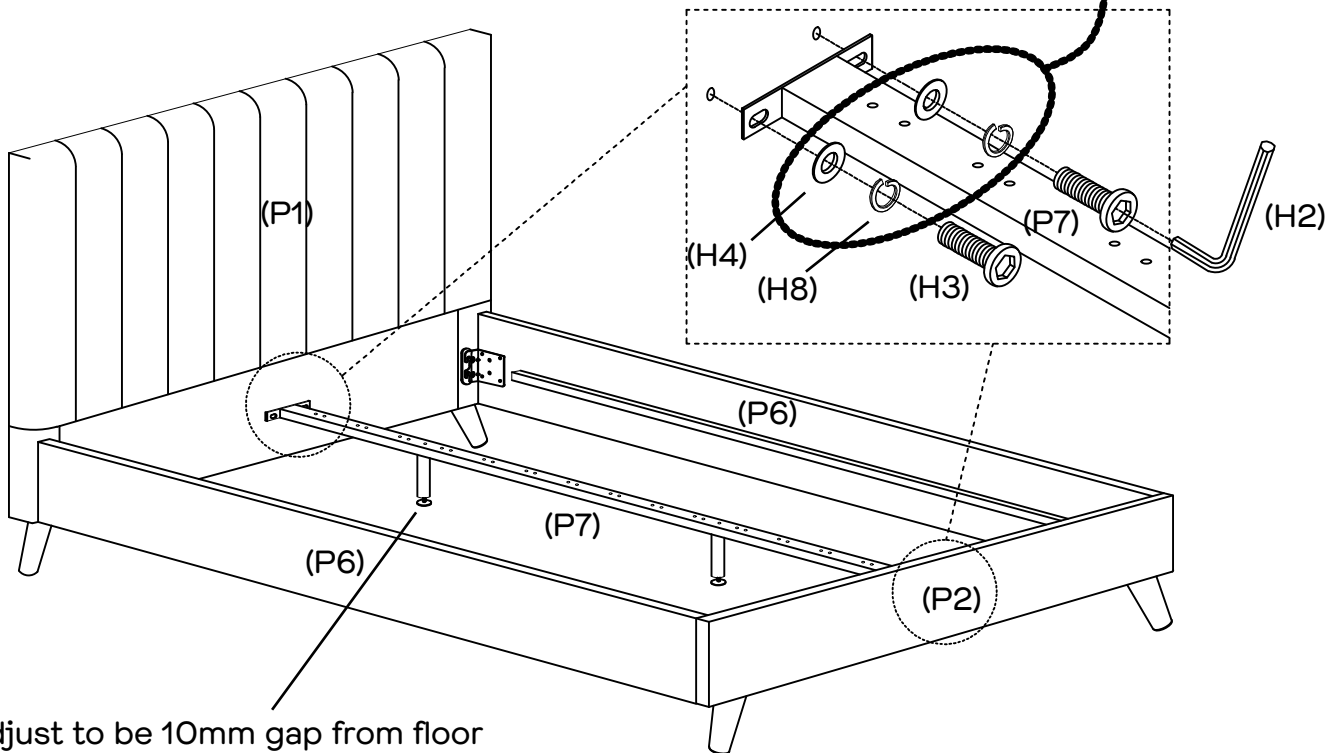




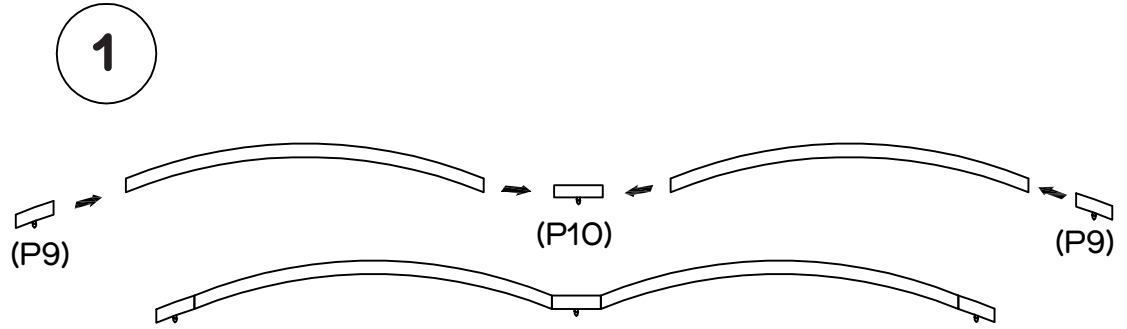
Adjust to be 10mm gap from floor to the bottom of support legs.

Slot the centre rail (P7) into the headboard (P1) and footboard (P2).

Rotate 4 x bolts (H3) and 4 x washers (H4) and 4 x spring washers (H8) to the headboard (P1) and footboard (P2) by using allen key(H2). No need to tighten bolts until step 7.


Step 6

You will need	
	
28 x End Connectors (P9)	14 x Centre Connectors (P10)
	
28 x Slats (P11)	




Push 2 end connectors (P9), 2 pcs slats (P11) and a centre connector (P10) together.

2

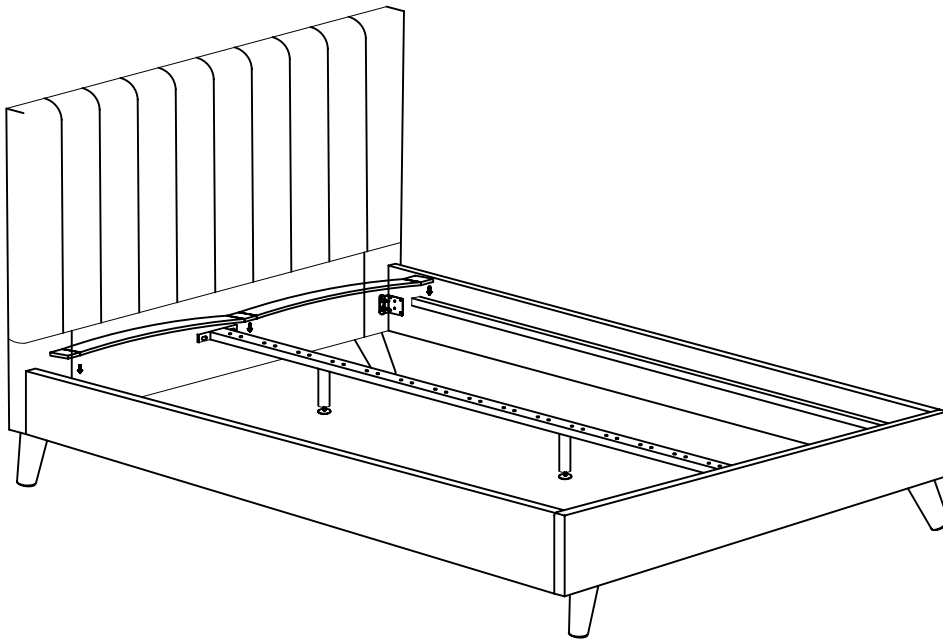


Insert the full slat into the side rail and centre rail one by one.

3

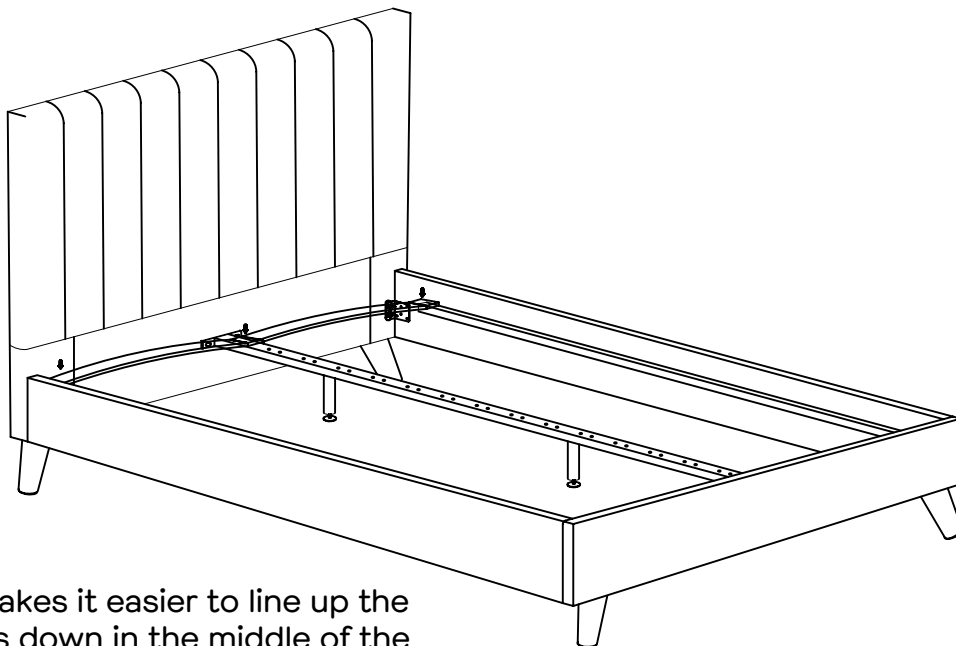





Sometimes it makes it easier to line up the hole if you press down in the middle of the slat to flatten it out.

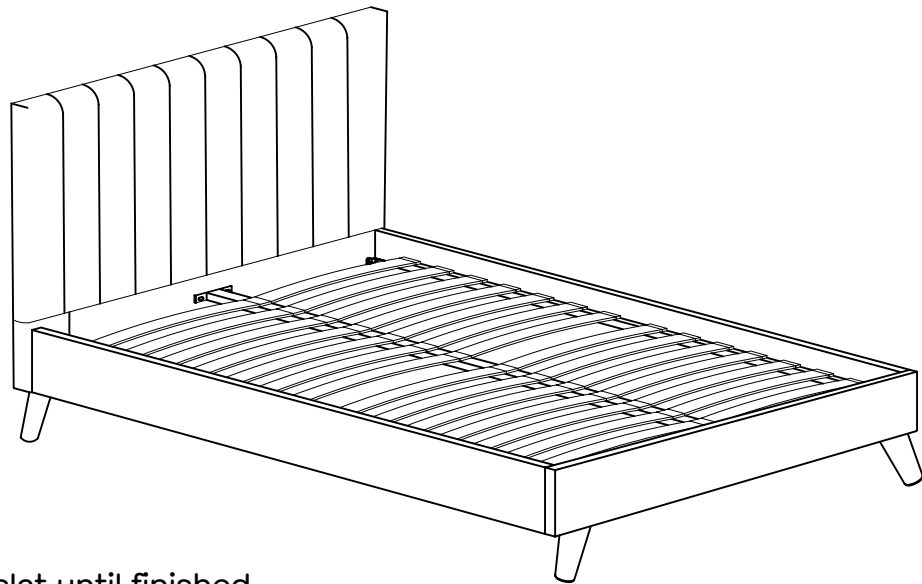
4



Repeat for every bed slat until finished.

Step 7

You will need	
	
Allen Key (H2)	2 x Screws (H5)
	
1 x Felt Pad (H6)	Phillips head Screwdriver (not provided)

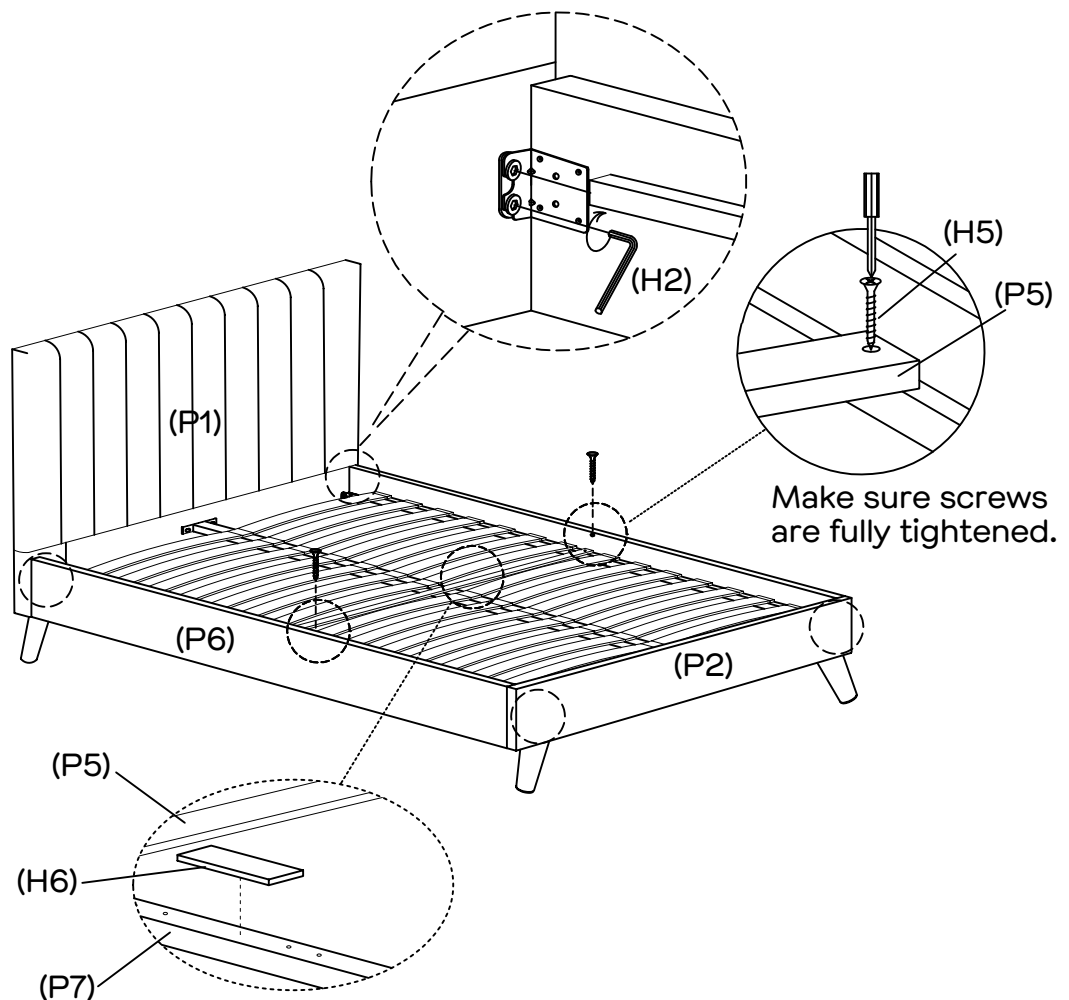


Make sure the inner space is square.

Attach the felt pad (H6) to the centre of centre rail (P7).

Then attach the timber cross rail (P5) to the centre of side rails (P6) by using 2 x screws (H5).

Now tighten all the bolts on the corner bracket and tighten bolts on the headboard (P1) and footboard (P2).

Step 8

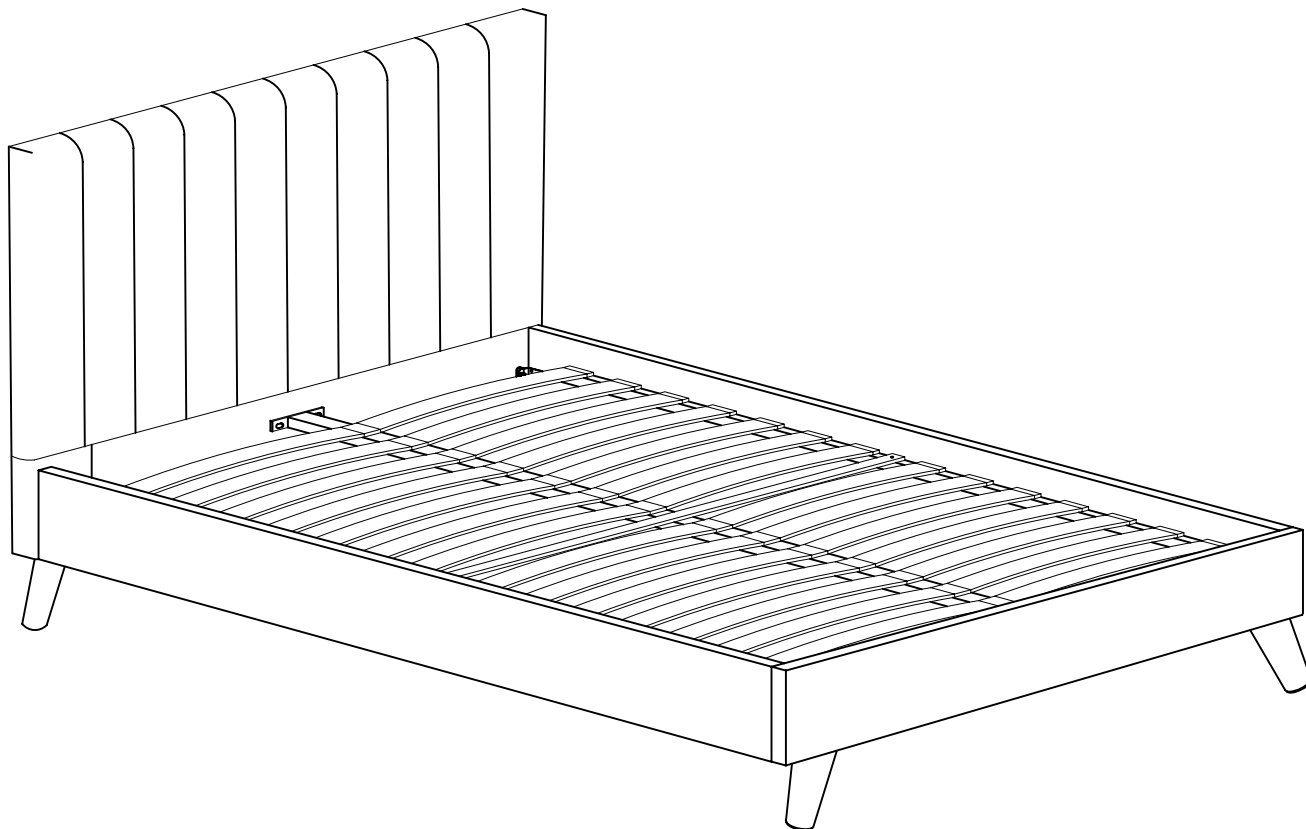

Job complete!

In the interest of our environment please dispose
of all packaging thoughtfully.