



**Fantastic
Furniture**

Version 1.0



Two People



Required

Willow MK2

Bed Queen

fantasticfurniture.com.au

Look like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



**Fantastic
Furniture**

Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

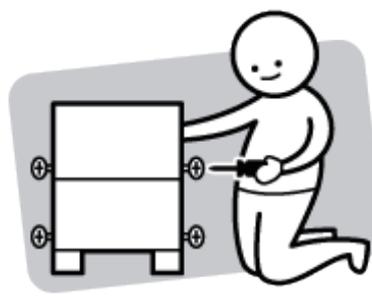

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.

! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.


! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product



DO NOT USE

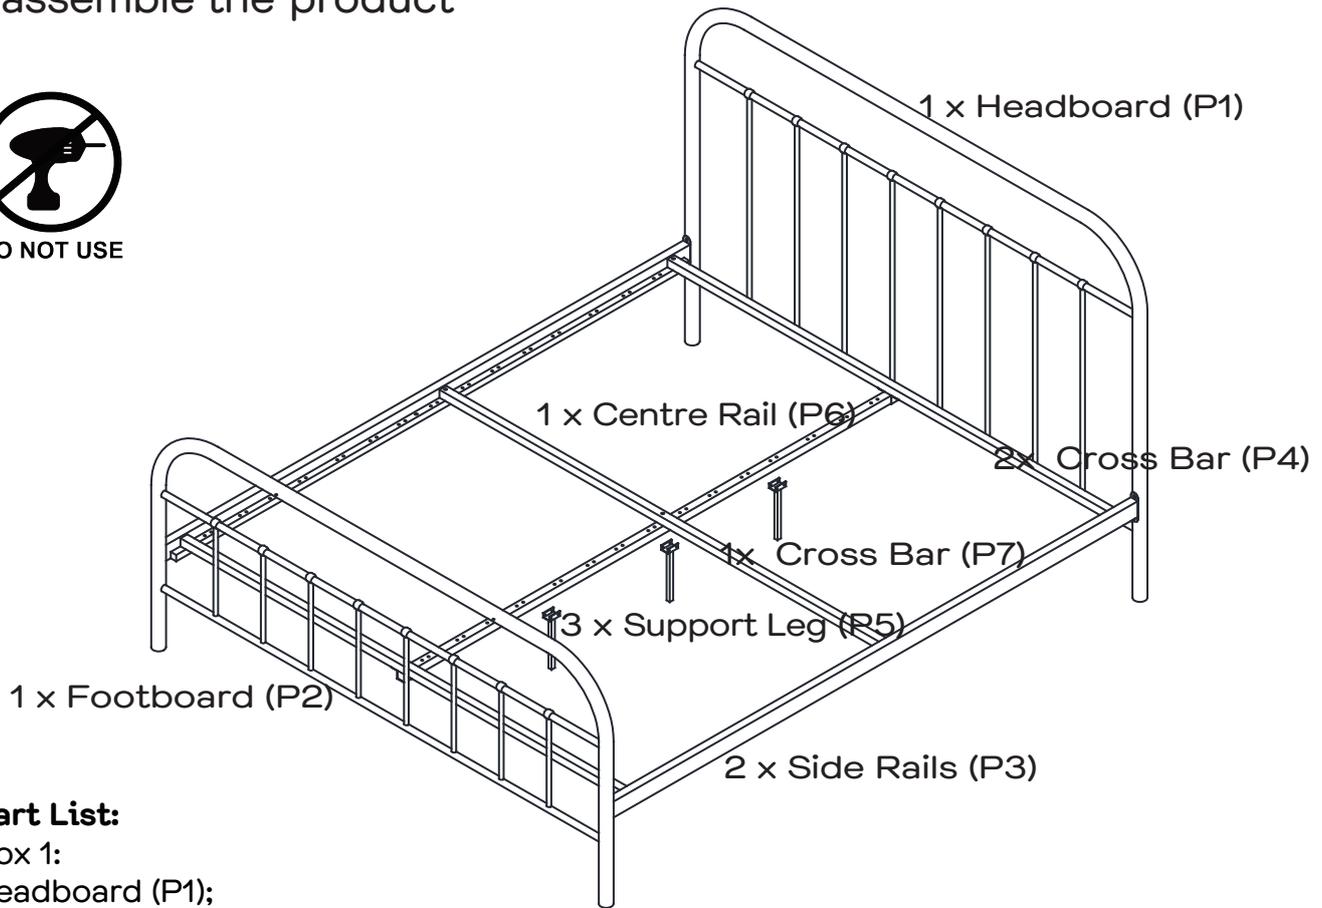

Part List:

Box 1:

Headboard (P1);

Footboard (P2);

3 x Support Legs (P5);

30 x Plastic Slat Caps (P8);

15 x Centre

Plastic slat Caps (P9).

Box 2:


2 x Side Rails (P3);

2 x Cross Bars (P4);


1 x Centre Rail (P6);

1 x Cross Bar (P7);


30 x Slats (P10).

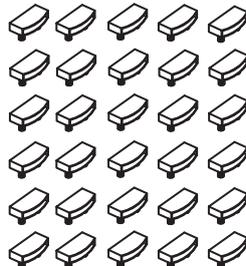

30 x Plastic Slat Caps (P8)

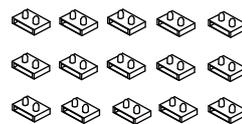

15 x Centre Plastic Slat Caps (P9)

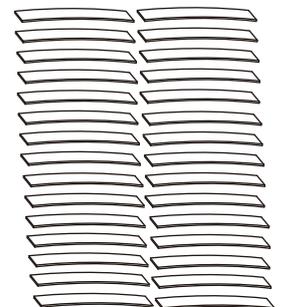

30 x Slats (P10)

Hardware pack



12 x Short Bolts (H1)
M6x20



4 x Long Bolts (H2)
M6x60



1 x Allen Key (H3)



13 x Hex Nuts (H4)



1 x Spanner (H5)



6 x Medium Bolts (H6)
M6x40



12x Metal washers (H7)




3 x Larger Medium Bolts (H8)
M6x45

Please make sure you have all these parts before you start.



Step 1


You will need	
4 x Short Bolts (H1)	
1 x Allen Key (H3)	

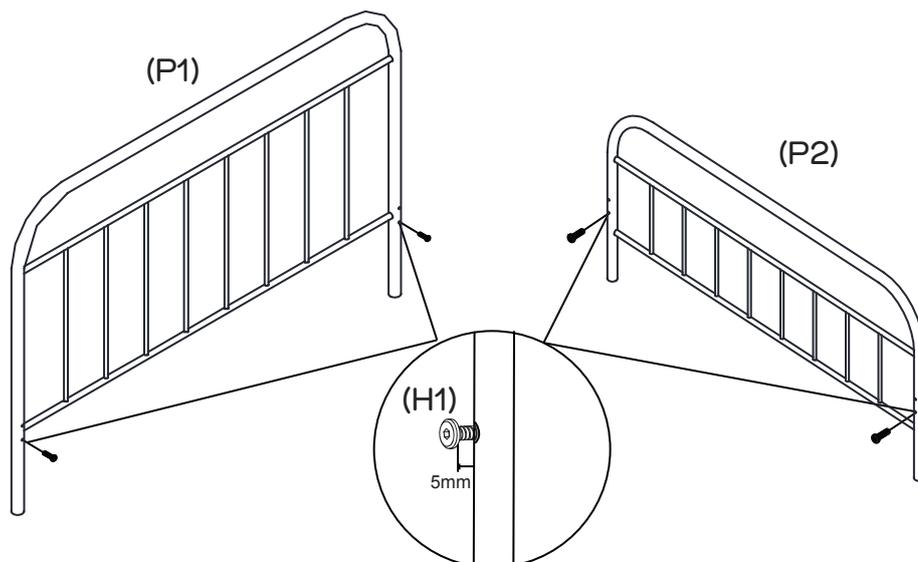

Insert 4 x short bolts (H1) into the bottom holes of the headboard (P1) and footboard (P2) using the allen key (H3). Do not fully tighten the bolts and leave a gap of 5mm as shown.

Step 2

You will need	
4 x Short Bolts (H1) M6x20	
1 x Allen Key (H3)	
4 x Long Bolts (H2) M6x60	
6 x Hex Nuts (H4)	
1 x Spanner (H5)	
2 x Larger Medium Bolts (H8) M6x45	

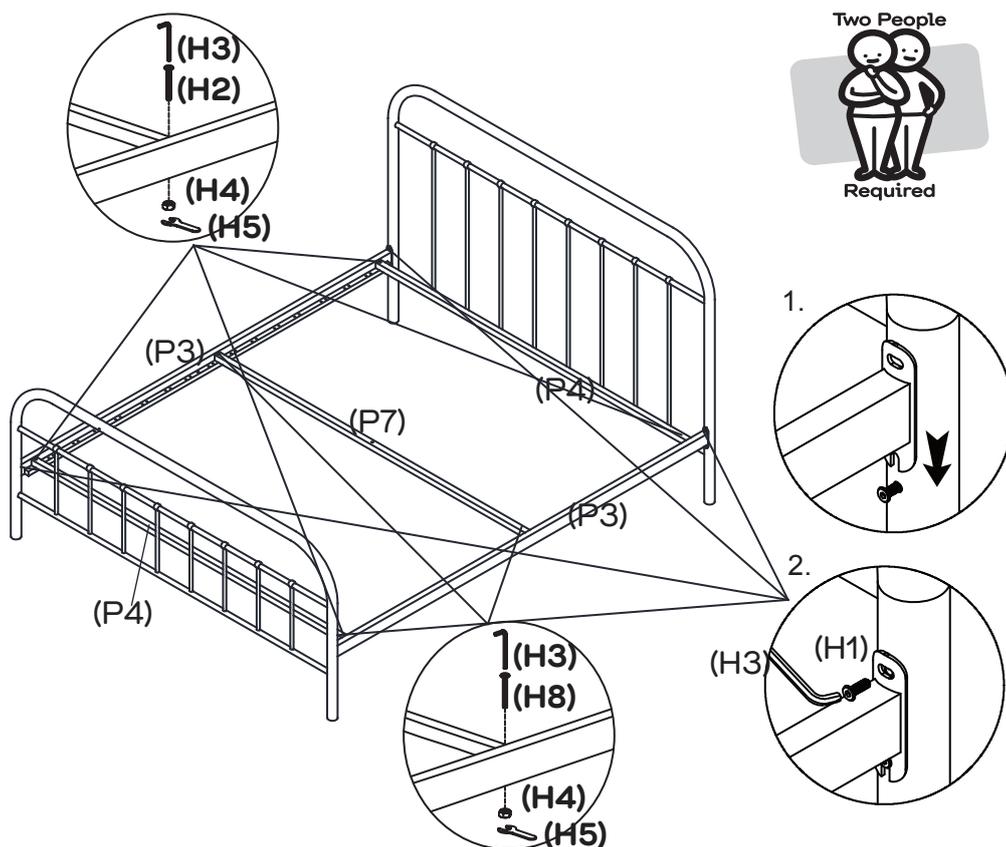

Attach the 2 x side rails (P3) to the headboard (P1) and footboard (P2).

Slot the side rails onto the bolts as shown and insert 4 x short bolts (H1) into the top holes with the allen key (H3).


Attach the 2 x cross bars (P4) onto the 2 x side rails (P3) using 4 x long bolts (H2) and 4 x hex nuts (H4). Ensure the holes on the centre of the 2 x cross bars (P4) faces downwards.

Attach the cross bar (P7) onto the 2 x side rails (P3) using 2 x Larger Medium bolts (H8) and 2 x hex nuts (H4). Ensure the holes on the centre of the cross bar (P7) faces upwards.

Tighten with the allen key (H3) and spanner (H5) as shown. Now fully tighten all bolts.

Step 3

You will need	
4 x Short Bolts (H1) M6x20	
1 x Allen Key (H3)	
1 x Larger Medium Bolt (H8) M6x45	
1 x Hex Nuts (H4)	
1 x Spanner (H5)	

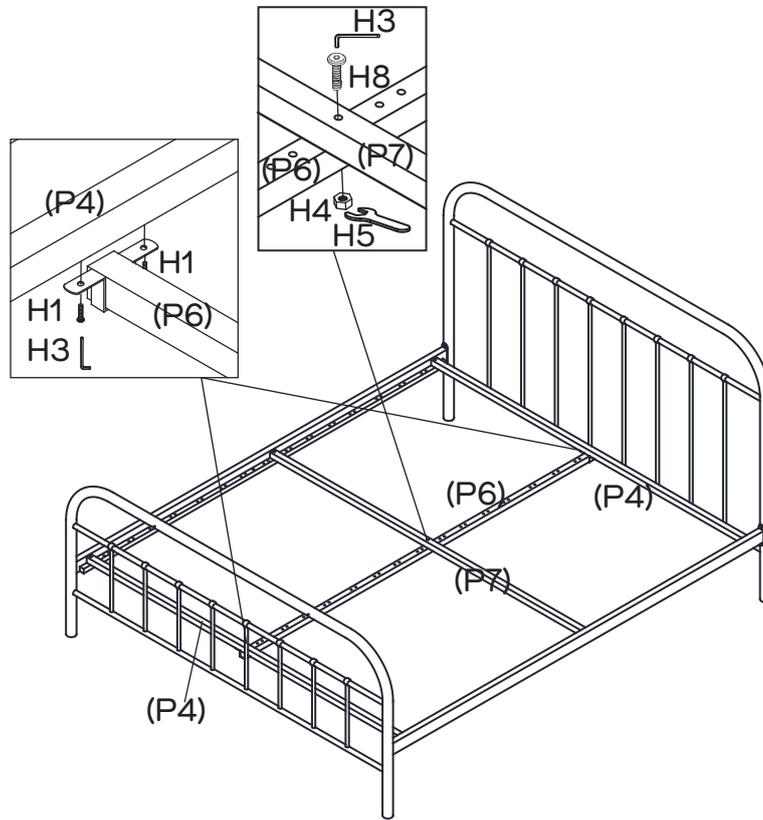


Secure the centre rail (P6) to the 2 x cross bars (P4) with 4 x short bolts (H1), tighten with the allen key (H3).

Secure the centre rail (P6) to the cross bar (P7) with 1 x Larger Medium Bolts (H8) and 1 x hex nut (H4), tighten with the allen key (H3) and spanner (H5) as shown.

Step 4

You will need	
12 x Metal Washer (H7)	
1 x Small Allen Key (H3)	
6 x Medium Bolts (H6) M6x40	
6 x Hex Nuts (H4)	
1 x Spanner (H5)	

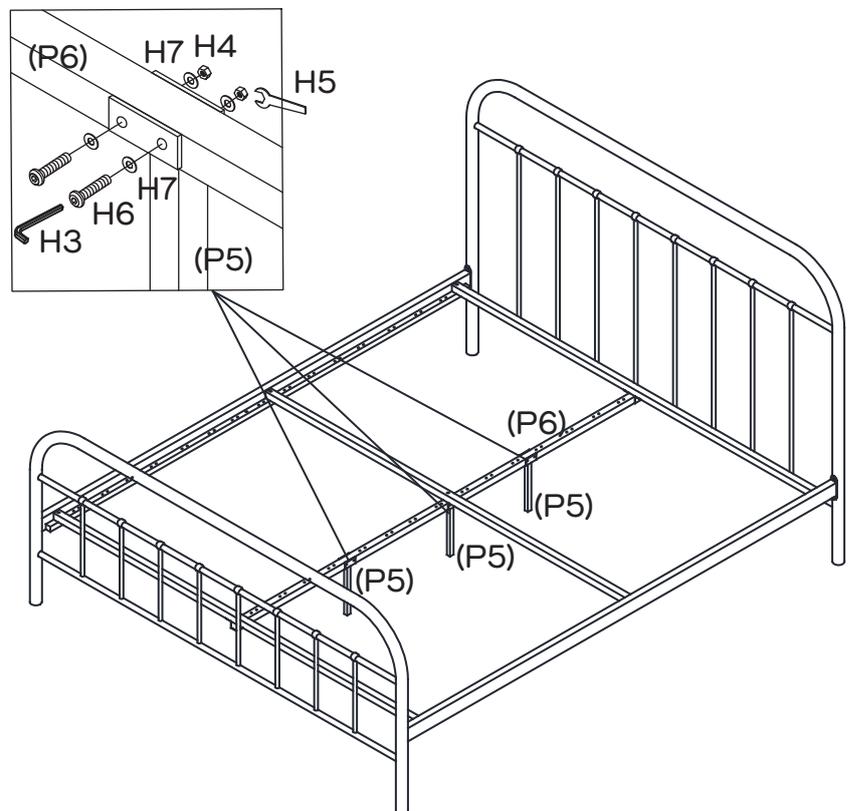

Attach the 3 x support legs (P5) to the centre rail (P6) with 6 x medium bolts (H6) 12 x metal washers and 6 x hex nuts (H4).


Tighten with the allen key (H3) and spanner (H5) as shown.

Extend the adjusters on the 3 x support legs (P5) by turning clockwise so that they are level on the ground.

Important Note: The adjusters must be retracted by turning anticlockwise before moving the bed. The adjusters should be extended again after moving the bed.

Step 5

You will need:	
30 x Plastic Slat Caps (P8)	
15 x Centre Plastic Slat Caps (P9)	
30 x Slats (P10)	

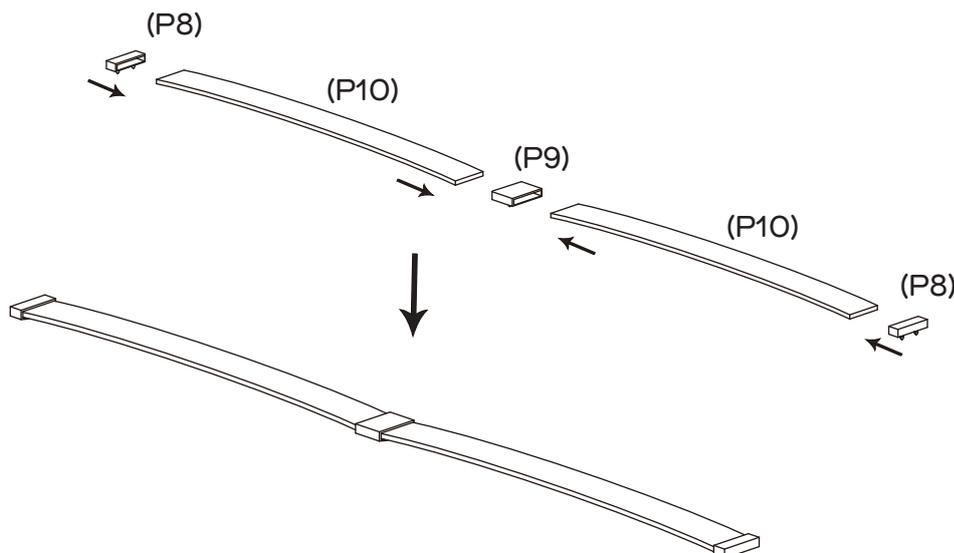

Attach 2 x plastic caps (P8), 2 slats (P10) and 1 x centre plastic slat cap (P9) together as shown. Repeat for the other slats (P10).

Step 6



Lower the slat (P10) with the plastic slat caps (P8) and centre plastic slat caps (P9) onto the 2 x side rails (P3) and centre rail (P6). Ensure the plastic slat caps (P8, P9) are in place over the side rail (P3) holes and centre rail holes (P6) and apply downward pressure until the plastic slat caps are fully inserted into the rails. Repeat for every bed slat until finished.

Lower the slat (P10) with the end connectors (P8) to the side rails (P3). Ensure the plastic slat caps are in place over the side rail holes and apply downward pressure until the plastic slat caps are fully inserted into the rails. Repeat for every bed slat until finished.

Step 7



IMPORTANT: Fully tighten all bolts on bed. Periodically check to ensure all bolts remain tight.

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.