




**Fantastic
Furniture**

Version 1.3

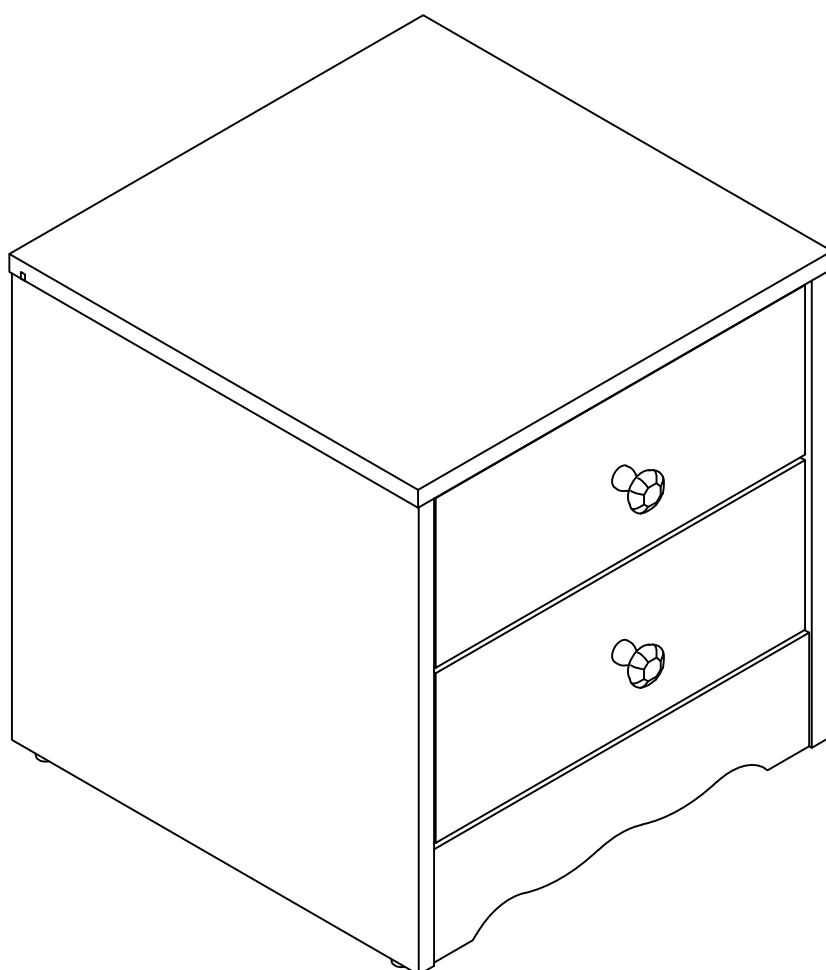

Amirah

Bedside

fantasticfurniture.com.au

Secure it!

Reduce the risk of furniture tip-over accidents



WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.



WARNING: WEIGHT LIMIT ON TOP IS 40kg. WARNING: WEIGHT PLACED IN DRAWER NOT TO EXCEED 10KG.

To reduce the risk of furniture tipover:



- Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.




- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.
- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- Avoid putting a TV on this product.

Wall attachment guide




For plasterboard
(without available wood stud)

Securing method:
Self drilling plasterboard anchor.

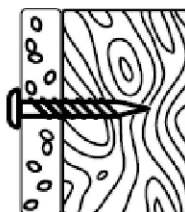

For plasterboard
(with available wood stud)

Securing method:
Screw inserted directly into stud.

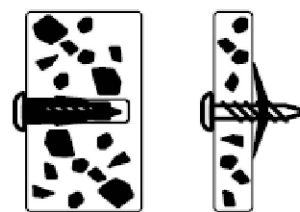

For masonry wall

Securing method:
Solid wall: Plug with screw
Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.

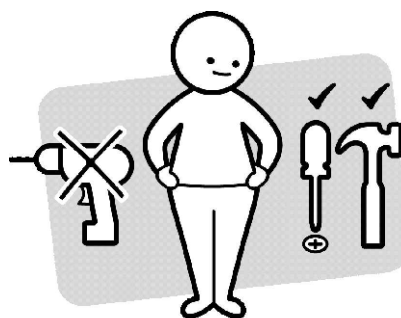

Make sure you have all the required tools. Never use power tools unless instructed.

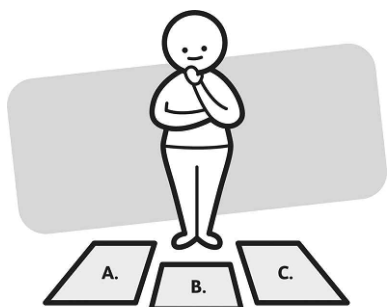

Identify and lay out all of the components before you begin assembly.

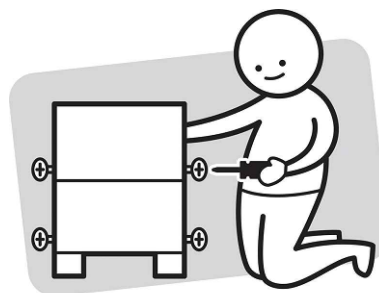

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product



DO NOT USE




Other tools you need

Phillips head screwdriver, soft headed mallet.

Parts list

Box 1:

Top Panel (P1);
Left Side Panel (P2);
Right Side Panel (P3);
Back Support Panel (P4);
Plinth Panel (P5);
2 x Drawer Back Panel (P6);
2 x Drawer Left Panel (P7);
2 x Drawer Right Panel (P8);
2 x Drawer Front Panel (P9);
2 x Drawer Bottom Panel (P10);
Back Panel (P11);
Hardware.

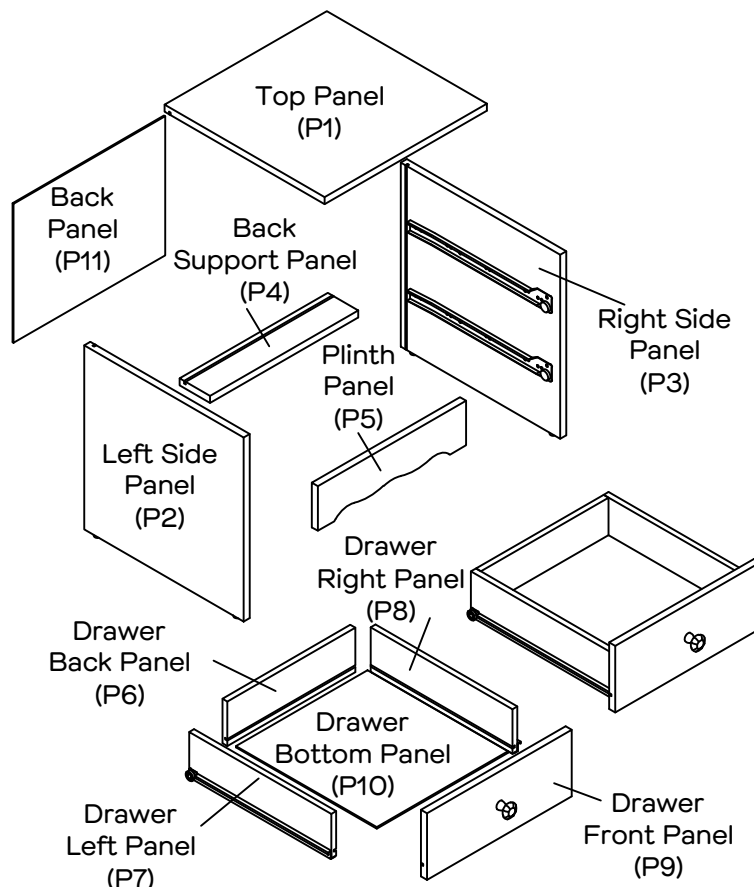


Hardware pack



12 x Cam Bolts
(H1)



12 x Cam Nuts
12mm (H2)



12 x Wood Dowels
(H3)



8 x CSK Screws
38mm
(H4)




24 x CSK Screws
12mm
(H5)




2 x T/MS Screws
(H6)




2 x Rhinestone
Handles (H7)




2 x Drawer
Runner L 14"
(H8)



2 x Drawer
Runner R 14"
(H9)



2 x Runner
Track R 14"
(H10)



2 x Runner
Track L 14"
(H11)



2 x Wall Fixing Strap
(H12)



2 x Washers
(H13)





2 x CSK Screws
16mm
(H14)





Fantastic
Furniture

Page 5

Step 1



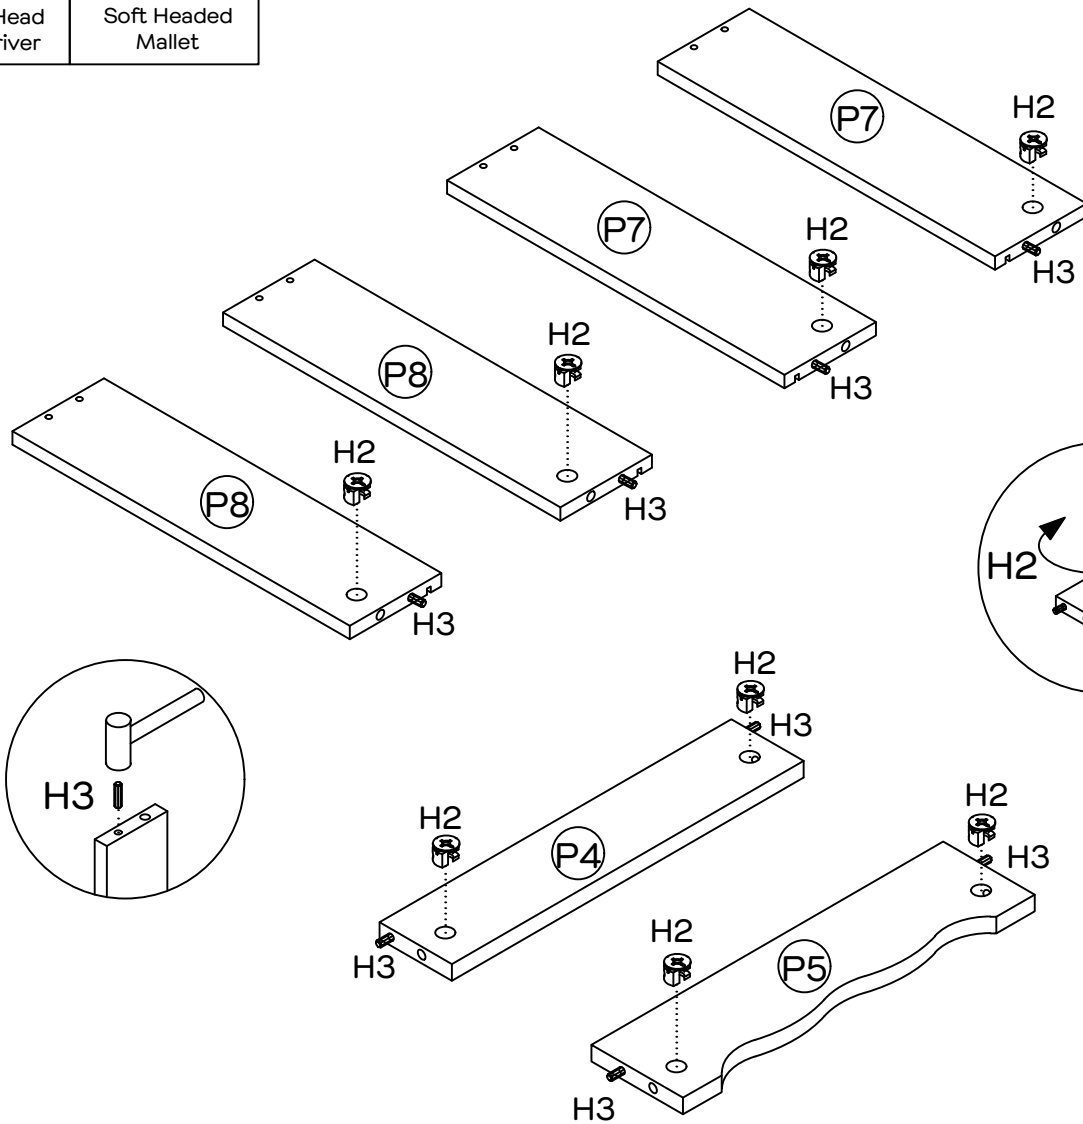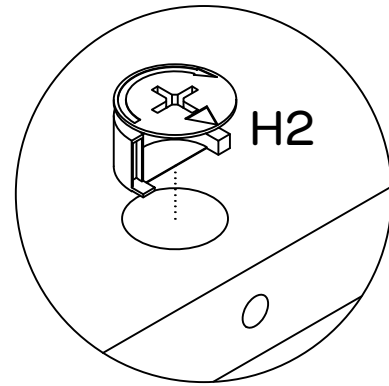

You will need	
	
8 x Cam Nuts 12mm (H2)	8 x Wood Dowels (H3)
	
Phillips Head Screwdriver	Soft Headed Mallet




Insert 8 x cam nuts (H2) into panels (P4), (P5), (P7) & (P8) using a phillips head screwdriver. Rotate the cam nuts (H2) so the arrow points towards the incoming bolts.

Insert 8 x dowels (H3) into panels (P4), (P5), (P7) & (P8) by hand or gently using a soft headed mallet.

Step 2

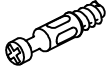

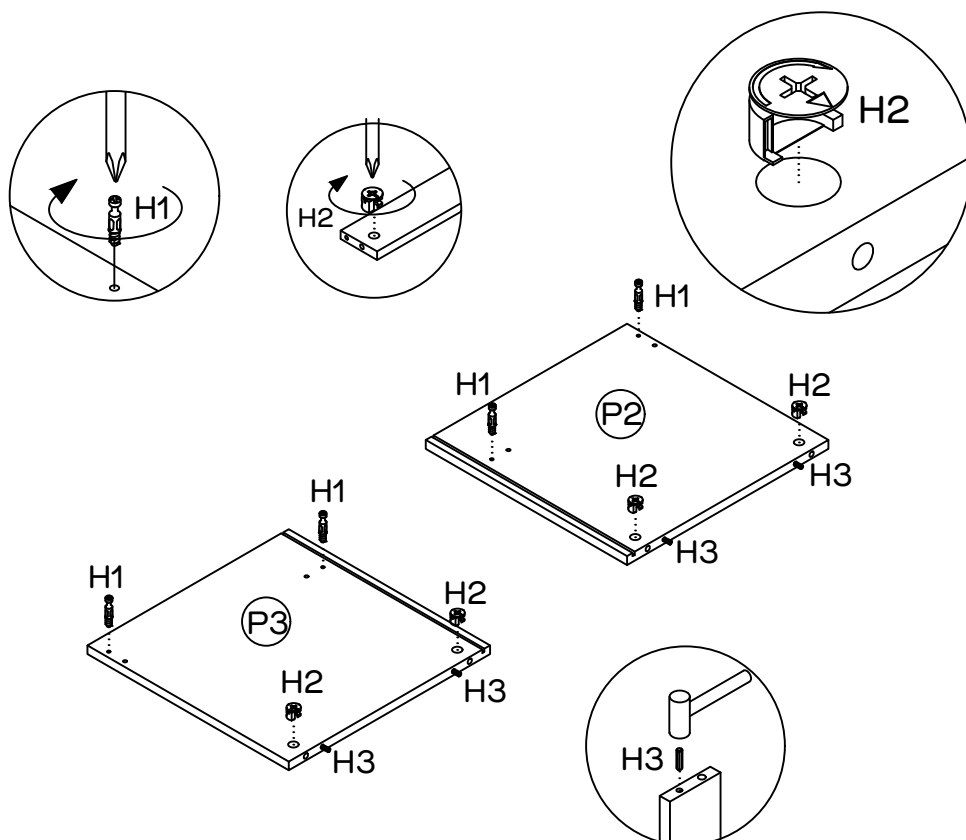You will need	
	
4 x Cam Nuts 12mm (H2)	4 x Wood Dowels (H3)
	
4 x Cam Bolts (H1)	Phillips Head Screwdriver
	
Soft Headed Mallet	




Insert 4 x cam nuts (H2) into panels (P2) & (P3). Rotate the cam nuts (H2) so the arrows point towards the incoming bolts.

Insert 4 x dowels (H3) into panels (P2) & (P3), by hand or gently using a soft headed mallet. Screw 4 x cam bolts (H1) into panels (P2) & (P3) using a phillips head screwdriver.


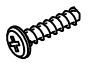


Step 3

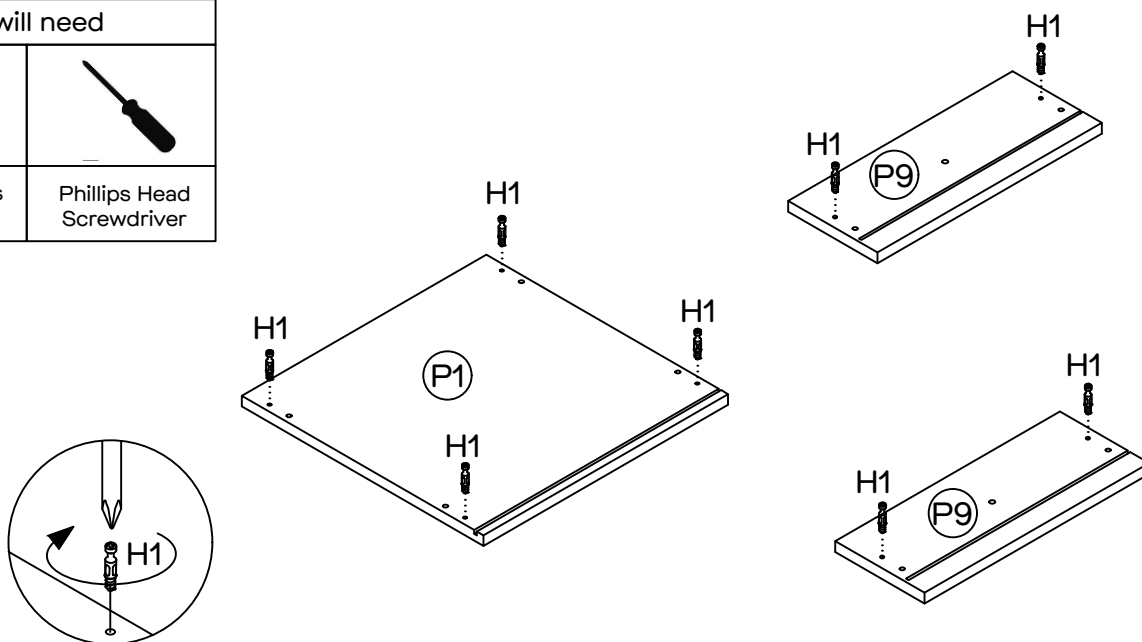You will need	
	
8 x Cam Bolts (H1)	Phillips Head Screwdriver




Screw 8 x cam bolts (H1) into panels (P1) & (P9) using a phillips head screwdriver.

Step 4


You will need	
	
8 x CSK Screws 38mm (H4)	2 x T/MS Screws (H6)
	
2 x Rhinstone Handles (H7)	Phillips Head Screwdriver

This is how a cam nut works.....

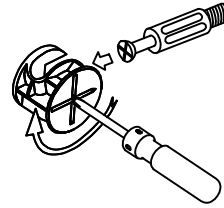

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

Repeat x 2

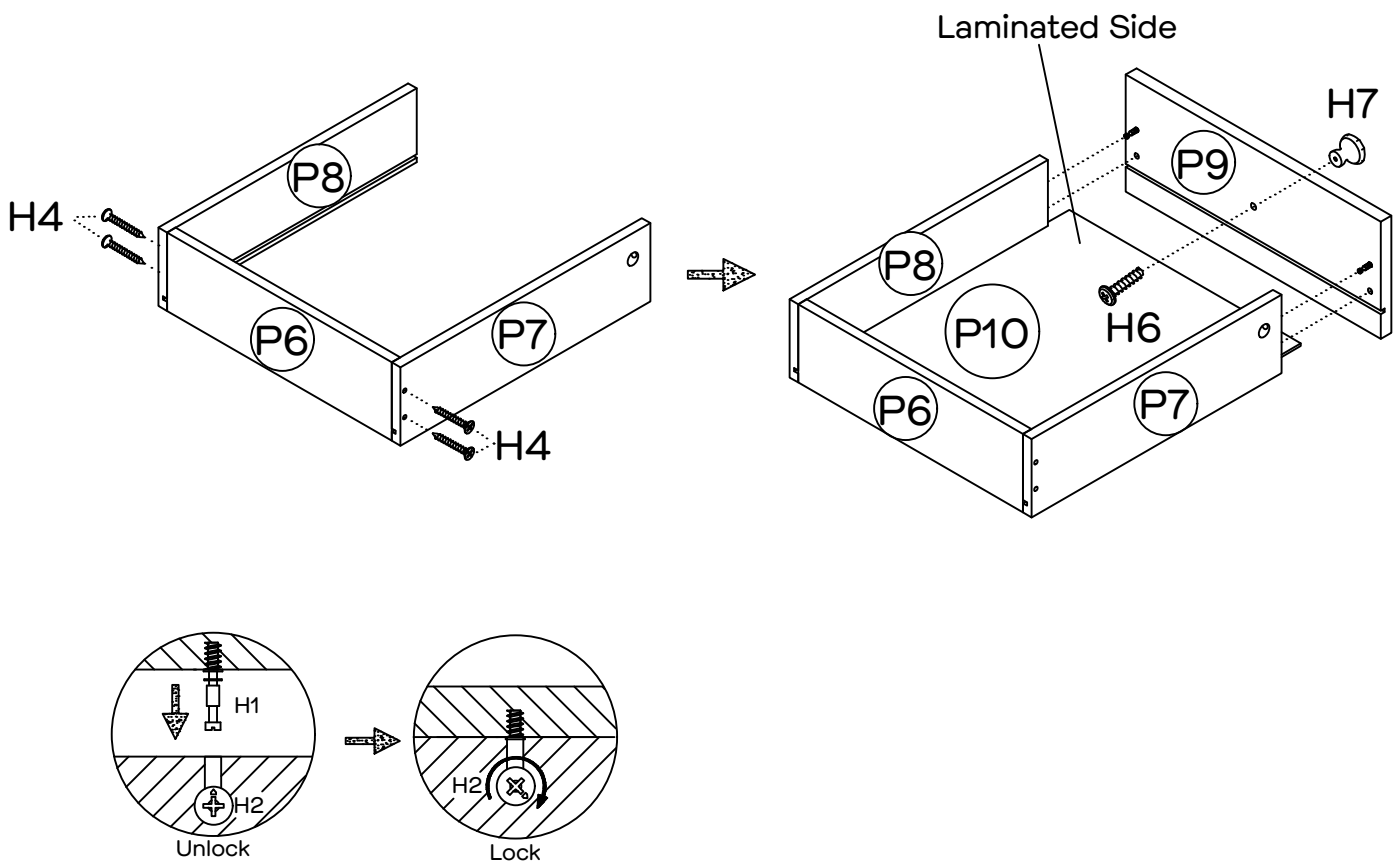

To attach panels (P7) & (P8) to panel (P6), insert 4 x CSK screws (H4) and tighten with a phillips head screwdriver.

Slide in the drawer bottom panel (P10) into the grooves of panels (P7, P8 & P6) with the laminated side facing up.





Attach the panel (P9) to panel (P7 & P8) and ensure the drawer bottom panel (P10) slides into the groove.


Turn the cam nuts on panel (P7 & P8) clockwise with a phillips head screwdriver.

Attach the handle (H7) to panel (P9) with 1 x T/MS screw (H6) using a phillips head screwdriver.

Repeat this process for the remaining drawer.

Step 5

You will need	
	
12 x CSK Screws 12mm(H5)	2 x Drawer Runner L 14" (H8)
	
2 x Drawer Runner R 14" (H9)	Phillips Head Screwdriver

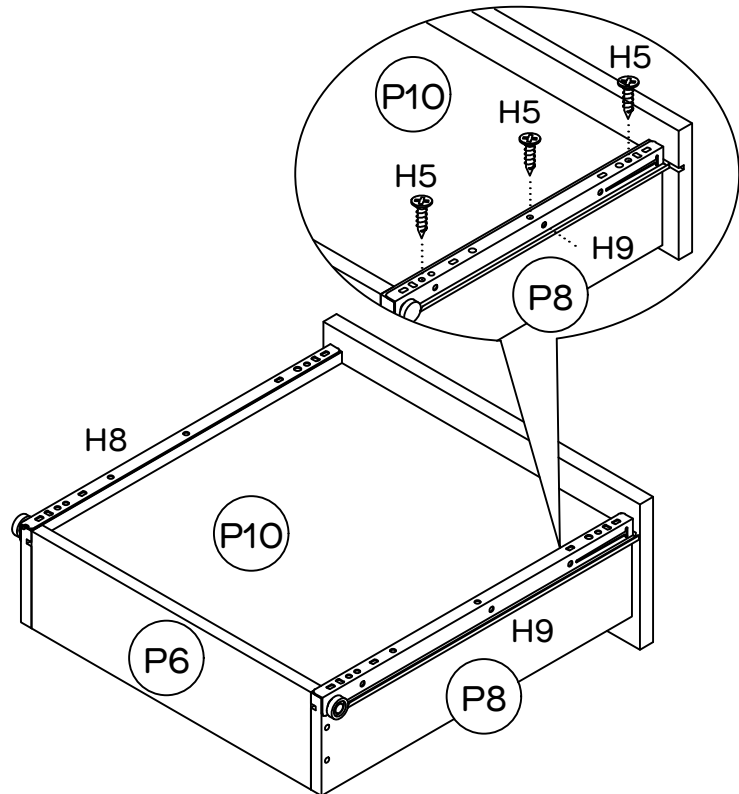


Repeat x 2

Attach the drawer L (H8) and the drawer runner R (H9) to the underside of the drawer with 6 x CSK screws (H5) using a phillips head screwdriver. Repeat this process for the other drawer.



Step 6

You will need	
	
12 x CSK Screws 12mm(H5)	2 x Runner Track R 14" (H10)
	
2 x Runner Track L 14" (H11)	Phillips Head Screwdriver

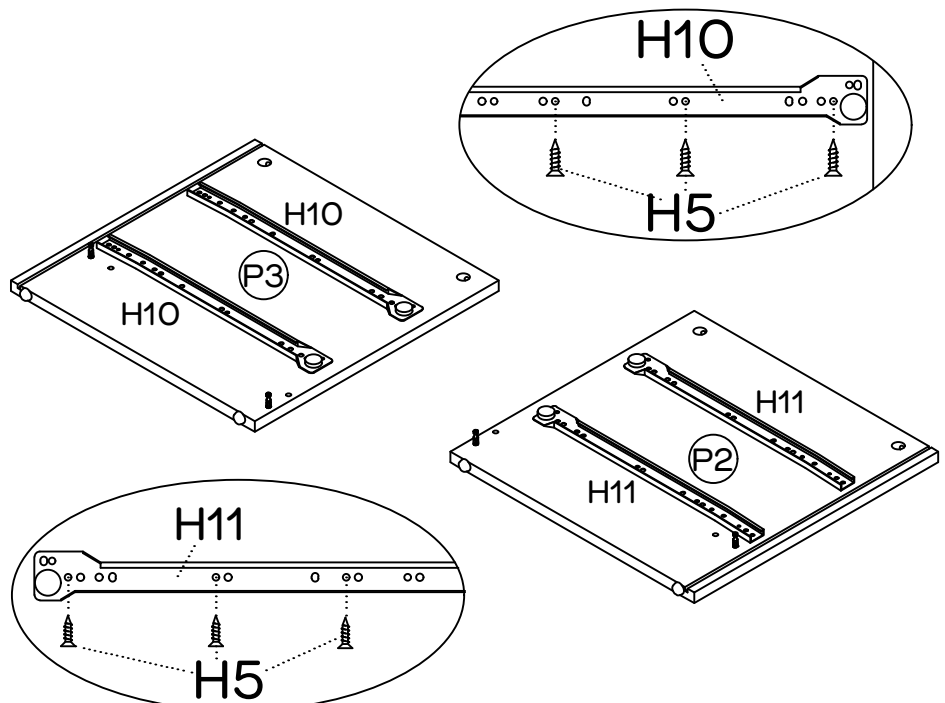

Attach 2 x panel runners L (H11) to the left side panel (P2) with 6 x CSK screws using a phillips head screwdriver.
Attach 2 x panel runners R (H10) to the right panel (P3) with 6 x CSK screws using a phillips head screwdriver.


Step 7

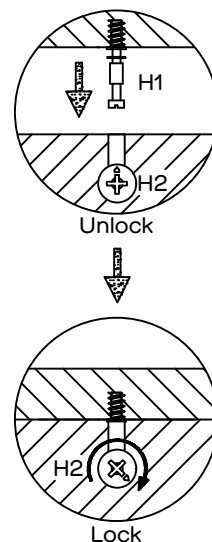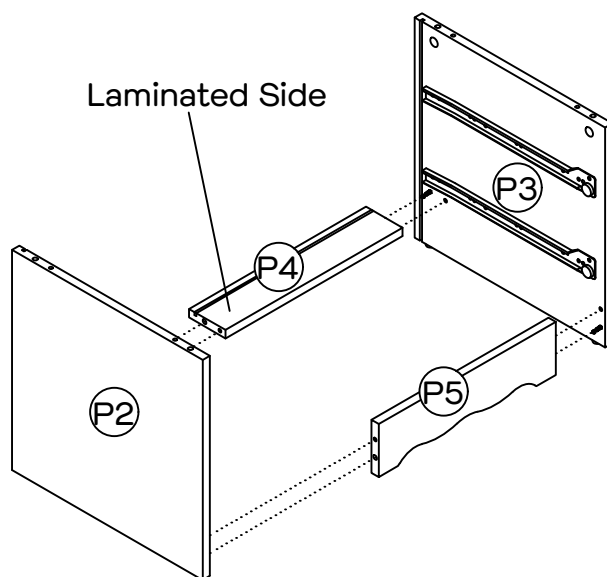

Attach panels (P4) & (P5) to panels (P2) & (P3).
Turn the cam nuts on (P4) & (P5) clockwise with a phillips head screwdriver to lock in position.



Step 8

Warning Label at the
back and top of the
unit

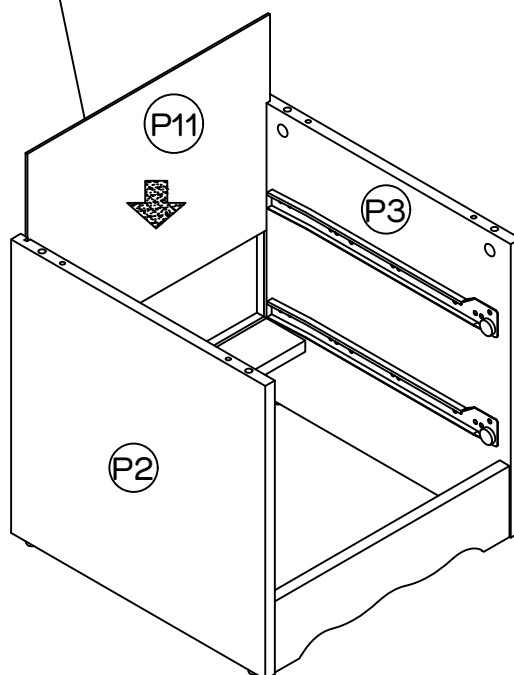


Slide panel (P11) into the groove in panels (P2) & (P3).

Step 9

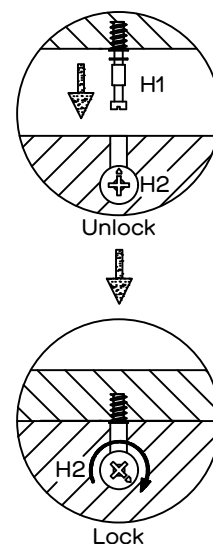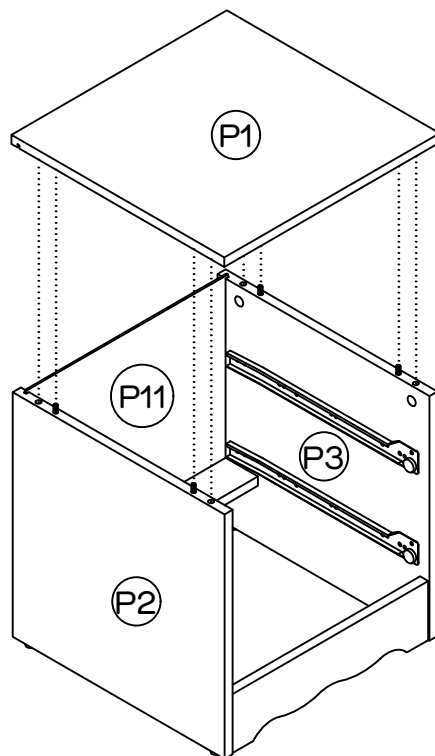





To attach panel (P1) to panels (P2 & P3), align the dowels (H3) and cam bolts (H2) to the holes and make sure the back panel (P11) slides into the groove. Turn the cam nuts on panels (P2 & P3) clockwise with a phillips head screwdriver to lock in position.

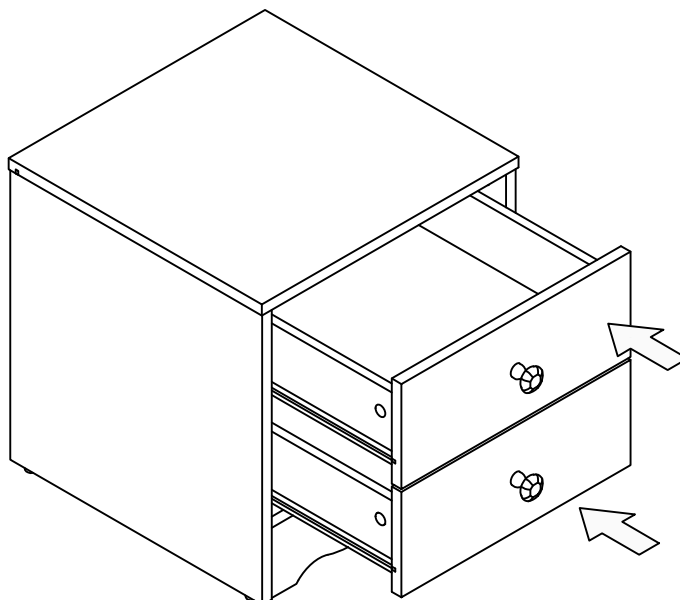
Step 10



Put the drawers into the frame one at a time.

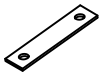
Step 11

You will need	
	
2 x Wall Fixing Strap (H12)	2 x Washers (H13)
	
2 x CSK Screws 16mm (H14)	Phillips Head Screwdriver

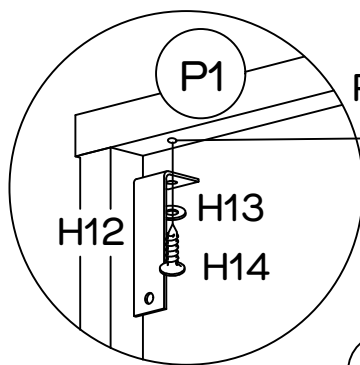

Pre-drilled Hole

P3

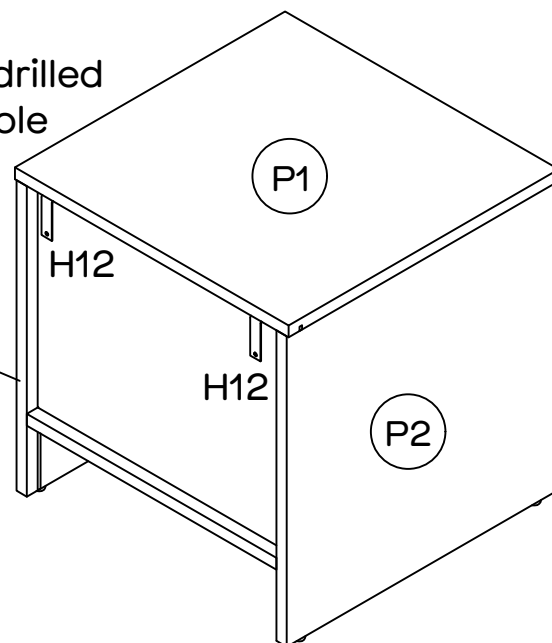

We strongly advise that you use the wall safety strap provided to prevent the unit toppling over.


Attach wall fixing strap to panel (P1) with 2 x CSK screws (H14) and 2 x washers (H13) using a phillips head screwdriver.

Move the bedside to the final position. Attach the safety strap to the wall.

Make sure it is firmly attached and make sure it is snug fit.

The screws and wall plugs are not provided. Please use appropriate fixtures for your wall.

Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

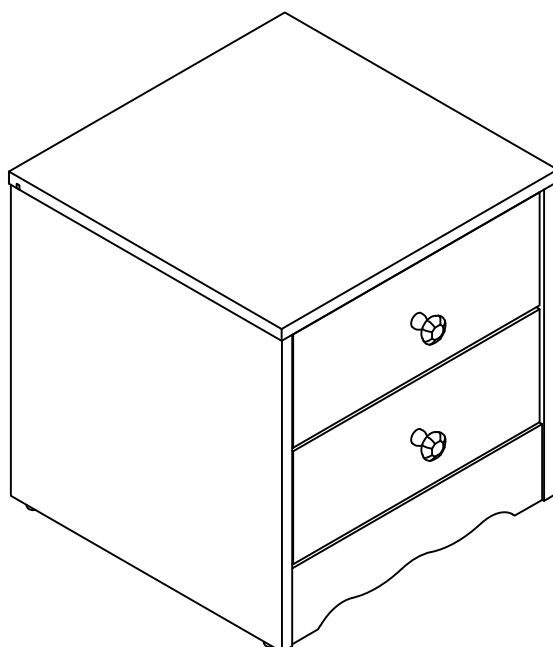

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.