

Version 1.1







Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Assembly Checklist



Read through instructions carefully before you begin



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless Instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistake made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.




What you need

to assemble the product




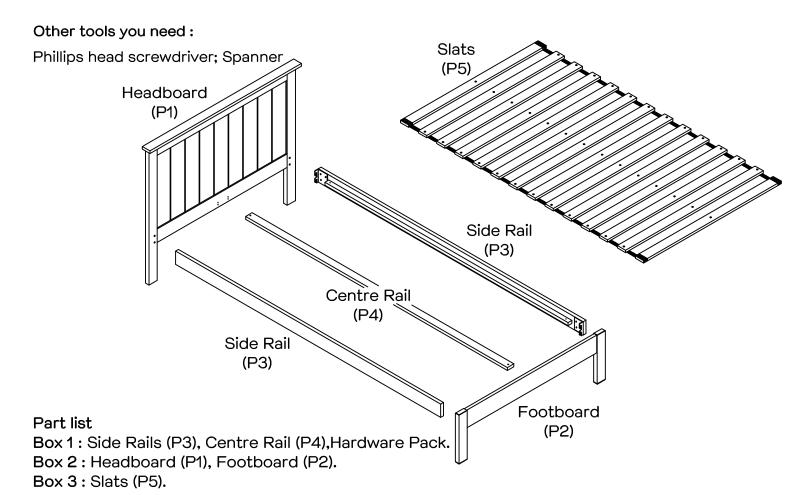

Hardware pack

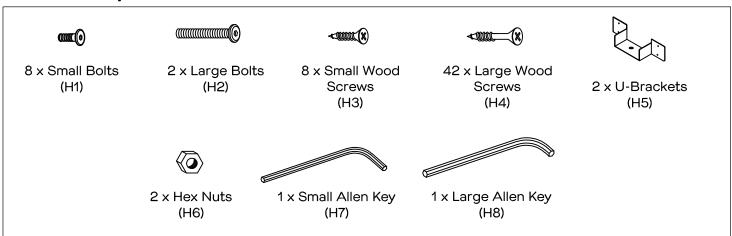


Step 1

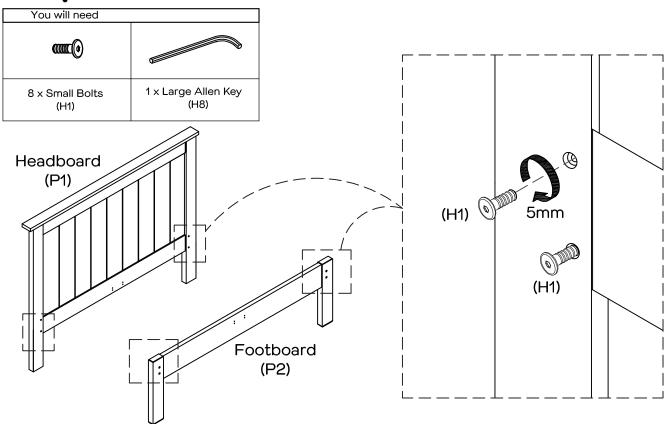

Fix 8 \times small bolts (H1) into headboard & footboard (P1 & P2) about 5mm with the large allen key (H8) or by hand.


Do not fully tighten, as you need to slot on the side rails in the next step.

Step 2

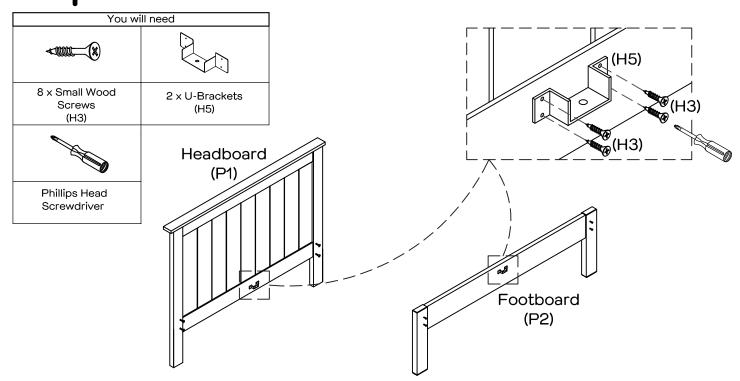


Fix 1 \times u-bracket (H5) to headboard (P1) with 4 \times small wood screws (H3) and fix 1 \times u-bracket (H5) to footboard (P2) with 4 \times small wood screws (H3), tightening with a phillips head screwdriver.



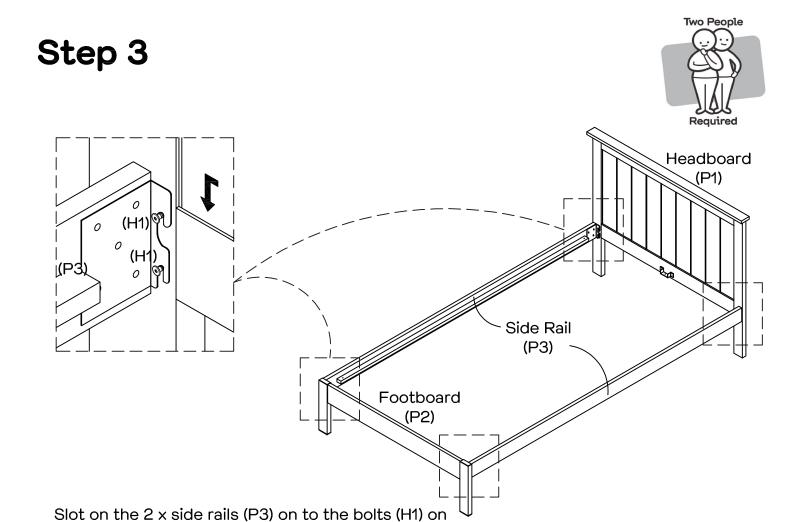


Step 4

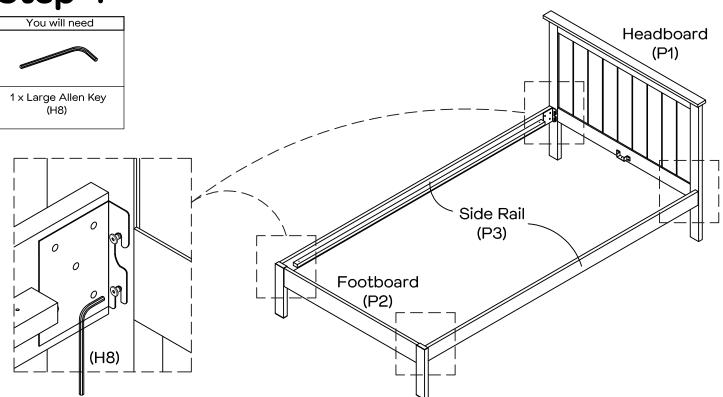


Tighten $8 \times 8 \times 10^{-5}$ x small bolts (H1) by using the large allen key (H8). Ensure the bolts (H1) are fully tightened.

the headboard (P1) and footboard (P2) as shown.



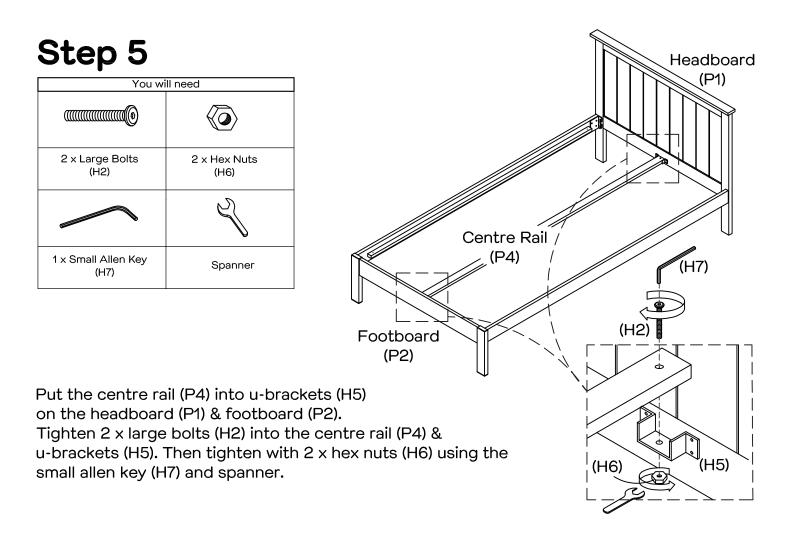

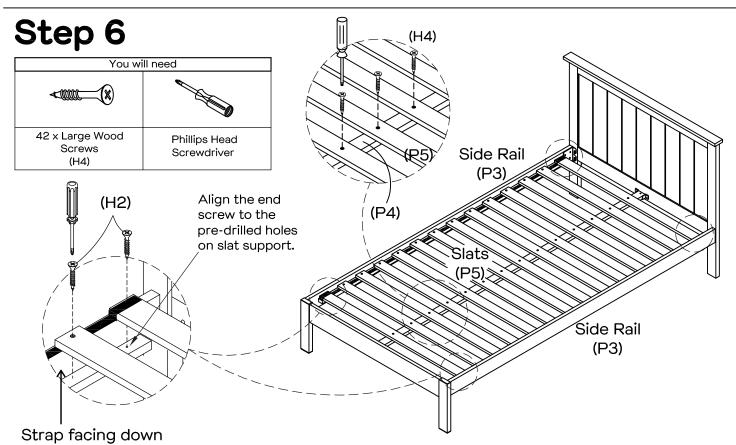

Fix the slats (P5) on to both side rails (P3) by using 28 x large wood screws (H4). Then fix center of each slat (P5) to centre rail (P4) by using 14 x large wood screws (H4). Secure by tightening wood screws (H4) with a phillips head screwdriver.



Step 7



Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.